

Firmware Instructions

- 1. Please update the firmware with FP firmware update software F3. F3 can be downloaded on the official website.**
- 2. Firmware Version Checking:** Press the “Mode” button and switch the flash on. The firmware update version (e.g. Ver X.X) will be displayed on the LCD panel.
- 3. Version Instructions:**

Version	What's New	Date
V1.5	Compatible with new batch flash tubes.	2024-02-28
V1.4	To add GROUP to the menu, with Controllable Receiver Groups increased to 16	2023-08-11
V1.3	To add compatibility with Flash Trigger for Leica --- XProIII Wireless System	2022-08-16
V1.2	Initial Adjustment	2019-06-05

Note: For more details, please download the newest instruction manual on the official website http://www.adorama.com/g/flashpoint_firmware_download