

## Contents



A	Monitor Unit
B	Hood
C	VGA Cable
D	Mains Cord
E	Camera Screw
F	Software & Dongle
G	Hex Key & Four Screws
H	Support Arm

## Specifications


### Product Highlights

- 17" Entry-Level Teleprompter
  - Brightness - 300 Nits
  - Contrast Ratio -1000:1
  - 70:30 Broadcast Quality Prompter Glass
- Reading Range - up to 20' (6m)
  - Teleprompter Hood
  - USB Security Dongle
  - Dual-screen Functionality
  - Offers Multi-Language Text & Menus
- Multiple Prompter Control Options
  - Formatting & Search Functionality

# SSP17 Lite Guide



# Components

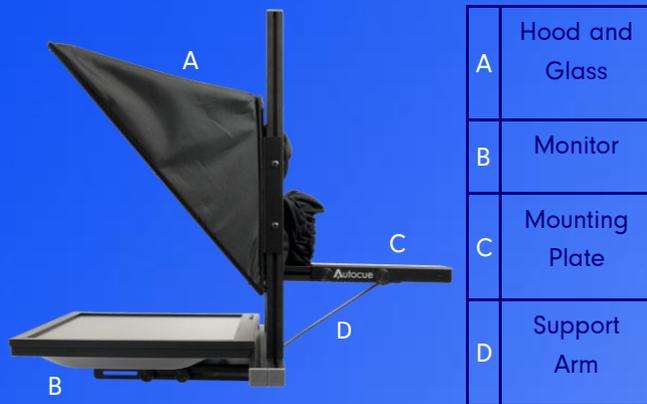

3. Attach the monitor to the hood mounting.



4. Secure the monitor mounting plate using the four screws provided.



5. Fix the hot shoe from your tripod to the unit.



6. Secure the hot shoe in place using two screws if possible.



7. Mount the unit onto the tripod.



# Camera Fixing



8. Mount your camera onto the unit.

Fix the camera in place using the camera screw provided.



9. Connect the power supply and the VGA or video cable.



# Assembly

1. Fix the arm provided to the camera mounting plate and monitor mounting.



2. Using the key provided, secure the arm to the points shown.

