

Instructions For Assembling the Lantern:

1. Attach brackets (or frame) to fixture, and lay fixture flat with brackets and the front of the fixture facing up.

2. Place pole ends into corresponding holes in bracket as shown in photo #2.

 **Tip!** It may seem like you'll bend the pole to breaking, but you won't.



 **Tip!** Grip the pole diagonally opposite from the pole you are inserting to provide extra leverage.

3. Make sure to align the short side of the fixture with the short side of the lantern. While pushing downward on the center of the lantern, bring the internal cables down and place hooked ends in the grooves in the pole ferrules on opposite corners of the fixture as shown in photos #4 & #5.

4. With the corners of the lantern body aligned with the poles, gradually pull one corner of the body up along the pole as far as it will go. Then move to another corner and do the same. Repeat with each corner. Be sure to align poles with seams in the body. The bank will now appear as shown in photo #6 & #7.

5. Assembled bank should appear as shown in photo #8.

 **Tip!** If you're using the skirt just slide it over the fixture and lantern.

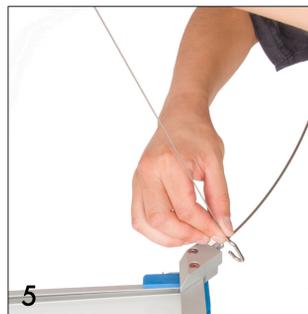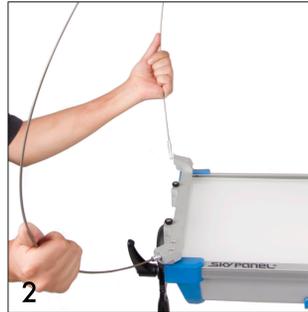

Removing the body from the brackets/frame:

- 1. Remove the skirt from the lantern (if utilized)**
- 2. Place fixture flat with lantern facing up.**
- 3. Gradually slide one corner of the body off of the curve in the pole. The first corner will be tighter than the others. Once the first two corners are removed, the lantern will be loose enough to fall off of the remaining corners.**

Removing the poles from the brackets/frame:

- 1. With the fixture on its back, and the poles facing up, apply slight backward pressure on the pole to center it in its mounting hole and slide the pole out of its hole. Repeat on the remaining poles. After the first two poles are removed, the remaining poles should come out very easily.**
- 2. If you are having difficulty relieving the pressure on the pole in this manner, apply downward pressure to the center of the lantern, compressing it approximately two inches (50mm). This will relieve the pressure on the poles so that they can be removed from the bracket.**

Lightbank Care

Cleaning - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

Repair - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at 888-444-1812.

Chimera 5-Year Promise


At Chimera, we stand behind our Lightbanks, speed rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return it for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

OTHER SKYPANEL ITEMS

#1636
S30 SMALL




#1639
S60 MEDIUM

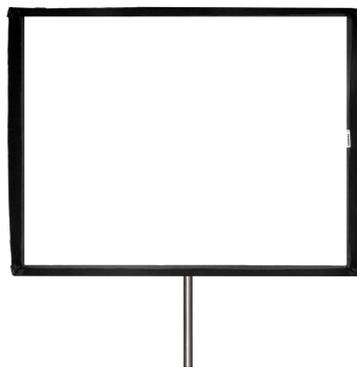

#1638
S60 MEDIUM SHALLOW



#1649
S120 LARGE

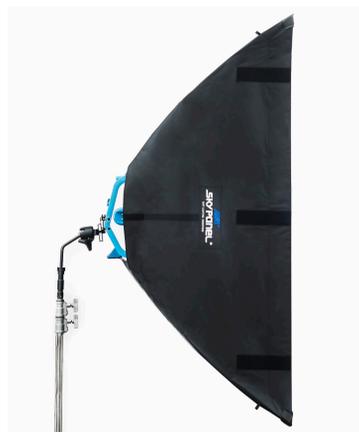

ARRI SKYPANEL LANTERNS

Instructions for
Care and Use

MODEL #1851 & #1856
SKYPANEL LANTERN

360-degree full-diffusion body, with adjustable wrap skirt,
allowing for an omnidirectional soft light



LANTERN ACCESSORIES AND PARTS

S30 Lantern	1851	S60 Lantern	1856
S30 Lantern Body and Skirt	18511851	S60 Lantern Body	18561856
S30 Lantern Skirt	18521852	S60 Lantern Skirt	18571857
S30 Lantern Wire Assembly	40774077	S60 Lantern Wire Assembly	40974097
Universal Mounting Brackets	16011601	Universal Mounting Brackets	16011601
Storage Sack	45214521	Storage Sack	45314531