

Warranty Information

At Chimera, we stand behind our Lightbanks, speed rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return it for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. **This warranty does not apply to expendables, such as light bulbs, and certain OEM products.**



Chimera Lightbanks with Brackets for ARRI SkyPanel S30, S60, and S120

1636B, 1638B, 1639B, 1649

Instructions for Care and Use



Assembly

1. Loosen the screws that secure the blocks on the 1601601 Brackets.



With the pole holes pointed outward from the fixture slide the metal bracket over the front of extrusion on the SkyPanel. This should hook in between the front of the fixture, and the metal extrusion. The metal blocks will then hook around the rear of the extrusion. Tighten the thumbscrews, ensuring the bracket is secure.

2. Next, insert the 4 poles into the Lightbank body.



3. Insert the pole ends into the pole holes on the 16011601 Universal Brackets.



4. Attach the provided front diffusion to the Velcro on the front aperture of the Lightbank. Your Chimera Lightbank is now set up and ready for use!



Disassembly and Storage

Disassemble and re-pack the Chimera SkyPanel Lightbank in reverse order of assembly.

The photos above show an S60, but installation technique is the same for all models.

Tips for Care and Use

Cleaning - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

Repair - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at 888-444 1812.