

Owner's Manual

Main features

Pedalboard Integration Evolved

- Integrated system with versatile built-in effects plus three loops for your favorite pedals.
- Space-saving design enables you to create a compact pedalboard with sophisticated functionality.
- Advanced control and expandability delivers infinite creative possibilities.



Owner's Manual (this document)

Read this first. It explains the basic things you need to know in order to use the MS-3. For detailed information on how to operate the MS-3, please download and refer to "Parameter Guide" (PDF file).

PDF Manual (download from the Web)

- **Parameter Guide**

This explains all of the parameters of the MS-3. It also contains a list of the sounds that are built into the MS-3.

The Parameter Guide can also be viewed using the dedicated software.

- **Application Guide**

This explains example setups for the MS-3 and how to make settings.

- **MIDI Implementation**

This is detailed information about MIDI messages.

To obtain the PDF manual

1. Enter the following URL on your computer.

<http://www.boss.info/manuals/>



2. Choose "MS-3" as the product name.

Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (the leaflet "USING THE UNIT SAFELY" and the Owner's Manual (p. 20)). After reading, keep the document(s) where it will be available for immediate reference.

Copyright © 2017 ROLAND CORPORATION

Contents

Getting Ready	3	System Settings (MENU)	15
Rear Panel (Connecting Your Equipment)	3	Basic Operation	15
Top Panel	5	Adjusting the Display Contrast	15
Screen Structure	6	Enabling/Disabling the Auto-Off Function	16
Operation of the [1]–[3] Knobs	7	Restoring the Factory Default Settings (Factory Reset)	16
Switching Pages	7		
Turning On/Off the Power	8		
Tuning the Guitar (TUNER)	8		
		Using a Computer to Edit/Back up Patches	17
Playing	9	Installing the USB Driver	17
Patch Structure	9	Installing the Dedicated Software	17
Switching Between Memory and Manual Modes	9		
Switching Banks/Patches	10	Appendix	18
About the Play Screen	10	Error Messages	18
		Attaching the Rubber Feet	18
		Block Diagram	18
		Main Specifications	19
Editing the Settings of a Patch	11		
Basic Operation	11	USING THE UNIT SAFELY	20
Changing the Effect Connection Order	12		
Changing the CTL/ASSIGN/MIDI Settings	12	IMPORTANT NOTES	20
Saving a Patch	13		
Exchanging Patches	14		
Initializing a Patch	14		

The power to this unit will be turned off automatically after a predetermined amount of time has passed since it was last used for playing music, or its buttons or controls were operated (Auto Off function).
If you do not want the power to be turned off automatically, disengage the Auto Off function (p. 16).

NOTE

- Any settings that you are in the process of editing will be lost when the power is turned off. If you have any settings that you want to keep, you should save them beforehand.
- To restore power, turn the power on again (p. 8).

Getting Ready

Rear Panel (Connecting Your Equipment)

LOOPS jacks (L1-3 SEND, L1-3 RETURN)

These jacks provide effect loops. The MS-3 is equipped with three loops: L1-3.


Signals are sent from L1-3 SEND jacks to each effect unit, and the signals from each effect unit are received at the L1-3 RETURN jacks.

Connect the L1-3 SEND jacks to the INPUT jack of each effect unit, and connect the OUTPUT jack of each effect unit to the L1-3 RETURN jacks.



[POWER] switch

This turns the power on/off (p. 8).

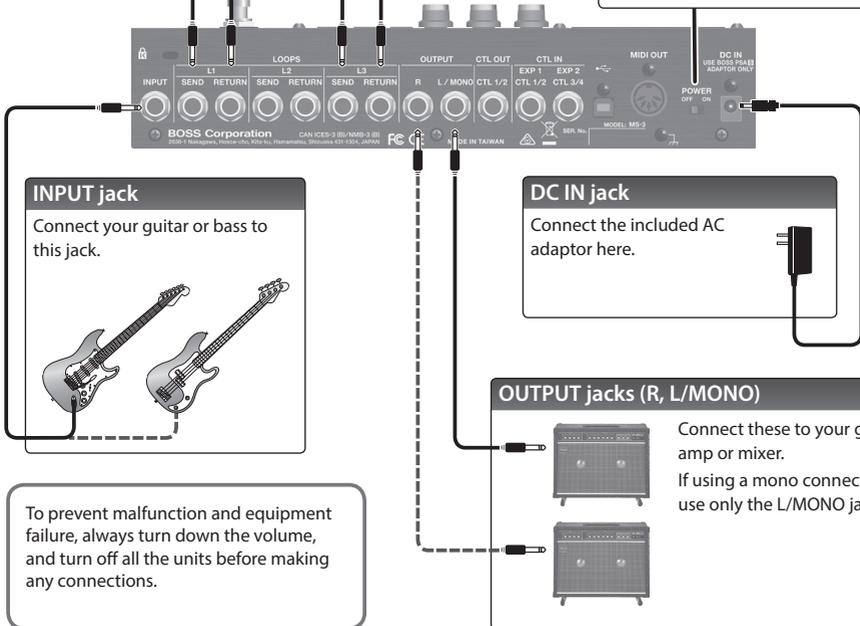

Getting Ready

Rear Panel (Connecting Your Equipment)



CTL OUT jack (CTL 1/2)

You can connect this jack to the control jack of your external device.

It can be used to control things such as switching channels of an amp, turning reverb on/off, or setting tap tempo.

By using a TRS plug with this jack, you can separately control two targets (TIP: CTL 1, RING: CTL 2).

* If 1/4" plug cable is connected, only CTL 1 is available.

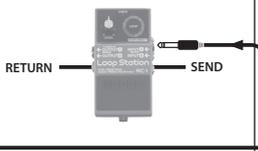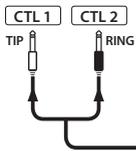

Pin assignment of CTL OUT and CTL IN jacks



CTL IN jacks

You can connect separately sold expression pedals or footswitches to these jacks, and use the expression pedals or footswitches to control a variety of functions.

To use these as EXP 1, 2 jacks

Connect an expression pedal (such as the Roland EV-5).





Use only the specified expression pedal (FV-500H, FV-500L, EV-30, and Roland EV-5; sold separately).

By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

To use these as CTL 1/2, 3/4 jacks

Connect a footswitch.

Mode/Polarity switch

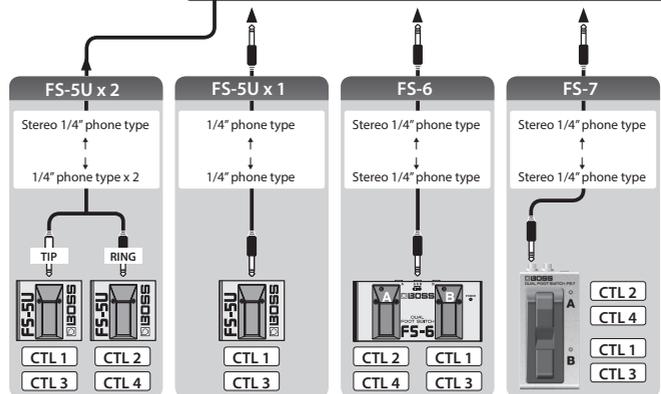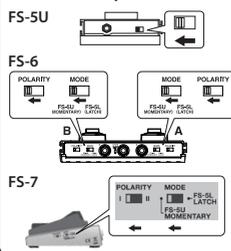

MIDI OUT connector

You can connect this to a MIDI-compatible effect unit and control it from the MS-3.

Clock out, program change, and control change messages are supported.

For details, refer to the parameter guide (PDF).




(USB) port

You can connect your computer via this port, and use your computer to edit and manage patches (p. 17).



Top Panel

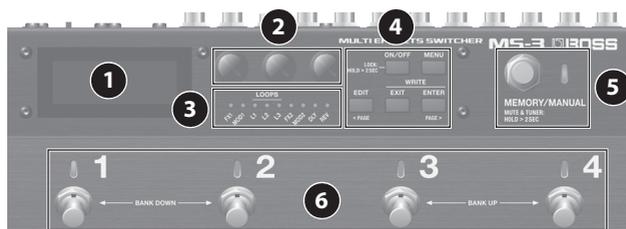

1	Display The MS-3 shows various information here.
	[1]–[3] knobs Use these to select or edit the values of parameters shown in the screen.  * Refer to “Operation of the [1]–[3] Knobs” (p. 7).
	On/Off indicators Show the status of each effect. On: lit, Off: unlit * In MUTE & TUNER mode, these indicators operate as TUNER indicators.
3	[ON/OFF] button When editing, press this to turn the selected effect on/off. Lock function In the play screen, long-press the [ON/OFF] button for two seconds or more to turn the lock function on, so that all buttons and the [1]–[3] knobs are disabled. This lets you prevent the settings from being changed inadvertently. Long-press the button once again to turn the lock function off.
	[MENU] button Press this to make system settings.
	[EDIT] (< PAGE) button Press this to make patch settings. • In screens that show page tabs, this operates as the [< PAGE] button to switch pages.

	[EXIT] button Press this to cancel an operation, or to return to the previous screen.
	[ENTER] ([PAGE >]) button Press this to confirm an operation. • In screens that show page tabs, this operates as the [PAGE >] button to switch pages. • In the play screen, use this to switch the display.
4	[MEMORY/MANUAL] switch Switches between memory mode (indicator lit blue) and manual mode (lit red). * Hold down the switch for two seconds or longer to enter MUTE & TUNER mode.
5	Number switch [1]–[4] In memory mode, use these to select patches. In manual mode, use these to operate the assigned function. When pressed simultaneously in memory mode * This does nothing in manual mode. • If you press [1] and [2] simultaneously, the bank number goes down each time you press the switches. (Bank down) • If you press [3] and [4] simultaneously, the bank number goes up each time you press the switches. (Bank up)
6	

Getting Ready

Screen Structure

WRITE UTILITY screen (p. 13)

WRITE UTILITY
WRITE EXCHANGE INITIALIZE

EXIT WRITE
EXIT ENTER

System settings (p. 15)

KNOB SETTING
PATCH BPM PATCH LVL
KNOB1 KNOB2 KNOB3

Use the [< PAGE] [PAGE >] buttons to change pages

EXIT ENTER

Use the [1]–[3] knobs to move the cursor

MENU screen (p. 15)

MENU
DISPLAY GLOBAL PLAY CTLOUT

MENU
MIDI PREF AUTO OFF RESET

EXIT MENU

Play screen (p. 10)

Memory mode

01-1 NATURAL CLEAN
PATCH BPM PATCH LVL

ENTER

01-1 NATURAL CLEAN
PATCH BPM PATCH LVL

MEMORY/MANUAL

Manual mode

01-1
FX1 MOD2 DLY
CORP S.DLY CHO SHGL
PATCH BPM PATCH LVL

EXIT EDIT

Tuner screen (p. 8)

01-1
A440Hz
PITCH MUTE
OUTPUT

MUTE & TUNER
Hold for two seconds

FX1 MOD1 L1 L2 L3 FX2 MOD2 DIV REV

Patch edit (p. 11)

Effect chain screen (p. 12)

01-1
FX1 MOD1 L1 L2 L3 NS
SELECT MOVE TYPE

01-1
EV MST 100 OUTPUT CTL
SELECT

EXIT ENTER

Use the [1]–[3] knobs to move the cursor

CTL, ASSIGN & MIDI SETTING screen (p. 12)

CTL, ASSIGN & MIDI SETTING
NUM1 NUM2 NUM3 NUM4

CTL, ASSIGN & MIDI SETTING
PATCH MIDI1 PATCH MIDI2 PATCH MIDI3 PATCH MIDI4

EXIT ENTER


Use the [< PAGE] [PAGE >] buttons to change pages

CTL IN1
FX1 TOGGLE OFF->ON
FUNC MODE ACTION


Use the [< PAGE] [PAGE >] buttons to change pages

Operation of the [1]–[3] Knobs


- When function names or parameters are shown in the lower line of the display, the [1]–[3] knobs correspond to those functions or parameters.

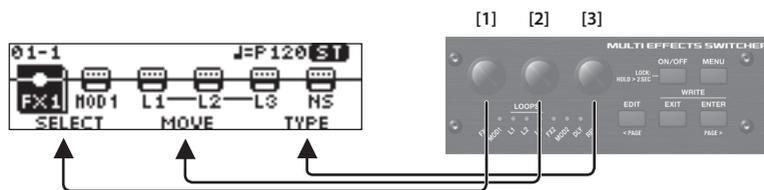

- In the CTL, ASSIGN & MIDI SETTING screen (p. 12), the WRITE UTILITY screen (p. 13), and the MENU screen (p. 15), you can operate any knob to move the cursor and select an icon.

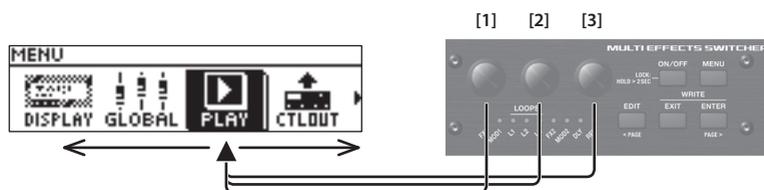


- In screens where knob or switch icons are shown, the [1]–[3] knobs correspond to those icons.

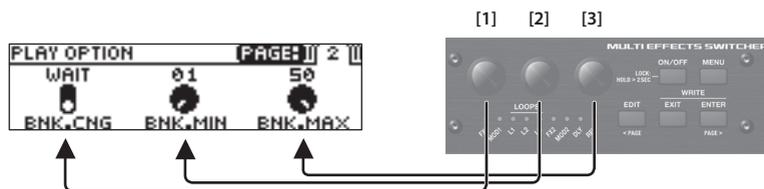

Switching Pages

- When page tabs are displayed on the screen, you can switch pages by pressing the [< PAGE] [PAGE >] buttons.

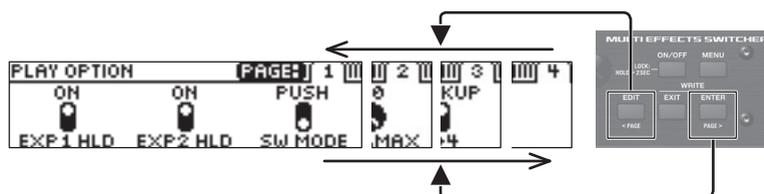

Getting Ready

Turning On/Off the Power

* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

When powering up

Turn on the power in the following order: this unit ([POWER] switch: ON) → connected equipment → guitar amp.

When powering down


Turn off the power in the following order: guitar amp → connected equipment → this unit ([POWER] switch: OFF).

Tuning the Guitar (TUNER)

1. Hold down the [MEMORY/MANUAL] switch for two seconds or longer.



The tuner screen appears.

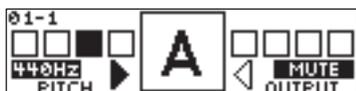

2. Play an open string, and tune it so that only the center indicator in the screen is lit.



MEMO

You can also tune while watching the On/Off indicators.

When the pitch is correct (lit green)

Low ← | → High



3. When you finish tuning, press once again the [MEMORY/MANUAL] switch.

Setting the standard pitch

In Tuner mode, you can turn the [1] knob to change the standard pitch of the tuner.

PITCH
435–445 Hz (default: 440 Hz)

Output setting

In the tuner screen, you can also change the output setting for when the tuner is in use by turning [3] knob.


OUTPUT	Explanation
MUTE	Sound will not be output while tuning.
BYPASS	While tuning, the sound of the guitar being input to the MS-3 will be output without change. All effects will be off.
THRU	Allows you to tune while hearing the current effect sound.

Playing

Patch Structure

A “patch” consists of a combination of settings for the MS-3’s built-in effects and the effect loops (L1–3). A set of four patches is called a “bank.”

Patches are managed by their bank (1–50) and number (1–4); the MS-3 can store 200 patches.

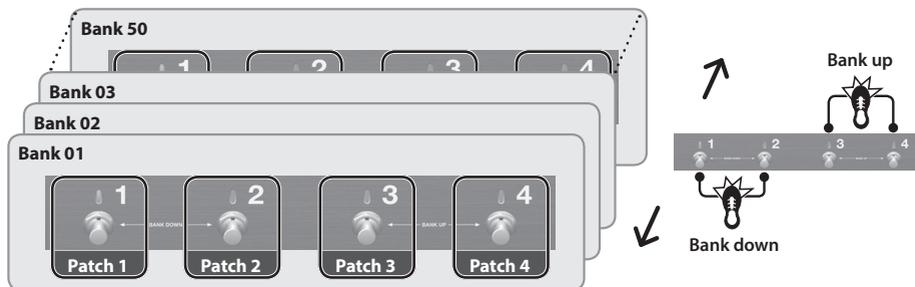

Switching Between Memory and Manual Modes

Memory mode (MEMORY/MANUAL indicator: lit blue)

This is the mode in which you recall and use the patches that are stored in the MS-3. Use number switches [1]–[4] to change patches.

Manual mode (MEMORY/MANUAL indicator: lit red)

This is the mode in which you operate the functions that are assigned by each patch to number switches [1]–[4].

1. Press the [MEMORY/MANUAL] switch.




Each time you press this switch, you alternate between memory mode and manual mode.

Switching Banks/Patches


1. Switch banks (01–50).

Press the number switch [3] and [4] simultaneously.

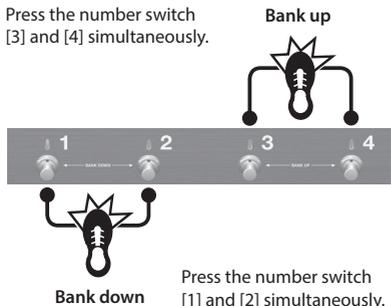

Press the number switch [1] and [2] simultaneously.

2. Press a number switch [1]–[4] to switch patches.

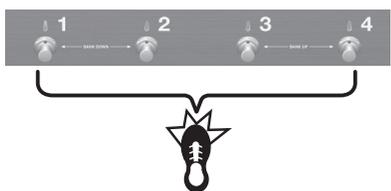

You can also change patches consecutively by turning the [1] knob.



When you select a patch, the On/Off indicator that are turned on for that patch are lit.




- * You can't switch patches unless you're in the Play screen (next item). Press the [EXIT] button to return to the Play screen, and then switch patches.

About the Play Screen

The screen that appears after you turn on the power is called the "Play screen."

In memory mode

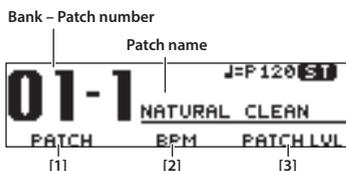

Parameters that can be adjusted using the [1]–[3] knobs


You can press the [ENTER] button to switch the screen.



Icon	Explanation
J=P 120	Master BPM
L	Output only OUTPUT L (mono output)
R	Output only OUTPUT R (mono output)
LR	Output the same signal from OUTPUT L and R
ST	Stereo output
f	Lock function is on

In manual mode

Parameters assigned to number switches [1]–[4]

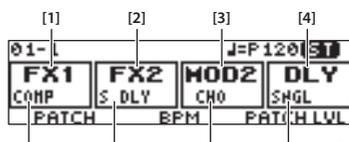

Effect type

- * If multiple parameters are assigned to one switch, a "+" symbol is shown at the lower right.


Editing the Settings of a Patch

Basic Operation


1. Recall the patch that you want to edit (p. 10).
2. Press the [EDIT] button.



The effect chain screen appears.

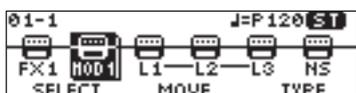

3. Use the [1] knob to choose the effect you're going to edit.

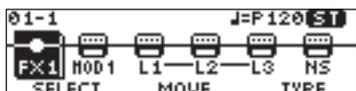

You can press the [ON/OFF] button to turn on/off the effect where the cursor is located (shown highlighted).




Effects that are turned on are indicated with icons. Effects that are turned off are indicated with “•”.

For details on the parameter, refer to the “Parameter Guide” (PDF file).

Icon	Explanation
	Choose from a variety of effect types. You can also choose the same effect for FX1 and FX2.
	Choose from various types of modulation effect. You can also choose the same effect for MOD1 and MOD2.
	Turn loop effects on/off.
	Choose from various types of delay.
	Choose from various types of reverb.
	Noise suppressor
	Control the volume. * This cannot be turned off.
	Adjust the tonal character of patches, and make other settings.
	Specify the patch level (the volume of the patch). When the cursor is moved here, the [3] knob adjusts this.
	Specify how sound is output from the OUTPUT jacks.
	Refer to “Changing the CTL/ASSIGN/MIDI Settings” (p. 12).

MEMO

If you've selected FX1, FX2, MOD1, MOD2, DLV, or REV, you can use the [3] knob to choose its effect type.

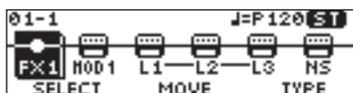

4. Press the [ENTER] button to enter the edit screen.



Editing the Settings of a Patch

MEMO

Pressing the [ON/OFF] button in the edit screen switches the effect's on/off status. This lets you hear what the effect is doing.

When tabs are displayed on the screen, you can switch pages by pressing the [< PAGE] [PAGE >] buttons.



- Use the [1]–[3] knobs to edit the value of the parameters shown in the screen.



- Press the [EXIT] button a number of times to return to the play screen.

Changing the Effect Connection Order

- In the effect chain screen, use the [1] knob to select the effect that you want to move.



NOTE

- You can't move L1–3. However, FX1, FX2, MOD1, MOD2, DLY, REV, NS, and FV can be freely moved before or after L1–3.
- MST, PATCH LVL, OUTPUT, and CTL cannot be moved.

- Use the [2] knob to move the selected effect.



Changing the CTL/ASSIGN/MIDI Settings

For each patch, you can make CTL, ASSIGN, and MIDI settings to operate a variety of parameters.

- In the effect chain screen, choose "CTL" with the [1] knob, and press the [ENTER] button.

The CTL, ASSIGN & MIDI SETTING screen appears.



- Use the [1]–[3] knobs to choose the controller that you want to edit.

Controllers that are turned on are indicated with icons. When controllers are turned off, "OFF" is indicated.

Icon	Explanation
 NUM1 NUM4	Specify the parameters that are controlled by number switches [1]–[4] in manual mode. * This works only in manual mode.
 MEMORY/MANUAL	Use the [MEMORY/MANUAL] switch to specify the parameter that you want to control.
 CURRENT NUMBER	Specify the parameter that is controlled when you operate the number switch of the currently selected patch in memory mode. (Example) 01-1 → number switch [1] * This works only in memory mode.
 EXP 1 EXP 2	Specify the parameters that are controlled by expression pedals (EXP 1, 2) connected to the CTL IN jacks.

Icon	Explanation
 CTL IN 1  CTL IN 4	Specify the parameters that are controlled by footswitches (CTL 1–4) connected to the CTL IN jacks.
 ASSIGN 1  ASSIGN 8	ASSIGN lets you make more detailed settings. For example, use ASSIGN if you want another parameter to also be operated at the same time in addition to the parameter operation of number switch [1]. You can make eight settings for each patch.
 PATCH MIDI 1  PATCH MIDI 4	Specify the MIDI messages that are transmitted when you switch patches. You can make four settings for each patch.

3. Press the [ENTER] button to enter the edit screen.



When page tabs are displayed on the screen, you can switch pages by pressing the [< PAGE] [PAGE >] buttons.

4. Use the [1]–[3] knobs to edit the value of the parameters shown in the screen.



5. Press the [EXIT] button a number of times to return to the play screen.

Saving a Patch

If you want to save the patch that you created, execute the Write operation.

* You can use dedicated software to save, exchange, initialize, or back up patches (p. 17).

NOTE

- If you do not save the patch, the edited settings will be lost when you turn off the power or switch to another patch.
- When you save, the patch that had been in the save-destination is overwritten.

1. Press the [EXIT] button and [ENTER] button simultaneously.




The WRITE UTILITY screen appears.



2. Choose “WRITE” with the [1]–[3] knobs, and press the [ENTER] button.

3. Choose the patch write destination (01–1–50–4) with the [1] knob, and press the [ENTER] button.

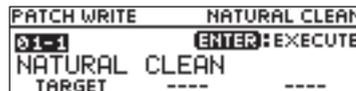

Here you can edit the name.

Controller	Operation
[1] knob	Changes the character
[2] knob	Moves the cursor
[3] knob	Selects the type of characters
[EDIT] button	Delete the character at the cursor location
[MENU] button	Insert a space at the cursor location

Editing the Settings of a Patch

4. To save the patch, press the [ENTER] button.

* If you decide to cancel, press the [EXIT] button.

Once the patch has been saved, you are returned to the Play screen.

Exchanging Patches

Here's how to exchange the currently selected patch with a patch that you specify.

1. In the WRITE UTILITY screen, choose "EXCHANGE" with the [1]–[3] knobs, and press the [ENTER] button.

2. Choose the exchange-destination patch with the [1] knob.



3. To exchange the patches, press the [ENTER] button.

* If you decide to cancel, press the [EXIT] button.


Once the patches has been exchanged, you are returned to the Play screen.

Initializing a Patch

Here's how to return the selected patch to the default values.

1. In the WRITE UTILITY screen, choose "INITIALIZE" with the [1]–[3] knobs, and press the [ENTER] button.

2. Choose the initialize-destination patch with the [1] knob.

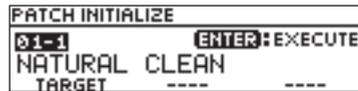

3. To initialize the patch, press the [ENTER] button.

* If you decide to cancel, press the [EXIT] button.

Once the patch has been initialized, you are returned to the Play screen.

System Settings (MENU)

Settings that are shared by the entire MS-3 are called “system settings.”

For details on the parameter, refer to the “Parameter Guide” (PDF file).

Basic Operation

1. Press the [MENU] button.



The MENU screen appears.




2. Use the [1]–[3] knobs to choose the item that you want to edit.

Icon	Explanation
 DISPLAY	Adjust the contrast of the display.
 GLOBAL	Adjust the tonal character of each frequency region.
 PLAY	Make settings for the option functions during performance.
 CTL OUT	Specify how the CTL OUT CTL 1/2 jack operates.
 KNOB	Specify the functions of knobs [1]–[3] operated in the play screen.
 MIDI	Specify whether MIDI clock messages are transmitted.
 PREF	Specify whether the MS-3's switches, external pedals, and other settings will have independent settings for each patch or will share the same settings for all patches.


Icon	Explanation
 AUTO OFF	Refer to “Enabling/Disabling the Auto-Off Function” (p. 16).
 F. RESET	Refer to “Restoring the Factory Default Settings (Factory Reset)” (p. 16).

Press the [ENTER] button to enter the edit screen.

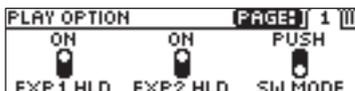

When page tabs are displayed on the screen, you can switch pages by pressing the [<PAGE>] [PAGE>] buttons.

3. Use the [1]–[3] knobs to edit the value of the parameters shown in the screen.

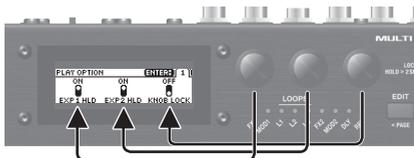

4. Press the [EXIT] button a number of times to return to the play screen.

* There is no Write function for the system settings. When you specify a parameter setting, the change is saved and applied automatically.

Adjusting the Display Contrast

You can adjust the brightness of the display.

1. In the MENU screen, choose “DISPLAY” with the [1]–[3] knobs, and press the [ENTER] button.
2. Adjust the contrast with the [1] knob.



System Settings (MENU)

Enabling/Disabling the Auto-Off Function

If you set the auto-off function to “On,” the power will turn off automatically when 10 hours have passed since you last played or operated the unit. The display will show a message approximately 15 minutes before the power turns off.

- * With the factory settings, this function is turned “On.”

If you want to have the power remain on all the time, turn it “OFF.”

1. In the MENU screen, choose “AUTO OFF” with the [1]–[3] knobs, and press the [ENTER] button.
2. Set the On (AUTO OFF) or OFF with the [1] knob.




Restoring the Factory Default Settings (Factory Reset)

Restoring the MS-3’s settings to their original factory default settings is referred to as “Factory Reset.” Not only can you return all of the settings to the values in effect when the MS-3 was shipped from the factory, you can also specify the items to be reset.

- * When you execute “Factory Reset,” the settings you made will be lost. Save the data you need to your computer using the dedicated software.

1. In the MENU screen, choose “F. RST” with the [1]–[3] knobs, and press the [ENTER] button.
2. Choose the type of settings to be restored to the factory default settings with knobs [1] and [3].

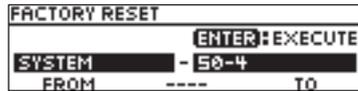

Parameter	Value	Explanation
[1] knob		
FROM	SYSTEM	System parameter settings
	01-1-50-4	Settings for Patch Numbers 01-1-50-4
[3] knob		
TO	SYSTEM	System parameter settings
	01-1-50-4	Settings for Patch Numbers 01-1-50-4


3. Press the [ENTER] button.
 4. To execute the factory reset, use the [1] knob to select “OK,” and press the [ENTER] button.
- * If you decide not to execute the factory reset, select “CANCEL” and press the [ENTER] button.

Once the Factory Reset is complete, you are returned to the Play screen.

Using a Computer to Edit/Back up Patches

By connecting the MS-3 to a computer via USB, using the dedicated software allows you to do the following:

- Edit patch settings
- Name patches
- Organize patches in order and switch them around
- Back up patches and system settings, and return to the backed up settings
- Display the “Parameter Guide,” “Application Guide,” and “MIDI Implementation” (PDF file) on your computer

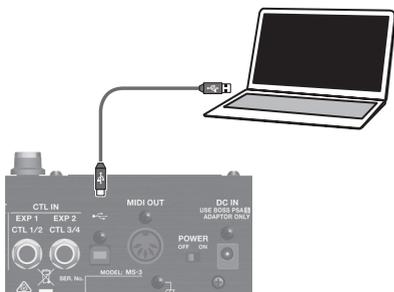

- * Use a commercially available USB 2.0 cable to make this connection.

Installing the USB Driver

You must install the USB driver before connecting to a computer.

Please download the USB driver from the BOSS website.

Install this special driver before making a USB connection.

For further details, refer to the Readme.htm file that comes with the download.

➔ <https://www.boss.info/support/>

The program you need to use, and the steps you need to take to install the USB driver will differ depending on your computer setup, so please carefully read and refer to the Readme.htm file that comes with the download.

Installing the Dedicated Software

You can easily download dedicated software from the BOSS website.

➔ <https://www.boss.info/support/>

For details on how to use the software, refer to the Readme.htm file that comes with the download.

Appendix

Error Messages

Display	Problem	Action
USB OFFLINE!	Transmissions from the connected device have been interrupted. This message also appears when the power to the connected device has been turned off. It does not indicate damage.	Check to make sure no cable is disconnected and that there are no shorts.
DATA WRITE ERROR!	Writing to the memory for storage of user data failed.	The unit may be damaged. Consult the nearest Roland service center.
LOCKED!	The [1]–[3] knobs and buttons are locked.	Turn “Lock function” off (p. 5).

Attaching the Rubber Feet


You can attach the rubber feet (included) if necessary.

1. Attach the rubber feet in alignment with the marks on the bottom of the unit.



- * When turning the unit over, be careful so as to protect the buttons and switches from damage. Also, handle the unit carefully; do not drop it.
- * Attach the rubber feet correctly. If they are not attached correctly, they could deform or malfunction.

Block Diagram

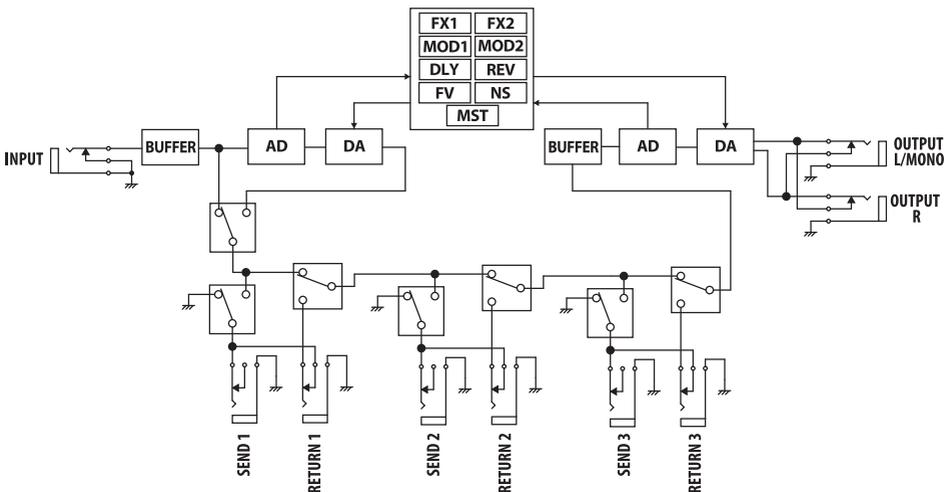

Main Specifications

BOSS MS-3: Multi Effects Switcher

Modes	Memory mode/Manual mode
Loops	3
AD Conversion	24 bits + AF method AF method (Adaptive Focus method) This is a proprietary method from Roland & BOSS that vastly improves the signal-to-noise (SN) ratio of the AD and DA converters.
DA Conversion	24 bits
Sampling Frequency	44.1 kHz
Effects	112 types
Patches	200
Nominal Input Level	INPUT: -10 dBu LOOPS L1-3 RETURN: -10 dBu
Maximum Input Level	INPUT: +7 dBu LOOPS L1-3 RETURN: +7 dBu
Input Impedance	INPUT: 1 MΩ
Nominal Output Level	OUTPUT L/MONO, R: -10 dBu LOOPS L1-3 SEND: -10 dBu
Output Impedance	OUTPUT L/MONO, R: 1 kΩ
Recommended Load Impedance	OUTPUT L/MONO, R: 10 kΩ or greater LOOPS L1-3 SEND: 10 kΩ or greater
Controls	Number switch 1-4, MEMORY/MANUAL switch ON/OFF button, MENU button, EDIT button, EXIT button, ENTER button 1-3 knobs POWER switch
Display	Graphic LCD (132 x 32 dots, backlit LCD)
Indicator	Number indicator 1-4, MEMORY/MANUAL indicator On/Off indicators (MOD1, L1-3, FX2, MOD2, DLY, REV)
Connectors	INPUT jack: 1/4-inch phone type LOOPS L1-3 SEND jacks: 1/4-inch phone type LOOPS L1-3 RETURN jacks: 1/4-inch phone type OUTPUT (L/MONO, R) jacks: 1/4-inch phone type CTL OUT CTL1/2 jack: 1/4-inch TRS phone type CTL IN EXP1 CTL1/2 jack, CTL IN EXP2 CTL3/4 jack: 1/4-inch TRS phone type USB COMPUTER port: USB type B MIDI OUT connector DC IN jack
Power Supply	AC adaptor
Current Draw	280 mA
Dimensions	275 (W) x 97 (D) x 68 (H) mm 10-7/8 (W) x 3-7/8 (D) x 2-11/16 (H) inches
Weight (including battery)	1.1 kg 2 lbs 7 oz
Accessories	AC adaptor, Rubber feet x 4, Owner's manual, Leaflet "USING THE UNIT SAFELY"
Options (sold separately)	Footswitch: FS-5U, FS-5L, FS-6, FS-7 Expression pedal: EV-30, FV-500L, FV-500H, Roland EV-5

* 0 dBu = 0.775 Vrms

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

USING THE UNIT SAFELY

⚠ WARNING

Concerning the Auto Off function

The power to this unit will be turned off automatically after a predetermined amount of time has passed since it was last used for playing music, or its buttons or controls were operated (Auto Off function). If you do not want the power to be turned off automatically, disengage the Auto Off function (p. 16).



⚠ WARNING

Use only the supplied AC adaptor and the correct voltage

Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.



⚠ CAUTION

Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.

- Included Parts
Rubber feet (p. 18)



Handle the ground terminal carefully

If you remove the screw from the ground terminal, be sure to replace it; don't leave it lying around where it could accidentally be swallowed by small children. When refastening the screw, make that it is firmly fastened, so it won't come loose.



IMPORTANT NOTES

Placement

- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.

Repairs and Data

- Before sending the unit away for repairs, be sure to make a backup of the data stored within it; or you may prefer to write down the needed information. Although we will do our utmost to preserve the data stored in your unit when we carry out repairs, in some cases, such as when the memory section is physically damaged, restoration of the stored content may be impossible. Roland assumes no liability concerning the restoration of any stored content that has been lost.

Additional Precautions

- Any data stored within the unit can be lost as the result of equipment failure, incorrect operation, etc. To protect yourself against the irretrievable loss of data, try to make a habit of creating regular backups of the data you've stored in the unit.
- Roland assumes no liability concerning the restoration of any stored content that has been lost.
- Never strike or apply strong pressure to the display.
- Use only the specified expression pedal (FV-500H, FV-500L, EV-30, and Roland EV-5; sold separately). By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

- Do not use connection cables that contain a built-in resistor.
- Depending on the circumstances of a particular setup, you may experience a discomforting sensation, or perceive that the surface feels gritty to the touch when you touch this device, the metal portions of other objects, such as guitars. This is due to an infinitesimal electrical charge, which is absolutely harmless. However, if you are concerned about this, connect the ground terminal (see figure) with an external ground. When the unit is grounded, a slight hum may occur, depending on the particulars of your installation. If you are unsure of the connection method, contact the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."



Unsuitable places for connection

- Water pipes (may result in shock or electrocution)
- Gas pipes (may result in fire or explosion)
- Telephone-line ground or lightning rod (may be dangerous in the event of lightning)

Intellectual Property Right

- It is forbidden by law to make an audio recording, video recording, copy or revision of a third party's copyrighted work (musical work, video work, broadcast, live performance, or other work), whether in whole or in part, and distribute, sell, lease, perform or broadcast it without the permission of the copyright owner.
- Do not use this product for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this product.
- This product contains eParts integrated software platform of eSQL Co., Ltd. eParts is a trademark of eSQL Co., Ltd. in Japan.
- Roland and BOSS are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.