

Safety

1. To prevent possible hearing damage, do not listen at high volume levels for long periods.
2. Risk of explosion if battery is replaced by an incorrect type, dispose of battery according to the instruction.

3. Recycle your products

The WEEE logo (shown at right) appears on the product to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by transporting to an appropriate collection point for recycling of such hazardous waste.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

IC Warning:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following 2 conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty

Eartec items are warrantied against defects in material and/or factory workmanship for a set period from the date of purchase. Standard repairs due to misuse or wear and tear, as well as replacement parts including but not limited to batteries, padding, USB cable, etc. are excluded. Shipping to Eartec is at customer's expense, Eartec will pay for return ground shipping if the product warranty applies to the repair. Call for details.

Shipping

Prior to returning your headset for warranty or service you must call Eartec for an RA (return authorization) number: 1.800.399.5994.

General Service

All repair work will be performed for the cost of replacement parts and return shipping from the Eartec factory.

Service / Eartec

145 Dean Knauss Drive
Narragansett, RI. 02882

www.eartec.com
1.800.399.5994



**EXCELLENT
PERFORMANCE**
Effective range up to
1/2 mile.

 
**WEAR ON LEFT OR
RIGHT EAR** Mic boom
swivels 270 degrees.

LITHIUM BATTERIES
Provide continuous 8 hr
operation and are field
replaceable.

EVADE CMod Series

Communicate in Total Comfort

Light Industrial Wireless System

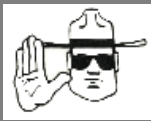

IMPORTANT

All units marked MAIN must be turned “ON”
to link the corresponding
REMOTE headsets & CMod.



Battery

The CMod and all EVADE headsets are powered by a Lithium Polymer battery that will operate 6-8 hours when fully charged.

Charging

1. Batteries are charged via the multi-charger.
2. Insert the batteries making sure the contacts are properly aligned.
3. RED: Charging; GREEN: Fully Charged.

Installation

1. The CMod: Slide battery compartment open, insert battery, click closed.
2. To eject battery press the release button located at the top of the compartment.
3. Insert battery by snapping onto place.

Low Indicator

A repetitive beep (every 20 seconds) indicates low power – battery should be charged or replaced. to turn off.

Battery Care

To preserve optimum charge level remove battery from headsets when not in use.

 


The CMod Battery Slot



The CMod

- A - Charge Jack
- B - Battery Insert
- C - On / Off Dial
- D - Separate / Combine Switch
- E - Interlink Jack
- F - Headset Jack
- G - Belt Clip
- H - Programming Buttons

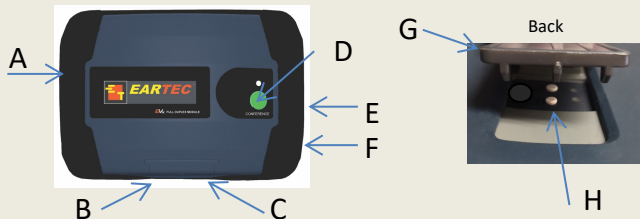

Operation

System Startup – Turn ON all units marked MAIN.

1. Turn ON each EVADE MAIN headset by pressing the power button located above the volume controls. A flashing green LED on the earcup confirms the headset is in search mode.
2. Select AC adapter or battery, then power up The CMod by rotating the ON/OFF/Volume dial clockwise. LED confirms power is on.
3. Turn ON each EVADE Remote headset by pressing the power button located above the volume controls.
4. Flashing LEDs change to solid green to indicate that headsets have successfully connected.

Set Volume

Select the desired volume by slowly clicking the up or down buttons. An audible tone reflects volume level. A double tone indicates max volume.

Note: If using a wired headset with the CMod, adjust sound level with volume dial.

Conference Mode

Each time The CMod is turned on the default setting will be dual channel. Up to 8 headsets can communicate privately on Ch 1 & Ch 2. Pressing the green conference button connects the channels to link all 16 headsets (LED turns red).

 
Shut Down

Rotate The CMod on/off/vol dial until it clicks off. Press and hold power button on the EVADE headsets for 4-5 seconds to turn off.

To preserve optimum charge level remove battery from headsets when not in use.



Interlink Option

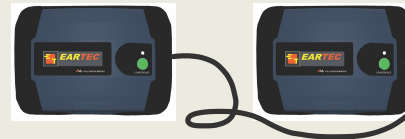

Expand system - Interlink two Conference Modules.

1. Power ON both modules.
2. Connect with HDMI cable via interlink jack.
3. Press ONE Separate/Combine Switch.
4. Both LEDs will turn red, indicating Conference Mode.

Headset Adjustments



Position microphone one-finger width from your mouth.
Speak into the front- indicated by TALK.



Boom swivels so headset can be worn on left or right.



Microphone mutes when boom is in “UP” position.