

PAR 38B FLOOD (E117)

User Guide

©2018 **Eliminator Lighting** all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. Eliminator logo and identifying product names and numbers herein are trademarks of Eliminator Lighting. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-Eliminator brands and product names are trademarks or registered trademarks of their respective companies.

Eliminator Lighting and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Eliminator Lighting USA

4295 Charter Street, Los Angeles, CA 90058

Tel: (323) 948-0480 | Fax: 888-287-5224 | www.eliminatorlighting.com | info@eliminatorlighting.com

D O C U M E N T V E R S I O N

An updated version of this document may be available online.

Please check www.eliminatorlighting.com for the latest revision/update of this document before beginning installation and use.

| Date | Document Version | Notes |
|----------|------------------|------------------|
| 11/11/18 | 1 | Updated release. |

CONTENTS

| | |
|---|----|
| General Information | 4 |
| Limited Warranty (USA Only) | 4 |
| Safety Guidelines | 5 |
| Maintenance Guidelines | 7 |
| Overview | 8 |
| Installation Guidelines | 9 |
| Trouble Shooting and Frequently Asked Questions | 12 |
| Technical Specifications | 12 |

GENERAL INFORMATION

INTRODUCTION

Please read and understand all instructions in this manual carefully and thoroughly before attempting to operate this product. These instructions contain important safety and use information.

UNPACKING: This product has been thoroughly tested and has been shipped in perfect condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your product for damage and be sure all accessories necessary to assemble the product have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this product to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

CUSTOMER SUPPORT

Tel: (323) 948-0480 | Fax: 888-287-5224 | www.eliminatorlighting.com | info@eliminatorlighting.com

LIMITED WARRANTY (USA)

Eliminator Lighting warranty is valid from the date of purchase for a period of one year (365 days) and covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.

WARRANTY RETURNS

All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

SAFETY GUIDELINES

To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. **ELIMINATOR LIGHTING** is not responsible for injury and/or damages resulting from the misuse of these devices due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of these devices and only the original rigging parts included with these devices should be used for installation. Any modifications to these devices and/or the included mounting hardware will void the original manufactures warranty and increase the risk of damage and/or personal injury.



THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS DEVICE. DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR MANUFACTURES WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS DEVICE AND/OR THE DISREGARD OF SAFETY GUIDELINES IN THIS MANUAL VOID THE MANUFACTURES WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.



**NEVER REPLACE LAMP IN THIS FIXTURE WHILE IN USE!
UNPLUG POWER BEFORE REPLACING LAMP!
NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!
KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!**



**INDOOR / DRY LOCATIONS USE ONLY!
DO NOT EXPOSE DEVICES TO RAIN AND/OR MOISTURE!**



**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!
RETINA INJURY RISK - MAY INDUCE BLINDNESS!
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**

SAFETY GUIDELINES

DO NOT TOUCH fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before replacing lamp.

DO NOT shake fixture, avoid brute force when installing and/or operating fixture.

DO NOT operate fixture if the power cord is frayed, crimped, damaged and/or if any of the power cord connectors are damaged and do not insert into the fixture securely with ease. **NEVER** force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace it immediately with a new one of similar power rating.

DO NOT block any air ventilation slots. All fan and air inlets must remain clean and never blocked. Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.

When installing fixture in a suspended environment, always use mounting hardware that is no less than M10 x 25 mm, and always install fixture with an appropriately rated safety cable.

Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.

During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time. Consistent operational breaks will ensure fixture will function properly for many years.

ONLY use the original packaging and materials to transport the fixture in for service.

REPLACEMENT LAMP – LL-PAR 38 150W 110V LAMP

ALWAYS disconnect devices from main power source before performing any cleaning.

ALWAYS disconnect light from main power before replacing lamp.

NEVER remove the ground prong from the power cable.

Power cords should be safely routed and secured so they are not likely pinched.

Disconnect power cords during long periods of non-use.

Only use recommended rigging hardware as described in this guide.

These devices should be serviced by qualified service personnel when:

- The power cords or plugs have become damaged.
- Objects have fallen on and/or liquid has spilled into the devices.
- The devices have been exposed to rain and/or moisture.
- The devices do not operate normally or exhibit a marked change in performance.

MAINTENANCE GUIDELINES



DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!

CLEANING

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the device operates in: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the mirror ball and/or light fixture optics. Clean the external lens of the mirror ball surface and the front lens of the light at least every 20 days with a soft cloth to avoid dirt/debris accumulation

NEVER use alcohol, solvents, or ammonia-based cleaners.

MAINTENANCE

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside these devices, please refer all other service issues to Eliminator Lighting. Should you need any spare parts, please order genuine parts from Eliminator Lighting.

Please refer to the following points during routine inspections:

A detailed review by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.

Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation resulting in damage or injury as larger parts could fall.


Check for any deformations on the light housing, lens, gel frame, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations could allow for dust to enter into the devices. Damaged rigging points or unsecured rigging could cause the devices to fall and seriously injure a person(s).

Electric power supply cables must not show any damage, material fatigue or sediments.

OVERVIEW



INCLUDED ITEMS

- (1) Metal Par Can with Power Cord
- (1) LL-Par-38 Lamp
- (1) Socket
- (1) Gel Frame

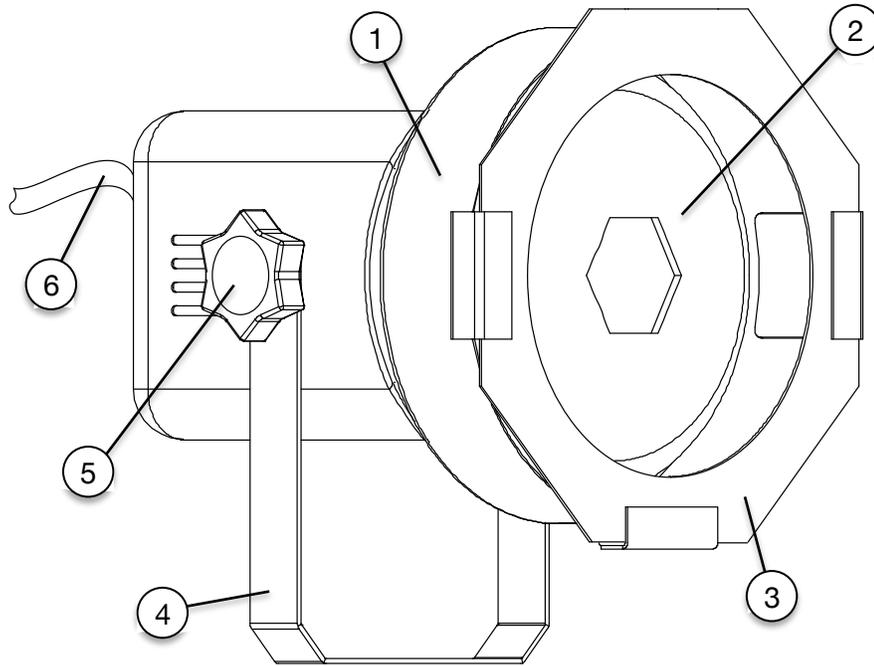

- 1. Light Housing
- 2. Lamp (LL-Par 38)
- 3. Gel Frame Holder
- 4. Yoke / Mounting Bracket
- 5. 6-Point Knob
- 6. Power Cord

DIMENSIONS

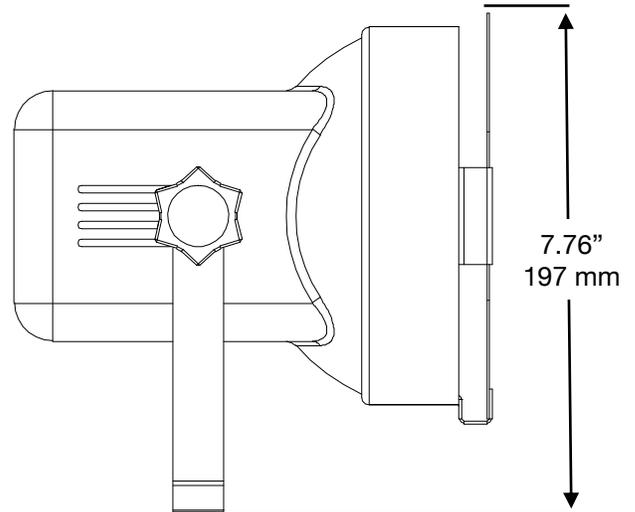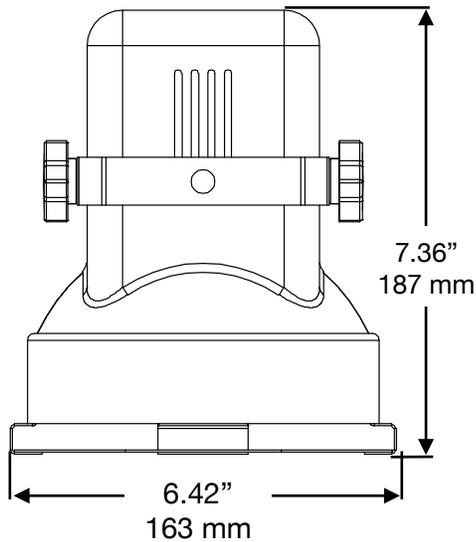

INSTALLATION GUIDELINES



FLAMMABLE MATERIAL WARNING

Keep devices minimum 5.0 feet (1.5m) away from flammable materials and/or pyrotechnics.



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



DO NOT INSTALL THIS DEVICE IF YOU ARE NOT QUALIFIED TO DO SO!

OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE, INCLUDING AMONGST OTHERS CALCULATING WORKING LOAD LIMITS, INSTALLATION MATERIAL BEING USED, AND PERIODIC SAFETY INSPECTION OF ALL INSTALLATION MATERIAL.

IF YOU LACK THESE QUALIFICATIONS, DO NOT ATTEMPT THE INSTALLATION YOURSELF. IMPROPER INSTALLATION CAN RESULT IN BODILY INJURY.

BEFORE RIGGING/MOUNTING FIXTURE TO ANY METAL TRUSS/STRUCTURE OR CEILING, A PROFESSIONAL EQUIPMENT INSTALLER MUST BE CONSULTED TO DETERMINE IF THE METAL TRUSS/STRUCTURE OR CEILING IS PROPERLY CERTIFIED TO SAFELY HOLD THE WEIGHT OF THE LIGHT FIXTURE. BEFORE MOUNTING FIXTURE TO ANY SURFACE OR STRUCTURE, MAKE SURE THE SURFACE OR STRUCTURE CAN HOLD A MINIMUM POINT LOAD OF 10 TIMES THE WEIGHT OF THE DEVICES.

MAKE SURE SCREWS AND/OR ANCHOR BOLTS (NOT INCLUDED) FIT INTO MOUNTING HOLES!

MAKE SURE TO DRILL SCREWS AND/OR ANCHOR BOLTS INTO WOOD OR METAL!

DO NOT MOUNT THE FIXTURE TO A CEILING SURFACE MADE OF DRY WALL!

FOR ADDED PROTECTION, MOUNT FIXTURE IN AREAS OUTSIDE WALKING PATHS, SEATING AREAS, OR IN AREAS WERE UNAUTHORIZED PERSONNEL CAN REACH THE FIXTURE.

NEVER STAND DIRECTLY BELOW THE FIXTURE WHEN MOUNTING, REMOVING OR SERVICING.

FIXTURE MUST ALL BE INSTALLED FOLLOWING ALL LOCAL, NATIONAL, AND COUNTRY COMMERCIAL ELECTRICAL AND CONSTRUCTION CODES AND REGULATIONS.

DO NOT EXCEED AMBIENT OPERATING TEMPERATURE RANGE OF 140°F. (60°C)


INSTALLATION GUIDELINES

AIMING THE LIGHT SOURCE

Experiment with different angles and distances before mounting light to achieve desired result.


MOUNTING LIGHT SOURCE

Light can be mounted onto a truss using an Eliminator Lighting (not included) clamp, or to a flat surface using the mounting yoke hole along the inside. Ceiling surface must support 10 times the total weight of the light. **Please consult a professional for ceiling installation guidance.**

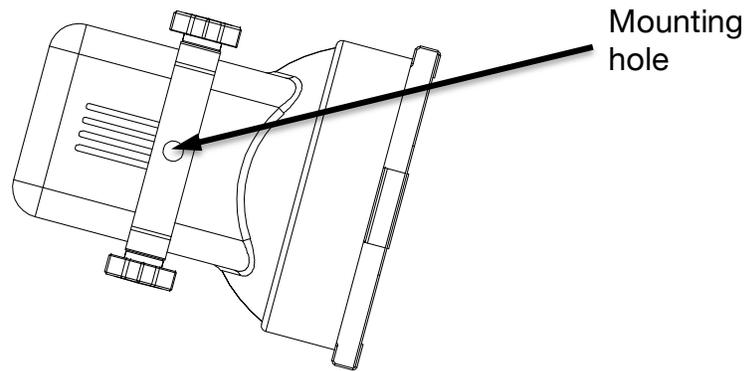

ADJUSTING THE AIM

To adjust the aim of the fixture, loosen the 6-point knobs on each side of the yoke by turning counter-clockwise. Adjust light as needed and tighten knobs by turning knobs clockwise.

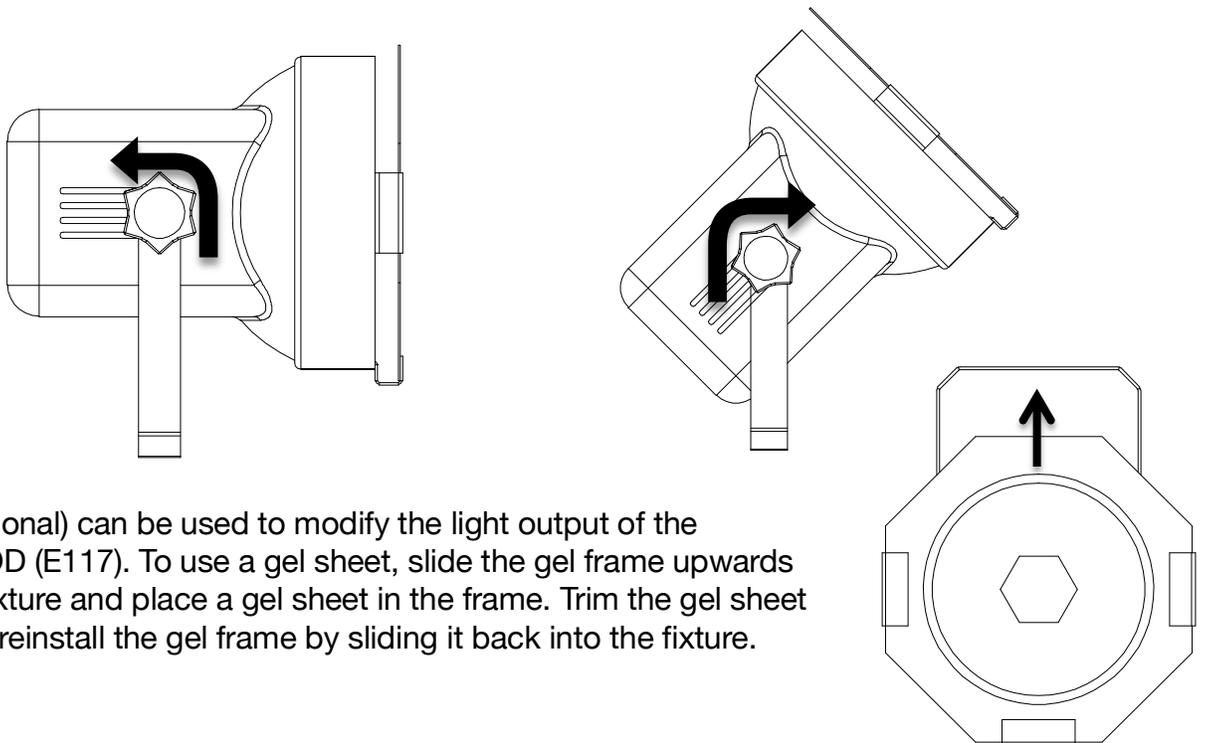

GEL FRAME

Gel sheets (optional) can be used to modify the light output of the PAR-38B FLOOD (E117). To use a gel sheet, slide the gel frame upwards from the light fixture and place a gel sheet in the frame. Trim the gel sheet (if desired) and reinstall the gel frame by sliding it back into the fixture.

LAMP REPLACEMENT

Make sure light is disconnected from the power source.
Remove Gel Frame. Unscrew bulb by turning counter clockwise.
Replace bulb and reassemble.

TROUBLE SHOOTING TIPS

The light does not turn ON

1. Confirm the light has AC power.
2. Check if circuit breaker that controls the AC outlet the light is plugged into is not tripped.
3. Confirm the AC power cord from the light is not damaged or cut.
4. Confirm the light bulb is not damaged or loose.
5. If none of these solutions work, please contact Eliminator Lighting.

FREQUENTLY ASKED QUESTIONS

Listed below are a few answers to common questions users may have.

1. Can the PAR 38B FLOOD (E117) be mounted onto to a ceiling?

Yes, it can be installed onto a flat ceiling surface that can support 10 times the combined total weight of the attached fixture and any mounting accessories. Careful planning must be used when calculating the combined weight and determining if the flat ceiling surface can support the weight of the fixture. **PLEASE CONSULT A PROFESSIONAL FOR CEILING INSTALLATION GUIDANCE!**

2. What is the replacement bulb?

Replacement Lamp: LL-PAR 38 150W 110V LAMP

3. How do you clean the light fixture?

Clean the external surface and lens at least every 20 days with a soft cloth to avoid dirt/debris accumulation. **NEVER** use alcohol, solvents, or ammonia-based cleaners.

4. Is the light DMX compatible?

No. However, a variety of lighting fixtures and options are available at www.eliminatorlighting.com.

4. Can the light stand freely on the floor?

Eliminator Lighting recommends mounting the fixture to a base or fixture for best results.

TECHNICAL SPECIFICATIONS

BULB/LAMP - LL-PAR 38 150W 110V LAMP

SIZE / WEIGHT

Length: 7.36" (187 mm)
Height: 7.76" (197 mm)
Width: 6.42" (163 mm)
Weight: 1.81 lbs. (.82 kg)

ELECTRICAL / THERMAL

AC 120V/ 60Hz

Specifications subject to change without any prior written notice.

