 


Product introduction:

- 1. Three-axis gyro gimbal stabilizer
- 2. Mode:
 - > Follow Mode
 - > Lock Mode i.e. Flashlight Mode (Pan Follow)
 - > Lock Mode i.e. Flashlight Mode
- 3. Use precision brushless electrical machine
- 4. One-button brainpower start function
- 5. Don't need to adjust any parameters, when the phone or gopro installed, it will keep balance.
- 6. Suit for Gopro and kinds of specification smartphones

Packing list:

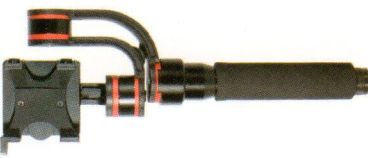

Stabilizer body*1



Charger set*1



18350 battery*3



Optional
GoPro bracket *1



Optional
Counter weight*1



Optional
18650 extension tube

3 axis balance adjustment:




Pitch angle range
-90°~90° (Follow Mode)
-90°~180° (Lock Mode)



Roll angle range
-45°~90° (Follow Mode)



Yaw angle range
-150°~150° (Follow And Lock Mode)

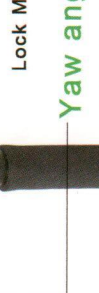

Press twice
Lock Mode i.e. Flashlight Mode (Pan Follow)



Press thrice
Lock Mode i.e. Flashlight Mode

Phone installment:



Push open the phone clamp, put the iPhone into the clamp. By adjusting the iPhone to left or right make the stabilizer reached a certain level will be OK



if use iPhone 6plus, please put counter weight mounted on the motor neutral lateral screw hole support.



NO YES YES YES YES YES


Gopro installment:



1. Push open the phone clamp, put the bracket into the clamp



2. Put the Gopro on the bracket

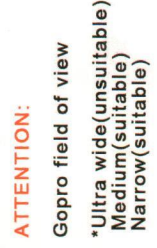

ATTENTION:
GoPro field of view
*Ultra wide(unsuitable)
Medium(suitable)
Narrow(suitable)

Vertical Start:

Keep the battery positive (raised part) into the handle, before starting the phone or GOPRO, keep the basic balance of it, if unbalanced or in a very oblique angle sensor, please don't start to cause the sensor misjudgment! (In case of shaking, just hand righting the stabilizer) When using the Large-screen phone, hold the stabilizer gently in your left hand

Attention:

- 1. Only applies to lithium battery 18350 or 18650
- 2. Battery charger:
Red light battery charging, blue light full charged.

FAQ:

- 1. Why my stabilizer kept dithering or couldn't work after turning it on?
before pressing the power switch, please make sure the stabilizer is balanced and confirm the battery is fully charged.
- 2. When use the stabilizer for a long time, why it is unable to work well or the motor makes abnormal sound?
Please check the battery power level. Restart it after replacing the batteries
- 3. During shooting, touch the stabilizer carelessly to make it dithering how should we do?
Hold the stabilizer gently in a right direction, then you can continue to use.