

FP FLASHPOINT

UC46

Multi Battery Charger

for the XPLOR 600, 600Pro and 400 Pro

FPPPUC46

Forward

Thank you for purchasing Flashpoint USB Charger UC46. This charger can charge the batteries of XPLOR 400 Pro (battery model: WB400P), XPLOR 600 series (battery model: WB87) and XPLOR 600 Pro (battery model: WB26) outdoor flashes, which offers great portability in outdoor shooting.

Main Features:

- Can charge WB87, WB400P and WB26 lithium batteries.
- Set the charging orders according to your requirements.
- With easy operation.
- Extremely portable.

Note:

1. This charger is only suitable to the specified battery models. The damaged caused by violation operations is not within the scope of the warranty.
2. Please read the instruction manual carefully before operation.

Warning

- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Keep out of reach of children.
- ⚠ The charger will get hot during charging and can be safely used.
- ⚠ Do not cover the charger and its battery during charging.
- ⚠ This product should be placed in cool, dry and ventilated area.
- ⚠ Please disconnect the power source if any abnormal phenomenon occurs in charger and batteries.


Includes

1. Charger
2. Type-C USB Cable
3. 30W PD Adapter
4. Instruction Manual



Names of Part

1. Type-C USB Charging Port
2. DC Charging Port
3. Charging Priority Selection Button
4. Display Screen
5. XPLOR 600 Series Battery(WB87) Charging Connect Cable
6. XPLOR 400 Pro Battery(WB400P) Charging Connect Cable
7. XPLOR 600 Pro Battery(WB26) Charging Connect Cable
8. Connect Cable Compartment

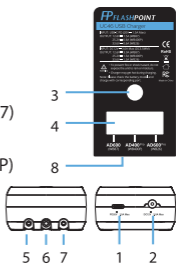

Operation

1. Choose the corresponding charging cable according to the different battery models.
2. Connect to the power source.
3. Charging priority:

(1) To charge one battery, just connect the charging connect cable to power source and the charger will work.




(2) If you want to charge WB87, WB400P and WB26 batteries at the same time, the charging order will be as follows by default:

- ① WB87
- ② WB400P
- ③ WB26

If you want to charge the battery preferentially, press down the charging priority selection button.



4. Fully charged:

when the battery is in charging, the corresponding screen will display  and the battery grid will be blinking.

5. Fully charged:

when getting fully charged, the corresponding battery level indication will show full level. If there are three batteries installed, the charger will automatically charge another battery in the default order after fully charging the former one until all the battery level indication show full level.



Technical Data

Model	UC46		
USB-C Power Supply	Input 20V/1.5A	Output	Charging Time
		12.6V/1.5A(WB87)	Approx.4.5 hours
		25.2V/0.6A(WB400P)	Approx.3.5 hours
		33.6V/0.6A(WB26)	Approx.3.5 hours
DC Power Supply (DC3.5mm)	12V/3A	12.6V/3A(WB87)	Approx.2 hours
		25.2V/1.3A(WB400P)	Approx.1.5 hours
		33.6V/1.3A(WB26)	Approx.1.5 hours
Operation Environment Temperature	-5°C ~ 40°C		
Dimension	108*60*32.5mm		
Weight	158g		

One Year Flashpoint Limited Warranty

Flashpoint warrants to the original purchaser that your Flashpoint USB Charger UC46 shall be free from defects in material and workmanship for the period of one (1) year from the date of purchase (or delivery as may be required in certain jurisdictions), or thirty (30) days after replacement, whichever comes later.

Flashpoint's entire liability and your exclusive remedy for any breach of warranty shall be, at Flashpoint's option, to repair or replace the hardware, provided that the hardware is returned to the point of purchase or such other place as Flashpoint may direct with a copy of the sales receipt or dated itemized receipt. Flashpoint may, at its option, replace your product, offer to provide a functionally equivalent product, or repair any product with new, refurbished or used parts as long as such parts are in compliance with the product's technical specifications. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.


This warranty does not cover problems or damage resulting from accident, abuse, misapplication, or any unauthorized repair, modification or disassembly, improper operation or maintenance, normal wear and tear, or usage not in accordance with product instructions or connection to improper voltage supply, use of consumables, such as replacement batteries, not supplied by Flashpoint, except where such restriction is prohibited by applicable law.

Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser and the country in which the product was purchased. This warranty gives you specific legal rights, and you may also have other rights, including a longer warranty duration that may vary under local laws.


To start a warranty claim contact the Flashpoint Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Flashpoint, along with the RMA number and proof of purchase.

Question about our product line? Need Product Support?

We are proud of our products and celebrate our customers. We are with you, from product selection to everyday use. Be secure with your purchase and reach us as you need.

 **212-647-9300**

 **brands@adorama.com**

 **Adorama Brands,
42 West 18th Street,
New York, NY 10011**

You can always contact us at BRANDS@ADORAMA.COM for personal technical support.

Our website contains a wide range of Support and FAQ pages with valuable technical assistance.