

FP FLASHPOINT

LED
Ring Light

FPRLLED19
FPRLLED13

Thank you for choosing FLASHPOINT

The Flashpoint LED Ring Light is an AC powered constant light source for use with still and video cameras. It features powerful 55W / 42W LED light bulbs which is dimmable for precise output. It runs cool for use close to subjects, providing a soft directional light. The surrounding style of the light makes it great for unique lighting effects, macro and tight spaces, web broadcasts, and its signature catchlights. The bulb is color correct for perfect skin tones. For specialty lighting, nothing beats it.

If you have any questions or concerns, please feel free to contact us at

Brands@Adorama.com

Features

- Powerful 55w / 45w LED Lights
- Dimmable for precise output
- Runs cool for close up use
- Produces a soft, directional light
- Great for unique lighting effects, macro and tight spaces, and its signature catchlights
- Color correct for perfect skin tones
- Mounts on a standard lightstand
- 1 Year Warranty

For Your Safety

- Always keep this product dry. Do not use in rain or in damp conditions.
- Do not use any power supply other than the included one.
- Clean the unit with a soft, dry cloth.
- This product contains high-voltage electronic parts. Touching the high-voltage circuit inside it may result in electric shock. Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- Stop using this product if it breaks open due to internal shifting, falling or strong impact. STRONG electric shock may occur if you touch the components inside it. You might DIE. Don't risk it. Reincarnation is not covered by the warranty.
- Do not leave or store the unit if the ambient temperature reads over 50°C (e.g. in automobile in the sun). Otherwise the electronic parts may be damaged.
- Do not insert metal parts into any lighting equipment.
- Do not touch the electrical contacts with any conductive materials.
- Do not use selective coloring.
- Be sure to secure all connectors and other equipment. Check constantly for tightness and do not manhandle the equipment. For example, do not lift your camera by the light or vice versa.
- In case of abnormal function, sparks, excessive heat, flames or smoke, immediately power off the unit and disconnect the power if safely possible. Have it checked by an authorized technician.

Instructions

Mounting on a light stand



1. Tighten the angle adjustment knob so the light is not shifting on the stand mount
2. Loosen the stand mount screw and slide the stand mount onto your lightstand
3. Tighten the stand mount screw and then loosen the angle adjustment knob, position the light at your desired angle and tighten the angle adjustment knob

Connecting to a power supply

1. Connect the power supply to a US power supply (Max 120V) then connect the power supply to the light
2. Twist the knob to turn on the light
3. For best color, turn the light up to full power for at least 3 minutes before lowering it to the desired luminosity level
4. To turn off, rotate the knob until the light clicks off

Adjusting the light angle

Loosen the angle tilt knob and position to the desired angle. Tighten the locking knob until secure.

Turn on the power and adjust the dimmer

With the ring light facing away from you, rotate the power/dimmer knob counterclockwise until you hear a click. The lamp will take a few seconds to turn on and will be at full brightness. Within a few more seconds, it will decrease brightness to the current dimmer setting.

Adjust brightness

With the ring light facing away from you, rotate the power/dimmer knob until the full power.

Mount mini ball head



Loosen the mounting foot at the base of the mini ball head. With the ring light facing away from you, slide the mini ball head mounting foot into the center shoe mount on the ring light housing. Rotate clockwise to tighten. It may be necessary to pull up on the mini ball head and rotate clockwise when tightening.

Mount on camera



Align the 1/4"-20 stud on the mini ball head match the tripod mount of your camera. Rotate your camera clockwise onto the stud until secure. Tighten the locking knob of ball head until secure. See attached pic

Mount mirror (19" SKU# FPRLX003 13" SKU# FPRLX004)



Loosen the mirror's locking screws. Slide the secure loops which are on the back of the mirror onto the L-bracket. Make sure that the mirror will face your subject. Tighten the locking screws on the back of the mirror so that it does not move around. Remove the plastic film on the mirror when you use.

Mount the cold shoe extension/smart phone cradle (SKU# FPRLX002 Mobile holder set)

- 1 Make sure the socket and ball head is 1/4"-20 studs. Rotate the cradle clockwise until secure.
- 2 Secure your smart phone on the holder. Press the button on the side of the cradle and extend the cold shoe stand. The smart phone cradle is padded for no-slip security when you smart phone is inserted.



Mount the filter (SKU# FPRLX001 19" Filter Kit)

The filters clip onto the outside housing of the ring light with tabs that is attached to each filter, for the last panel, slide its alignment lip under the lip of the first panel and then firmly clip the panel onto the housing.



Specifications

Item No.	FPRLLED19	FPRLLED13
Power Supply	120V,50/60Hz / 230V,50/60Hz	120V,50/60Hz / 230V,50/60Hz
Output	55W	42W
Luminous	Max : 4800 lx@1m	Max : 3600 lx@1m
	Min : 480 lx@1m	Min : 360 lx@1m
Dimmer	10%-100%	10%-100%
Color Temperature	5500 K (±300K)	5500 K (±300K)
Cri	Ra>85	Ra>85
Size	outer48.5cm inner36.5cm	outer34.5cm inner22.5cm
Weight	1.6kg	1.2kg

Limited Warranty

FLASHPOINT 1-Year USA Warranty

This FLASHPOINT product is warranted to the original purchaser for a period of one year.

This warranty does not cover damage or defect caused by misuse, accident, abuse, wrong installation or maintenance. To obtain warranty coverage, contact Adorama Brands Customer service department to obtain a return merchandise authorization ("RMA") number.

For more information or to arrange service, visit www.adorama.com/help/contactus or call customer service at 212.741.0052

Product warranty provided by the **ADORAMA BRANDS**

www.adoramabrands.com

FLASHPOINT is a registered trademark of the ADORAMA BRANDS

© 2016 Adorama Brands. All Rights Reserved

