

**FP** *FLASHPOINT*



**R1**

**Radio Receiver**

FPRRR1PJR

Thanks for choosing the R1 RECEIVER.

The R1 RECEIVER is a photography lighting receiver, it serves as a receiver for triggering wireless strobes.

The R1 RECEIVER features incredible range and versatility, and should provide you with years of valuable service. Your satisfaction means a world to us, we back our products with a Standard One Year Limited Warranty to repair or replace your Flashpoint products.

The Standard Limited Warranty does not cover damages due to personal mishandling, third-party repair, or inappropriate disassembly of the products. If you have any questions about this or any other Flashpoint product, please contact us at [Brands@Adorama.com](mailto:Brands@Adorama.com)

## Warnings

- Do not mix old and new batteries
- Do not subject the radios to impact or abrasion
- Do not attempt to modify the internal components
- Be careful not to bend any antennas
- Do not use selective color
- These radios may interfere with other nearby radio devices, if that is the case, change the operating channel on all transmitters and receivers
- Not intended for underwater use
- Do not store illegal substances in the battery compartment
- Do not hang radios or lights by the cord alone, ALWAYS use a hanging lanyard/strap if possible
- Do not use the radio as a remote detonator

## Instructions for Use

1. Insert batteries as indicated inside the battery compartment
2. Insert sync cord into strobe, using an adapter if necessary
3. Switch on the radio
4. Make sure the channel switches are in the same position on the transmitter and receiver
5. Press the test button on the transmitter to confirm the signal is working
6. Keep an eye on the strobe, if the strobe stops flashing, change the receiver batteries
7. Remember to switch off the receiver when it is not in use