

FLASHPOINT

78" BLACK

TELEPOLE EXTENSION

Thank You for choosing **FLASHPOINT**.

The Flashpoint 78" Telepole Extension is an indispensable tool for photographers and videographers seeking to elevate their creative capabilities. This manual is designed to provide you with all the essential information you need to make the most of this versatile extension pole. Whether you're an experienced professional or a passionate enthusiast, the following pages will guide you through the setup, operation, and maintenance of the Flashpoint Telepole Extension, helping you unlock new perspectives and achieve outstanding results in your photography and videography endeavors.

This manual will not only guide you through the basic setup and operation but also delve into advanced techniques and creative applications. You'll learn how to stabilize your shots, extend your reach, and achieve that perfect shot, all while maintaining the utmost safety and equipment care.

As you read on, you'll discover helpful insights into accessorizing the Flashpoint Telepole Extension with various camera mounts, adapters, and additional gear. You'll also find recommendations on how to adapt to different shooting scenarios, such as outdoor adventures, event photography, and architectural documentation. Let's embark on this journey together, exploring the boundless possibilities this tool has to offer.

Unpacking and Inspection

Welcome to the world of enhanced photographic and videographic possibilities with your new Flashpoint 78" Telepole Extension. Before you begin using this versatile tool, it's essential to ensure that it has been received and assembled correctly. This unpacking and inspection guide will walk you through the initial steps to guarantee a safe and successful start.

Step 1: Unboxing

- a. Carefully open the packaging by removing any seals or tape. Ensure you have a suitable workspace to avoid any accidental damage to the extension pole or its accessories.
- b. Inside the box, you should find the Flashpoint Telepole Extension along with any included accessories and documentation. Common accessories may include adapters, mounts, or a storage case.

Step 2: Visual Inspection

- a. Carefully inspect the Flashpoint Telepole Extension for any visible signs of damage or irregularities. Pay close attention to the following:
 - Scratches or dents on the pole's surface.
 - Bent or misaligned sections.
 - Damaged locking mechanisms or clamps.
 - Loose or missing components.
- b. Check all included accessories to ensure that they are in good condition and match the description provided in the product documentation.

Step 3: Functional Inspection

- a. Extend and retract the extension pole to ensure that the telescoping mechanism functions smoothly. Pay attention to any resistance, wobbling, or unusual noises.

- b.** Test the locking mechanisms (such as twist locks or lever locks) to confirm that they securely hold the pole at your desired length.
- c.** If your Flashpoint 78" Telepole Extension includes any mounting accessories or adapters, verify that they securely attach to the pole and remain stable during use.

Step 4: Documentation Review

- a.** Take a moment to review the user manual and any included documentation to familiarize yourself with the product's features.

By following this unpacking and inspection guide, you ensure that your Flashpoint Telepole Extension is in optimal condition and ready for safe and effective use in your photography and videography endeavors. If you encounter any issues during this process, please contact the manufacturer or your authorized dealer for assistance.

Introduction

Before we embark on the journey of setting up and utilizing your Flashpoint 78" Telepole Extension (Black) to its fullest potential, it's crucial to become acquainted with the various components that make up this versatile tool. In this section, we will introduce each part, providing you with a clear understanding of its function and significance. Familiarity with these parts is the first step towards a seamless experience with your extension pole.



1. Cushion
2. Spring Loaded Tube
3. Telepole Extender
4. Telepole

Cautions


- 1. Balance:** Ensure your equipment is well-balanced when mounted on the extension pole. Imbalanced weight distribution may cause the pole to tilt or tip over during operation.

- 2. Secure Mounting:** Double-check that your camera or device is securely attached to the mounting adapter. Any loose connections can result in your equipment falling during use.
- 3. Height and Reach:** When extending the pole to its maximum length, be cautious of your surroundings, including low ceilings, trees, or other obstacles that may obstruct its movement.
- 4. Slippery Surfaces:** When working on smooth or slippery surfaces, such as wet pavement or icy ground, use caution. Ensure that the rubber feet at the base of the extension pole are in good condition and provide proper grip.
- 5. Elevate Gradually:** Extend the pole gradually and maintain control as you adjust the length. Rapid extension can lead to instability.
- 6. Maintenance:** Regularly inspect your extension pole for signs of wear and tear, loose components, or damage. Ensure that the locking mechanisms are functioning correctly.
- 7. Avoid Overhead Use:** Do not extend the pole over your head or others, as this may lead to accidental drops or injury.


By following these cautions and using the Flashpoint Telepole Extension responsibly, you can enjoy a safe and productive experience, capturing remarkable shots with confidence while preserving the integrity of your equipment.

Operating Instructions


Step 1: Start by removing the cushion and the spring-loaded tube from the top of the telepole. Gently detach the cushion, ensuring that it's securely separated from the extension. Next, carefully release and remove the spring-loaded tube to disassemble the telepole completely. Remember to handle these components with care to avoid any damage during the disassembly process. (Refer to image 1)

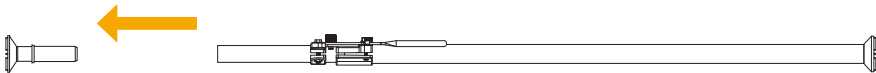


Step 2: Insert the narrow end of the telepole extender into the top of the telepole. Make sure the fit is snug and secure to ensure stability during use. This step is crucial for extending the length of the pole and allows you to capture shots from varying heights and angles. Be gentle during the insertion process to prevent any damage to the components. (Refer to image 2)

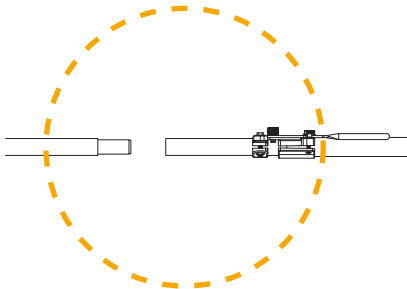

Step 3: You will insert both the spring-loaded tube and the cushion into the top of the telepole extender. Start by carefully sliding the spring-loaded tube into the extender, ensuring it fits securely. Next, attach the cushion to the top of the extender, providing a comfortable grip for your hand. This step is essential for achieving a stable and ergonomic handle on the extended pole, enhancing your control and maneuverability during photography or videography. Be gentle when inserting these components to avoid any damage or misalignment. (Refer to image 3)

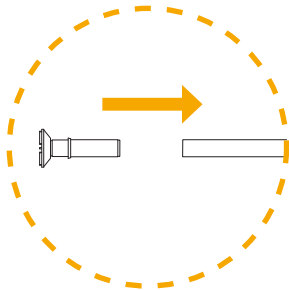

Step 4: In the final step of assembling your Flashpoint Telepole Extension (Black), your goal is to achieve a complete telepole with an extender securely attached to it. When properly assembled, the pole should stand sturdy and still, ready to support your camera or device with confidence. Carefully inspect the entire setup to ensure that all components are tightly connected, the locking mechanisms are engaged, and the extension is at the desired height. This stability is crucial for capturing clear and steady shots while preventing any potential accidents or damage.

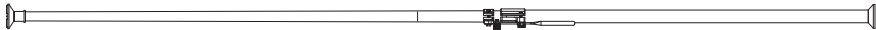

We express our sincere appreciation for choosing the Flashpoint Telepole Extension as your trusted partner in your creative endeavors. Your pursuit of excellence is our inspiration, and we are honored to be a part of your journey. Should you ever need assistance or have any questions, our dedicated support team is here to help.

Thank you for placing your trust in us. We look forward to witnessing the remarkable feats you will achieve with your new Telepole Support System. Your success is our success, and we are here to support you every step of the way.

One Year Flashpoint Limited Warranty

Flashpoint warrants to the original purchaser that your Flashpoint product shall be free from defects in material and workmanship for the period of one (1) year from the date of purchase (or delivery as may be required in certain jurisdictions), or thirty (30) days after replacement, whichever comes later. Flashpoint's entire liability and your exclusive remedy for any breach of warranty shall be, at Flashpoint's option, to repair or replace the hardware, provided that the hardware is returned to the point of purchase or such other place as Flashpoint may direct with a copy of the sales receipt or dated itemized receipt. Flashpoint may, at its option, replace your product, offer to provide a functionally equivalent product, or repair any product with new, refurbished or used parts as long as such parts are in compliance with the product's technical specifications. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover problems or damage resulting from accident, abuse, misapplication, or any unauthorized repair, modification or disassembly, improper operation or maintenance, normal wear and tear, or usage not in accordance with product instructions or connection to improper voltage supply, use of consumables, such as replacement batteries, not supplied by Flashpoint, except where such restriction is prohibited by applicable law.

Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser and the country in which the product was purchased. This warranty gives you specific legal rights, and you may also have other rights, including a longer warranty duration that may vary under local laws.


To start a warranty claim contact the Flashpoint Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Flashpoint, along with the RMA number and proof of purchase.

Question about our product line? Need Product Support?

We are proud of our products and celebrate our customers. We are with you, from product selection to everyday use. Be secure with your purchase and reach us as you need.

 212-647-9300

 support@flashpointlighting.com

 Flashpoint, 42 West 18th Street,
New York, NY 10011

You can always contact us at BRANDS@ADORAMA.COM for personal technical support. Our website contains a wide range of Support and FAQ pages with valuable technical assistance.

Flashpoint is a registered trademark of ADORAMA CAMERA.

© 2023 Adorama Camera, Corp.

All Rights Reserved.



Scan to follow our official instagram