FLASHPOINT



FPW30SF

WIND 30 AC-POWERED STUDIO FAN Congratulations on your **FLASHPOINT** Wind 30, AC-Powered Studio Fan.

Step into a world of cinematic excellence and creative freedom with the Flashpoint Wind 30, AC-Powered Studio Fan. This manual is your guide to unlocking its full potential. Whether you're an aspiring filmmaker, a seasoned videographer, or a photography enthusiast, we've tailored this guide to enhance your skills and elevate your craft. From setup to advanced techniques, we'll explore every facet of this exceptional tool, offering unparalleled stability and creative possibilities. Welcome to a cinematic journey like no other!

In this section, we'll delve into the specifications and main parts that make up the core of your Flashpoint Wind 30, AC-Powered Studio Fan. Understanding the composition and quality of the materials used in your equipment is essential to maximize its performance and longevity.

Specifications

Power source	AC110 V-220 V
Current	0.55 A
Action speed	2600 r/min
Air volume	5.5 m³/min
Noise	<72dB/A
Capacitor	2.7 uf/500 V

Please refer to the corresponding numbers in the table for each part mentioned on the attached picture.

Parts to Remember

- 1. Air Duct
- 2. Air Outlet
- 3. Air Inlet
- 4. Bracket Holder
- 5. Tightening Screw
- 6. Speed Controller
- 7. Fuse (5A)
- 8. Power Indicator
- 9. Adjustable Knob & Power Switch



It is a reliable companion in your setup whether you are capturing photo shoot or just a smooth and dramatic video footage. In this section, we will guide you through the process of securely using your Flashpoint Wind 30.

Step 1: Unpacking and Inspection

- 1. Carefully remove all parts from the packaging.
- 2. Refer to the table mentioned to verify the parts included in.
- 3. Examine each part to make sure everything is complete and no defect.

Step 2: Mounting the Fan Body on the Stand

- 1. Carefully take the fan body and ensure that you handle it by its base so that you will secure other components of the fan body itself (shown in picture 1).
- 2. Make sure the stand is sturdy and correctly adjusted to the height you want and need before placing it in the intended place.

Step 3: Attaching the Air Duct to the Fan Body

- 1. Begin by locating the **M4x12** screw on the fan body and carefully loosen the screw, but do not remove it completely (shown in picture 2).
- 2. Take the air duct and position it so that the holes in the air duct align perfectly with the screw holes on the fan body. Ensure that the air duct is oriented correctly and fits flush against the fan body (shown in picture 3).
- 3. Once the air duct is properly aligned, tighten the **M4x12** screw to secure the air duct to the fan body. Use a screwdriver to ensure the screw is fastened firmly (shown in picture 3).







Step 4: Connect to Power

- 1. To provide the unit power, plug the fan into an AC power source. Make sure there are no obstacles in the fan's path before turning it on. To guarantee proper airflow, make sure nothing is obstructing the air duct, air outlet, or air intake. Adjust the air duct to the desired position according to your specific need. You can tilt the air duct up, down, or sideways depending on the direction you want the airflow to follow.
- 2. Rotate the adjustable knob to the right to switch on the fan (shown in picture 4).
- 3. Continue rotating the knob to adjust the airflow to the required volume. Whether you need a light breeze or a strong gust, fine-tune the airflow to match your needs by adjusting the knob to your preferred setting.



The device is now ready for use!

By following these tips and practicing with the Flashpoint Wind 30, AC-Powered Studio Fan, it can help you capture smoother and more professional video or photo footage for your projects. Unlock Your Creative Vision with Precision and Seamlessness – Elevate Your Photography with **Flashpoint**!



WWW.FLASHPOINTLIGHTING.COM

Scan to join our Instagram community for product tips, Inspirations, and more.

One Year Flashpoint Limited Warranty

Flashpoint warrants to the original purchaser that your Flashpoint product shall be free from defects in material and workmanship for the period of one (1) year from the date of purchase (or delivery as may be required in certain jurisdictions), or thirty (30) days after replacement, whichever comes later.

Flashpoint's entire liability and your exclusive remedy for any breach of warranty shall be, at Flashpoint's option, to repair or replace the hardware, provided that the hardware is returned to the point of purchase or such other place as Flashpoint may direct with a copy of the sales receipt or dated itemized receipt. Flashpoint may, at its option, replace your product, offer to provide a functionally equivalent product, or repair any product with new, refurbished or used parts as long as such parts are in compliance with the product's technical specifications. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover problems or damage resulting from accident, abuse, misapplication, or any unauthorized repair, modification or disassembly, improper operation or maintenance, normal wear and tear, or usage not in accordance with product instructions or connection to improper voltage supply, use of consumables, such as replacement batteries, not supplied by Flashpoint, except where such restriction is prohibited by applicable law.

Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser and the country in which the product was purchased. This warranty gives you specific legal rights, and you may also have other rights, including a longer warranty duration that may vary under local laws.

To start a warranty claim contact the Flashpoint Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Flashpoint, along with the RMA number and proof of purchase.

Question about our product line? Need Product Support?

We are proud of our products and celebrate our customers. We are with you, from product selection to everyday use. Be secure with your purchase and reach us as you need.

- **L** 212-647-9300
- Flashpoint,42 West 18th Street,New York, NY 10011

You can always contact us at BRANDS@ADORAMA.COM for personal technical support. Our website contains a wide range of Support and FAQ pages with valuable technical assistance.