


LITEMONS

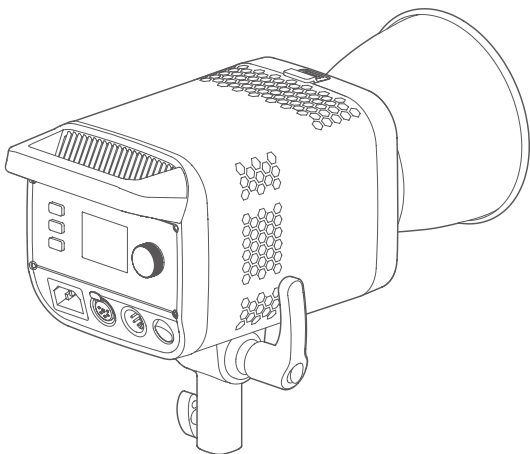

LE600R LE300R LE200R

使用手册

Instruction Manual V1.1

V1.00 固件 Firmware

目录

01	重要安全说明
01	危险
01	警告
02	物品清单
04	部件名称
06	使用说明
06	附件使用
06	接口连接
06	控制面板操作
07	模式设置
09	菜单设置
11	"Godox Light" 应用程序连接指南
12	照度数据
18	技术参数
18	维护保养

重要安全说明

使用前请务必仔细阅读本手册，并严格遵守以下安全注意事项。

危险

- 本设备为摄影灯具，禁止儿童单独使用。儿童靠近时，监护人需全程密切看护，防止因碰撞或擅自操作引发人身伤害。
- 若外壳出现开裂、变形、进液、异味或异常发热等情况，请立即停止使用。
- 仅限使用原厂配件，或经制造商明确推荐的配件；否则可能导致火灾、电击或人身伤害。
- 本设备必须接入具备可靠接地功能的电源插座；在断开或重新连接电源线前，先切断设备电源；严禁在通电状态下进行电源线的插拔操作。

警告


- 本设备不具备防水防尘功能，禁止在雨天、高湿度、多尘环境中使用。
- 若设备进水或受潮，请立即切断电源，并断开所有连接线缆。
- 严禁在酒精、汽油等易燃易爆气体或液体附近使用本设备。
- 严禁遮挡或堵塞设备散热孔，以防过热引发危险。
- 严禁私自拆卸或改装设备。非授权拆解易导致电路故障或永久性损坏。如需维修，请联系神牛授权服务中心。

请勿直视光源


LE600R 设备包含型号核准代码为：CMIIT ID: 24J44V807298，
为该产品的无线电发射模块。

物品清单

LE200R / LE300R

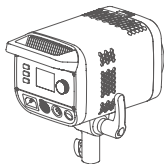

灯体 × 1

 

反光罩 BR30 × 1




AC 电源线 × 1




使用手册 × 1

LE600R

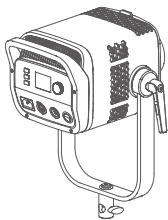

灯体 × 1

 

反光罩 BR30 × 1



AC 电源线 × 1




使用手册 × 1

注:

1. 开箱后核对所购套装内的物品，若有缺失或破损，及时联系经销商。
2. 图示仅供参考，具体以实际产品为准。

部件名称


LE200R / LE300R

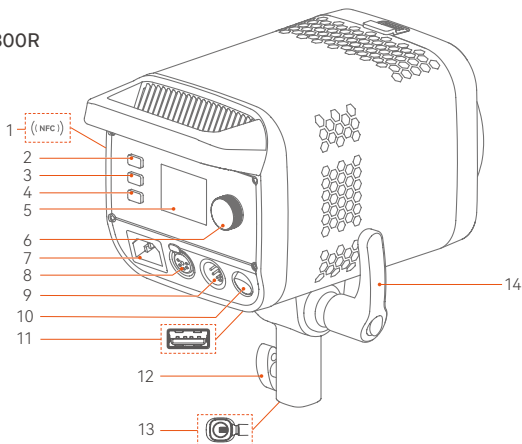


1. NFC 感应区
2. MODE 键
3. MENU 键
4. 蓝牙重置键
5. 显示屏
6. SET 旋钮

7. AC INPUT 接口
8. DMX OUT 接口
9. DMX IN 接口
10. 电源键
11. USB-A 接口

12. 灯架锁紧旋钮
13. 套筒 (内径 16mm)
14. 俯仰锁紧把手
15. 散热孔
16. 卡口释放键
17. 保荣卡口
18. 灯珠
19. 伞孔

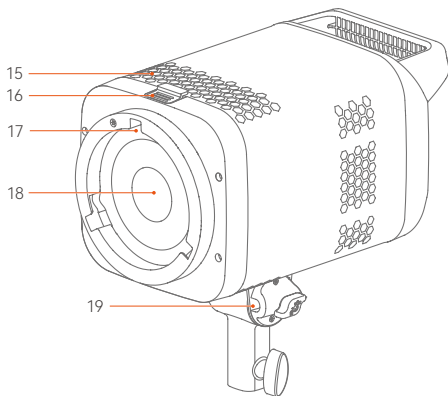

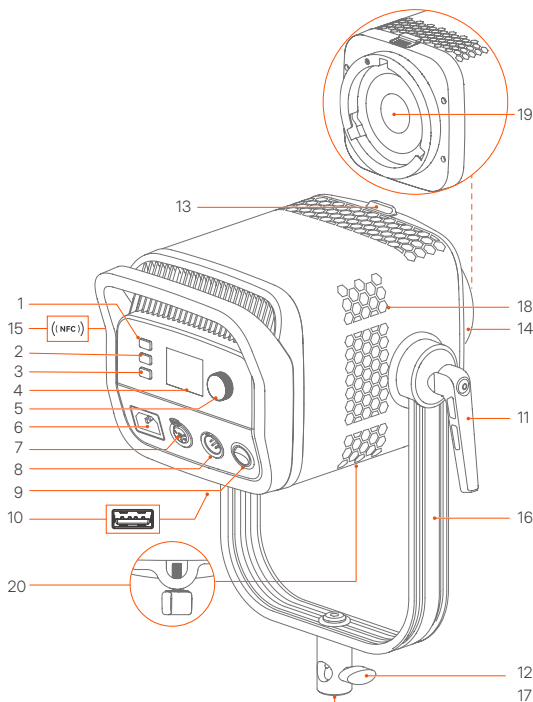

1. MODE 键
2. MENU 键
3. 蓝牙重置键
4. 显示屏
5. SET 旋钮
6. AC INPUT 接口
7. DMX OUT 接口

8. DMX IN 接口
9. 电源键
10. USB-A 接口
11. 俯仰锁紧把手
12. 灯架锁紧旋钮
13. 卡口释放键
14. 保荣卡口

15. NFC 感应区
16. U 型架
17. 套筒 (内径 16mm)
18. 散热孔
19. 灯珠
20. 伞孔

使用说明

1. 附件使用

1.1 反光罩

安装时对准卡口推入，顺时针旋转直至锁定。拆卸时按住卡口释放键，同时逆时针旋转将其取下。


1.2 灯架（另购）

将套筒插入灯架后，顺时针拧紧灯架锁紧旋钮。

2. 接口连接

2.1 有线 DMX 连接

仅展示连接 DMX512 控制台方式，控制台及连接线需另购。

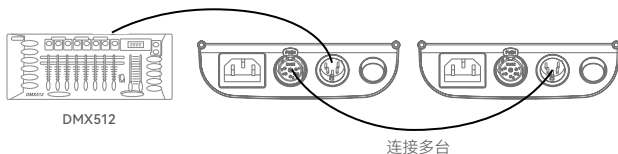

2.2 AC 电源连接


将 AC 电源线插入 AC INPUT 接口，另一端接入电源。

3. 控制面板操作

部件	操作	说明
电源键	拨至“ I ”	开机
	拨至“ O ”	关机
MODE 键	短按	进入模式选择界面
MENU 键	短按	进入菜单界面
SET 旋钮	旋转	切换选项或增减参数值
	短按	确认选择或退出当前设置
蓝牙重置键	长按	快捷蓝牙重置

4. 模式设置

短按 MODE 键进入模式选择界面，旋转并短按 SET 旋钮进入其中一项设置。

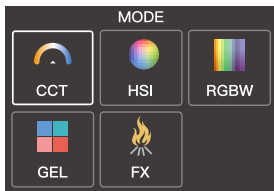

4.1 CCT 模式

亮度范围: 0% ~ 100%

色温范围: 1800K ~ 10000K

GM 范围: -100% ~ +100%

4.2 HSI 模式

亮度范围: 0% ~ 100%

色相范围: 0° ~ 360°

饱和度范围: 0% ~ 100%

4.3 RGBW 模式

亮度范围: 0% ~ 100%

独立控制红、绿、蓝、白四路通道: 0% ~ 100%

4.4 GEL 模式

亮度范围: 0% ~ 100%

色片类型: R-GEL / L-GEL

R-GEL 色片组: COR. / CAL. / SPC. / CINE.

L-GEL 色片组: COR. / COLOR. / 600 / COS. / 700

色温选项: 3200K 或 5600K

色相范围: -10° ~ 10°

饱和度范围: -20% ~ 20%

4.5 FX 模式

选中一类光效，短按 SET 旋钮进入参数调节。

光效	亮度	颜色	色温 / 色相	速度	其他
闪光灯	0%-100%	CCT / HSI	1800K-10000K / 0-360°	1-100	模式: 闪光灯 / 镁光灯 触发: 自动 / 手动
雷闪电		/	1800K-10000K	/	闪烁次数: 随机 / 1-10 频率: 随机 / 2-20 触发: 自动 / 手动
多云		/	/	随机 / 1-100	亮暗比例: 30%-90%
坏灯泡		CCT / HSI	1800K-10000K / 0-360°	1-100	/
电视机		CCT / HSI	/	1-100	/
蜡烛		/	/	1-100	/
火		/	/	1-100	/
烟花		/	/	1-100	余烬: 1-100
爆炸		CCT / HSI	1800K-10000K / 0-360°	1-100	余烬: 1-100 触发: 自动 / 手动
焊接		CCT / HSI	1800K-10000K / 0-360°	1-100	/
警车		红 + 蓝、红、蓝、 白 + 蓝、黄 + 蓝、 黄、红 + 蓝 + 白、 红 + 黄 + 蓝	/	/	模式: 1-5
SOS		CCT / HSI	1800K-10000K / 0-360°	/	/
彩光循环		/	/	1-100	饱和度: 0%-100%
派对		/	/	1-100	饱和度: 0%-100%

注: 所有光效均可设置开启或关闭; 触发方式设为手动时, 短按 SET 旋钮可触发一次光效。

5. 菜单设置

短按 MENU 键进入菜单界面，旋转并短按 SET 旋钮进入其中一项设置。

图标	功能	选项		说明
	DMX	地址	001-512	起始地址
		DMX 模式	01: CCT 8 Bit	8 位 CCT 模式
			02: HSI 8 Bit	8 位 HSI 模式
			03: RGB 8 Bit	8 位 RGB 模式
			04: RGBW 8 Bit	8 位 RGBW 模式
			05: CCT+HSI 8 Bit	8 位 CCT+HSI 模式
			06: CCT+RGBW 8 Bit	8 位 CCT+RGBW 模式
			07: FX 8 Bit	8 位 FX 模式
			08: GEL 8 Bit	8 位 GEL 模式
			09: CCT 16 Bit	16 位 CCT 模式
			10: HSI 16 Bit	16 位 HSI 模式
			11: RGB 16 Bit	16 位 RGB 模式
			12: RGBW 16 Bit	16 位 RGBW 模式
			13: FX 16 Bit	16 位 FX 模式
			14: GEL 16 Bit	16 位 GEL 模式
			15: ULTIMATE 8 Bit	8 位 ULTIMATE 模式
			16: ULTIMATE 16 Bit	16 位 ULTIMATE 模式
		RDM 状态	开启	开启后控制台可设置灯具地址及 DMX 模式
			关闭	关闭 RDM

图标	功能	选项		说明
	DMX	DMX 丢失状态	保持最后状态	失去 DMX 控制信号后, 在关机或再次接收有效 DMX 控制信号前, 持续使用最后一次接收的 DMX 控制信号。
			直接关闭	灯具直接熄灭
			保持最后状态 2 分钟熄灭	失去 DMX 控制信号后, 持续使用最后一次接收的 DMX 控制信号 2 分钟, 2 分钟后灯具熄灭。注: 如 2 分钟内接收到有效 DMX 控制信号, 则使用新的 DMX 控制信号。
		终止开关	开启	开启 DMX 终端
			关闭	关闭 DMX 终端
		增强通道	开启	开启增强通道信号
			关闭	关闭增强通道信号
		DMX 通道表	(扫描二维码查看)	
	蓝牙	开启		开启蓝牙
		关闭		关闭蓝牙
		重置		重置蓝牙
		MAC 码		便于查找灯具
	调光曲线	线性		/
		S 曲线		
		指数		
		对数		
	风扇	静音		/
		自动		
		中速		
		高速		
	屏幕设置	屏幕亮度: 10%-100%		/
	语言	简体中文		设置界面语言
		English		

图标	功能	选项	说明
	版本与升级	/	1. 在神牛官网下载新固件至 U 盘。 2. 关机状态下, 将存有新固件的 U 盘插入 USB-A 接口。 3. 长按 MODE 键同时开机, 灯具进入升级界面, 升级完成后自动返回主界面。 注: 1. 固件需从官网下载, U 盘根目录仅能存放单个 BIN 格式文件。 2. USB-A 接口支持输出 (5V --- 0.5A), 请勿接入大功率 USB 设备。
	恢复出厂设置	取消	/
		确定	所有参数还原至出厂默认值; 设备自动重启, 亮度重置为 100%。
	灯具信息	/	查看型号 / 固件版本等信息

6. “Godox Light” 应用程序连接指南

扫描二维码或在应用商店搜索 “Godox Light” 下载安装。

6.1 蓝牙重置

长按蓝牙重置键, 完成重置。

6.2 蓝牙配对

打开应用程序, 选择 “蓝牙添加”, 搜索并连接灯具。

6.3 NFC 速连

开启移动设备 NFC 功能, 应用程序内选择 “NFC 添加”, 贴近灯具 NFC 感应区即可自动配对。

6.4 固件升级

在应用程序的设备列表中点击  选择固件升级, 将自动检测新版本, 请按提示操作。



照度数据

LE200R

色温	测试条件	照度单位	1m	2m	3m
1800K	裸灯	lux	1920	492	222
		fc	178	46	21
	搭配反光罩 BR30	lux	18600	4110	1750
		fc	1730	382	163
2800K	裸灯	lux	6320	1620	728
		fc	587	150	68
	搭配反光罩 BR30	lux	61400	13500	5770
		fc	5700	1260	536
3200K	裸灯	lux	6700	1720	772
		fc	623	160	72
	搭配反光罩 BR30	lux	65300	14400	6130
		fc	6070	1340	570
4300K	裸灯	lux	7110	1820	819
		fc	660	169	76
	搭配反光罩 BR30	lux	69200	15300	6500
		fc	6430	1420	604
5600K	裸灯	lux	7330	1880	845
		fc	681	175	79
	搭配反光罩 BR30	lux	71700	15800	6710
		fc	6660	1470	623
6500K	裸灯	lux	7580	1950	874
		fc	705	181	81
	搭配反光罩 BR30	lux	74300	16400	6950
		fc	6900	1520	646

色温	测试条件	照度单位	1m	2m	3m
8500K	裸灯	lux	7760	1990	895
		fc	721	185	83
	搭配反光罩 BR30	lux	76100	16800	7120
		fc	7070	1560	661
10000K	裸灯	lux	7750	1990	895
		fc	720	185	83
	搭配反光罩 BR30	lux	75900	16700	7120
		fc	7060	1550	661
R (红光)	裸灯	lux	1180	303	137
		fc	109	28	13
	搭配反光罩 BR30	lux	11300	2520	1070
		fc	1050	234	99
G (绿光)	裸灯	lux	4860	1250	563
		fc	452	116	52
	搭配反光罩 BR30	lux	47600	10600	4480
		fc	4430	985	417
B (蓝光)	裸灯	lux	1330	338	153
		fc	123	31	14
	搭配反光罩 BR30	lux	13100	2910	1230
		fc	1220	270	115

LE300R

色温	测试条件	照度单位	1m	2m	3m	5m
1800K	裸灯	lux	2630	669	305	111
		fc	244	62	28	10
	搭配反光罩 BR30	lux	23900	5260	2270	783
		fc	2220	488	211	73
2800K	裸灯	lux	9170	2330	1060	386
		fc	852	216	99	36
	搭配反光罩 BR30	lux	82900	18300	7910	2730
		fc	7700	1700	735	254
3200K	裸灯	lux	9740	2480	1130	411
		fc	905	230	105	38
	搭配反光罩 BR30	lux	88100	19500	8430	2910
		fc	8190	1810	783	270
4300K	裸灯	lux	10100	2570	1180	426
		fc	938	239	109	40
	搭配反光罩 BR30	lux	91700	20200	8740	3010
		fc	8520	1870	812	280
5600K	裸灯	lux	10400	2650	1210	439
		fc	968	246	113	41
	搭配反光罩 BR30	lux	94400	20800	9020	3110
		fc	8770	1930	838	289
6500K	裸灯	lux	10700	2730	1250	452
		fc	998	254	116	42
	搭配反光罩 BR30	lux	97200	21500	9300	3220
		fc	9030	2000	864	299

色温	测试条件	照度单位	1m	2m	3m	5m
8500K	裸灯	lux	11200	2860	1300	471
		fc	1040	265	121	44
	搭配反光罩 BR30	lux	102000	22500	9690	3360
		fc	9460	2090	900	313
10000K	裸灯	lux	11100	2840	1290	468
		fc	1040	264	120	44
	搭配反光罩 BR30	lux	101000	22400	9630	3350
		fc	9410	2080	895	311
R (红光)	裸灯	lux	1540	391	175	66
		fc	143	36	16	6
	搭配反光罩 BR30	lux	13800	3040	1290	454
		fc	1280	282	120	42
G (绿光)	裸灯	lux	6570	1670	750	279
		fc	610	155	70	26
	搭配反光罩 BR30	lux	60000	13200	5660	1980
		fc	5570	1230	526	184
B (蓝光)	裸灯	lux	1720	438	199	72
		fc	160	41	19	7
	搭配反光罩 BR30	lux	15700	3480	1490	517
		fc	1460	323	138	48

LE600R

色温	测试条件	照度单位	1m	2m	3m	5m
1800K	裸灯	lux	4290	1090	486	179
		fc	398	101	45	17
	搭配反光罩 BR30	lux	29800	6480	2720	950
		fc	2770	602	252	88
2800K	裸灯	lux	16000	4020	1820	666
		fc	1490	374	169	62
	搭配反光罩 BR30	lux	112000	24500	10200	3600
		fc	10400	2280	949	334
3200K	裸灯	lux	16700	4250	1900	698
		fc	1560	395	177	65
	搭配反光罩 BR30	lux	117000	25700	10700	3750
		fc	10900	2380	996	348
4300K	裸灯	lux	17900	4530	2030	744
		fc	1660	421	189	69
	搭配反光罩 BR30	lux	125000	27400	11500	4010
		fc	11600	2540	1060	373
5600K	裸灯	lux	18600	4720	2110	774
		fc	1720	438	196	72
	搭配反光罩 BR30	lux	130000	28400	11900	4170
		fc	12000	2640	1110	387
6500K	裸灯	lux	19200	4870	2180	798
		fc	1780	452	202	74
	搭配反光罩 BR30	lux	134000	29400	12300	4300
		fc	12400	2730	1150	400

色温	测试条件	照度单位	1m	2m	3m	5m
8500K	裸灯	lux	19900	5050	2260	828
		fc	1850	469	210	77
	搭配反光罩 BR30	lux	139000	30400	12800	4460
		fc	12900	2830	1190	414
10000K	裸灯	lux	19500	4990	2230	817
		fc	1820	463	207	76
	搭配反光罩 BR30	lux	137000	30000	12600	4400
		fc	12800	2780	1170	409
R (红光)	裸灯	lux	2600	661	296	108
		fc	241	61	28	10
	搭配反光罩 BR30	lux	17900	3900	1630	569
		fc	1660	362	152	53
G (绿光)	裸灯	lux	11600	2940	1320	483
		fc	1080	273	122	45
	搭配反光罩 BR30	lux	81000	17800	7430	2600
		fc	7520	1650	691	241
B (蓝光)	裸灯	lux	2920	742	332	121
		fc	271	69	31	44
	搭配反光罩 BR30	lux	20200	4420	1860	649
		fc	1880	411	173	60

注: 文中数据均为 100% 亮度下的平均测试值。

技术参数

产品名称	光小兽全彩 LED 直播灯		
产品型号	LE200R	LE300R	LE600R
AC INPUT 接口	100V-240V ~ 50/60Hz		100V ~ 60Hz, 635W 240V ~ 50Hz, 620W
	230W	330W	
色温范围	1800K ~ 10000K		
GM 范围	-100% ~ 100%		
亮度范围	0% ~ 100%		
调光曲线	线性 / S 曲线 / 指数 / 对数		
FX 光效	14 类		
CRI≈	96		
TLCI≈	95		
控制方式	DMX / RDM、应用程序、灯体控制		
蓝牙控制距离	最远 30 米		
USB-A 接口	固件升级 / 5V 三 0.5A 输出		
工作环境温度	-20℃ ~ 45℃		
尺寸 (不含反光罩)	158 × 239 × 262mm		272 × 282 × 397mm
净重 (不含反光罩) ≈	2.8kg		5.2kg

注:

1. 请按所购型号查阅对应参数。
2. 产品设计与规格如有变更, 恕不另行通知。

维护保养

- 清洁前务必关机并断开电源, 仅可使用干燥软布擦拭, 严禁使用酒精、苯或其他挥发性溶剂。
- 存放前请断开电源, 待产品完全冷却后, 置于通风干燥、无强磁场干扰的环境。

Contents

20	Important Safety Instructions
20	DANGER
20	WARNING
21	What's Inside
23	Names of Parts
25	Usage Instructions
25	Accessory Installation
25	Port Connect
25	Control Panel Operations
26	Mode Settings
28	Menu Settings
30	"Godox Light" App Connection Guide
31	Illuminance Data
37	Technical Data
37	Maintenance

Important Safety Instructions

Read this manual carefully before use and strictly follow all safety instructions below.



DANGER

- This device is a photography light. Do not allow children to use it alone. When children are nearby, guardians must provide continuous close supervision to prevent personal injury from collision or unauthorized operation.
- Stop using immediately if the housing is cracked or deformed, if liquid enters the device, or if it emits a strange odor or becomes abnormally hot.
- Use only original accessories or accessories specified by the manufacturer. Failure to do so may result in fire, electric shock, or personal injury.
- This device must be connected to a power outlet with reliable grounding. Cut off the device power before disconnecting or reconnecting the power cable. It is strictly prohibited to plug or unplug the power cable while the device is powered on.



WARNING


- This device is NOT waterproof or dustproof. Do not use in rain, high humidity, or dusty environments.
- If liquid enters the device or it becomes damp, disconnect the power immediately and remove all cables.
- Strictly do not use near flammable or explosive gases or liquids (e.g., alcohol, gasoline).
- Strictly do not block or obstruct the air vents to prevent overheating.
- Do not disassemble or modify the device without authorization. Unauthorized disassembly may result in circuit malfunction or permanent damage. Contact an authorized Godox service center for repairs.



Do not stare directly at the light source.

What's Inside

LE200R / LE300R

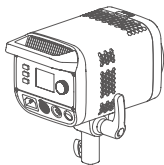

Light Body × 1



Reflector BR30 × 1




AC power cable × 1




Instruction Manual × 1

LE600R

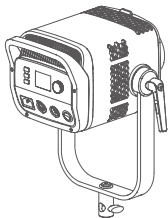

Light Body × 1

 

Reflector BR30 × 1



AC power cable × 1




Instruction Manual × 1

Note:


1. Check the package contents after unboxing. If any items are missing or damaged, contact the dealer immediately.
2. Illustrations are for reference only and may differ from the actual product.

Names of Parts


LE200R / LE300R

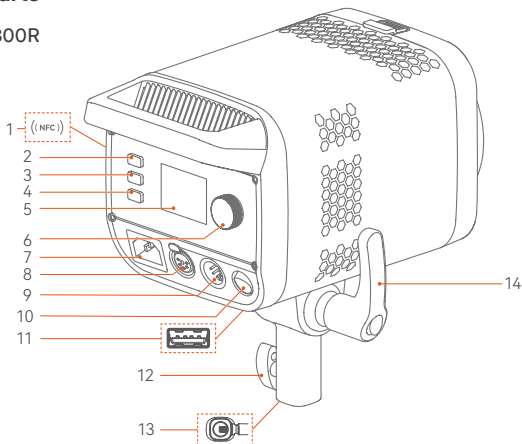

1. NFC Zone
2. MODE Button
3. MENU Button
4. Bluetooth Reset Button
5. Display
6. SET Knob
7. AC INPUT Port
8. DMX OUT Port
9. DMX IN Port
10. Power Switch
11. USB-A Port
12. Locking Knob
13. Sleeve (ID16mm)
14. Tilt Locking Handle
15. Cooling Vents
16. Mount Release Button
17. Bowens Mount
18. LED Beads
19. Umbrella Slot

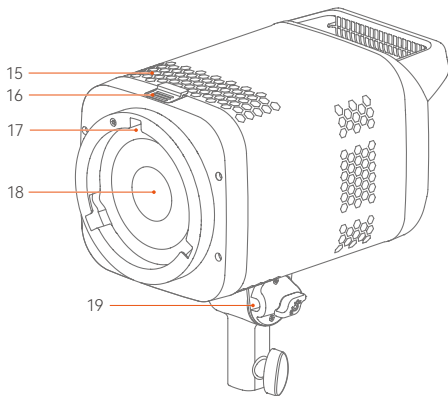

LE600R

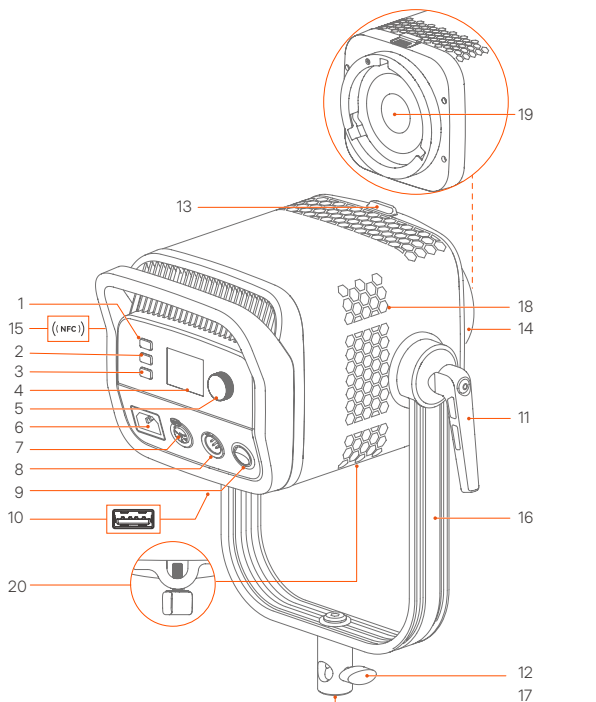

1. MODE Button

2. MENU Button

3. Bluetooth Reset Button

4. Display

5. SET Knob

6. AC INPUT Port

7. DMX OUT Port

8. DMX IN Port

9. Power Switch

10. USB-A Port

11. Tilt Locking Handle

12. Locking Knob

13. Mount Release Button

14. Bowens Mount

15. NFC Zone

16. Yoke

17. Sleeve (ID16mm)

18. Cooling Vents

19. LED Beads

20. Umbrella Slot

Usage Instructions

1. Accessory Installation

1.1 Reflector

Align the reflector with the mount. Insert and turn it clockwise until it locks into place. To remove, press and hold the Mount Release Button and turn the reflector counter-clockwise.


1.2 Light Stand (Sold Separately)

Insert the sleeve into the light stand and turn it clockwise to tighten.

2. Port Connect

2.1 Wired DMX Connection

The diagram only show the method to connect the DMX512 controller, the controller and connecting cable are sold separately.

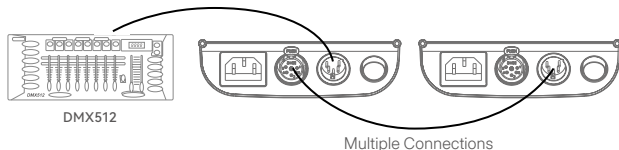

2.2 AC Power Connection


Insert the AC Power Cable into the AC INPUT Port. Connect the other end to a power outlet.

3. Control Panel Operations

Component	Operation	Description
Power Switch	Switch to " I "	Turn on
	Switch to " O "	Turn off
MODE Button	Short press	Enter mode selection interface
MENU Button	Short press	Enter menu interface
SET Knob	Rotate	Switch options or adjust parameter values
	Short press	Confirm selection or exit current setting
Bluetooth Reset Button	Long press	Quick Bluetooth reset

4. Mode Settings

Short press the MODE Button to enter the mode selection interface. Rotate and short press the SET Knob to enter the desired mode.

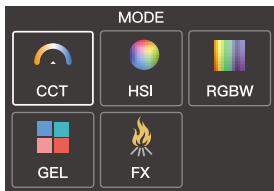

4.1 CCT Mode

Brightness range: 0% ~ 100%

CCT range: 1800K ~ 10000K

GM range: -100% ~ +100%

4.2 HSI Mode

Brightness range: 0% ~ 100%

HUE range: 0° ~ 360°

SAT range: 0% ~ 100%

4.3 RGBW Mode

Brightness range: 0% ~ 100%

Independent control of Red, Green, Blue, White four channels: 0% ~ 100%

4.4 GEL Mode

Brightness range: 0% ~ 100%

Gel type: R-GEL / L-GEL

R-GEL gel sets: COR. / CAL. / SPC. / CINE.

L-GEL gel sets: COR. / COLOR. / 600 / COS. / 700

CCT range: 3200K or 5600K

HUE range: -10° ~ 10°

SAT range: -20% ~ 20%

4.5 FX Mode

Select an effect. Short press the SET Knob to adjust parameters.

Effect	Brightness	Color	CCT / HUE	Speed	Other
Flash	0%- 100%	CCT / HSI	1800K-10000K / 0-360°	1-100	Mode: Camera Flash / Flash bulb Trigger: Auto / Manual
Lightning		/	1800K-10000K	/	Times: Random / 1-10 Frequency: Random / 2-20 Trigger: Auto / Manual
Cloudy		/	/	Random/ 1-100	Ratio: 30%-90%
Broken Bulb		CCT / HSI	1800K-10000K / 0-360°	1-100	/
TV		CCT / HSI	/	1-100	/
Candle		/	/	1-100	/
Fire		/	/	1-100	/
Firework		/	/	1-100	Ember: 1-100
Explosion		CCT / HSI	1800K-10000K / 0-360°	1-100	Ember: 1-100 Trigger: Auto / Manual
Welding		CCT / HSI	1800K-10000K / 0-360°	1-100	/
Cop Car		Red+Blue, Red, Blue, White+Blue, Yellow+Blue, Yellow, Red+Blue+White, Red+Yellow+Blue	/	/	Mode: 1-5
SOS		CCT / HSI	1800K-10000K / 0-360°	/	/
RGB Cycle		/	/	1-100	Saturation: 0%-100%
Party		/	/	1-100	Saturation: 0%-100%

Note: All effects can be enabled or disabled. When the trigger is set to Manual, short press the SET Knob to trigger the effect once.

5. Menu Settings

Press MENU button to enter menu interface. Rotate and short press SET Knob to enter one of the settings.

Icon	Function	Options		Description
	DMX	Address	001-512	Start Address
		DMX Mode	01: CCT 8 Bit	8-bit CCT mode
			02: HSI 8 Bit	8-bit HSI mode
			03: RGB 8 Bit	8-bit RGB mode
			04: RGBW 8 Bit	8-bit RGBW mode
			05: CCT+HSI 8 Bit	8-bit CCT + HSI mode
			06: CCT+RGBW 8 Bit	8-bit CCT + RGBW mode
			07: FX 8 Bit	8-bit FX mode
			08: GEL 8 Bit	8-bit GEL mode
			09: CCT 16 Bit	16-bit CCT mode
			10: HSI 16 Bit	16-bit HSI mode
			11: RGB 16 Bit	16-bit RGB mode
			12: RGBW 16 Bit	16-bit RGBW mode
			13: FX 16 Bit	16-bit FX mode
			14: GEL 16 Bit	16-bit GEL mode
			15: ULTIMATE 8 Bit	8-bit ULTIMATE mode
			16: ULTIMATE 16 Bit	16-bit ULTIMATE mode
		RDM Status	On	Enable RDM. The console can remotely set the fixture address and DMX mode.
			Off	Disable RDM

Icon	Function	Options		Description
	DMX	DMX Lost	Hold Last Command	Upon loss of valid DMX signal, the fixture continues to use the last received signal.
			Black Out	The fixture turns off immediately.
			Black Out after 2 Min	Upon loss of DMX signal, the fixture holds the last signal for 2 minutes, then turns off. Note: If a valid DMX signal is received within 2 minutes, the fixture will use the new signal.
		Termination	On	Enable internal DMX terminator.
			Off	Disable internal DMX terminator.
		Extend DMX Channels	On	Enable enhanced channel signal
			Off	Disable enhanced channel signal
		DMX Table	Scan the QR code to view	
	Bluetooth	On		Enable Bluetooth
		Off		Disable Bluetooth
		Reset		Reset Bluetooth
		MAC Code		For easy fixture identification
	Dimming Curves	Linear		/
		S-Curve		
		Exponential		
		Logarithmic		
	Fan	Auto		/
		OFF		
		Medium		
		High		
	Display	Brightness: 10%-100%		/
	Language	简体中文		Set interface language
		English		

Icon	Function	Options	Description
	Version & Update	/	1. Download the new firmware to a USB flash drive from the official Godox website. 2. With the device powered off, insert the USB drive with the new firmware into the USB-A port. 3. Power on: The light enters the upgrade interface and automatically returns to the main interface upon completion. Note: 1. Firmware must be downloaded from the official website. The root directory of the USB drive must contain only a single BIN file. 2. USB-A output: 5 V $\pm$ 0.5 A. Do not connect high power USB devices.
	Factory Reset	No	/
		Yes	Restore all parameters to factory defaults. The device reboots automatically, and brightness resets to 100%.
	Fixture Info	/	View Model, Firmware Version, etc.

6. "Godox Light" App Connection Guide

Scan the QR code or search for "Godox Light" in the App Store to download.

6.1 Bluetooth Reset

Long press the Bluetooth Reset Button to complete reset

6.2 Bluetooth Pairing

Open the App, select "Add Bluetooth", then search for and connect the device.

6.3 NFC Quick Pair

Enable NFC on the mobile device. Select "Add via NFC" in the app, then bring the device close to the NFC Zone on the fixture to pair automatically.



6.4 Firmware Upgrade

In the app's device list, tap the  and select "Firmware Upgrade". The App will automatically check for new versions. Follow the on-screen instructions.

Illuminance Data

LE200R

CCT	Testing	Unit	1m	2m	3m
1800K	Bare Light	lux	1920	492	222
		fc	178	46	21
	With Reflector BR30	lux	18600	4110	1750
		fc	1730	382	163
2800K	Bare Light	lux	6320	1620	728
		fc	587	150	68
	With Reflector BR30	lux	61400	13500	5770
		fc	5700	1260	536
3200K	Bare Light	lux	6700	1720	772
		fc	623	160	72
	With Reflector BR30	lux	65300	14400	6130
		fc	6070	1340	570
4300K	Bare Light	lux	7110	1820	819
		fc	660	169	76
	With Reflector BR30	lux	69200	15300	6500
		fc	6430	1420	604
5600K	Bare Light	lux	7330	1880	845
		fc	681	175	79
	With Reflector BR30	lux	71700	15800	6710
		fc	6660	1470	623
6500K	Bare Light	lux	7580	1950	874
		fc	705	181	81
	With Reflector BR30	lux	74300	16400	6950
		fc	6900	1520	646

CCT	Testing	Unit	1m	2m	3m
8500K	Bare Light	lux	7760	1990	895
		fc	721	185	83
	With Reflector BR30	lux	76100	16800	7120
		fc	7070	1560	661
10000K	Bare Light	lux	7750	1990	895
		fc	720	185	83
	With Reflector BR30	lux	75900	16700	7120
		fc	7060	1550	661
Red	Bare Light	lux	1180	303	137
		fc	109	28	13
	With Reflector BR30	lux	11300	2520	1070
		fc	1050	234	99
Green	Bare Light	lux	4860	1250	563
		fc	452	116	52
	With Reflector BR30	lux	47600	10600	4480
		fc	4430	985	417
Blue	Bare Light	lux	1330	338	153
		fc	123	31	14
	With Reflector BR30	lux	13100	2910	1230
		fc	1220	270	115

LE300R

CCT	Testing	Unit	1m	2m	3m	5m
1800K	Bare Light	lux	2630	669	305	111
		fc	244	62	28	10
	With Reflector BR30	lux	23900	5260	2270	783
		fc	2220	488	211	73
2800K	Bare Light	lux	9170	2330	1060	386
		fc	852	216	99	36
	With Reflector BR30	lux	82900	18300	7910	2730
		fc	7700	1700	735	254
3200K	Bare Light	lux	9740	2480	1130	411
		fc	905	230	105	38
	With Reflector BR30	lux	88100	19500	8430	2910
		fc	8190	1810	783	270
4300K	Bare Light	lux	10100	2570	1180	426
		fc	938	239	109	40
	With Reflector BR30	lux	91700	20200	8740	3010
		fc	8520	1870	812	280
5600K	Bare Light	lux	10400	2650	1210	439
		fc	968	246	113	41
	With Reflector BR30	lux	94400	20800	9020	3110
		fc	8770	1930	838	289
6500K	Bare Light	lux	10700	2730	1250	452
		fc	998	254	116	42
	With Reflector BR30	lux	97200	21500	9300	3220
		fc	9030	2000	864	299

CCT	Testing	Unit	1m	2m	3m	5m
8500K	Bare Light	lux	11200	2860	1300	471
		fc	1040	265	121	44
	With Reflector BR30	lux	102000	22500	9690	3360
		fc	9460	2090	900	313
10000K	Bare Light	lux	11100	2840	1290	468
		fc	1040	264	120	44
	With Reflector BR30	lux	101000	22400	9630	3350
		fc	9410	2080	895	311
Red	Bare Light	lux	1540	391	175	66
		fc	143	36	16	6
	With Reflector BR30	lux	13800	3040	1290	454
		fc	1280	282	120	42
Green	Bare Light	lux	6570	1670	750	279
		fc	610	155	70	26
	With Reflector BR30	lux	60000	13200	5660	1980
		fc	5570	1230	526	184
Blue	Bare Light	lux	1720	438	199	72
		fc	160	41	19	7
	With Reflector BR30	lux	15700	3480	1490	517
		fc	1460	323	138	48

LE600R

CCT	Testing	Unit	1m	2m	3m	5m
1800K	Bare Light	lux	4290	1090	486	179
		fc	398	101	45	17
	With Reflector BR30	lux	29800	6480	2720	950
		fc	2770	602	252	88
2800K	Bare Light	lux	16000	4020	1820	666
		fc	1490	374	169	62
	With Reflector BR30	lux	112000	24500	10200	3600
		fc	10400	2280	949	334
3200K	Bare Light	lux	16700	4250	1900	698
		fc	1560	395	177	65
	With Reflector BR30	lux	117000	25700	10700	3750
		fc	10900	2380	996	348
4300K	Bare Light	lux	17900	4530	2030	744
		fc	1660	421	189	69
	With Reflector BR30	lux	125000	27400	11500	4010
		fc	11600	2540	1060	373
5600K	Bare Light	lux	18600	4720	2110	774
		fc	1720	438	196	72
	With Reflector BR30	lux	130000	28400	11900	4170
		fc	12000	2640	1110	387
6500K	Bare Light	lux	19200	4870	2180	798
		fc	1780	452	202	74
	With Reflector BR30	lux	134000	29400	12300	4300
		fc	12400	2730	1150	400

CCT	Testing	Unit	1m	2m	3m	5m
8500K	Bare Light	lux	19900	5050	2260	828
		fc	1850	469	210	77
	With Reflector BR30	lux	139000	30400	12800	4460
		fc	12900	2830	1190	414
10000K	Bare Light	lux	19500	4990	2230	817
		fc	1820	463	207	76
	With Reflector BR30	lux	137000	30000	12600	4400
		fc	12800	2780	1170	409
Red	Bare Light	lux	2600	661	296	108
		fc	241	61	28	10
	With Reflector BR30	lux	17900	3900	1630	569
		fc	1660	362	152	53
Green	Bare Light	lux	11600	2940	1320	483
		fc	1080	273	122	45
	With Reflector BR30	lux	81000	17800	7430	2600
		fc	7520	1650	691	241
Blue	Bare Light	lux	2920	742	332	121
		fc	271	69	31	44
	With Reflector BR30	lux	20200	4420	1860	649
		fc	1880	411	173	60

Note: All data are average values measured at 100% brightness.

Technical Data

Product Name	LITEMONS Full-color LED Light		
Product Model	LE200R	LE300R	LE600R
AC INPUT	100V-240V ~ 50/60Hz		100V ~ 60Hz, 635W 240V ~ 50Hz, 620W
	230W	330W	
CCT Range	1800K ~ 10000K		
GM Range	-100% ~ 100%		
Brightness Range	0% ~ 100%		
Dimming Curves	Linear / S-Curve / Exponential / Logarithmic		
FX Effects	14 Types		
CRI≈	96		
TLCI≈	95		
Control Method	DMX512 / RDM, App, On-board control		
Bluetooth Range	Up to 30m		
USB-A Port	Firmware update / 5 V⎓ 0.5 A output		
Operating Temperature	-20°C ~ 45°C		
Dimensions (without Reflector)	158 × 239 × 262mm		272 × 282× 397mm
Net Weight (without Reflector)	2.8kg		5.2kg

Note:

1. Please refer to the corresponding parameters for the model purchased.
2. Product design and specifications are subject to change without notice.

Maintenance

- Power off and disconnect the power supply before cleaning. Use a dry, soft cloth only. Strictly do not use alcohol, benzene, or other volatile solvents.
- Ensure the device has cooled down completely and all cables are disconnected before storage. Store in a dry, well-ventilated environment away from strong magnetic fields.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Warning

Operating frequency: 2402MHz – 2480MHz (BT)

Maximum EIRP Power: 5dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

IC Warning

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS sans licence d'innovation, sciences et développement économique Canada. Les opérations sont soumises aux deux conditions suivantes:

- (1) Cet appareil ne peut pas causer d'interférences, et
- (2) Cet appareil doit accepter toute interférence, y compris celles qui pourraient entraîner un fonctionnement accidentel de l'appareil.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条形码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》（见后面说明）所列产品，其他非属此范围的产品或部件（如促销品、赠品及其他出厂后附加的部件等）不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修情况

如产品存在下列情，本文件项下的保证和服务将不适用：①产品或部件超出保修期；②因不当使用、维护或保管导致的损坏，如：不当搬运；未按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③非神牛授权机构或人员安装、修理、更改、添加或拆卸导致的损坏；④产品或部件原有识别信息被修改或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件导致的损坏；⑦因不可抗力或意外事故导致的损坏；⑧其他非产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。不在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

部件	保修期（月）	保修服务类型
内部电路板	12	客户送修
其他（光效附件、各类线材、包装等）	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Parts	Maintenance Period (month)	Warranty Service Type
Internal circuit board	12	Customer sends the product to designated site
Other items (optical accessories, cables, package, etc)	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062



Wechat
Official Account
神牛微信公众号

制造商：深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业区厂房 2 栋

电话：+86-755-29609320 (8062) 传真：+86-755-25723423

邮箱：godox@godox.com 网址：godox.com

MANUFACTURER: GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street,
Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320 (8062)

Fax: +86-755-25723423 E-mail: godox@godox.com Website: godox.com



合格证
QC PASS

Copyright © 2026 Godox All Rights Reserved.

中国制造 Made in China