


GARMIN®

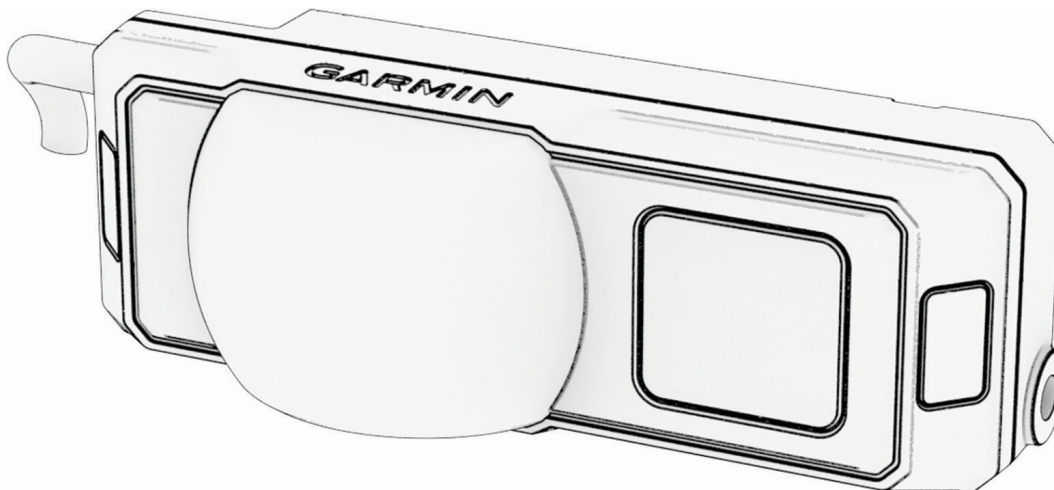

ZŪMO™ R1 RADAR

Owner's Manual

© 2025 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, Tread®, and zūmo® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. zūmo™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Table of Contents

Introduction.....	1
Getting Started.....	1
Device Overview.....	2
Radar Status LED.....	4
Status Icons.....	4
Tools Needed.....	5

Installation.....	5
Mounting Considerations.....	5
Installing the Indicators.....	6
Mounting the Indicators with Brackets.....	7
Mounting the Indicators with Adhesive.....	8
Mounting the Indicators with Cable Ties.....	9
Installing the Mount.....	10
Vehicle Mount Installation for North America.....	10
Vehicle Mount Installation for Europe.....	11
Installing the Surface Mount.....	12
Installing the Motorcycle Radar in the Mount.....	13
Checking the Radar Angle.....	14
Wiring Diagram.....	15
In-line Fuse Cable.....	16

The zūmo R1 Radar System and the zūmo Radar App.....	16
Pairing the zūmo R1 Radar System with Your Phone.....	16
Viewing Radar on the App.....	17
Display Mode Settings.....	17
Enabling or Disabling Alignment Lines.....	17
Pairing Multiple Devices with Your Phone.....	18
Selecting a Radar Device from Multiple Paired Devices.....	18
Enabling Audio Alerts on Your Phone or Bluetooth Headset.....	18
Enabling Blind Spot Alerts on Your Phone.....	18

Enabling the Rear Alert Lights from the App.....	19
Adjusting Alert Sensitivity.....	19

The zūmo R1 Radar System and Your Compatible Motorcycle Navigator... 19

Pairing the zūmo R1 Radar System with Your Motorcycle Navigator.....	20
Viewing Radar on Your Motorcycle Navigator.....	20
Viewing the Radar Map Tool on Your Motorcycle Navigator.....	20
Enabling or Disabling Alignment Lines on Your Motorcycle Navigator.....	21
Enabling Audio Alerts on Your Motorcycle Navigator or Bluetooth Headset.....	21
Enabling Blind Spot Alerts on Your Motorcycle Navigator.....	21
Enabling the Rear Alert Lights from Your Motorcycle Navigator.....	21

Rider Awareness Features and Alerts..... 22

Enabling the Rear Alert Lights from the zūmo R1 Radar System.....	22
Rear Alert Notifications.....	23

Device Information..... 23

Device Care.....	23
Cleaning the Device.....	23
Radar Detection.....	24
Specifications.....	24

Troubleshooting..... 24

Restarting the Device.....	24
Resetting the Device.....	24
Exiting Demo Mode.....	24
My device is overheating.....	25

Introduction

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Garmin® strongly recommends having an experienced installer with the proper knowledge of electrical systems install the device. Incorrectly wiring the power cable can result in damage to the vehicle, the battery, or the device and can cause bodily injury.

The device can improve situational awareness. It is not a replacement for rider attentiveness, good judgement, or checking mirrors and blind spots. Always maintain awareness of your surroundings, and operate the motorcycle in a safe manner. Failure to do so could result in serious injury or death.

The device, including the sensor, must be securely mounted and must remain stable in all operating conditions. The mounting options outlined here may not be compatible with all vehicles and may require additional hardware. Failure to securely mount this device could result in poor product performance and could cause the device to detach from its mount, which could damage the device or the vehicle and could cause serious personal injury.

If the radar device is not connected or sending radar data, Garmin recommends that you stop riding and check the devices in a safe location. Failure to do so could result in serious injury or death.

Failure to install this device according to these instructions could result in serious personal injury, damage to the motorcycle or device, or poor product performance.

The device must be installed in a manner that ensures sufficient cable slack for the entire turning range of the motorcycle's handlebars. Failure to do so could result in poor product performance, property damage, or serious personal injury.

Adverse weather conditions and wet roads may interfere with the operation of the device. Avoid using the device in these conditions.

Routinely inspect the device and remove any dirt, debris, or other obstructions. Failure to do so could result in poor product performance or may interfere with the operation of the the device.

CAUTION

To avoid possible personal injury, always wear safety goggles, ear protection, and a dust mask when drilling, cutting, or sanding.

NOTICE

When drilling or cutting, always check what is on the opposite side of the surface to avoid damaging the vehicle.

These installation instructions do not apply to a specific vehicle type, and are meant as a guide when installing this product on your vehicle. For questions specific to your vehicle, you should contact the vehicle manufacturer.


When using the license plate mount, Garmin recommends attaching this device only to OEM license plate mounts to ensure adequate stability and a clear view.

Getting Started

You can use the zūmo R1 Radar system with your compatible Garmin device or the zūmo® Radar app on your phone. You can also use the zūmo R1 Radar system as a standalone device without a screen ([Radar Status LED](#), [page 4](#)). This list provides an overview of the installation and setup tasks.

- 1 Install the indicators ([Installing the Indicators](#), [page 6](#)).
- 2 Install the mount ([Installing the Mount](#), [page 10](#)).
- 3 Install the zūmo R1 Radar system in the mount ([Installing the Motorcycle Radar in the Mount](#), [page 13](#)).
- 4 Select an option:
 - If you are using a compatible motorcycle navigator, pair the devices ([Pairing the zūmo R1 Radar System with Your Motorcycle Navigator](#), [page 20](#)).
 - If you are using your phone, download the zūmo Radar app to your phone, and pair the devices ([Pairing the zūmo R1 Radar System with Your Phone](#), [page 16](#)).


Device Overview

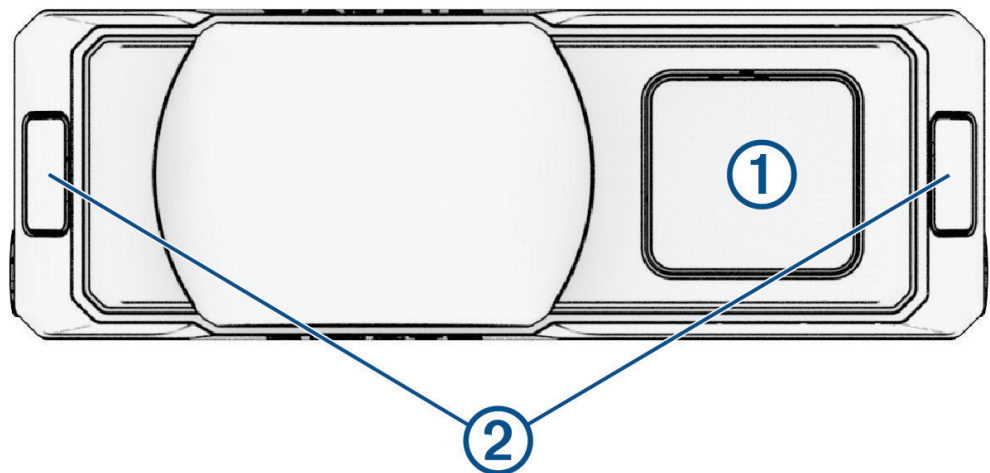

NOTE: The rear-facing red light ① may be oriented to the left or right, depending on which fit is most suitable for your motorcycle.

The rear-facing red lights and amber indicator lights are disabled by default ([Enabling the Rear Alert Lights from the zūmo R1 Radar System, page 22](#)).

① Rear-facing red light	Rear alert light.
② Amber indicator lights	Blind spot warning lights.

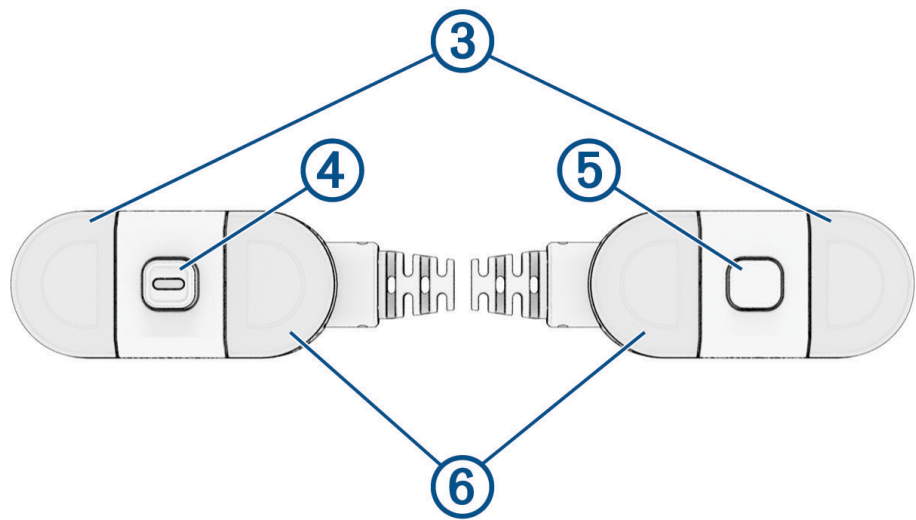

③ Amber LEDs	Blind spot warning lights.
④ Device button	Powers the device on or off or enters the device into pairing mode.
⑤ Status LED	Indicates the radar status.
⑥ Red LEDs	Rear alert lights.

Radar Status LED

LED Activity	Status
Flashing blue	Bluetooth® The device is in Bluetooth pairing mode. The light will flash for three minutes, until a Bluetooth device is paired, or until the device button is pressed.
Solid yellow	Demo The device is in demo mode.
Solid orange	Error The device is experiencing degraded performance because the rear sensor is obstructed.
Solid red	Error The device is not operational because of a system error.
Solid green	Normal operation The device is operating normally.
Solid blue	Normal operation The device features are limited because the motorcycle is traveling at a low rate of speed.
Single green flash (after button press)	Normal operation The indicator and rear lights are enabled.
Single yellow flash (after button press)	Normal operation The indicator lights are enabled. The rear lights are off, but radar detection is working.
Three green flashes (after three button presses)	Normal operation The indicator and rear lights are enabled.
Three orange flashes (after three button presses)	Normal operation The indicator lights are disabled. The rear lights are off, but radar detection is working.
Solid or flashing magenta	Update The device is performing a software update and is disabled until the update is complete.
20 green flashes on startup	Update The device performed a successful update.
20 red flashes on startup	Update The device failed to perform a software update.

Status Icons

	Software update
	Frequency interference
	Overheating

Tools Needed

- 2.5 mm hex wrench (included)
- Adhesive strips (included)
- Cable ties (included)
- Cutters to trim cable ties
- Screws or bolts (to secure the devices)

Installation

Mounting Considerations


WARNING

Failure to mount the device without the appropriate vertical or horizontal clearance could cause degraded performance or could interfere with motorcycle operations, causing an accident possibly resulting in property damage, serious personal injury, or death.


Failure to ensure sufficient cable slack could result in poor product performance, property damage, or serious personal injury.

When selecting a location to mount the device, observe these considerations before permanently mounting it.


- Ensure adequate clearance around the device through full suspension travel of the rear wheel.
- Ensure the device does not block any numbers or letters on the license plate when using the license plate mount.
- You must mount the device in a location where it is not exposed to extreme temperatures, such as the exhaust.
- Installing the device higher on the back of the motorcycle provides a better radar view.
- The included surface mount bracket can be fastened to the back of the motorcycle using self-tapping, panhead screws or adhesive.
- When using the license plate mount, Garmin recommends using metal fasteners to attach the license plate to your motorcycle.
- Ensure the device faces backward and is level and parallel to the road.

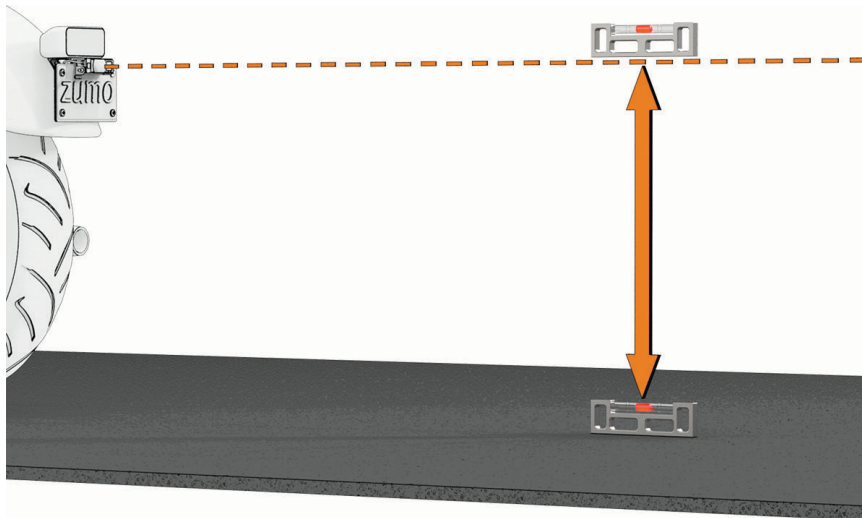

- Ensure the device has 180 degrees of horizontal clearance.

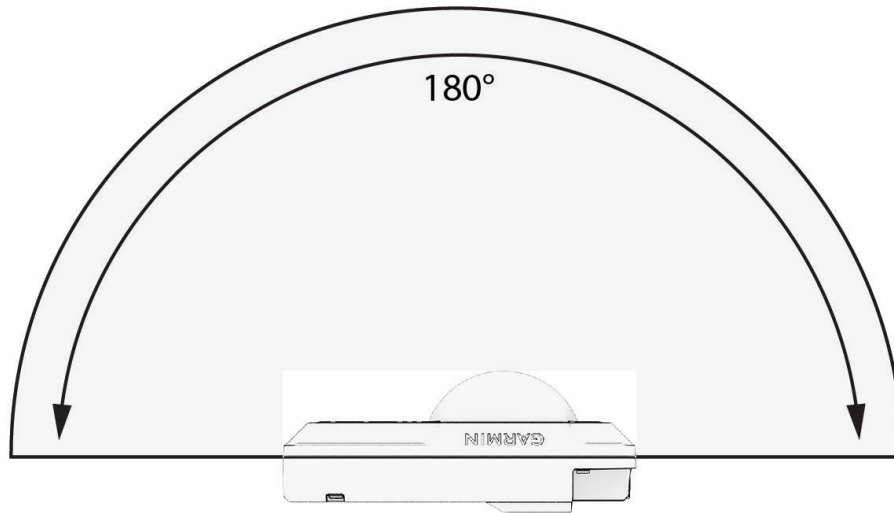

- Ensure the device has 135 degrees of vertical clearance.

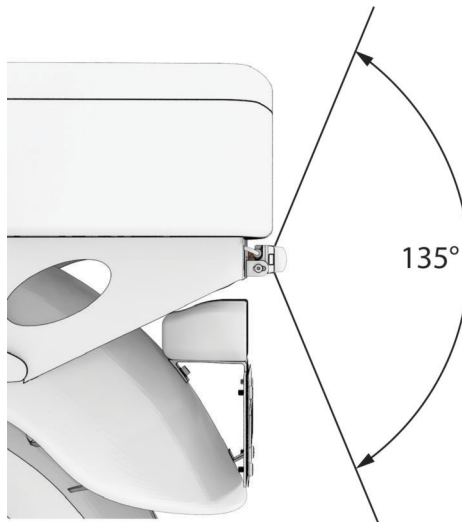

- The device must be installed in a manner that ensures sufficient cable slack for the entire turning range of the motorcycle's handlebars and during full range of suspension travel.


Installing the Indicators

The device includes parts for multiple indicator installation solutions. Custom mounts may require additional hardware. The indicators are labeled on the back, with the L indicator to be positioned on the left handlebar and the R indicator to be positioned on the right handlebar. Ensure the indicators are visible in your peripheral vision while you are looking straight ahead.


Mounting the Indicators with Brackets

Before you mount the indicators, determine whether the indicator should be placed vertically or horizontally on your motorcycle and which side each indicator should be placed on. Each indicator is marked with L or R to align with the left or right side from the rider's position.

- 1 Attach the bracket to the back of the indicator using the included screw.

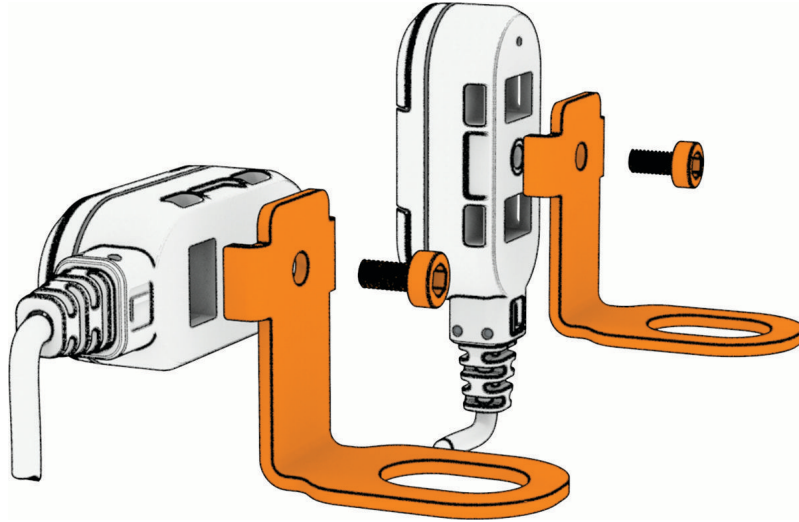

- 2 Remove the mirror.
- 3 Place the bracket under the mirror stem with the indicator facing the rider.

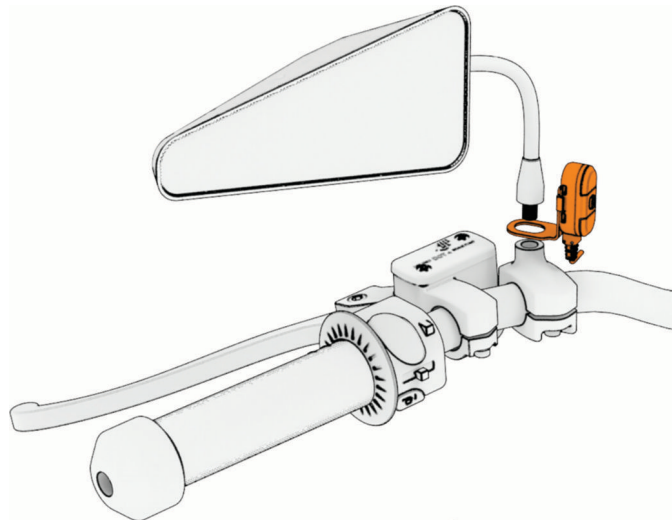

- 4 Return the mirror to its original position.
- 5 Repeat steps 1 through 4 to install the other indicator on the other side.

Mounting the Indicators with Adhesive

NOTICE

The adhesive mount is intended for a long-term installation and can be difficult to remove. You should carefully consider the mounting location before you install the mount.


You should allow the mount to remain in place at room temperature for 24 hours before completing installation and going for a ride.

For the best results, the ambient temperature should be from 21° to 38°C (from 70° to 100°F) while installing with adhesive. The adhesive may not bond correctly if the temperature is outside this range.

Before you mount the indicators, determine whether the indicator should be placed vertically or horizontally on your motorcycle and which side each indicator should be placed on. Each indicator is marked with L or R to align with the left or right side from the rider's position.


Before you mount the indicators with adhesive, ensure the surface areas are completely flat.

- 1 Clean the surface area and the back of the indicators using water or isopropyl alcohol and a lint-free cloth. The surface must be free of dust, wax, oils, or coatings.
- 2 Remove the protective film from the adhesive.
- 3 Apply the adhesive to the back of the indicator.

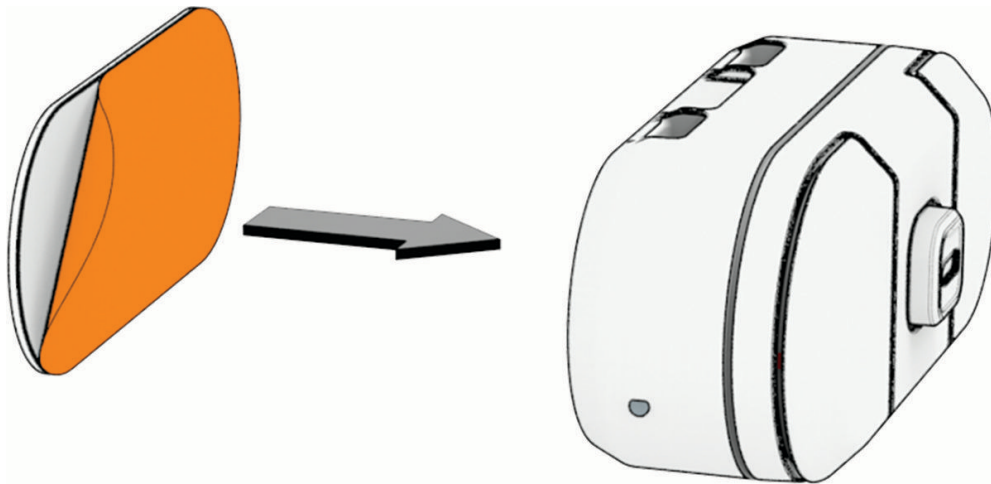

TIP: The adhesive is extremely sticky. Do not touch the adhesive to the surface until the indicator is properly positioned and aligned.

- 4 Remove the protective film from the other side of the adhesive, and position the indicator over the mounting location.

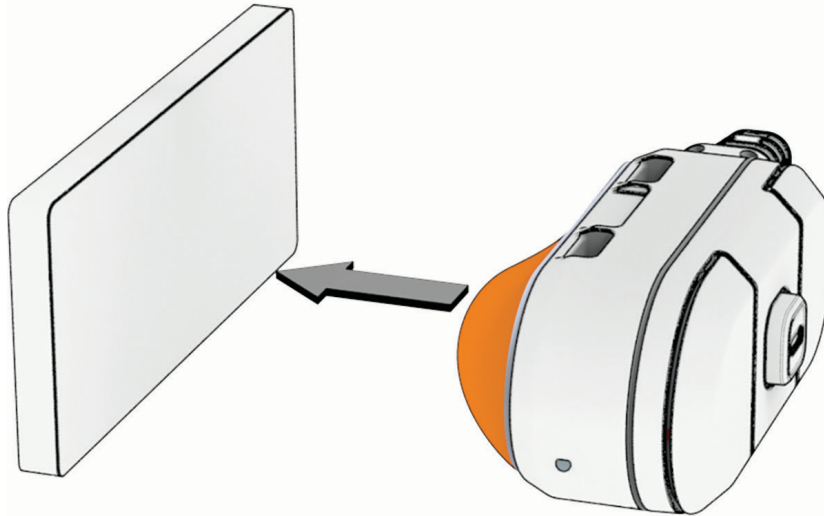

TIP: The adhesive is extremely sticky. Do not touch the adhesive to the surface until the indicator is properly positioned and aligned.

- 5 Press the indicator firmly onto the surface, and maintain pressure for 30 seconds.
- 6 Repeat steps 1 through 5 to install the other indicator.

Mounting the Indicators with Cable Ties

Before you mount the indicators, determine whether the indicator should be placed vertically or horizontally on your motorcycle and which side each indicator should be placed on. Each indicator is marked with L or R to align with the left or right side from the rider's position.

- 1 Position the indicator facing toward the rider and in a location where it is visible without needing to look away from the road.
- 2 Mount the indicator to the handlebar or mirror stem using zip ties and the included mounting pad.



- 3 Repeat steps 1 and 2 for the indicator on the other side.

Installing the Mount

NOTICE


It is the user's responsibility to mount and operate the device in compliance with all applicable laws and ordinances.

The zūmo R1 Radar system includes parts for a license plate or surface mount. Custom mounts may require additional hardware.

Vehicle Mount Installation for North America

Installing the License Plate Mount

- 1 Plan a path for the cable so that it does not interfere with the operation and function of your motorcycle.
- 2 Attach the license plate and mount to your motorcycle using the existing license plate hardware.

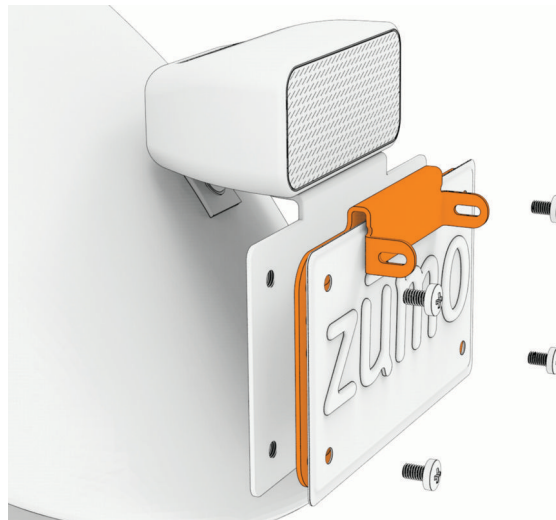


NOTE: Some license plates may accommodate only two screws, but you should use four screws when possible.

- 3 Ensure the mount is securely attached to the motorcycle near the sensor. If your license plate is mounted with only two screws, or if the existing license plate screws are not close to the sensor, you should use adhesive strips (included) or additional fasteners.
- 4 Secure the cable, and connect it to the battery and zūmo R1 Radar system.

Vehicle Mount Installation for Europe

Installing the License Plate Mount

- 1 Plan a path for the cable so that it does not interfere with the operation and function of your motorcycle.
- 2 Attach the license plate and mount assembly to your motorcycle using the existing license plate hardware.

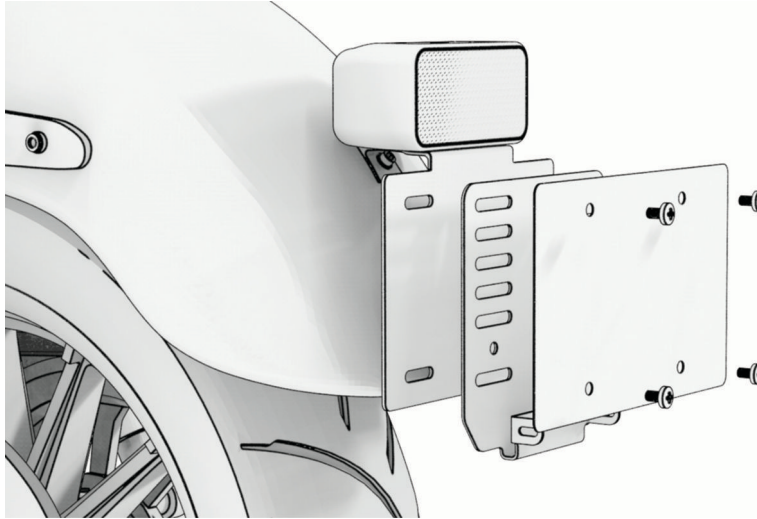

NOTE: Some license plates may accommodate only two screws, but you should use four screws when possible.

- 3 Ensure the mount is securely attached to the motorcycle near the sensor. If your license plate is mounted with only two screws, or if the existing license plate screws are not close to the sensor, you should use adhesive strips (included) or additional fasteners.
- 4 Secure the cable, and connect it to the battery and zūmo R1 Radar system.

Installing the License Plate Mount with an Extender Plate

An extender plate is included so that you can adjust the mount to accommodate tall license plates.

- 1 Plan a path for the cable so that it does not interfere with the operation and function of your motorcycle.
- 2 Position the extender plate with the license plate mount so that the assembly accommodates your license plate.



- 3 Attach the license plate mount to the extender plate using the four included screws.
- 4 Attach the license plate and mount assembly to your motorcycle using the existing license plate hardware.
NOTE: Some license plates may accommodate only two screws, but you should use four screws when possible.
- 5 Ensure the mount is securely attached to the motorcycle near the sensor. If your license plate is mounted with only two screws, or if the existing license plate screws are not close to the sensor, you should use adhesive strips (included) or additional fasteners.
- 6 Secure the cable, and connect it to the battery and zūmo R1 Radar system.

Installing the Surface Mount

NOTICE

The adhesive is intended for a long-term installation and can be difficult to remove. You should carefully consider the mounting location before you install the mount.

You should allow the mount to remain in place at room temperature for 24 hours before completing installation and going for a ride.

For the best results, the ambient temperature should be from 21° to 38°C (from 70° to 100°F) while installing with adhesive. The adhesive may not bond correctly if the temperature is outside this range.

Before you install the mount with adhesive, ensure the surface area is completely flat.

If screws cannot be used for installation, you can install the zūmo R1 Radar system using the included adhesive strip.


- 1 Plan a path for the cable so that it does not interfere with the operation and function of your motorcycle.
- 2 Clean the mount and the area of the vehicle where you want to place the device using water or alcohol and a lint-free cloth.

The surface must be free of dust, wax, oils, or coatings.

- 3 Remove the protective film from the adhesive, and press it into place on the mount.

TIP: The adhesive is extremely sticky. Do not touch the adhesive to the surface until the indicator is properly positioned and aligned.

- 4 Remove the protective film from the other side of the adhesive strip, press the mount into place on the vehicle, and hold the mount for 30 seconds to ensure proper adhesion.

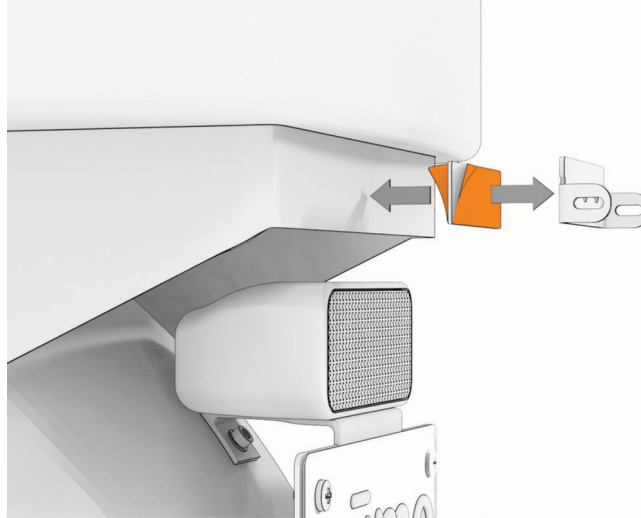

- 5 Secure the cable, and connect it to the battery and zūmo R1 Radar system.

Installing the Motorcycle Radar in the Mount

- 1 Place the zūmo R1 Radar system into the mount, with the lens facing outward.

NOTE: The radar system automatically detects orientation and can be mounted with the red light to the left or right, depending on which fit is more appropriate for your motorcycle.

- 2 Secure the device into the mount using the included M4 screws.




Checking the Radar Angle


You can adjust the radar angle to provide the best view for your motorcycle.

- 1 Ensure the system is facing straight backward from the motorcycle.
- 2 Drive to a level area with a clear view behind your motorcycle.
- 3 Use a 2.5 mm hex wrench to loosen the two screws that hold the radar to the mount.
- 4 Tilt the radar left or right.

NOTE: If approaching vehicles appear too far to your left side, adjust the angle so that the radar sensor points more to the left side. If the vehicles are too far to the right, adjust the radar sensor to point more to the right side.

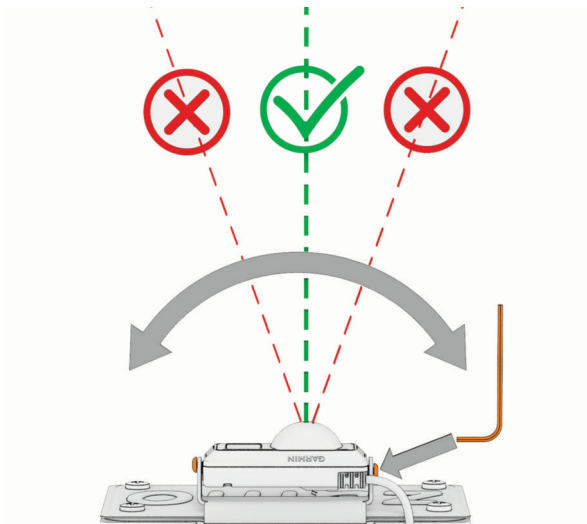

- 5 Tilt the radar up and down so that it is level and parallel to the road.

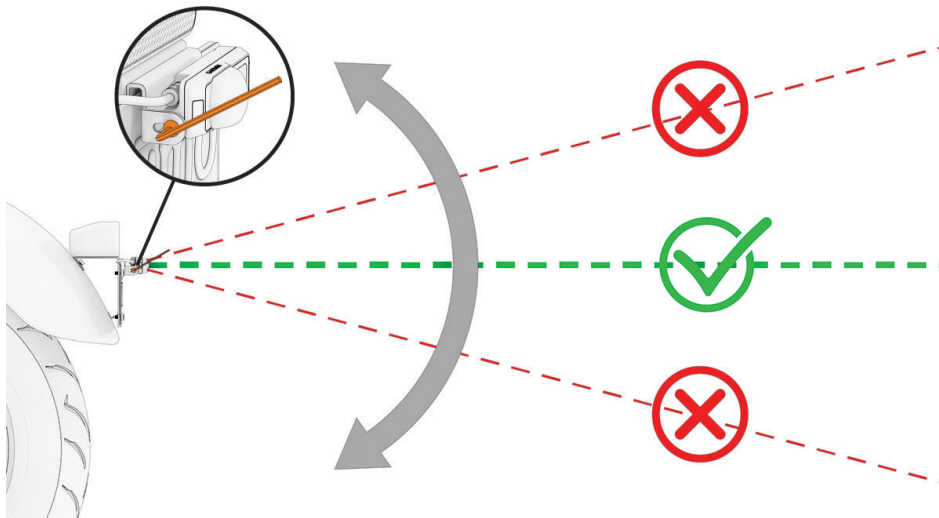

- 6 Tighten the screws to lock the radar in the new position.
- 7 While on a ride, view the radar from the zūmo R1 Radar app or the motorcycle navigator, and verify the radar angle.
When the radar is angled correctly, vehicles appear accurately on the radar screen ([Viewing Radar on the App, page 17](#)), ([Viewing Radar on Your Motorcycle Navigator, page 20](#)).
- 8 If necessary, repeat this procedure until the radar angle is correct.

WARNING


After you adjust the radar angle, you must ensure that vehicles appear as expected. Failure to properly verify the radar angle could result in an accident or collision, resulting in death, serious injury, or property damage.

Wiring Diagram

⚠ WARNING
See the *Important Safety and Product Information* guide in the GPS device product box for product warnings and other important information.

⚠ WARNING
Garmin strongly recommends having an experienced installer with the proper knowledge of electrical systems install the device. Incorrectly wiring the power cable can result in damage to the vehicle, the battery, or the device and can cause bodily injury.

The device must be mounted in a suitable and secure location on your motorcycle, based on available power sources and safe cable routing.

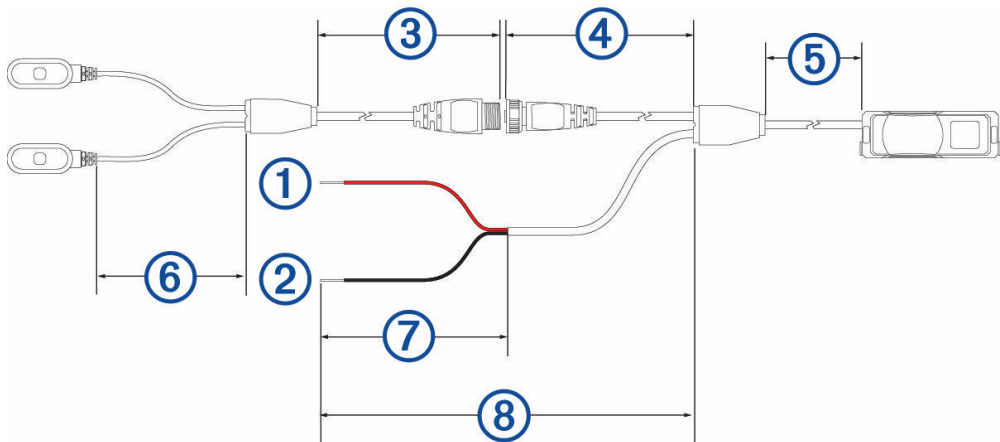

①	10 to 30 Vdc system power (red)
②	System ground (black)
③	Cable length: 1.4 m (55.1 in.)
④	Cable length: 0.7 m (27.5 in.)
⑤	Cable length: 1 m (39.3 in.)
⑥	Cable length: 0.95 m (37.4 in.)
⑦	Cable length: 0.15 m (5.9 in.)
⑧	Cable length: 1 m (39.3 in.)


NOTE: Cable lengths are not to scale.
All measurements may vary by 3 cm (1.2 in.).

In-line Fuse Cable

⚠ WARNING

Garmin strongly recommends having an experienced installer with the proper knowledge of electrical systems install the in-line fuse cable. Incorrectly wiring the power cable or the in-line fuse cable can result in damage to the vehicle or the battery and can cause bodily injury.

In many cases, you must install the included in-line fuse cable on the device power cable to protect the device from excessive electrical current.

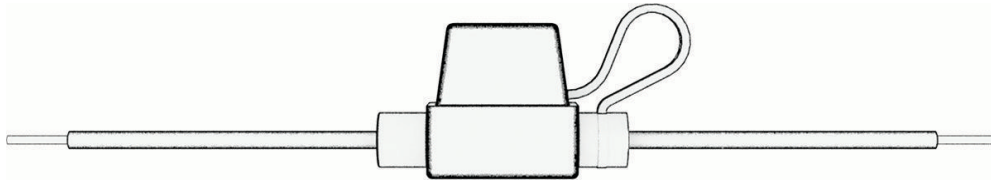

- You must install the included in-line fuse cable if you are connecting the power cable directly to the vehicle battery.
- If you are connecting the power cable to an accessory power source or bus bar that already has a suitable fuse or a protective circuit, installing the included in-line fuse is not necessary.
- When installing the fuse cable, you should connect it to the red system power wire using the included splice connector.

The zūmo R1 Radar System and the zūmo Radar App

NOTICE

Use of the rear alert lights may violate certain laws and regulations related to motorcycle operation. It is the user's responsibility to comply with any such applicable laws or regulations. Garmin is not responsible for any fines, penalties, citations, or damages that may be incurred due to any such lack of compliance.

The zūmo Radar app connects to your zūmo R1 Radar system using Bluetooth technology. The app displays radar information and settings.

- After pairing, the app displays colored vehicles indicating the threat level posed by approaching vehicles.
- You can enable rear alert lights and audio alerts.
- Firmware updates are sent to the zūmo R1 Radar system from the zūmo Radar app.

garmin.com/zumoradarapp

Pairing the zūmo R1 Radar System with Your Phone

The first time you connect the zūmo R1 Radar system to the zūmo Radar app on your phone, you must pair both devices. After the initial pairing, the zūmo Radar app automatically connects to the zūmo R1 Radar system when you open the app and the device is active and within range.

- 1 Bring your phone within 3 m (10 ft.) of the rear radar sensor on your zūmo R1 Radar system.

NOTE: Stay 10 m (33 ft.) away from other Bluetooth sensors while pairing.

- 2 On your compatible phone, enable Bluetooth technology.
- 3 From the app store on your phone, install and open the zūmo Radar app.
- 4 Follow the on-screen instructions.
- 5 While the zūmo R1 Radar system is powered on, hold the device button for 5 seconds until the status LED flashes blue to enter pairing mode.

NOTE: If you hold the device button for 8 seconds or longer, the radar enters demo mode ([Exiting Demo Mode, page 24](#)).

The device is in pairing mode for 3 minutes or until you press the device button to exit pairing mode.

- 6 Follow the on-screen instructions.

When the zūmo R1 Radar system is paired with your phone, the app displays the current radar status.

Viewing Radar on the App

Go for a ride.

The radar information appears on the active data screen.



The status icon ① indicates the radar sensor status. The vehicle positions change color based on threat level. A yellow vehicle ② indicates a vehicle is approaching in your blind spot to the left or right of your motorcycle. A red vehicle ③ indicates a vehicle is approaching rapidly or presents a danger. The rear alert light flashes red three times when this occurs. A gray vehicle ④ indicates a vehicle is approaching from a distance.

Display Mode Settings

You can change the background of the radar screen in the zūmo Radar app.

From the zūmo Radar app, select .

Automatic: Uses the light sensor on the radar device to set the background to light during the day and dark during the night.

Light: Sets a light background.


Dark: Sets a dark background.

Enabling or Disabling Alignment Lines

WARNING


The alignment lines feature is intended for informational and reference purposes only. You are responsible for maintaining awareness of your surroundings. Failure to do so could result in an accident or collision, resulting in death, serious injury, or property damage.

Alignment lines provide an approximate visual representation of the vehicle's path of travel.

From the zūmo Radar app, select  > **Alignment Lines**.

Pairing Multiple Devices with Your Phone

You can pair multiple zūmo R1 Radar systems with the zūmo Radar app.

- 1 Bring your phone within 3 m (10 ft.) of the zūmo R1 Radar system.
NOTE: Stay 10 m (33 ft.) away from other Bluetooth sensors while pairing.
- 2 On your compatible phone, enable Bluetooth technology.
- 3 From the app store on your phone, install and open the zūmo Radar app.
- 4 Select  > **Add Another Device**.
- 5 Follow the on-screen instructions.
- 6 While the zūmo R1 Radar system is powered on, hold the device button for 5 seconds until the status LED flashes blue to enter pairing mode.
NOTE: If you hold the device button for 8 seconds or longer, the radar enters demo mode ([Exiting Demo Mode, page 24](#)).

The device is in pairing mode for 3 minutes or until you press the device button to exit pairing mode.

Connected devices are displayed at the top of the screen when you open the zūmo Radar app ([Selecting a Radar Device from Multiple Paired Devices, page 18](#)).


Selecting a Radar Device from Multiple Paired Devices

Before you can select from a list of radar devices, you must have more than one device paired ([Pairing Multiple Devices with Your Phone, page 18](#)).

- 1 From the zūmo Radar app, select the zūmo R1 Radar system listed at the top of the screen.
- 2 Select a different zūmo R1 Radar system.
The selected zūmo R1 Radar system remains the default device until you select a different one.


Enabling Audio Alerts on Your Phone or Bluetooth Headset

When the system detects a vehicle approaching from behind or in your blind spot, you can receive audio alerts through your paired phone or Bluetooth headset.

- 1 From the zūmo Radar app, select .
- 2 Select an option:
 - To receive an alert when the system detects a vehicle approaching from behind, under **Rear Alert Settings**, select **Audio Alerts**.
 - To receive an alert when the system detects a vehicle in your blind spot, under **Blind Spot Settings**, select **Audio Alerts**.

Enabling Blind Spot Alerts on Your Phone

When the zūmo R1 Radar system detects a vehicle in your blind spot, you can receive alerts through your paired phone.


From the zūmo Radar app, select  > **Blind Spot Alerts**.

Enabling the Rear Alert Lights from the App

NOTICE


Use of the rear alert lights may violate certain laws and regulations related to motorcycle operation. It is the user's responsibility to comply with any such applicable laws or regulations. Garmin is not responsible for any fines, penalties, citations, or damages that may be incurred due to any such lack of compliance.

Rear alert lights are disabled by default. You can enable rear alert lights to light up when vehicles are approaching your motorcycle from behind or in your blind spot.

- 1 From the zūmo Radar app, select .
- 2 Select your zūmo Radar system.
- 3 Select an option:
 - To make the lights turn on when the system detects a vehicle approaching from behind, under **Rear Alert Settings**, select **Rear Lights**.
 - To make the lights turn on when the system detects a vehicle in your blind spot, under **Blind Spot Settings**, select **Rear Lights**.

Adjusting Alert Sensitivity

You can adjust the radar sensitivity to control how many alerts you receive.

- 1 From the zūmo Radar app, select  > **Rear Alerts**.
- 2 Select an option:
 - Select **More** to receive all alerts.
 - Select **Standard** to receive the default amount of alerts.
 - Select **Less** to receive fewer alerts.
 - Select **Off** to turn off all alerts.

The zūmo R1 Radar System and Your Compatible Motorcycle Navigator

You can remotely control your zūmo R1 Radar system and customize settings using your compatible motorcycle navigator. This section contains instructions for the zūmo XT2 motorcycle navigator and Tread® 2 powersport navigator. Go to buy.garmin.com for more information about compatible devices.

Pairing the zūmo R1 Radar System with Your Motorcycle Navigator

Before you can pair your devices, you must ensure both the zūmo R1 Radar and motorcycle navigator are installed on the motorcycle and connected to power.

The first time you connect the zūmo R1 Radar system to your motorcycle navigator, you must pair both devices using Bluetooth technology. After the initial pairing, the motorcycle navigator automatically connects to the zūmo R1 Radar system when it is active and within range.

- 1 Bring the motorcycle navigator within 3 m (10 ft.) of the zūmo R1 Radar system.

NOTE: Stay 10 m (33 ft.) away from other sensors that use Bluetooth technology while pairing.

- 2 From the motorcycle navigator, select  > **zūmo R1 Radar** > **Connect Now**, and follow the on-screen instructions.

- 3 While the zūmo R1 Radar system is powered on, hold the device button for 5 seconds to enter pairing mode.

NOTE: If you hold the device button for 8 seconds or longer, the radar enters demo mode ([Exiting Demo Mode, page 24](#)).

The status LED flashes blue. The device is in pairing mode for 3 minutes or until you press the device button to exit pairing mode.

- 4 When prompted, select **Yes** to select the zūmo R1 Radar system.


- 5 Follow the on-screen instructions.

When the zūmo R1 Radar system is paired with your motorcycle navigator, the status icon turns blue.

Viewing Radar on Your Motorcycle Navigator

Go for a ride.

The radar information appears on the active data screen.

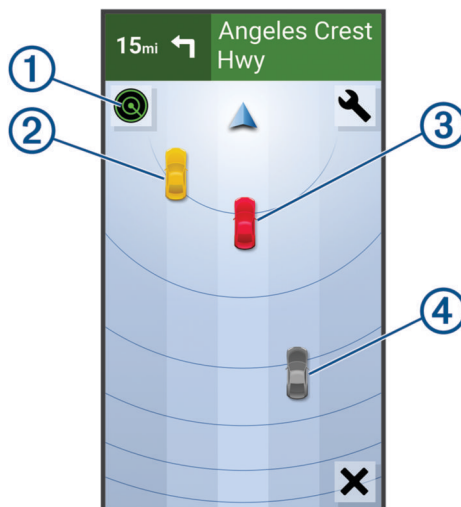

The vehicle positions change color based on threat level. The status icon ① indicates the radar sensor status. A yellow vehicle ② indicates a vehicle is approaching in your blind spot to the left or right of your motorcycle. A red vehicle ③ indicates a vehicle is approaching rapidly or presents a danger. The rear alert light flashes red three times when this occurs. A gray vehicle ④ indicates a vehicle is approaching from a distance.

Viewing the Radar Map Tool on Your Motorcycle Navigator

You can use the zūmo XT2 radar map tool on your motorcycle navigator to view the radar and map data at the same time.

On your motorcycle navigator, from the map, select  > **zūmo R1 Radar**.

The map tool appears in a panel at the edge of the map.

Enabling or Disabling Alignment Lines on Your Motorcycle Navigator

WARNING



The alignment lines feature is intended for informational and reference purposes only. You are responsible for maintaining awareness of your surroundings. Failure to do so could result in an accident or collision, resulting in death, serious injury, or property damage.

Alignment lines provide an approximate visual representation of the vehicle's path of travel.

From your motorcycle navigator, select  > **zūmo R1 Radar** >  > **Alignment Lines**.



Enabling Audio Alerts on Your Motorcycle Navigator or Bluetooth Headset

When the system detects a vehicle, you can receive audio alerts through your motorcycle navigator or paired Bluetooth headset.

- 1 From your motorcycle navigator, select  > **zūmo R1 Radar** > .
- 2 Select your zūmo Radar system.
- 3 Select **Audio Alerts**.

Enabling Blind Spot Alerts on Your Motorcycle Navigator

When the zūmo R1 Radar system detects a vehicle in your blind spot, you can receive alerts through your motorcycle navigator.



- 1 From your motorcycle navigator, select  > **zūmo R1 Radar** > .
- 2 Select your zūmo Radar system.
- 3 Select **Blind Spot Alerts**.

Enabling the Rear Alert Lights from Your Motorcycle Navigator

NOTICE

Use of the rear alert lights may violate certain laws and regulations related to motorcycle operation. It is the user's responsibility to comply with any such applicable laws or regulations. Garmin is not responsible for any fines, penalties, citations, or damages that may be incurred due to any such lack of compliance.

Rear alert lights are disabled by default. You can enable rear alert lights to light up when vehicles are approaching your motorcycle from behind or in your blind spot.

- 1 From your motorcycle navigator, select  > **zūmo R1 Radar** > .
- 2 Select your zūmo Radar system.
- 3 Select an option:
 - To make the lights turn on when the system detects a vehicle approaching from behind, select **Rear Alert Settings** > **Rear Lights**.
 - To make the lights turn on when the system detects a vehicle in your blind spot, select **Blind Spot Settings** > **Rear Lights**.

Rider Awareness Features and Alerts

WARNING

The device can improve situational awareness. It is not a replacement for rider attentiveness, good judgement, or checking mirrors and blind spots. Always maintain awareness of your surroundings, and operate the motorcycle in a safe manner. Failure to do so could result in serious injury or death.

The zūmo R1 Radar system provides features that can help encourage safer riding by notifying you of approaching vehicles. When paired with the zūmo Radar app on your phone or motorcycle navigator, you can customize the device features and alerts.

Lights: The amber and red LEDs on your indicators are illuminated when a vehicle is approaching ([Device Overview, page 2](#)).

Messages and color changes: When a vehicle is approaching at a rapid speed, the bottom of the screen turns red before the vehicle travels into view ([Rear Alert Notifications, page 23](#)).

Audio alerts: You can enable audio alerts through your paired phone ([Enabling Audio Alerts on Your Phone or Bluetooth Headset, page 18](#)) or motorcycle navigator ([Enabling Audio Alerts on Your Motorcycle Navigator or Bluetooth Headset, page 21](#)).

Rear facing lights: You can enable rear alert lights to light up when vehicles are approaching your motorcycle ([Enabling the Rear Alert Lights from the zūmo R1 Radar System, page 22](#)).

Alert sensitivity: You can adjust the amount of alerts displayed or turn them off ([Adjusting Alert Sensitivity, page 19](#)).

Enabling the Rear Alert Lights from the zūmo R1 Radar System

NOTICE

Use of the rear alert lights may violate certain laws and regulations related to motorcycle operation. It is the user's responsibility to comply with any such applicable laws or regulations. Garmin is not responsible for any fines, penalties, citations, or damages that may be incurred due to any such lack of compliance.

Rear alert lights are disabled by default. You can enable rear alert lights to light up when vehicles are approaching your motorcycle.

- 1 Press the device button three times.


The light flashes green three times to indicate that the lights were successfully enabled.

- 2 Press the device button once to determine whether the rear lights are enabled or disabled.

The LED status light flashes green three times when the rear lights are enabled or orange three times when the rear lights are disabled.

Rear Alert Notifications

When a vehicle is approaching from the rear, the bottom of the screen turns red before the rapidly approaching vehicle travels into view.

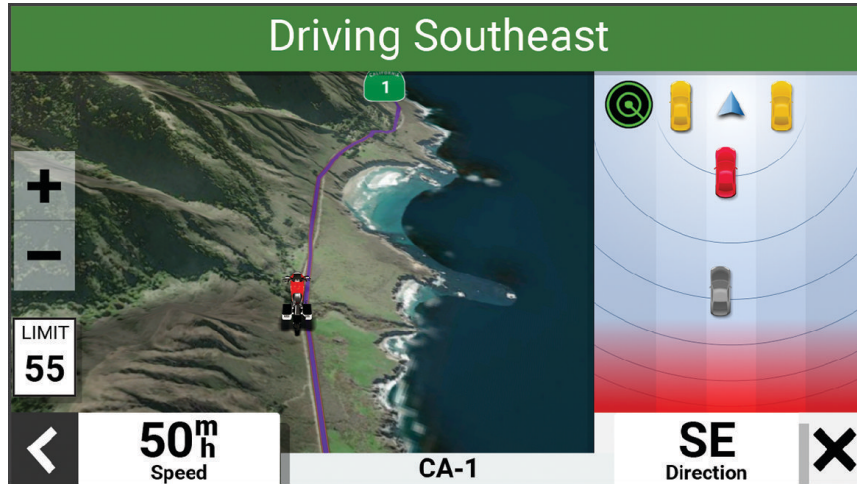

Device Information

Device Care

NOTICE

Avoid contact with chemical cleaners, solvents, gasoline, oil, insect repellents, or sunscreen. These chemicals can damage plastic components and finish.

Thoroughly rinse the device with fresh water as soon as possible after exposure to chlorine, salt water, sunscreen, cosmetics, alcohol, or other harsh chemicals. Prolonged exposure to these substances can damage the plastic components and finish.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Cleaning the Device

NOTICE

Do not use a dry cloth to clean the LED lenses. Use of a dry cloth may damage the LED lenses.

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Wipe the outer casing and LED lenses with a soft, non-scratch cloth dampened with water or isopropyl alcohol.
- 2 Wipe the outer casing dry, and allow the LED lenses to air dry.

Radar Detection

WARNING

Radar performance may be degraded or vehicles may not be detected when the motorcycle is operated outside of the following range: 25 to 150 km/h (15 to 93 mph). Always maintain awareness of your surroundings and operate your motorcycle in a safe manner. Failure to maintain awareness of your surroundings could result in an accident, possibly causing property damage, serious injury, or death.

- The radar detects approaching vehicles up to 60 m (197 ft.) away.
- The radar detects approaching vehicle speed from 0 to 55 km/h (from 0 to 34 mph) relative to your current speed.
- The radar beam width is 170 degrees.
- The radar can detect up to 8 moving vehicles.

Specifications

Input voltage	From 12 to 24 Vdc
Current usage	0.5 A at 12 Vdc
Water rating	IEC 60529 IP67 ¹
Operating temperature range	From -20° to 55°C (from -4° to 131°F)
Wireless frequency	77-81 GHz @ 21 dBm maximum 2.4 GHz @ 4 dBm maximum

Troubleshooting

Restarting the Device

If the device stops responding or the status LED is solid red, you may need to restart it. This does not erase any of your data or settings.

- 1 Hold the device button for 10 seconds.
- 2 Release the device button.

The status LED turns off and the device restarts.

Resetting the Device

Before you reset the device, you should try to restart the device to avoid erasing data and settings ([Restarting the Device, page 24](#)).

If the device is not responding or the status LED is solid red, you can reset the device.

Press the device button 10 consecutive times.

The status LED turns blue and the device restarts.


Exiting Demo Mode

Demo mode shows a preview of features on your zūmo R1 Radar system. The status LED is solid yellow when the device is in demo mode.

- 1 Hold the device button for 8 seconds until the status LED changes to orange.
- 2 Release the device button.

¹ The device is protected against the ingress of dust and withstands incidental exposure to water of up to 1 m for up to 30 min.

My device is overheating

The operating temperature range specification for the device is from -20° to 55°C (from -4° to 131°F). The status LED turns red and an icon  is displayed in the zūmo Radar app or on your motorcycle navigator when your device is overheating and could indicate that the device is operating outside this range.

NOTE: The zūmo Radar system is not operational when this icon is displayed and the status LED is red.

- Ensure your device is mounted as far away from heat sources on the motorcycle as possible.
- Avoid parking your motorcycle with the device in direct sunlight.

