



GREEN
EXTREME™

Vertical

Battery Grip

GXBGE20

for Canon EOS 5D Mark IV DSLR
Manual


Thank You for Choosing Green Extreme

The Green Extreme BG-E20 is compatible with the Canon EOS 5D Mark IV DSLR Camera. The BG-E20 accepts two LPE-6N/LP-E6 Batteries for twice the power. The BG-E20 is equipped with an alternate shutter-release button, AF start button, AF point selection, AE lock/FE lock button, and much more.




Enjoy the many benefits that a battery grip offers, extend your shooting time and have more control and comfort when shooting in portrait orientation.

Please read the manual before using this product. Please keep it properly for convenient access. Please use the product only after you fully understand how to use.




Overview

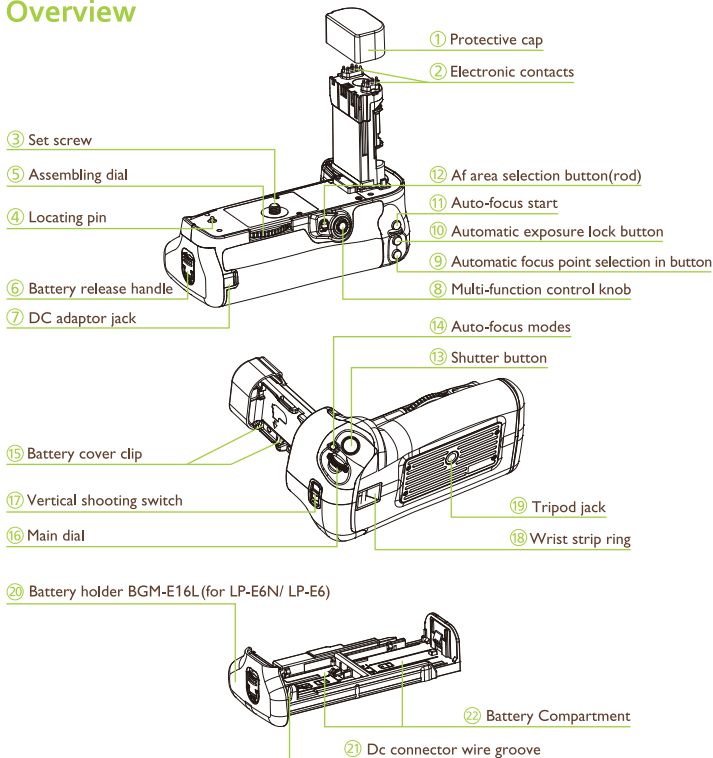

Attaching to the Camera

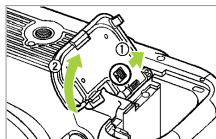
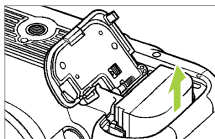
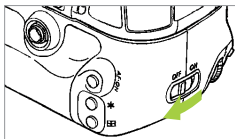


1. Please turn off the camera and ensure that the Control Lock on the grip is in the "OFF" position before attaching.
2. Open the camera's battery chamber and remove the battery from the camera battery compartment.
3. Detach the chamber cover as illustrated.

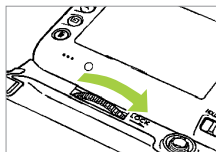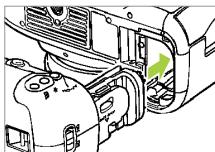
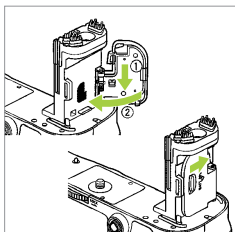


4. To prevent loss, insert the battery chamber cover into the camera battery chamber cover storage slot on grip.
5. Insert the grip's electrical contacts into the camera's battery chamber, align the attachment screw with the camera's tripod socket.
6. Turn the attachment wheel to tighten securely in the direction of the arrow. If there is some space left, please remove and reattach the battery grip.

Install Batteries

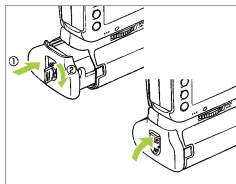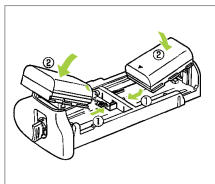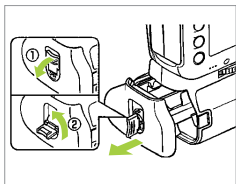

1. Ensure that the power is turned off on the camera and the Control Lock on the grip is in the "OFF" position. Turn the battery-chamber latch counter-clockwise to open the battery chamber door.
2. For LPE-6N/LPE-6 Li-ion Batteries: Matching the indentations on the battery (one or two) with the LP-E6 holder, press the battery down and slide it in the direction of the arrow.
3. Insert the battery holder into the grip and turn the latch in the direction of the arrow to lock it.

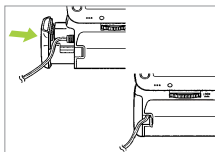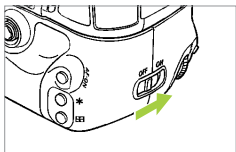




4. Switch the battery grip power to ON and turn on the camera to check the battery level in the control panel or viewfinder.
5. To use the AC Power Adapter Kit(sold separately), insert the adapter into the LP-E6 battery holder in the same manner as a regular battery. Open the latch and pass the cable through.

-
- Please install the grip without batteries to the camera. If the grip with batteries is installed to the camera, it is possible that the test result of battery power is not correct.
 - Before installing to or removing from the camera, do turn off the camera and remove the batteries. After removing the grip, please install protective cap for electrical contacts.
 - Replace the battery cover, with 90° or more will install to the battery cover.

Power Supply by Home Socket

If so, please use AC adaptor set ACK-E6 (sold separately)


1. Connect the DC connector plug with the AC adaptor socket and connect the power cord with AC adaptor.(refer to the manual of ACK-E6)
2. Install the DC connector to the battery holder(for LP-E6)(figure 1)
3. Have the DC connector wire through the hole(groove)(figure 2-1), and then through the DC connector wire hole (figure 2-2) and then put the battery holder into the grip.

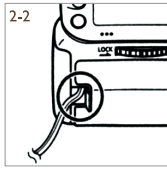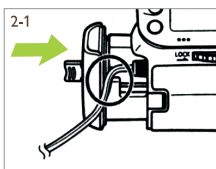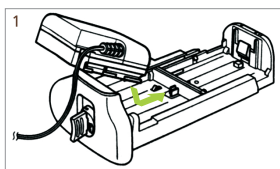

- When the power switch of the camera is “ON”, please don’t connect/disconnect the power cord.
- Please don’t have the DC connector wire caught between the grip and the battery holder.

The Use of Grip


- Turn on the vertical shooting switch (figure 3) so as to make the function of the grip button and the dial the same as that of the corresponding parts of the camera.
- In horizontal shooting, please turn off the vertical shooting switch in case of using buttons or dial on the grip.
- Battery power can be checked from the camera.
- The waist strap is good for holding it tight.

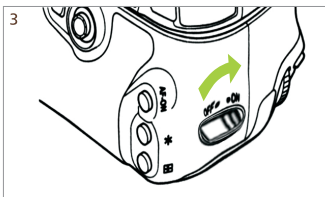

Specification

Power	(1) One or two LP-E6N/ LP-E6 batteries packs (2) AC adaptor set ACK-E6
Power switch	Camera' power switch
Shooting capacity	Refer to the manual of the camera
Working temperature range	0°C -+ 40°C
Operating humidity	85% or less
Size	About 151.7(W)×114.5(H)× 84.3(D) mm
Weight	About 390g

- Specification and appearance may change without notice.

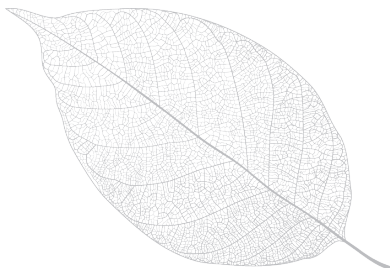

Safety Precautions

The following precautions are to prevent potential danger or loss.
Please read them carefully and use this product correctly and safely.

WARNING: Failure to comply could result in death or serious injury.

1. Do not conduct the following operations, as they may cause fire, fever, fluid leakage or rupture.
 - Use other batteries, power supplies, accessories, deformed or modified batteries.
 - Short-circuit, disassemble, deform, heat, weld the battery, put it into fire or water or apply strong impact.
 - Reverse the positive and negative. Insert new battery with used ones or a different type.
 - Insert metal objects into the contacts point.
2. When fluid leaks, changes color, deforms, smokes, gives off a burning smell or other abnormal situation appears, please pay close attention and promptly remove the battery. If you continue to use the battery, it may cause fire, electric shock or burn.
3. When you don't use the camera, remove and store the battery. Otherwise, it may cause electric shock, fever or fire.
4. Do not use it in a flammable gas environment. Otherwise, it may cause explosion or fire.
5. When the inside device exposed after being dropped, do not touch the exposed parts. Otherwise, it may cause electric shock.
6. Do not disassemble or modify. The inside high voltage parts may cause electric shock.
7. Do not store it in wet or dusty place . Otherwise, it may cause fire or electric shock.
8. When use it on plane or in hospitals, please observe the corresponding instructions.
This device emits electromagnetic wave and may affect measuring or medical equipment.

One Year Limited Warranty

Green Extreme warrants to the original purchaser that your Green Extreme product shall be free from defects in material and workmanship for the period of one(1) years from the date of purchase (or delivery as may be required in certain jurisdictions), or thirty(30) days after replacement, whichever comes later.

Green Extreme's entire liability and your exclusive remedy for any breach of warranty shall be, at Green Extreme's option, to repair or replace the hardware, provided that the hardware is returned to the point of purchase or such other place as Green Extreme may direct with a copy of the sales receipt or dated itemized receipt. Green Extreme may, at its option, replace your product, offer to provide a functionally equivalent product, or repair any product with new, refurbished or used parts as long as such parts are in compliance with the product's technical specifications. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty(30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover problems or damage resulting from accident, abuse, misapplication, or any unauthorized repair, modification or disassembly, improper operation or maintenance, normal wear and tear, or usage not in accordance with product instructions or connection to improper voltage supply, use of consumables, such as replacement batteries, not supplied by Green Extreme, except where such restriction is prohibited by applicable law.

Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser and the country in which the product was purchased. This warranty gives you specific legal rights, and you may also have other rights, including a longer warranty duration that may vary under local laws.

To start a warranty claim contact the Green Extreme Customer Service Department to obtain a return merchandise authorization("RMA") number, and return the defective product to Green Extreme, along with the RMA number and proof of purchase.

Question about our product line? Need Product Support?

We are proud of our products and celebrate our customers. We are with you from product selection to everyday use. Be secure with your purchase and reach us as you need.

Email us: brands@adorama.com Call: 212-647-9300

Address: Adorama Brands, 42 West 18th Street, New York, NY 10011

You can always contact us at BRANDS@ADORAMA.COM for personal technical support. Our web site contains a wide range of Support and FAQ pages with valuable technical assistance.

Green Extreme is a registered trademark of ADORAMA CAMERA.

© 2016 Adorama Camera, Corp. All Rights Reserved.