PT-E-PR QUICKSTART GUIDE

Elite Universal Large Tablet, Surface Pro, & iPad Pro Teleprompter




What's Included

- □ 1 x Glass Assembly
- □ 1 x Magnetic Hood
- □ 2 x 12-Inch Rods
- ☐ 1 x Baseplate Assembly
- ☐ 1 x Large Tablet Holder
- □ 1 x Large Tablet Holder Extension Mount & D-Ring





PT-ELITE-PRO

What's Included

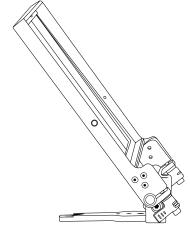


Glass Frame Assembly

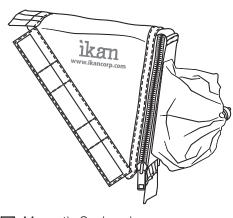


 


2 x 12-Inch Rods

 

☐ Large Tablet Holder Extension & D-Ring

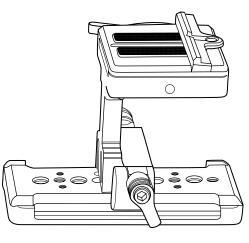

☐ Baseplate Assembly

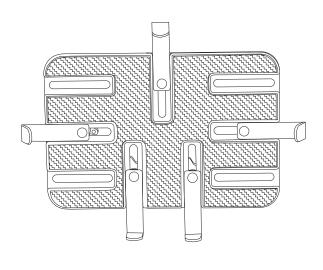



□ Tablet Holder

PT-ELITE-PRO

How to Assemble


1. Attach tablet mount to glass frame assembly. Figures 1a, 1b, 1c.

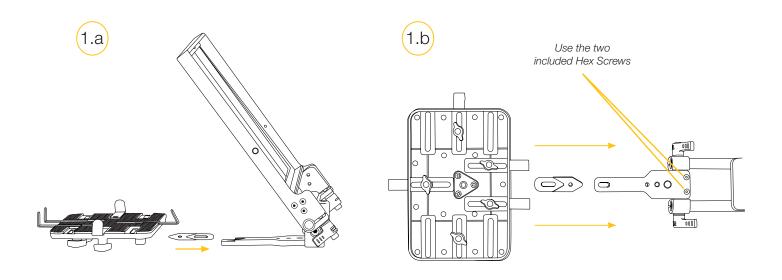

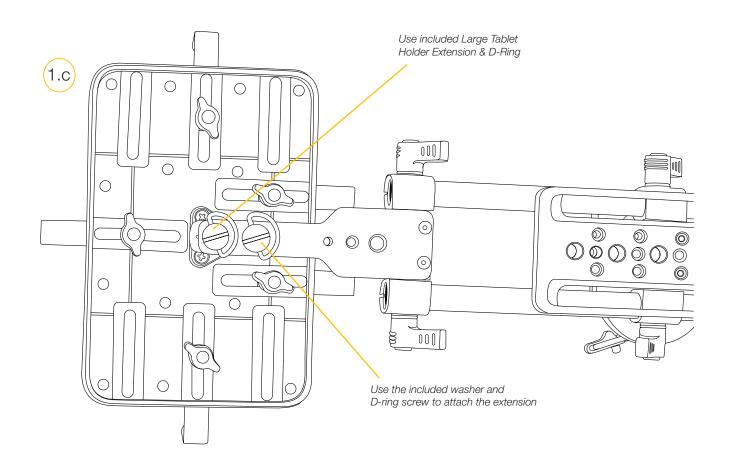

PIERITEPRO

- 2. Insert rods into rail mount on glass frame assembly.
- 3. Slide baseplate onto rods.
- 4. Adjust spacing for your camera.
- 5. Tighten & loosen thumb screws to adjust glass frame. Ideal angle is 45 degrees.

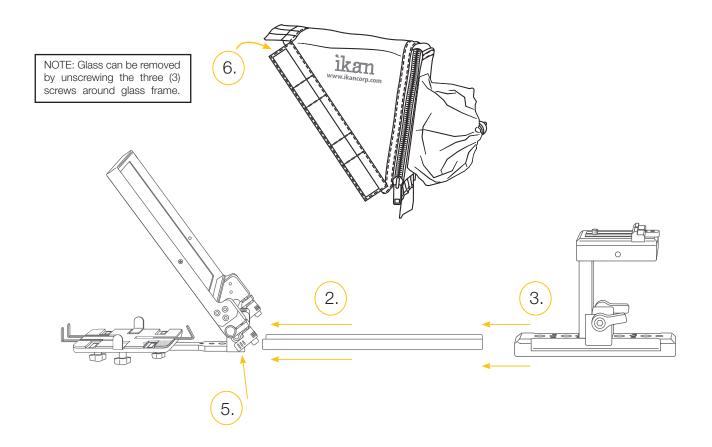

- 6. Attach magnetic hood to glass frame.
- 7. Remove quick release plate & attach your camera. Reattach.

DO NOT THROW AWAY FOAM INSERT.

8. The PT-ELITE-PRO comes packaged in high quality custom-cut foam. It is sized perfectly to fit inside an SKB-i Series 1914-8 waterproof case.

Software Options

Windows: Choose from PrompterPro from Ikan, or from multiple third party options in the Windows Store or on the Web.

iOS: Download Ikan Elite Prompter App from App Store

Android: Choose from multiple 3rd party options on Google Play Store

Learn More

More dynamic information at official website: www.ikancorp.com

Support

Contact email: support@ikancorp.com

Conditions of warranty service

Free service for one year from the day of purchase if the problem is caused by manufacturing errors.

• The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations: (*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.



Quick Start Guide ELITE-REMOTE (i) Bluetooth



Quick Start Guide

Thank you for purchasing the ELITE-REMOTE - Bluetooth iPad teleprompter remote. Please follow these simple instructions to get started.

Downloading Compatible Apps

- 1. Go to the App Store on your tablet
- 2. Locate the search bar at the top right corner and key in the name of one of our compatible apps.





Teleprompt+ 3 Teleprompter Premium

 
3. Select the app and install it.

Inserting battery into ELITE-REMOTE

- 1. Remove the cover on the back of the remote 2. Insert 2 AAA batteries into the battery compartment 3. Re-install the battery cover

Syncing ELITE-REMOTE to your iPad

- 1. Go to the "Settings" app on your iPad
- 2. Select the Bluetooth tab on the left side and confirm the Bluetooth option is on (switch will togale green).
- 3. Turn on the remote by inserting 2 AAA batteries into the battery compartment. A red light should blink momentarily on the front side of the remote.



- 4. Press and hold the "Rewind & Forward" buttons (above the "Laser Pointer Button) for 3 seconds to sync the remote. A blue light should blink momentarily on the front side of the remote
- 5. The words "Elite RC" should appear on your iPad. Select it.
- 6. Once connection between the iPad and the remote has been established. the status message next to "Elite RC" should change to Connected.

Re-establishing connection with your iPad

Once you sync your iPad and ELITE-REMOTE, your iPad will always remember the ELITE-REMOTE. To re-establish connection, simply turn on the remote. press any button, and wait a few seconds. The remote will automatically re-establish connection with your iPad.










Troubleshooting

If you have any issues with the ELITE-REMOTE, please call us at 1.713.272.8822 Monday through Friday 9:00 am to 6:00 pm CST. Or you can email us at support@ikancorp.com.

Ikan International 2022, All Rights Reserved.



Controlling your iPad with ELITE-REMOTE

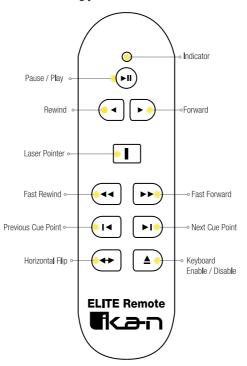

PrompterPro4 Control

