

J. ROCKETT AUDIO DESIGNS



Controls

Gain Knob: Turn to the right to increase gain, to the left to decrease gain.
Treble Knob: Turn to the right to increase treble, to the left to decrease treble.
Output Knob: Turn to the right to increase output, to the left to decrease output.

Settings

The Archer ikon is sort of a 2 in 1 pedal. It can be used as just a clean boost by turning the gain all the way down. As you introduce gain it will attenuate the clean signal, but there is a magical blend in-between that you will find. Please experiment!!



2.1mm x 5.5 mm tip/negative plug

Warranty

J. Rockett Audio Designs LLC will repair or replace, at its discretion, defective workmanship or materials on all new J. Rockett Audio Designs products directly or through the selling dealer or an authorized service technician for one year from the date of purchase at no cost to the original purchaser. Repair and replacement parts installed will be warranted for the unexpired portion of the original warranty term.

Before sending a product in for repair, please contact us at chris@rockettpedals.com or <a href="mailto:carrier-state-order-contact-conta

This warranty does not cover shipping costs, product appearance or damages caused by accident, abuse, misuse or alteration. A dated sales slip or order number (issued by a tech, dealer or J. Rockett Audio Designs) must accompany a product being returned for warranty service. Repairs without a return authorization number will be refused. Please allow four (4) weeks for warranty service. For more information please contact J. Rockett Audio Designs via our website at www.rockettpedals.com or call us at 760-419-1345. No other warranty is expressed or implied.