



POCKET POD

PILOT'S GUIDE ►

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Unique Identifiers: Line 6® Pocket POD®

Responsible Party - U.S. Contact Information:

Yamaha Guitar Group, Inc.
26580 Agoura Road
Calabasas, CA 91302-1921
(818) 575-3600
<https://line6.com/>


FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

What's in the Box


Pocket POD®, (4) AAA batteries, Pilot's Guide.

Battery Installation

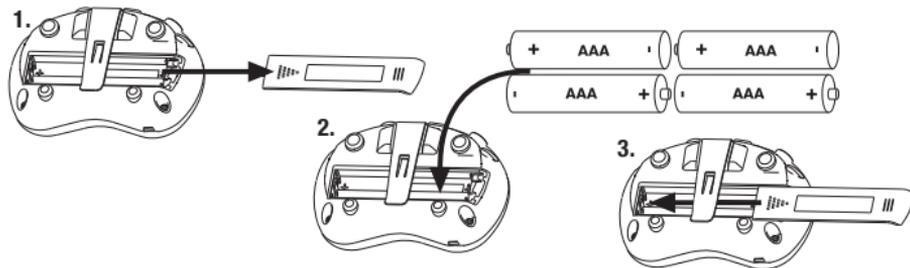


⚠ IMPORTANT! Use non-rechargeable alkaline batteries or the Line 6 DC-1 power adapter (sold separately).


Hookup

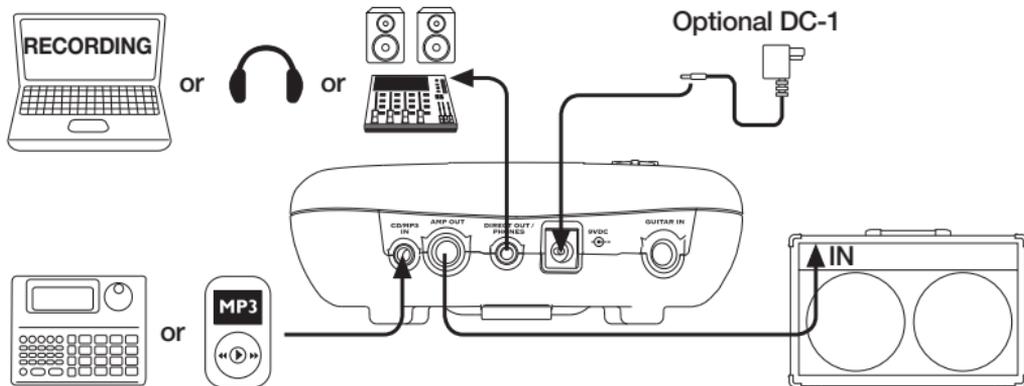

Plug In To Turn On

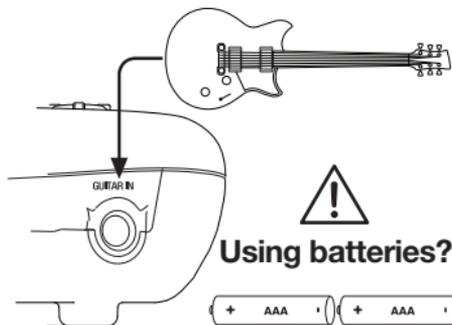

Using batteries?

 

Unplug guitar cable when not in use to avoid draining batteries.

Need Lower Volume?

If output is too loud for your headphones or other equipment:




Hold



+

Master Volume adjust

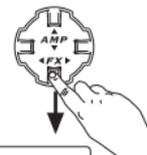

Selecting Presets

Press ◀ repeatedly to select Browse mode:


BROWSE BY: USER

or


BROWSE BY: STYLE

or

BROWSE BY: BAND

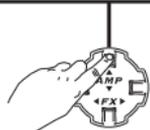

FWD

 

“BANK 31”

↑

“BANK 01”

↑

“SONG”

↑

“CLEAN”

↑

4



FWD




Select next preset




Select previous preset

Adjusting Amp Tone

Adjust Drive / Channel Volume

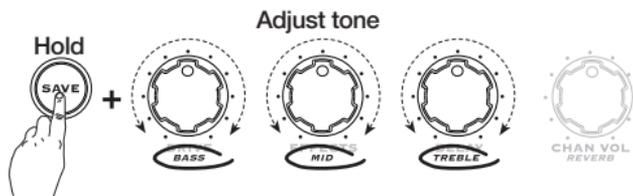

Selecting Amp Models

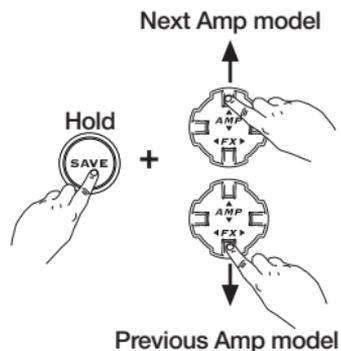

Adjusting Effects

Effects Tweak



Parameter tweaked depends on effect loaded


Delay Level




Delay Rate / Effect Speed




Reverb Level

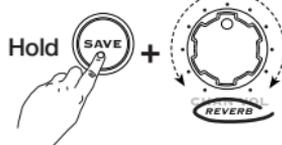


Selecting Effect Models

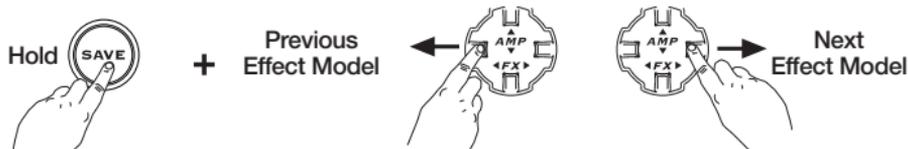

Enabling the Noise Gate

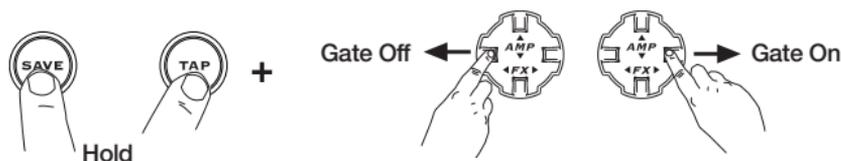

Using the Built-in Tuner

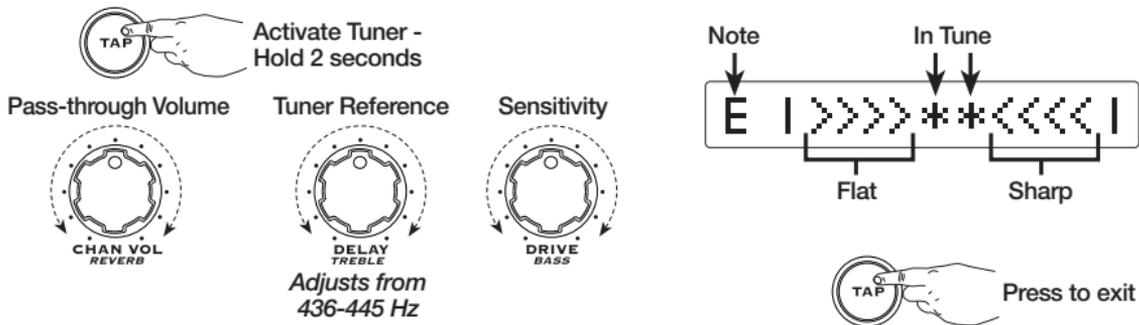


Saving User Presets


1. Press Save



2. Select User Preset to replace

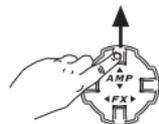

Choose a destination
(User Preset 01A - 31D)

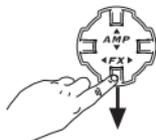


3. Press Save again




4. Rename User Preset

Select next character of name

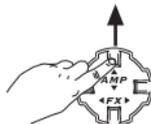

Change letter,
number, or character

Select previous character of name

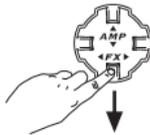

5. Press Save again



Cabinet Tuning Mode

By default the AMP OUT is tuned for ideal sound when connected to the instrument input of an open-back guitar amplifier. If connecting to something else, you can change the Cabinet Tuning Mode.




2. **Direct Mode** - no amp or speaker cabs connected (to recording device, mixer, live P.A., etc.)
'D' Instr In Clsd - for connecting to a guitar combo/head with a closed back speaker cabinet.
'C' Instr In Open - for connecting to a guitar combo/head with an open back speaker cabinet.
'B' Pwr Amp Open - for connecting to a power amp with an open back speaker cabinet.
'A' Pwr Amp Clsd - for connecting to a power amp with a closed back speaker cabinet.



Factory Reset

⚠ WARNING! All custom User Presets will be lost after a Factory Reset.

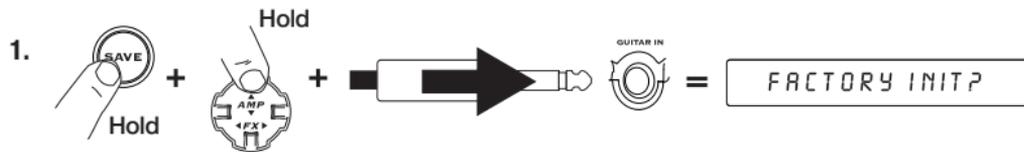- 

1. Hold **SAVE** + Hold **AMP** + **GUITAR IN** = **FACTORY INIT?**
- 

2. **YES=SAVE NO=TAP**

Proceed with Reset Press **SAVE**

Cancel Press **TAP**

Connect



Edit and Share



To fine tune your tones, create original presets from scratch, and build your own personal tone collection, download **Vyrex Pocket POD** editor/librarian software at line6.com/software.* Then visit **CustomTone.com** to download any of 10,000+ free Pocket POD-compatible presets and share your own unique tones with guitarists from around the world.



 ***NOTE:** Please see the Release Notes for the current Vyrex Pocket POD edit application for information regarding supported Mac and Windows computer systems.

www.line6.com/manuals

Select **Pocket POD** in our online manual archive to download the companion manual that describes the details of all the amps and effects featured in your Pocket POD.

All specifications subject to change.

© 2022 Yamaha Guitar Group, Inc. All rights reserved.

Line 6, the Line 6 logo, and POD are trademarks or registered trademarks of Yamaha Guitar Group, Inc. in the U.S. and/or other jurisdictions. Mac is a trademark of Apple, Inc. registered in the U.S. and other countries. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Serial No.: _____