



\* LG LED Monitor applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

34UM88 34UM88C 34UB88

# **TABLE OF CONTENTS**

LICENSE3	USER SETTINGS	18	
- Product Composition4 - Supported Drivers and Software	<ul> <li>Activating the Main Menu</li> <li>Main Menu Features</li> <li>User Settings</li> <li>Menu Settings</li> <li>Quick Settings</li> <li>PBP</li> </ul>		
Input Connector	Picture		
- Moving and Lifting the Monitor8 - Installing the Monitor9 Assembling the Stand	Sound General Reset		
Installing on a Table Adjusting the Stand Height	TROUBLESHOOTING	29	
Adjusting the Angle	PRODUCT SPECIFICATION	31	
Tidying up Cables Using the Kensington Lock Installing the Wall Mount Plate Installing on the Wall	- Factory Support Mode HDMI Timing (Video) Power LED	34	
USING THE MONITOR 14			
- Connecting to a PC 14  HDMI Connection  DisplayPort Connection  Thunderbolt Connection			
- Connecting AV Devices 16 HDMI Connection			
- Connecting Peripherals 16  USB Cable connection - PC  Connecting Headphones			

## **LICENSE**

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



VESA, VESA logo, DisplayPort compliance logo and DisplayPort compliance logo for dual-mode source devices are all registered trademarks of the Video Electronics Standards Association.



MaxxAudio and additional MAXX trademarks are trademarks and/or registered trademarks of Waves Audio Ltd.




The SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc.

# ASSEMBLING AND PREPARING

# **Product Composition**

Please check whether all the components are included in the box before using the product. If there are any missing components, contact the retailer where you purchased the product. Note that the product and related components may look different from those shown here.

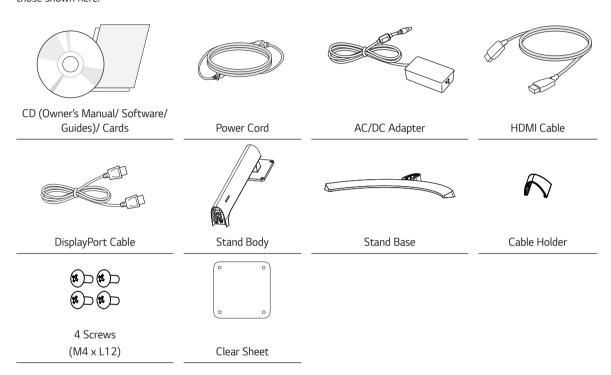



### **CAUTION**

- · Always use genuine LG components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of unauthorized components.
- It is recommend that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.



### NOTE

- The components may look different from those illustrated here.
- Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or an online shopping site, or contact the retailer from which you purchased the product.
- The power cord provided may differ depending upon the region.


# **Supported Drivers and Software**

Check the drivers and software supported by your product and refer to the manuals on the CD enclosed in the product package.

Drivers and Software	Installation Priority	34UM88, 34UB88	34UM88C
Monitor Driver	Recommended	0	0
ASM Driver	Required O		X
OnScreen Control	Recommended	0	0
Dual Controller	Optional	0	0
TRUE COLOR PRO	Optional	0	0

- Required and Recommended: You can download and install the latest version from the enclosed CD or from the LGE website (www.lg.com).
- Optional: You can download and install the latest version from the LGE website (www.lg.com).

# **Product and Button Description**

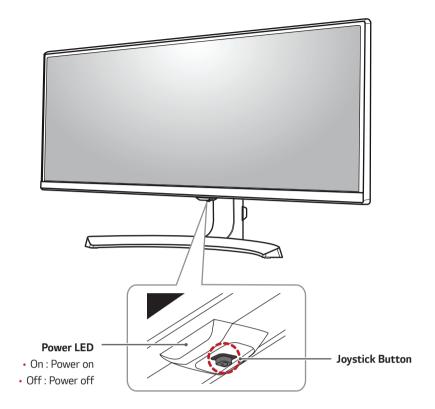

# **How to Use the Joystick Button**

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right with your finger.


### **Basic Functions**

	్తి	Power on	Press the joystick button once with your finger to turn on the monitor.
		Power off	Press and hold the joystick button once with your finger to turn off the monitor.
	<b>⋖/</b> ▶	Volume Control	You can control the volume by moving the joystick button left/right.



• The joystick button is located at the bottom of the monitor.


# **Input Connector**

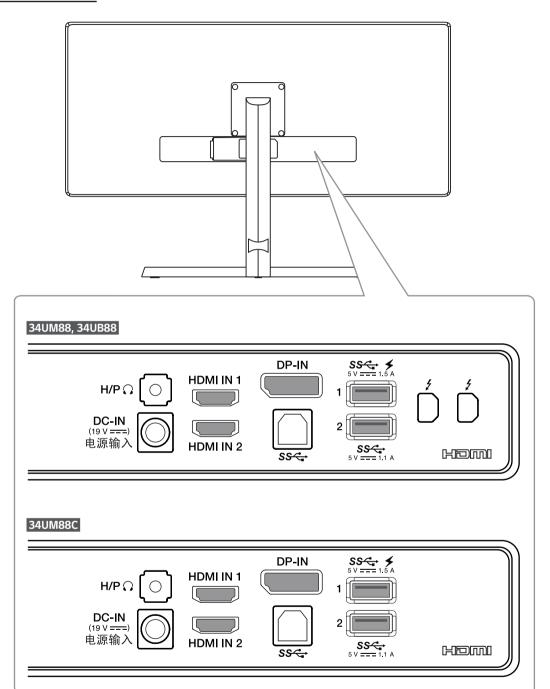

# Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation, regardless of its shape or size.

- Place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all other cables.
- Hold the bottom and side of the monitor frame firmly. Do not hold the panel itself.

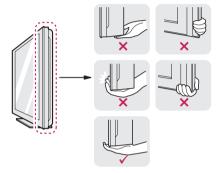




- When holding the monitor, the screen should face away from you to prevent it from being scratched.
- When transporting the monitor, do not expose the monitor to shock or excessive vibration.
- When moving the monitor, keep it upright and never turn the monitor on its side or tilt it sideways.



- Avoid touching the monitor screen as much as possible.
- This may result in damage to the screen or some of the pixels used to create images.




 If you use the monitor panel without the stand base, its joystick button may cause the monitor to become unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick button to malfunction.

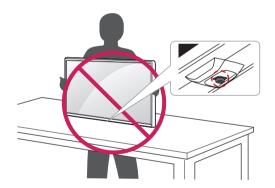


# **Installing the Monitor**

# **Assembling the Stand**


1

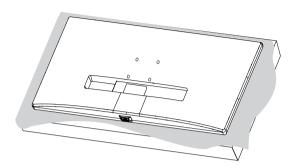

2

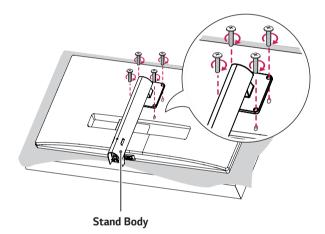

3

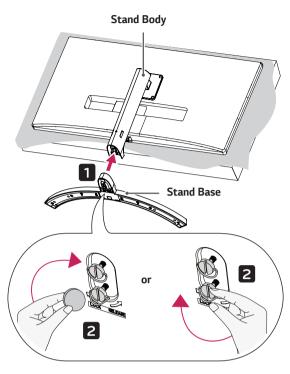

# <u>^</u>

## CAUTION

- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- When assembling the stand, lay the packing material on a table or product box and then place the monitor with its screen facing down on the packing material or box. Be sure to protect the screen from scratches. When there is no packing brace provided, make sure that you place the screen on soft clothing or a cushion.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Do not carry the monitor upside down by just holding the base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.




#### NOTE


 You can disassemble the stand in the reverse order of the assembly.

### Installing on a Table

1 Lift the monitor and place it on the table in an upright position. Place the monitor at least 100 mm (3.9 inches) away from the wall to ensure sufficient ventilation.

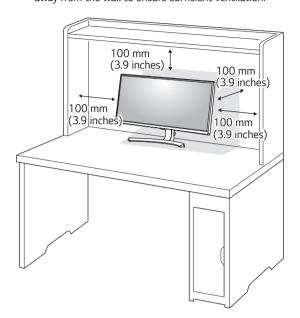

2 Connect the power adapter to the monitor and then plug the power cord into the wall outlet.

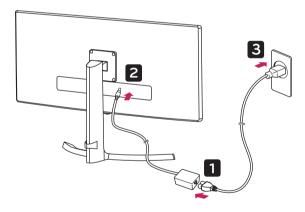


3 Press the joystick button on the bottom of the monitor to turn on the monitor.



 Unplug the power cord before moving or installing the monitor. There is risk of electric shock.

#### **Cautions When Connecting Power Cord**

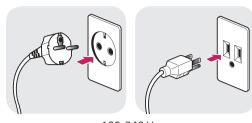


100-240 V ~


- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

### Adjusting the Stand Height

 - 1 Place the monitor mounted on the stand base in an upright position.
- 2 Handle the monitor with both hands for safety.



 3 The height can be adjusted up to 120 mm (4.7 inches).








 When adjusting the screen height, do not place your hand on the stand body to avoid injury to your fingers.

### Adjusting the Angle

- 1 Place the monitor mounted on the stand base in an upright position.
- 2 Adjust the angle of the screen. The angle of the screen can be adjusted forward or backward from -5° to 20° for a comfortable viewing experience.

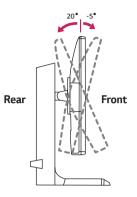



### **WARNING**

 To avoid injury to the fingers when adjusting the screen, do not hold the lower part of the monitor's frame as illustrated below.








• Be careful not to touch or press the screen area when adjusting the angle of the monitor.



### **Tidying up Cables**

Arrange the cables using the cable holder as shown in the illustration.

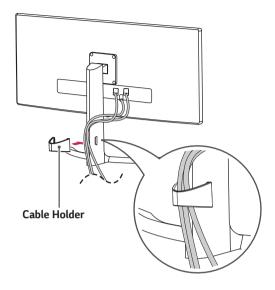


### **Using the Kensington Lock**

The connector for the Kensington security system is located at the back of the monitor.

For more information on installation and usage, refer to the Kensington lock owner's manual or visit the website at <a href="http://www.kensington.com">http://www.kensington.com</a>.

Connect the monitor to a table using the Kensington security system cable.

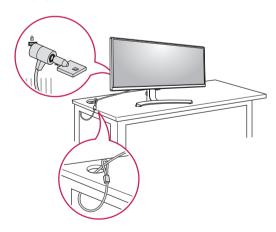





 The Kensington security system is optional. You can obtain optional accessories from most electronics stores.

### Installing the Wall Mount Plate

 This monitor meets the specifications for the wall mount plate or other compatible devices.

- 1 Place the screen face down. To protect the monitor panel (screen), cover the surface with a soft cloth or the monitor protection pad included in the product package.
- 2 Attach the clear sheet to the back of the monitor and align it with the screw holes.



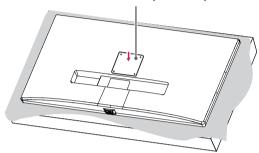

- 3 Place the wall mount plate onto the monitor and align it with the screw holes.
- 4 Tighten the four screws using a screwdriver to fix the plate to the monitor.




#### NOTE

- The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation guide.
- Be careful not to apply too much force while mounting the wall mount plate as it may cause damage to the screen.

### Installing on the Wall

Install the monitor at least 100 mm (3.9 inches) away from the wall and leave about 100 mm (3.9 inches) of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Alternatively, please refer to the manual for how to install and set up a tilting wall mounting bracket.

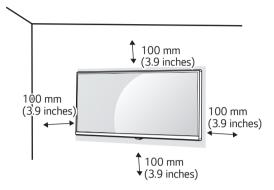

To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor.

Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.

- 1 If you use screws longer than the standard length, it may damage the inside of the product.
- 2 A non-VESA standard screw may damage the product and cause the monitor to fall. LG Electronics is not liable for any accidents relating to the use of non-standard screws.

Wall Mount	100 mm x 100 mm	
	(3.9 inches x 3.9 inches)	
Stand Screw	M4 x L10	
Required Screws	4	
Wall Mount Plate (Optional)	RW120	




#### NOTE

- · Use the screws specified by VESA standards.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. You can obtain optional accessories from your local dealer.
- The length of the screw may differ for each wall mounting bracket. Be sure to use the proper length.
- For more information, please refer to the user manual for the wall mounting bracket.



#### **CAUTION**

- Unplug the power cord before moving or installing the monitor to avoid electric shock.
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead to injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to VESA standards. Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.
- When measured from the back of the monitor, the length of each installed screw must be 8 mm (0.3 inches) or less.

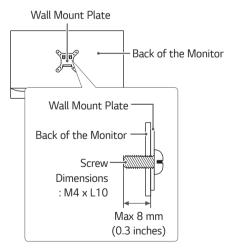

# **USING THE MONITOR**

 The following instructions are based on the 34UM88 model. Illustrations in this manual may differ from the actual product.

Press the joystick button, go to Menu o Quick Settings o Input, and then select the input option.



#### **CAUTION**

- Do not press the screen for a prolonged time. This may cause image distortion.
- Do not display a still image on the screen for a prolonged time. This may cause image retention. Use a screensaver if possible.



#### **NOTE**


- When connecting the power cord to the outlet, use a grounded (3-hole) power strip or a grounded power outlet.
- The monitor may flicker when turned on in an area where the temperature is low. This is normal.
- Sometimes red, green, or blue spots may appear on the screen. This is normal.

# Connecting to a PC

- This monitor supports the \*Plug and Play feature.
- \* Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

### **HDMI Connection**

Transmits digital video and audio signals from your PC to the monitor. Connect your PC to the monitor using the HDMI cable as shown in the illustration below.

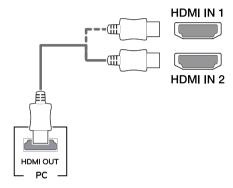



### **NOTE**

- Make sure to use the supplied HDMI cable of the product.
   Otherwise, this may cause the device to malfunction.
- Use a certified cable with the HDMI logo attached. If you
  do not use a certified HDMI cable, the screen may not
  display or a connection error may occur.
- · Recommended HDMI cable types
  - High-Speed HDMI®/™ cable
- High-Speed HDMI®/TM cable with Ethernet




#### **CAUTION**

- Connecting your PC to the monitor using the HDMI cable may cause device compatibility issues.
- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.

### **DisplayPort Connection**

Transmits digital video and audio signals from your PC to the monitor. Connect the monitor to your PC using the display port cable as shown in the illustration below.

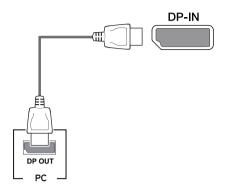




#### NOTE

- There may be no video or audio output depending on the DP (DisplayPort) version of the PC.
- Make sure to use the supplied DisplayPort cable of the product. Otherwise, this may cause the device to malfunction.
- For using Mini DP to DP (Mini DisplayPort to DisplayPort) cable, it is recommended that you use DisplayPort 1.2 cable.

### **Thunderbolt Connection**

You can connect your high-resolution display or high-performance data device to the monitor via a Thunderbolt (\$\mathcal{f}\$) port. Connect your external device to the monitor using the Thunderbolt cable as illustrated below.

#### 34UM88, 34UB88

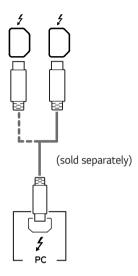




### NOTE

- The maximum data transmission rate of each port is 20 Gb/s.
- Make sure to use a Thunderbolt (1) certified cable.
   Otherwise, this may cause the device to malfunction.
- Thunderbolt (f) is supported in such environments as Windows 7, Windows 8.1, Windows 10, and Mac product.
- In accordance with Mac products may not support the recommended resolution or the some features.
- The ability to set up dual monitors using the Thunderbolt
   (f) and daisy-chaining technology depends on the
   performance of your video card.

# **Connecting AV Devices**

### **HDMI Connection**

HDMI transmits digital video and audio signals from your AV device to the monitor. Connect your AV device to the monitor using the HDMI cable as shown in the illustration below.

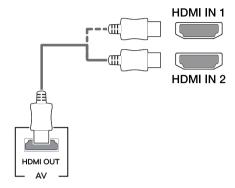



#### NOTE

- Make sure to use the supplied HDMI cable of the product.
   Otherwise, this may cause the device to malfunction.
- Use a certified cable with the HDMI logo attached. If you
  do not use a certified HDMI cable, the screen may not
  display or a connection error may occur.
- Recommended HDMI cable types
  - High-Speed HDMI®/TM cable
- High-Speed HDMI®/™ cable with Ethernet



#### CAUTION

• Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.

# **Connecting Peripherals**

### **USB Cable connection - PC**

The USB port on the product functions as a USB hub.



#### NOTE

- Make sure to install the most recent Windows OS service pack before using the product.
- · Peripheral devices are sold separately.
- A keyboard, mouse, or USB device can be connected to the USB port.
- Quick Charge is only available through the USB1 port.
   When Quick Charge is set to On, data transmission through the USB1 port is not available (e.g. connecting your keyboard, mouse, or other USB storage devices to the monitor). (Go to General > Quick Charge to set Quick Charge to On or Off.)
- The charging speed may vary depending on the device.





### CAUTION


Cautions When Using a USB Device

- A USB device with an automatic recognition program installed, or that uses its own driver, may not be recognized.
- Some USB devices may not be supported or may not work properly.
- It is recommended to use a USB hub or hard disk drive with power supplied. (If the power supply is not adequate, the USB device may not be recognized properly.)

#### HDMI/DP (DisplayPort) connection

To use USB 3.0, connect the A-B type USB 3.0 cable of the product to the PC.  $\,$ 

Peripheral devices connected to the USB IN port can be controlled from the PC.

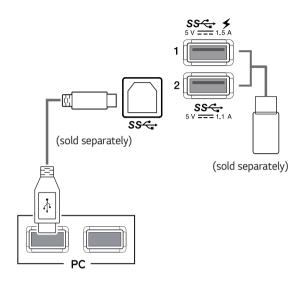


#### Thunderbolt connection

Peripheral devices connected to the USB IN port can be controlled from the PC.


If you change the input on the menu while a device is in connection via the Thunderbolt ( ) port, then the device in connection via the USB port may not work properly.

#### 34UM88, 34UB88

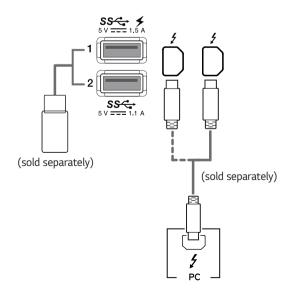

### **Connecting Headphones**

 Connect peripherals to the monitor via the headphones port. Connect as illustrated.





### NOTE

- · Peripheral devices are sold separately.
- If you use angled earphones, it may cause a problem with connecting another external device to the monitor.
   Therefore, it is recommended to use straight earphones.

 


 Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.

# **USER SETTINGS**

# **Activating the Main Menu**

- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down ( $\triangle$  /  $\nabla$ ) and left/right ( $\triangleleft$  /  $\triangleright$ ) to set the options.
- 3 Press the joystick button once more to exit the main menu.



Button		Menu Status	Description
	Main menu enabled		Enables the main menu.
			Exits the main menu.  (Holding down the button to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.)
		Main menu disabled	Adjusts the monitor volume level.
	Mai	Main menu enabled	Enters the <b>Menu</b> features.
		Main menu disabled	Adjusts the monitor volume level.
		Main menu enabled	Enters the <b>Input</b> feature.
		Main menu disabled	Enables the main menu.
		Main menu enabled	Enters Game Mode.
		Main menu disabled	Enables the main menu.
•	<b>V</b>	Main menu enabled	Turns off the monitor.

# **Main Menu Features**



Main Menu	Description		
Menu	Configures the screen settings.		
Game Mode	Sets the picture mode for gaming.		
Input	Sets input mode.		
Monitor off	Turns off the monitor.		
Exit	Exits the main menu.		

# **User Settings**

### **Menu Settings**

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the Menu.
- 2 Configure the options by moving the joystick up/down/left/right.
- 3 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (◉ / Ok) it.
- 4 If you want to exit the OSD menu, move the joystick to ◀ until you exit.
- When you enter the menu, instructions on how to use the button will appear in the bottom right corner of the screen.













**Quick Settings** 

PIC

Each option is described below.

ı	Vlenu	Description		
Quick Settings	Brightness	Adjusts the color contrast and brightness of the screen.		
	Contrast			
	Volume	Adjusts the volume level.		
		NOTE  • You can adjust Mute / Unmute by moving the joystick button to ▼ in the Volume		
		menu.		
	Input	Selects the input mode.		
	Ratio	Adjusts the aspect ratio of the screen.		
PBP	PBP	Displays the screens of two input modes on one monitor.		
Picture	Picture Mode	Changes the picture mode to the one optimized for a given feature.		
	Picture Adjust	Adjusts the <b>Sharpness</b> , <b>Black Level</b> , and <b>DFC</b> .		
	Game Adjust	Adjusts the Response Time, FreeSync, and Black Stabilizer.		
	Color Adjust	Adjusts the Gamma, Color Temp, and Six Color.		
Sound		Adjusts the MaxxAudio, MaxxAudio Settings, and Midnight Mode.		
General		Sets Language, SMART ENERGY SAVING, Power LED, Automatic Standby, DisplayPort 1.2, Quick Charge, Buzzer, and OSD Lock.		



Exit

Reset

• Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.

Restores the default settings.

Exits the OSD menu.

## **Quick Settings**

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Menu**.
- 2 Go to **Quick Settings** by moving the joystick.
- 3 Configure the options following the instructions that appear in the bottom right corner.
- 4 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (◉ / Ok) it.
- 5 If you want to exit the OSD menu, move the joystick to ◀ until you exit



Each option is described below.

Menu > Quick Settings		Description		
Brightness	Adjusts the soler cor			
Contrast	Adjusts the color col	ntrast and brightness of the screen.		
Volume	Adjusts the volume le	Adjusts the volume level.		
	*	• You can adjust <b>Mute</b> / <b>Unmute</b> by moving the joystick button to <b>▼</b> in the <b>Volume</b> menu.		
Input	Selects the input mode.			
Ratio	Adjusts the aspect ra	Adjusts the aspect ratio of the screen.		
	Wide	Displays the video in widescreen, regardless of the video signal input.		
	Original	Displays video according to the aspect ratio of the video signal input.		
	Cinema1	Cinema1 Enlarges the screen with an aspect ratio of 21:9. (at 1080p)		
	Cinema2	Cinema2 Enlarges the screen with an aspect ratio of 21:9, including the black box at the bottom for subtitles. (at 1080p)		
	1:1	The aspect ratio is not adjusted from the original.		



• The display may look the same for Wide, Original, and 1:1 options at the recommended resolution (3440 x 1440).

### **PBP**

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Menu**.
- 2 Go to **PBP** by moving the joystick.
- 3 Configure the options following the instructions that appear in the bottom right corner.
- 4 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (◉ / Ok) it.
- 5 If you want to exit the OSD menu, move the joystick to ◀ until you exit.



Each option is described below.

Menu > PBP		Description				
Sub	Displays t	isplays the screens of two input modes on one monitor.				
				Sub Screen (Right)		
		PBP Connection	HDMI 1	HDMI 2	DisplayPort	Thunderbolt (5) (only 34UM88, 34UB88 model)
		HDMI 1	-	Х	0	0
	Main	HDMI 2	Х	-	0	0
	Screen	DisplayPort	0	0	-	X
(Left)	Thunderbolt (5) (only 34UM88, 34UB88 model)	0	0	Х	-	
Sound Out	Main	Main Selects the input for Main.				
	Sub	Selects the input for <b>Sub</b> .	).			
Swap	Toggles b	Toggles between the main screen and sub screen in <b>PBP</b> mode.				
Sub Full	Converts	Converts the sub screen in <b>PBP</b> mode to wide screen.				
Ratio	Adjusts th	ne aspect ratio of the main s	creen or sub	screen.		
	Main	Wide	<b>Wide</b> Displays the video to fit the PBP screen, regardless of the video signal input.			
		Original	Displays the video in the aspect ratio of the video signal input on the PBP screen.			
	Sub	Wide	Displays the video to fit the PBP screen, regardless of the video signal input.			
		Original	Displays the video in the aspect ratio of the video signal input on the PBP screen.			



• When the **Sub** mode is **Off, Sound Out, Swap, Sub Full**, and **Ratio** menus become disabled. The **Main / Sub** options for **Ratio** become disabled if there is no signal.

## **Picture**

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Menu**.
- 2 Go to **Picture** by moving the joystick.
- 3 Configure the options following the instructions that appear in the bottom right corner.
- 4 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (◉ / Ok) it.
- 5 If you want to exit the OSD menu, move the joystick to ◀ until you exit




Menu > Picture	Description			
Picture Mode	Custom	Allows the user to adjust each element. The color mode of the main menu can be adjusted.		
	Reader	Optimizes the screen for viewing documents. You can brighten the screen in the OSD menu.		
	Photo	Optimizes the screen for photos.		
	Cinema	Optimizes the screen for video.		
	Dark Room 1	This mode adjusts the brightness to the optimal level for working in a dark environment.		
	Dark Room 2	This mode sets the brightness to a lower level than <b>Dark Room 1</b> .		
	Color Weakness	This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors.		
	FPS Game 1	This mode is optimized for FPS games.		
	FPS Game 2	It has a higher <b>Black Stabilizer</b> value than <b>FPS Game 1</b> . It is suitable for very dark FPS games.		
	RTS Game	This mode is optimized for RTS Game.		
	Custom (Game)	In this mode, users can customize various elements including game-related options.		

Menu > Picture		Description			
Picture Mode	Calibration 1	Adjusts to the last calibrated screen.			
	Calibration 2	Adjusts to the p	reviously calibrated screen.		
	NOTE	NOTE			
	your PC screen ma	-			
Picture Adjust	Sharpness	1	COLOR PRO and proceeding with <b>Calibration</b> will enable this menu.  rpness of the screen.		
Ficture Aujust	Black Level	1	level (for HDMI only).		
	DIACK Level		ference for a video signal, this is the darkest color the monitor can		
		High	Keeps the current contrast ratio of the screen.		
		Low	Lowers the black levels and raises the white levels from the current contrast ratio of the screen.		
	DFC	On	Adjusts the brightness automatically according to the screen.		
		Off	Disables the <b>DFC</b> feature.		
Game Adjust	Response Time	Sets a response time for displayed pictures based on the speed of the screen.  For a normal environment, it is recommended that you use <b>Middle</b> . For a fast-moving picture, it is recommended that you use <b>High</b> .  Setting to <b>High</b> may cause image sticking.			
		High	Sets the response time to high.		
		Middle Sets the response time to middle.			
		Low	Sets the response time to low.		
		Off	Does not use the response time improvement feature.		
	FreeSync	CAUTIO Supported Inte Supported Granecessary.	ss and natural images by synchronizing the vertical frequency of the natural that of the output signal.		
		For more infor	mation and requirement, refer to AMD website at  nd.com/FreeSync.		
		On	FreeSync function on. (Setting FreeSync to On disables the DisplayPort 1.2 option.)		
		Off	FreeSync function off.		
	Black Stabilizer	You can control the black contrast to have better visibility in dark scenes.  Increasing the <b>Black Stabilizer</b> value brightens the low gray level area on th (You can easily distinguish objects on dark game screens.)  Reducing the <b>Black Stabilizer</b> value darkens the low gray level area and incr			
	the dynamic contrast on the screen.		trast on the screen.		

Menu > Picture		Description		
Color Adjust	Gamma	gamma value, th	Custom gamma settings: <b>Gamma 0</b> , <b>Gamma 1</b> , <b>Gamma 2</b> , <b>Off</b> . The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes. If you do not need to adjust the gamma settings, select <b>Off</b> .	
	Color Temp	Custom	The user can adjust it to red, green, or blue by customization.	
		Warm	Sets the screen color to a reddish tone.	
		Medium	Sets the screen color to between a red and blue tone.	
		Cool Sets the screen color to a bluish tone.		
	Red	You can customize the picture color using Red, Green, and Blue colors.		
	Green			
	Blue			
	Six Color		requirements for colors by adjusting the hue and saturation of the six en, Blue, Cyan, Magenta, and Yellow) and then saving the settings.	
		Hue	Adjusts the tone of the screen colors.	
		Saturation	Adjusts the saturation of the screen colors. The lower the value, the less saturated and brighter the colors become. The higher the value, the more saturated and darker the colors become.	
	Reset	Returns color to the default settings.		

# Sound


- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Menu**.
- 2 Go to **Sound** by moving the joystick.
- 3 Configure the options following the instructions that appear in the bottom right corner.
- 4 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (◉ / Ok) it.
- 5 If you want to exit the OSD menu, move the joystick to ◀ until you exit.

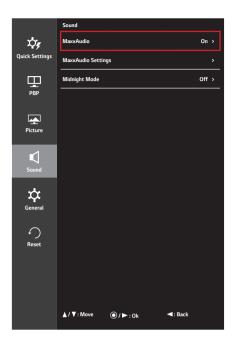

Menu > Sound	Description				
MaxxAudio	On	MaxxAudio® by Waves, recipient of a Technical GRAMMY Award® is a suite of studio-quality sound tools for a superior listening experience.			
	Off	Disables the <b>MaxxAudio</b> function.			
MaxxAudio Settings	The user can set the sound quality manually.				
	MaxxBass	Bass Enhancement.			
	MaxxTreble	Treble Enhancement.			
	MaxxDialog	Dialog Enhancement.			
	Махх3D	Enhances the three dimensional effect of the sound.			
	Reset	Returns the sound quality to the default settings.			
Midnight Mode	On	Lets you enjoy rich and full sound at a low volume.			
	Off	Disables Midnight Mode.			

### General

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Menu**.
- 2 Go to **General** by moving the joystick.
- 3 Configure the options following the instructions that appear in the bottom right corner.
- 4 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (◉ / Ok) it.
- 5 If you want to exit the OSD menu, move the joystick to ◀ until you exit

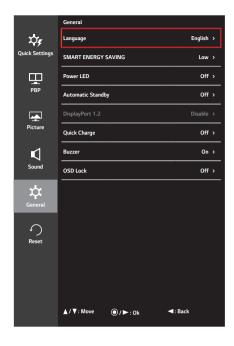

Menu > General	Description				
Language	Sets the me	Sets the menu screen to the desired language.			
SMART ENERGY	Conserve energy by using luminance compensation algorithm.				
SAVING	High	Saves energy using the high-efficiency <b>SMART ENERGY SAVING</b> feature.			
	Low	Saves energy using the low-efficiency <b>SMART ENERGY SAVING</b> feature.			
	Off	Disables the <b>SMART ENERGY SAVING</b> feature.			
Power LED	Turns the power LED on the front of the monitor <b>On</b> or <b>Off</b> .				
	On	The power LED turns on automatically.			
	Off	The power LED turns off.			
Automatic Standby		Feature that automatically turns off the monitor when there is no movement on the screen for a period of time. You can set a timer for the auto-off function. (Off, 4 H, 6 H, and 8 H)			
DisplayPort 1.2	Enables or disables <b>DisplayPort 1.2</b> .				
	<b>● NOTE</b>				
		Be sure to configure this option according to the DisplayPort version supported by your graphics card.  Set this option to <b>Disable</b> if your graphics card does not support DisplayPort 1.2.			
	1	• When <b>DisplayPort 1.2</b> is disabled, you cannot use the 10-bit output of your video card.			


Menu > General	Description				
Quick Charge	Quick Charge is a feature that rapidly charges the device connected to the USB 3.0 port.				
	On Enables Quick Charge.				
	Off	Disables Quick Charge.			
	NOT	ΓE			
	transmissi	• <b>Quick Charge</b> is only available through the USB1 port. When <b>Quick Charge</b> is set to <b>On</b> , data transmission through the USB1 port is not available (e.g. connecting your keyboard, mouse, or other USB storage devices to the monitor).			
Buzzer	This feature lets you set the sound generated from Buzzer when your monitor powers on to O				
	On	Enables your monitor's <b>Buzzer</b> .			
	Off	Disables your monitor's <b>Buzzer</b> .			
OSD Lock	This feature disables the configuration and adjustment of menus.				
	On Enables OSD Lock.				
	Off	Disables <b>OSD Lock</b> .			
	NOTE				
	<ul> <li>All features are disabled except Brightness, Contrast, Volume, Input in Quick Settings, and C Lock in General.</li> </ul>				



• Saving Data depends on the Panel. These values vary by panel and vendor. If option of **SMART ENERGY SAVING** is **High** or **Low**, monitor luminance becomes higher or lower depending upon the source.

### Reset

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Menu**.
- 2 Go to **Reset** by moving the joystick.
- 3 Configure the options following the instructions that appear in the bottom right corner.
- 4 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (◉ / Ok) it.
- 5 If you want to exit the OSD menu, move the joystick to ◀ until you exit

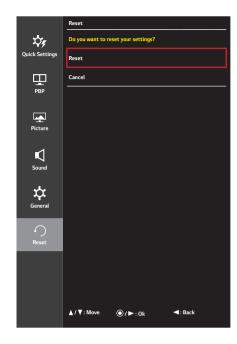

Menu > Reset	Description		
Do you want to rese	t your settings?		
Reset	Restores the default settings.		
Cancel	Cancel the reset.		

# **TROUBLESHOOTING**

Nothing is displayed on the screen.			
Is the monitor's power cord plugged in?	Check if the power cord is correctly plugged into the power outlet.		
Is the power LED on?	Check the power cable connection and press the power button.		
Is the power on and the power LED displaying white?	Check that the connected input is enabled (Menu > Quick Settings > Input).		
Is the power LED blinking?	<ul> <li>If the monitor is in sleep mode, move the mouse, or press any key on the keyboard, to switch the display on.</li> <li>Check if the computer is turned on.</li> </ul>		
Is the <b>OUT OF RANGE</b> message being displayed?	This occurs when signals transferred from the PC (Graphics card) are out of the horizontal or vertical frequency range of the monitor. Please see the Product Specification section of this manual to set the appropriate frequency.		
Is the <b>No Signal</b> message being displayed?	This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it.		
The screen may not be displayed properly when configuring DisplayPort 1.2 in a Mac product.	DisplayPort 1.2 may not be supported depending upon the Mac product. Please contact the manufacturer.		

The OSD Lock message is being displayed.		
Are some functions not available when you press the Menu button?	The OSD is locked. Go to Menu > General and set OSD Lock to Off.	

The screen retains an image.		
Does image sticking occur even when the monitor is turned off?	<ul> <li>Displaying a still image for a prolonged time may cause damage to the screen, resulting in the retention of the image.</li> </ul>	
	To extend the lifetime of the monitor, use a screensaver.	

Screen display is unstable and shaky. / Images displayed on the monitor leave shadow trails.			
Did you select the appropriate • If the selected resolution is HDMI 1080i 60/50 Hz (interlaced), the screen may be			
resolution?	flickering. Change the resolution to 1080p or the recommended resolution.		



## NOTE

- Vertical Frequency: In order to display an image, the screen must be refreshed dozens of times per second, like a fluorescent lamp. The number of times the screen is refreshed per second is called vertical frequency, or refresh rate, and is represented by Hz.
- Horizontal Frequency: The time it takes to display one horizontal line is called the horizontal cycle. If 1 is divided by the horizontal interval, the result is the number of horizontal lines displayed per second. This is called horizontal frequency and is represented by kHz.



- Check if the graphics card's resolution or frequency is within the range allowed by the monitor and set it to the recommended (optimal) resolution **Control Panel** > **Display** > **Settings** in Windows. (The settings may differ depending on the operating system (OS) you use.)
- Not setting the Graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area or misalignment of the display.
- The setting methods may be different depending on the computer or operating system, and some resolutions may not be available depending on the performance of the Graphics card. If this is the case, contact the manufacturer of the computer or graphics card for assistance.
- Some Graphics cards may not support 3440 x 1440 resolution. If the resolution cannot be displayed, contact the manufacturer of your Graphics card.

The display color is abnormal.			
Does the display appear discolored (16 colors)?	<ul> <li>Set the color to 24 bit (true color) or higher. In Windows, go to Control Panel &gt; Display &gt; Settings &gt; Color Quality. (The settings may differ depending on the operating system (OS) you use.)</li> </ul>		
Does the display color appear unstable or monochrome?	Check if the signal cable is connected properly. Reconnect the cable or reinsert the PC's Graphics card.		
Are there spots on the screen?	When using the monitor, pixilated spots (red, green, blue, white, or black) may appear on the screen. This is normal for an LCD screen. It is not an error, nor is it related to the monitor's performance.		

Do you see an "Unrecognized monitor, Plug and Play (VESA DDC) monitor found" message?			
Have you installed the display driver?  • Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: <a href="http://www.lg.com">http://www.lg.com</a> .  • Make sure to check if the graphics card supports Plug and Play function.			

No sound from the headphone port.			
Are images displayed using DP	Make sure that the headphone port connections are made properly.		
(DisplayPort) or HDMI input without	Try increasing the volume with the joystick.		
sound?	• Set the audio output of the PC to the monitor you are using. On Microsoft Windows,		
	go to Control Panel > Hardware and Sound > Sound > set the Monitor as default		
	device. (The settings may differ depending on the operating system (OS) you use.)		

# **PRODUCT SPECIFICATION**

### 34UM88, 34UB88

LCD Screen	Туре	TFT (Thin Fil	m Transistor)			
		LCD (Liquid Crystal Display) Screen				
	Color Depth	HDMI		8-bit color is supported.		
		DP (DisplayPort)		8-bit / 10-bit color is supported.		
		Thunderbolt ( <b>/</b> )				
	Pixel Pitch	0.2325 mm x 0.2325 mm				
Resolution	Max Resolution					
	Recommended Resolution	3440 x 1440 @ 60 Hz				
Video Signal	Horizontal Frequency 30 kHz to 90 kHz					
	Vertical Frequency	56 Hz to 61 Hz				
	Synchronization	Separate Sync.				
Input Connector	H/P OUT, HDMI IN 1, I	HDMI IN 2, DP (DisplayPort) IN, Thunderbolt (﴿) × 2, USB UP, USB (\$\$<↔) 1, 2				
Power Sources	Power Rating	19 V 5	.6 A			
	Power Consumption (Typical)	34UM88	On Mode: 70 W (Typical, USB excluded) (Outgoing condition) *			
		34UB88 On Mode:				
		47.9 W (Typical, USB excluded) (Outgoing condition) *				
		Off Mode ≤ 0.3 W				
AC/DC Adapter	ADS-110CL-19-3 19	0110G type,	manufactured by Ho	nor		
	Output: 19 V === 5.79 A					
Environmental	Operating Conditions	Temperature		0 °C to 40 °C (32 °F to 104 °F)		
Conditions		Humidity		Less than 80 %		
	Storing Conditions	Temperature		-20 °C to 60 °C (-4 °F to 140 °F)		
		Humidity		Less than 85 %		

Dimensions	Monitor Size (Width x Height x Depth)	
	With Stand	829.9 mm x 428.9 mm x 252.4 mm
		(32.6 inches x 16.8 inches x 9.9 inches)
	Without Stand	829.9 mm x 379.8 mm x 49.2 mm
		(32.6 inches x 14.9 inches x 1.9 inches)
Weight (Without Packaging)	With Stand	8.4 kg (18.5 lbs)
	Without Stand	6.3 kg (13.8 lbs)

Specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

The monitor goes into the sleep mode in a couple of minutes. (Max 5 minutes)

<sup>\*</sup> The On Mode of power consumption is measured with LGE test standard. (Full White pattern, Maximum resolution)

### 34UM88C

ted.			
30 kHz to 90 kHz			
56 Hz to 61 Hz			
Separate Sync.			
H/P OUT, HDMI IN 1, HDMI IN 2, DP (DisplayPort) IN, USB UP, USB (\$S♣) 1, 2			
19 V === 4.3 A			
On Mode: 70 W (Typical, USB excluded) (Outgoing condition) * Off Mode $\leq$ 0.3 W			
ADS-110CL-19-3 190110G type, manufactured by Honor			
Output: 19 V === 5.79 A			
°F)			
) °F)			

Dimensions	Monitor Size (Width x Height x Depth)	
	With Stand	829.9 mm x 428.9 mm x 252.4 mm
		(32.6 inches x 16.8 inches x 9.9 inches)
	Without Stand	829.9 mm x 379.8 mm x 49.2 mm
		(32.6 inches x 14.9 inches x 1.9 inches)
Weight (Without Packaging)	With Stand	8.4 kg (18.5 lbs)
	Without Stand	6.3 kg (13.8 lbs)

Specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

The monitor goes into the sleep mode in a couple of minutes. (Max 5 minutes)

<sup>\*</sup> The On Mode of power consumption is measured with LGE test standard. (Full White pattern, Maximum resolution)

# **Factory Support Mode**

### 34UM88, 34UB88

(Preset Mode, HDMI/ DisplayPort/ Thunderbolt PC)

## 34UM88C

(Preset Mode, HDMI/ DisplayPort PC)

Preset Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (H/V)	Remarks
640 x 480	31.469	59.94	-/-	
800 x 600	37.879	60.317	+/+	
1024 x 768	48.363	60	-/-	
1152 x 864	54.347	60.05	+/+	
1280 x 720	45	60	+/+	
1280 x 1024	63.981	60.02	+/+	
1600 x 900	60	60	+/+	
1680 x 1050	65.29	59.954	-/+	
1720 x 1440	88.83	59.98	+/+	
1920 x 1080	67.5	60	+/-	
2560 x 1080	66.7	60	-/+	
3440 x 1440	43.82	29.99	+/+	
3440 x 1440	73.68	49.99	+/+	
3440 x 1440	88.82	59.97	+/+	

# **HDMI Timing (Video)**

Preset Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Remarks
480p	31.5	60	
576p	31.25	50	
720p	45	60	
720p	37.5	50	
1080p	67.5	60	
1080p	56.25	50	
1080p	56.25	60	2560 x 1080p
1080p	66	50	2560 x 1080p

# **Power LED**

Mode	LED Color
On Mode	White (Only 15 seconds)
Sleep Mode	Flashing White
Off Mode	Off



To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <a href="http://opensource.lge.com">http://opensource.lge.com</a>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to <code>opensource@lge.com</code>. This offer is valid for three (3) years from the date on which you purchased the product.

Read the owner's manual (CD) carefully and keep it at hand. Please note that the label attached to the product provides information for technical support.

Model	
Serial No.	

#### **Declaration of Conformity**

Trade Name: LG

Model: 34UM88, 34UM88C, 34UB88 Responsible Party: LG Electronics Inc.

Address: 1000 Sylvan Ave. Englewood Cliffs NJ 07632

U.S.A

TEL: 201-266-2534