



\*LG LED Monitors are LCD Monitors with LED Backlighting.

Please read the safety information carefully before using the product.

29WK600

34WK650

34BK650

### **CONTENTS**

### 3 LICENSE

### 4 ASSEMBLING AND PREPARING

- 4 Product Components
- 5 Supported Drivers and Software
- 6 Component and Button Description
- 6 How to Use the Joystick Button
- 7 Input Connector
- 8 Moving and Lifting the Monitor
- 9 Installing the Monitor
- 9 Assembling the stand base
- 10 Installing the Monitor
- 10 Assembling the stand base
- 11 Using the cable holder
- 12 Installing onto a table
- 13 Adjusting the angle
- 14 Adjusting the Stand Height
- 15 Using the Kensington lock
- 16 Installing the wall mount plate
- 16 Installing to a wall

### **18 USING THE MONITOR**

- 18 Connecting to a PC
- 18 HDMI connection
- 18 DisplayPort connection
- 19 Connecting to AV Devices
- 19 HDMI connection
- 19 Connecting to External Devices
- 19 Connecting Headphones

### **20 USER SETTINGS**

- 20 Activating the Main Menu
- 20 Main Menu Features
- 21 User Settings
- 21 Menu Settings

### 26 TROUBLESHOOTING

### 28 SPECIFICATIONS

- 28 29WK600
- 29 34WK650
- 30 34BK650
- 31 Factory Support Mode (Preset Mode, PC)
- 31 HDMI / DP Timing (PC)
- 31 HDMI Timing (Video)
- 31 Power LED
- 32 Beep Guide

### **LICENSE**

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



MaxxAudio and additional MAXX trademarks are trademarks and/or registered trademarks of Waves Audio Ltd.

The following content is only applied to the monitor which is sold in Europe market and which needs to meet the ErP Directive:


<sup>\*</sup> This monitor is set to be turned off automatically after 4 hours when you turn on the display and there is are no adjustments made to the display.

<sup>\*</sup> To disable this setting, change the option to "Off" in Settings menu of "Automatic Standby".

### ASSEMBLING AND PREPARING

### **Product Components**

Please check whether all the components are included in the box before using the product. If there are missing components, contact the retail store where you purchased the product. Note that the product and components may look different from those shown here.

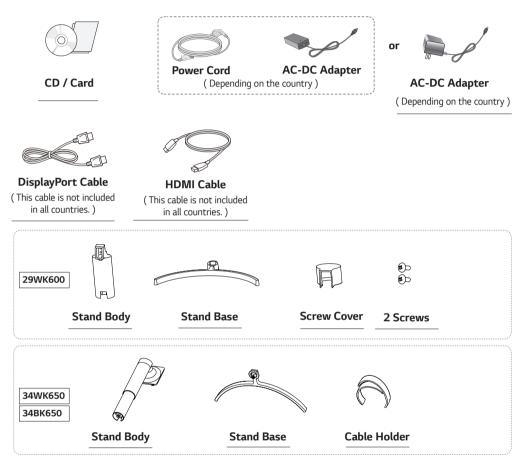

## **CAUTION**

- Always use genuine components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of counterfeit components.
- It is recommend that use the supplied components.
- · If you use generic cables not certified by LG, the screen may not display or there may be image noises.




- Note that the components may look different from those shown here.
- Without prior notice, all information and specifications in this manual are subject to change to improve the
  performance of the product.
- To purchase optional accessories, visit an electronics store or online shopping site or contact the retail store
  where you purchased the product.

# **Supported Drivers and Software**

You can download and install the latest version from the LGE website (www.lg.com).

Drivers and Software	Installation Priority	29WK600/34WK650/34BK650
Monitor Driver	Recommended	0
OnScreen Control	Recommended	0
Dual Controller	Optional	0

## **Component and Button Description**

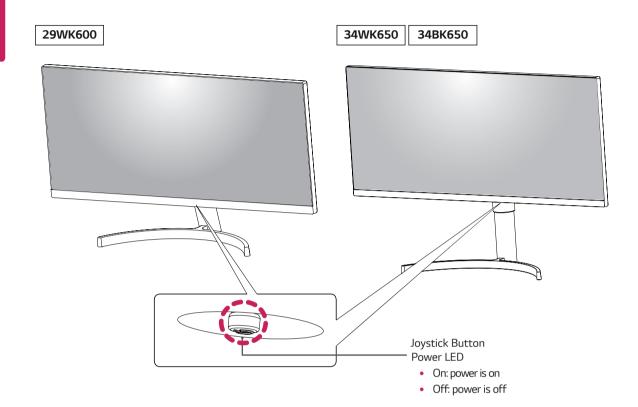

## How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right with your finger.

#### **Basic Functions**


	_ <b>&amp;</b>	Power on	Press the joystick button once with your finger to turn on the monitor.
		Power off	Press and hold the joystick button once with your finger to turn off the monitor.
	<b>⋖</b> /▶	Volume Control	You can control the volume by moving the joystick button left/right.



• The joystick button is located at the bottom of the monitor.

# **Input Connector**

29WK600

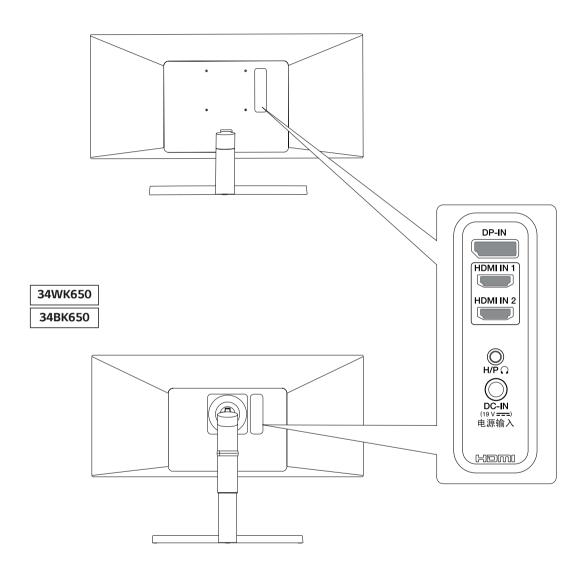

## **Moving and Lifting the Monitor**

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation regardless of its shape or size.

- It is advisable to place the monitor in the original box or packing material before attempting to move it
- Before moving or lifting the monitor, disconnect the power cord and all cables.
- Hold the top and bottom of the monitor frame firmly. Do not hold the screen itself.




 When holding the monitor, the screen should face away from you to prevent it being scratched.




- When moving the monitor, avoid any strong shock or vibrations to the product.
- When moving the monitor, keep it upright, never turn the monitor on its side or tilt it sideways.



 As far as possible, avoid touching the monitor screen. This may result in damage to the screen or some of the pixels used to create images.

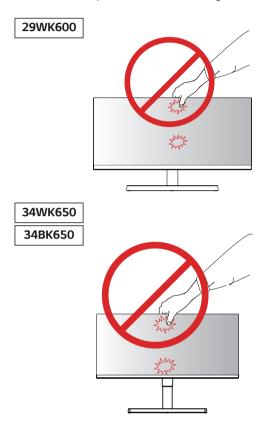

 If you use the monitor panel without the stand base, its joystick button may cause the monitor to become unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick button to malfunction.

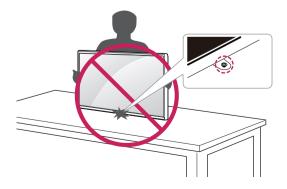


## **Installing the Monitor**

### Assembling the stand base

29WK600

1

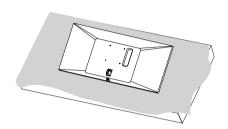





### **CAUTION**

• To protect the screen from scratches, cover the surface with a soft cloth.


2

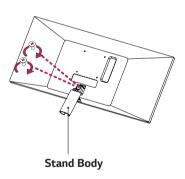

3

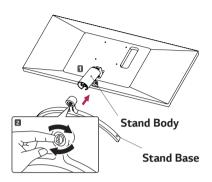

4

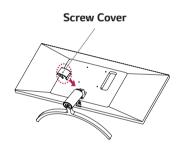



### **CAUTION**

Applying excessive force when tightening the screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.



### **CAUTION**

Be careful not to drop the stand. It may fall and hurt your foot.



#### NOTE

 You can disassemble the stand in the reverse order of the assembly.

## **Installing the Monitor**

## Assembling the stand base

34BK650 34WK650







## CAUTION


• To protect the screen from scratches, cover the surface with a soft cloth.

2

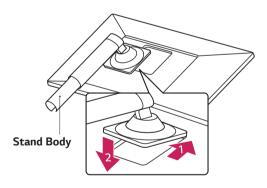

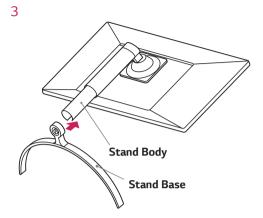


4

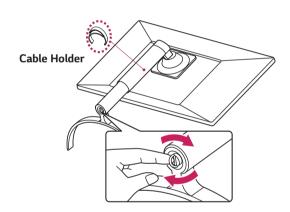



### NOTE

• Press the stand until the button reaches the top.

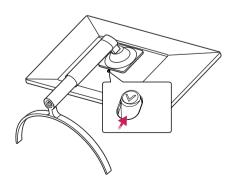




#### **CAUTION**

- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not carry the monitor upside down by just holding the stand base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- For wave pattern on appearance, unlike the general method of coating, it's applied to added glittering material in raw material. With no peeled-off appearance, it has good durability. Please use it with confidence because there is no problem in using the product at all.

### Using the cable holder

Arrange the cables using the cable holder as shown in the illustration.

34WK650 34BK650

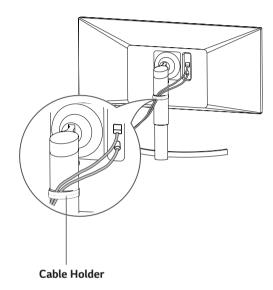



#### NOTE


 You can disassemble the stand in the reverse order of the assembly.

### Installing onto a table


1 Lift the monitor and place it on the table in an upright position.

Place at least 100 mm (3.94 inches) away from the wall to ensure sufficient ventilation.


29WK600

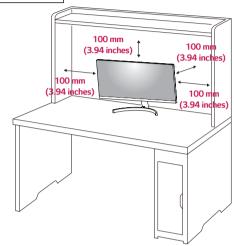



34WK650 34BK650

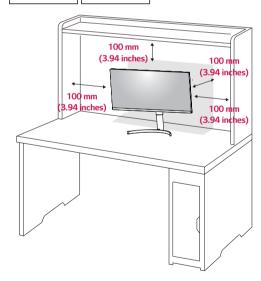

  2 Connect the Power cord to the monitor, then plug the power cord into the wall outlet.

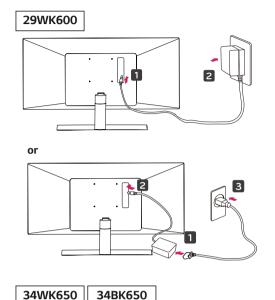






3 Press the joystick button on the bottom of the monitor to turn on the monitor.



· Unplug the power cord prior to moving or installing the monitor. There is risk of electric shock.

### **Cautions When Connecting Power Cord**

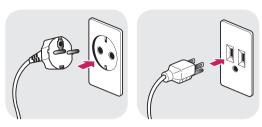



100-240 V ~

- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

### Adjusting the angle

- 1 Place the monitor in an upright position, mounted on the stand base.
- 2 Adjust the angle of the screen. The angle of the screen can be adjusted forwards or backwards for a comfortable viewing experience.

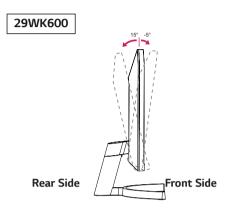

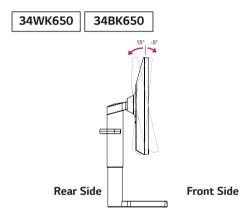




### **WARNING**

 To avoid injury to the fingers when adjusting the screen, do not hold the lower part of the monitor's frame as illustrated below.
 
#### 29WK600








### 34WK650

 
#### 34BK650







• Be careful not to touch or press the screen area when adjusting the angle of the monitor.

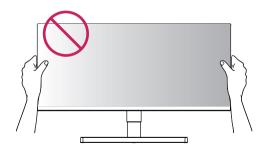


### Adjusting the Stand Height


34WK650


34BK650

1 Handle the monitor with both hands for safety.

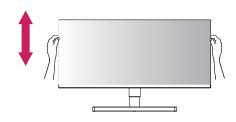

  2 The height can be adjusted up to 110 mm (4.33 inches).







### WARNING

34WK650

34BK650



 When adjusting the screen height, do not place your hand on the stand body to avoid injury to your fingers.


### Using the Kensington lock

 
The Kensington security system connector is located at the back of the Monitor set.


For more information on installation and usage, refer to the Kensington lock user manual or visit the website at http://www.kensington.com.

Connect the Kensington security system cable between the Monitor set and a table.



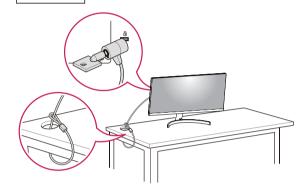



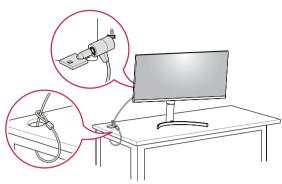



#### NOTE

 
Use of the Kensington lock is optional.
 The accessories can be purchased at your local electronics store.



### NOTE

### 34WK650 34BK650

 The left or right side of the monitor head can be slightly rotated up or down (up to 3°). Adjust the horizontal level of the monitor head.



### Installing the wall mount plate

This monitor supports the specification of the standard wall mount plate or compatible device.

- Place the screen face down. To protect the screen from scratches, cover the surface with a soft cloth.
- 2 Place the wall mount plate onto the monitor and align it with the screw holes.
- 3 Tighten the four screws to fix the plate to the monitor using a screwdriver.


## 0

#### NOTE

- The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation guide.
- Be careful not to use excessive force when mounting the wall mount plate, as this can damage the monitor's screen.

### Installing to a wall

Install the monitor at least 100 mm (3.94 inches) away from the wall and leave about 100 mm (3.94 inches) of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Please refer to the manual to install and set up a tilting wall mounting bracket.

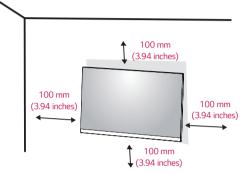

To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor.

Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.

- 1 If you use screw longer than standard, the monitor might be damaged internally.
- 2 If you use improper screw, the product might be damaged and drop from mounted position.
  In this case, LG Electronics is not responsible for it.

#### 29WK600

 
Wall Mount (A x B)	100 x 100
Standard screw	M4 x L10
Number of screws	4
Wall Mount Plate	LSW149
(Optional)	

## 34WK650 34BK650

Wall Mount (A x B)	100 x 100
Standard screw	M4 x L10
Number of screws	4
Wall Mount Plate (Optional)	LSW149


• Wall Mount (A x B)

#### 29WK600



## 34WK650

 
34BK650





#### **CAUTION**

- Unplug the power cord before moving or installing the monitor to avoid electric shocks.
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead to injury. Please use the genuine LG wall mounting bracket. For more information, contact your local retail store or a qualified installer.
- Applying excessive force when fastening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to the VESA standard. Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.
- Screw length from outer surface of back cover should be under 8 mm (0.3 inches).

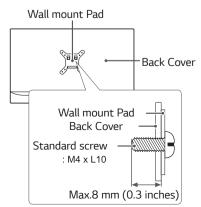



#### NOTE

- Use the screws specified by the VESA standard.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. The accessories can be purchased at your local retail store.
- The length of the screw may differ for each wall mounting bracket. Ensure the correct length screw is used.
- For more information, please refer to the user manual for the wall mounting bracket.

## **USING THE MONITOR**


### Connecting to a PC

 This monitor supports the \*Plug and Play feature.
 \*Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

#### **HDMI** connection

Transmits the digital video and audio signals from your PC and A/V devices to the monitor. Connect your PC and AV device to the monitor with the HDMI cable as illustrated below.

Press the menu button and then select the input option from the input menu.

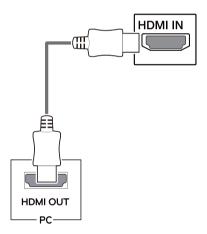


# 0

#### NOTE

- If you use HDMI PC, it can cause compatibility problem.
- Use a certified cable with the HDMI logo attached.
   If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- · Recommended HDMI cable types
- High-Speed HDMI®/™ Cable
- High-Speed HDMI®/™ Cable with Ethernet

### **DisplayPort connection**

Transmits the digital video and audio signals from your PC to the monitor. Connect your PC to the monitor using the DisplayPort cable as illustrated below. Press the menu button and then select the input option from the input menu.

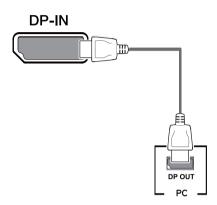



#### NOTE


- There may be no video or audio output depending on the DP version of the PC.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.

## **Connecting to AV Devices**

### **HDMI** connection

Transmits the digital video and audio signals from your PC and A/V devices to the monitor. Connect your PC and AV device to the monitor with the HDMI cable as illustrated below.

Press the menu button and then select the input option from the input menu.

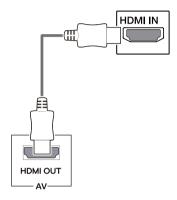




#### NOTE

- Use a certified cable with the HDMI logo attached.
   If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
- High-Speed  $\mathrm{HDMI}^{\$}/^{\mathsf{TM}}$  Cable
- High-Speed HDMI®/™ Cable with Ethernet

## **Connecting to External Devices**

### **Connecting Headphones**

Connect peripherals to the monitor via the headphones port. Connect as illustrated.

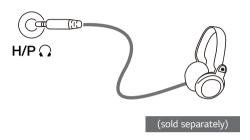



#### **NOTE**

- Peripheral devices are sold separately.
- If you use angled earphones, it may cause a problem with connecting another external device to the monitor. Therefore, it is recommended to use straight earphones.





Angled

Straight

 Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.

## **USER SETTINGS**



#### NOTE

- Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.
- When Beep Guide is activated, pressing the joystick button will take you to Settings right away.

### **Activating the Main Menu**

- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down (▲/▼) and left/right (◄/►) to set the options.
- 3 Press the joystick button once more to exit the main menu.



Button	Menu Status		Description
	Main menu enabled (		Enables the main menu.
			Exits the main menu. (Holding down the button to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.)
	4	Main menu disabled	Adjusts the monitor volume level.
		Main menu enabled	Enters the <b>Input</b> feature.
	•	Main menu disabled	Adjusts the monitor volume level.
		Main menu enabled	Enters the <b>Settings</b> features.
<b>A</b>		Main menu disabled	Enters the <b>Accessibility</b> menu.
		Main menu enabled	Turns off the monitor.
		Main menu disabled	Enters the <b>Accessibility</b> menu.
	•	Main menu enabled	Enters the <b>Game</b> features.

### Main Menu Features



Main Menu	Description	
Settings	Configures the screen settings.	
Game	You can change Picture Mode to a gaming mode.	
Input	Sets input mode.	
Power Off	Turns off the monitor.	
Exit	Exits the main menu.	

## **User Settings**

### **Menu Settings**

- 1 To view the settings menu, press the joystick button at the bottom of the monitor and then enter the **Settings**.
- 2 Configure the options by moving the joystick up/down/left/right.
- 3 To return to the upper settings or set other settings items, move the joystick to ◀ or press (憑).
- 4 If you want to exit the settings menu, move the joystick to ◀ until you exit.





Input



**Picture** 



Sound



General

**Quick Settings** 



• Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.

#### Each option is described below.

Settings > Quick Set- tings	Description			
Brightness	Adiusts the	and a contrast and brightness of the serious		
Contrast	- Aujusts trie	color contrast and brightness of the screen.		
Volume	Adjusts the	Adjusts the volume level.		
	NOTE			
	You can adjust Mute / Unmute by moving the joystick button to ▼ in the Volume menu.			
Color Temp	Custom The user can adjust it to red, green, or blue by customization.			
	Warm Sets the screen color to a reddish tone.			
	Medium Sets the screen color between a red and blue tone.			
	Cool Sets the screen color to a bluish tone.			
MaxxAudio	On	MaxxAudio <sup>®</sup> by Waves, recipient of a Technical GRAMMY Award <sup>®</sup> is a suite of studio-quality sound tools for a superior listening experience.		
	Off	Disables the MaxxAudio function.		

Settings > Input		Description		
Input List	Selects the in	put mode.		
Aspect Ratio	Adjusts the a	Adjusts the aspect ratio of the screen.		
	Full Wide	Displays the video in wide-screen, regardless of the video signal input.		
	Original	Original Displays video according to the aspect ratio of the video signal input.		
	Cinema1	Cinema1 Enlarges the screen with an aspect ratio of 21:9. (at 1080p)		
	Cinema2	Enlarges the screen with an aspect ratio of 21:9, including the black box at the bottom for subtitles. (at 1080p)		
		TE  no Cinema1, Cinema2 settings on FreeSync Mode. (Go to Picture → Game Adjust → nc, to set FreeSync On or Off)		

Picture Mode on SDR(Non-HDR) signal.

Settings > Picture		Description		
Picture Mode	Custom	Allows the user to adjust each element. The color mode of the main menu can be adjusted.		
	Reader	Optimizes the screen for viewing documents. You can brighten the screen in the settings menu.		
	Photo	Optimizes the screen for photos.		
	Cinema	Optimizes the screen for video.		
	HDR Effect	Optimizes the screen for high dynamic range.		
	Color Weakness	This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors.		
	FPS Game 1	This mode is optimized for FPS games.		
	FPS Game 2	It has a higher Black Stabilizer value than FPS Game 1. It is suitable for very dark FPS games.		
	RTS Game	This mode is optimized for RTS Game.		
	Custom (Game)	In this mode, users can customize various elements including game-related options.		
	NOTE  • If the picture fected.	mode is changed the screen may flicker or the resolution of your PC screen may be af-		

#### Picture Mode on HDR signal.

Settings > Picture		Description		
Picture Mode	HDR Vivid	Optimized the screen for HDR vivid colors.		
	HDR Standard	Optimized the screen for HDR.		
	HDR Game			
	HDR Cinema			
	HDR On / Of  When the HI card perform While the HI	may not be operated properly depending on the Windows10 OS setting. Please check the f setting of Windows.  OR function is turned on, the characters or picture quality may be poor according to Graphic lance.  OR function is on, screen flickering or cracking may occur when changing the monitor input of formation of carding to Graphic card performance.		

Picture Adjust	Brightness	Adjusts the	brightness of the screen.		
	Contrast	Adjusts the	contrast of the screen.		
	Sharpness	Adjusts the sharpness of the screen.			
	SUPER RESOLUTION+	High	Optimized picture quality is displayed when a user wants crystal clear images. It is effective for high quality video or game.		
		Middle	The optimized picture quality is displayed when a user wants images between low and high modes for comfortable viewing. It is effective for UCC or SD video.		
		Low	The optimized picture quality is displayed when a user wants smooth and natural images. It is effective for slow-moving pictures or still images.		
		Off	Select this option for everyday viewing. SUPER RESOLUTION+ is turned off in this mode.		
		() N	OTE		
		Because this is a function to increase the sharpness of low resolution pictures, it is not recommended to use the function for normal text or for desktop icons. Doing so may result in unnecessarily high sharpness.			
	Black Level		set level (for HDMI only). a reference for a video signal, this is the darkest color the monitor can display.		
		High	Keeps the current contrast ratio of the screen.		
		Low	Lowers the black levels and raises the white levels from the current contrast ratio of the screen.		
	DFC	On	Adjusts the brightness automatically according to the screen.		
		Off	Disables the <b>DFC</b> feature.		
Game Adjust	Response Time	For a normal is recommer	nse time for displayed pictures based on the speed of the screen. I environment, it is recommended that you use <b>Fast</b> . For a fast-moving picture, it ided that you use <b>Faster</b> . <b>aster</b> may cause image sticking.		
		Faster	Sets the response time to Faster.		
		Fast	Sets the response time to Fast.		
		Normal	Sets the response time to Normal.		
		Off	Does not use the response time improvement feature.		
	FreeSync	signal with t	mless and natural images by synchronizing the vertical frequency of the input hat of the output signal.  UTION		
		<ul><li>Support necessa</li><li>Support</li><li>For more</li></ul>	ted Interface: DisplayPort,HDMI.  ted Graphic Card : A graphic card that supports AMD's FreeSync is  try.  ted Version : Make sure to update the graphic card to the latest driver.  re information and requirement, refer to AMD website at http://www.  n/FreeSync		
		On	FreeSync function on.		
		Off	FreeSync function off.		

Game Adjust	Black Stabilizer	You can control the black contrast to have better visibility in dark scenes. Increasing the Black Stabilizer value brightens the low gray level area on the screen. (You cae easily distinguish objects on dark game screens.) Reducing the Black Stabilizer value darkens the low gray level area and increases the dynamic contrast on the screen.  Cross Hair provides a mark on the center of the screen for First Person Shooter (FPS) games Users can select the cross hair that fits their gaming environment among four different cross hairs.  • When the monitor is off or enters energy saving mode, the Cross Hair feature is automatically turned Off.		
	Cross Hair			
Color Adjust	Gamma	Mode 1, Mod 2, Mode 3	The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.	
		Mode 4	If you do not need to adjust the gamma settings, select Mode 4.	
	Color Temp	Custom	The user can adjust it to red, green, or blue by customization.	
		Warm	Sets the screen color to a reddish tone.	
		Medium	Sets the screen color between a red and blue tone.	
		Cool	Sets the screen color to a bluish tone.	
	Red	You can custo	mize the picture color using <b>Red</b> , <b>Green</b> , and <b>Blue</b> colors.	
	Green			
	Blue			
	Six Color	Meets the user requirements for colors by adjusting the hue and saturation of t (Red, Blue, Green, Cyan, Magenta and Yellow) and then saving the settings.		
		Hue	Adjusts the tone of the screen colors.	
		Saturation	Adjusts the saturation of the screen colors. The lower the value, the less saturated and brighter the colors become. The higher the value, the more saturated and darker the colors become.	
Picture Reset	Do you want to re	set your pictu	re settings?	
	No	Cancel		
	Yes	Reset		

Settings > Sound	Description	
Volume	To adjust the Volume of headphone or speaker.	
MaxxAudio	On MaxxAudio® by Waves, recipient of a Technical GRAMMY Award® is a suite of studio-quality sound tools for a superior listening experience.	
	Off Disables the MaxxAudio function.	

Settings > General	Description		
Language	Sets the menu screen to the desired language.		
SMART ENERGY	High	Saves energy using the high-efficiency SMART ENERGY SAVING feature.	
SAVING	Low	Saves energy using the low-efficiency SMART ENERGY SAVING feature.	
	Off	Disables the SMART ENERGY SAVING feature.	
Power LED	On	The power LED turns on.	
	Off	The power LED turns off.	
Automatic Standby		atically turns off the monitor when there is no movement on the screen for a period t a timer for the auto-off function. (Off, 4 H, 6 H, and 8 H)	
<b>HDMI</b> Compatibility	HDMI Compatibility	Mode feature can recognize the legacy equipment that does not support HDMI 2.0.	
Mode	On	Enables HDMI Compatibility Mode.(HDMI Version 1.4)	
	Off	Disables HDMI Compatibility Mode.(HDMI Version 2.0)	
work properly.  When HDMI Compatibi  Some older graphics ca		d device does not support <b>HDMI Compatibility Mode</b> , the screen or sound may not ompatibility Mode is on, HDR function is not supported. phics cards do not support HDMI 2.0, but you can select HDMI 2.0 resolution in the f window. This may cause the screen to appear abnormally.	
	<ul> <li>Enable or Disable DisplayPort 1.2.</li> <li>NOTE</li> <li>Be sure to configure this option according to the DisplayPort version supported by your graphics card. Set this option to Disable if your graphics card does not support DisplayPort 1.2.</li> </ul>		
Buzzer	This feature lets yo	u set the sound generated from Buzzer when your monitor powers on.	
	On	Enables your monitor's <b>Buzzer</b> .	
	Off	Disables your monitor's <b>Buzzer</b> .	
OSD Lock	This feature disable	s the configuration and adjustment of menus.	
	On	Enables OSD Lock.	
	Off	Disables OSD Lock.	
	NOTE     All features are disabled except Brightness, Contrast, Volume, Input, OSD Lock, Information.		
Information	The display information will be shown the Model, Serial Number, Total Power On Time, Resolution.		
Reset	Do you want to res	set your settings?	
	No	Cancel the select.	



- The value of energy saving data may differ depending on panel and panel suppliers.
- If you select the option of **SMART ENERGY SAVING** is **High** or **Low**, monitor luminance become lower or higher depend on source.

## **TROUBLESHOOTING**

Nothing is displayed on the screen.		
Is the monitor's power cord plugged in?	<ul><li>Check if the power cord is correctly plugged into the power outlet.</li><li>Test the Power Plug using a lamp or other device.</li></ul>	
Is the power LED on?	Check the power cable connection and press the power button.	
Is the power on and the power LED displaying white?	Check that the connected input is enabled (Settings > Input > Input list).	
Is the power LED blinking?	<ul> <li>If the monitor is in sleep mode, move the mouse, or press any key on the keyboard, to switch the display on.</li> <li>Check if the computer is turned on.</li> </ul>	
Is the OUT OF RANGE message being displayed?	This occurs when signals transferred from the PC (graphics card) are o of the horizontal or vertical frequency range of the monitor. Please see the Product Specification section of this manual to set the appropriate frequency.	
Is the No Signal message being displayed?	<ul> <li>This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it.</li> </ul>	

The OSD lock message is being displayed.		
Are some functions not available when you press the Menu button?	The OSD is locked. Go to <b>Settings</b> > <b>General</b> and set OSD Lock to Off.	

The screen retains an image.		
Does image sticking occur even when the monitor is turned off?	<ul> <li>Displaying a still image for a prolonged time may cause damage to the screen, resulting in the retention of the image.</li> <li>To extend the lifetime of the monitor, use a screensaver.</li> </ul>	

Screen display is unstable and shaky / Images displayed on the monitor leave shadow trails.		
Did you select the appropriate	If the selected resolution is HDMI 1080i 60/50 Hz (interlaced), the screen	
resolution?	may be flickering. Change the resolution to 1080P or the recommended	
	resolution.	

## O

#### NOTE

- Vertical frequency In order to display an image, the screen must be refreshed dozens of times per second, like a fluorescent lamp. The number of times the screen is refreshed per second is called vertical frequency, or refresh rate, and is represented by Hz.
- Horizontal frequency The time it takes to display one horizontal line is called the horizontal cycle. If 1 is divided by the horizontal interval, the result is the number of horizontal lines displayed per second. This is called horizontal frequency and is represented by kHz.
- LED can be lighted with Set OSD Menu.
   Settings > General > Power LED > On



- Check if the graphics card's resolution or frequency is within the range allowed by the monitor and set it to the recommended (optimal) resolution in **Control Panel > Display > settings**.
- Not setting the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area, or misalignment of the display.
- The setting methods may be different depending on the computer or operating system, and some resolutions may not be available depending on the performance of the graphics card. If this is the case, contact the manufacturer of the computer or graphics card for assistance.
- Some graphics cards may not support 2560×1080 resolution. If the resolution cannot be displayed, contact the manufacturer of your graphics card.

The display color is abnormal.		
Does the display appear discolored (16 colors)?	<ul> <li>Set the color to 24 bit (true color) or higher. In Windows, go to Control</li> <li>Panel &gt; Display &gt; Settings &gt; Color Quality.</li> </ul>	
Does the display color appear unstable or monochrome?	Check if the signal cable is connected properly. Reconnect the cable or reinsert the PC's graphics card.	
Are there spots on the screen?	<ul> <li>When using the monitor, pixilated spots (red, green, blue, white, or black) may appear on the screen. This is normal for an LCD screen. It is not an error, nor is it related to the monitor's performance.</li> </ul>	

Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?		
Have you installed the display driver?	Be sure to install the display driver from our web site: http://www.lg.com.	
	Make sure to check if the video card supports Plug&Play function.	

No sound from the headphone port or speaker.		
Are images displayed using DisplayPort or HDMI input without sound?	<ul> <li>Try increasing the volume using the button on the monitor.</li> <li>Set the audio output of the PC to the monitor you are using. On Microsoft Windows, go to Control Panel &gt; Hardware and Sound &gt; Sound &gt; set the monitor as default device.</li> </ul>	

## **SPECIFICATIONS**

### 29WK600

LCD Screen	Туре	TFT (Thin Film Transistor)	
LCD Scieen	Туре	LCD (Liquid Crystal Display) Screen	
	Pixel Pitch	0.2628 mm x 0.2628 mm	
Resolution	Maximum Resolution	2560×1080 @ 75 Hz	
resolution	Recommended Resolution	2560×1080 @ 60 Hz	
Video Signal	Horizontal Frequency	30 kHz to 90 kHz	
video signat	Vertical Frequency	56 Hz to 75 Hz	
Innut Connector			
Input Connector	19 V 3.3 A Or 19 V 2.4	ayPort) IN, H/P(Headphone) OUT	
Power input			
Power	On mode: 32 W Typ. (Outgoing		
consumption (Typ.)	Sleep Mode (Standby Mode) ≤ Off Mode ≤ 0.3 W	U.5 VV ^^	
AC/DC adaptor		Devices he production	
AC/DC adaptor	Type DA-65G19, Asian Power	ELECTRONIC ENTERPRISE production	
	Output: 19 V === 3.42 A	ELECTRONIC LIVIERFRISE production	
	Type DA-48F19, Asian Power	Devices Inc. production	
	Output: 19 V === 2.53 A	bevices inc. production	
	Type ADS-45SN-19-3 19040G, SHENZHEN HONOR ELECTRONIC production		
	Or type ADS-45SQ-19-3 19040E, SHENZHEN HONOR ELECTRONIC production		
	Or type ADS-45FSQ-19 19040EPG-1, SHENZHEN HONOR ELECTRONIC production		
	Or type ADS-45FSQ-19 19040EPK-1, SHENZHEN HONOR ELECTRONIC production		
	Or type ADS-45FSQ-19 19040EPCU-1, SHENZHEN HONOR ELECTRONIC production		
	Or type ADS-45FSQ-19 19040EPBR-1, SHENZHEN HONOR ELECTRONIC production		
	Or type LCAP21C, LIEN CHANG ELECTRONIC ENTERPRISE production		
	Or type LCAP26B-E, LIEN CHANG ELECTRONIC ENTERPRISE production		
	Or type LCAP26B-A, LIEN CHANG ELECTRONIC ENTERPRISE production		
	Or type AD10530LF, PI Electronics (H.K.) Ltd. production		
	Or type AD2137S20, PI Electronics (H.K.) Ltd. production		
	Or type AD2137620, PI Electronics (H.K.) Ltd. production		
	Output: 19 V === 2.1 A		
Environmental	Operating Condition	Temperature: 0°C to 40°C; Humidity: < 80%	
Conditions	Storing Condition	Temperature: -20°C to 60°C; Humidity: < 85%	
Dimension	Monitor Size (Width x Height x Depth)		
	With Stand	698.1 x 410.9 x 209.4 (mm)	
		27.4 x 16.1 x 8.2 (inches)	
	Without Stand	698.1 x 317.5 x 76.9 (mm)	
		27.4 x 12.5 x 3.0 (inches)	
Weight (Without	With Stand	5.2 kg (11.4 lbs)	
Packaging)	Without Stand	4.7 kg (10.3 lbs)	

The specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

<sup>\*</sup> The On mode power consumption is measured with LGE test standard (Full White pattern, Maximum resolution).

\*\* The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

## **SPECIFICATIONS**

## 34WK650

LCD Screen	Туре	TFT (Thin Film Transistor)	
	71	LCD (Liquid Crystal Display) Screen	
	Pixel Pitch	0.312 mm x 0.310 mm	
Resolution	Maximum Resolution	2560×1080 @ 75Hz	
	Recommended Resolution	2560×1080 @ 60Hz	
Video Signal	Horizontal Frequency	30 kHz to 90 kHz	
	Vertical Frequency	56 Hz to 75 Hz	
Input Connector	HDMI IN1, HDMI IN2, DP(Displ	ayPort) IN, H/P(Headphone) OUT	
Power input	19 V 3.3 A Or 19 V 2.4	1 A	
Power consumption (Typ.)	On mode: 42 W Typ. (Outgoing condition)* Sleep Mode (Standby Mode) ≤ 0.5 W ** Off Mode ≤ 0.3 W		
AC/DC adaptor	Type DA-65G19, Asian Power Devices Inc. production Or type LCAP39, LIEN CHANG ELECTRONIC ENTERPRISE production Output: 19 V === 3.42 A		
	Type DA-48F19, Asian Power Devices Inc. production Or type ADS-48FSK-19 19048EPCU-1, SHENZHEN HONOR ELECTRONIC production Or type ADS-48FSK-19 19048EPG-1, SHENZHEN HONOR ELECTRONIC production Or type ADS-48FSK-19 19048EPK-1, SHENZHEN HONOR ELECTRONIC production Output: 19 V 2.53 A		
Environmental	Operating Condition	Temperature: 0°C to 40°C; Humidity: < 80%	
Conditions	Storing Condition	Temperature: -20°C to 60°C; Humidity: < 85%	
Dimension	Monitor Size (Width x Height x Depth)		
	With Stand	825.6 x 570.7 x 230.0 (mm) 32.5 x 22.4 x 9.0 (inches)	
	Without Stand	825.6 x 369.8 x 51.2 (mm) 32.5 x 14.5 x 2.0 (inches)	
Weight (Without	With Stand	7.6 kg (16.7 lbs)	
Packaging)	Without Stand	5.9 kg (13.0 lbs)	

The specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

\* The On mode power consumption is measured with LGE test standard (Full White pattern, Maximum resolution).

<sup>\*\*</sup> The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

## **SPECIFICATIONS**

## 34BK650

LCD Screen	Туре	TFT (Thin Film Transistor)	
	31-	LCD (Liquid Crystal Display) Screen	
	Pixel Pitch	0.312 mm x 0.310 mm	
Resolution	Maximum Resolution	2560×1080 @ 75Hz	
	Recommended Resolution	2560×1080 @ 60Hz	
Video Signal	Horizontal Frequency	30 kHz to 90 kHz	
	Vertical Frequency	56 Hz to 75 Hz	
Input Connector	HDMI IN1, HDMI IN2, DP(Displ	ayPort) IN, H/P(Headphone) OUT	
Power input	19 V 3.3 A Or 19 V 2.4	4 A Or 19 V 2.0 A	
Power consumption (Typ.)	On mode: 23 W Typ. (ENERGY STAR® standard)* Sleep Mode (Standby Mode) ≤ 0.5 W ** Off Mode ≤ 0.3 W		
AC/DC adaptor	Type DA-65G19, Asian Power Devices Inc. production Or type LCAP39, LIEN CHANG ELECTRONIC ENTERPRISE production Output: 19 V === 3.42 A		
	Type DA-48F19, Asian Power Devices Inc. production Or type ADS-48FSK-19 19048EPCU-1, SHENZHEN HONOR ELECTRONIC production Or type ADS-48FSK-19 19048EPG-1, SHENZHEN HONOR ELECTRONIC production Or type ADS-48FSK-19 19048EPK-1, SHENZHEN HONOR ELECTRONIC production Output: 19 V === 2.53 A		
	Type ADS-45SN-19-3 19040G, SHENZHEN HONOR ELECTRONIC production Or type LCAP21C, LIEN CHANG ELECTRONIC ENTERPRISE production Or type LCAP26B-E, LIEN CHANG ELECTRONIC ENTERPRISE production Or type LCAP26B-A, LIEN CHANG ELECTRONIC ENTERPRISE production Output: 19 V === 2.1 A		
Environmental	Operating Condition	Temperature: 0°C to 40°C; Humidity: < 80%	
Conditions	Storing Condition	Temperature: -20°C to 60°C; Humidity: < 85%	
Dimension	Monitor Size (Width x Height x Depth)		
	With Stand	825.6 x 570.7 x 230.0 (mm) 32.5 x 22.4 x 9.0 (inches)	
	Without Stand	825.6 x 369.8 x 51.2 (mm) 32.5 x 14.5 x 2.0 (inches)	
Weight (Without	With Stand	7.6 kg (16.7 lbs)	
Packaging)	Without Stand	5.9 kg (13.0 lbs)	

The specifications are subject to change without notice.

The power consumption level can be different by operating condition and monitor setting.

<sup>\*</sup> The On mode power consumption is measured with ENERGY STAR® test standard. \*\* The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

# Factory Support Mode (Preset Mode, PC)

# HDMI / DP Timing (PC)

Resolution (HDMI / DP)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Polarity(H/V)	Remarks
640 x 480	31.469	59.94	-/-	
640 x 480	37.5	75	-/-	
800 x 600	37.879	60.317	+/+	
800 x 600	46.875	75	+/+	
1024 x 768	48.363	60	-/-	
1024 x 768	60.123	75.029	+/+	
1152 x 864	53.697	60	-/+	
1280 x 720	45	60	+/+	
1280 x 1024	63.981	60.02	+/+	
1280 x 1024	79.976	75.025	+/+	
1600 x 900	60	60	+/+	
1680 x 1050	65.29	59.954	-/+	
1920 x 1080	67.5	60	+/-	
2560 x 1080	66.636	59.98	-/+	
2560 x 1080	83.915	74.99	-/+	

# **HDMI Timing (Video)**

Factory support mode (Preset Mode)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Remarks
480p	31.5	60	
576P	31.25	50	
720p	37.5	50	
720p	45.0	60	
1080p	56.25	50	
1080p	67.5	60	
2160p	67.5	30	

## **Power LED**

Mode	LED Color
On Mode	White (For a few seconds)
Sleep Mode (Standby Mode)	Off
Off Mode	Off

# **Beep Guide**

Menu	Location
Quick Settings	1
Quick Settings - Brightness	1 1
Quick Settings - Brightness	1 1 1 Slider
Quick Settings - Contrast	1 2
Quick Settings - Contrast	1 2 1 Slider
Quick Settings - Volume	13
Quick Settings - Volume  Quick Settings - Color Temp	1 3 1 Slider
Quick Settings - Color Temp - Custom	1 4 1
Quick Settings - Color Temp - Warm	1 4 2
Quick Settings - Color Temp - Medium	143
Quick Settings - Color Temp - Cool	1 4 4
	15
Quick Settings - MaxxAudio	1 -
Quick Settings - MaxxAudio - On	151
Quick Settings - MaxxAudio - Off	152
Input	2
Input - Input List	2 1
Input - Input List - HDMI1	2 1 1
Input - Input List - HDMI2	2 1 2
Input - Input List - DisplayPort	213
Input - Aspect Ratio	2 2
Input - Aspect Ratio - Full Wide	2 2 1
Input - Aspect Ratio - Original	222
Input - Aspect Ratio - Cinema 1	223
Input - Aspect Ratio - Cinema 2	2 2 4
Picture	3
Picture - Picture Mode	3 1
Picture - Picture Mode - Custom	311
Picture - Picture Mode - Reader	3 1 2
Picture - Picture Mode - Photo	313
Picture - Picture Mode - Cinema	3 1 4
Picture - Picture Mode - HDR Effect	315
Picture - Picture Mode - Color Weakness	316
Picture - Picture Mode - FPS Game1	317
Picture - Picture Mode - FPS Game1	318
Picture - Picture Mode - RTS Game	3 1 9
Picture - Picture Mode - Custom(Game)	3 1 10
Picture - Picture Adjust	3 2

Menu	Location
Picture - Picture Adjust - Brightness	3 2 1
Picture - Picture Adjust - Brightness	3 2 1 1 Slider
Picture - Picture Adjust - Contrast	3 2 2
Picture - Picture Adjust - Contrast	3 2 2 1 Slider
Picture - Picture Adjust - Sharpness	3 2 3
Picture - Picture Adjust - Sharpness	3 2 3 1 Slider
Picture - Picture Adjust - SUPER RESOLUTION+	3 2 4
Picture - Picture Adjust - SUPER RESOLUTION+ - High	3 2 4 1
Picture - Picture Adjust - SUPER RESOLUTION+ - Middle	3 2 4 2
Picture - Picture Adjust - SUPER RESOLUTION+ - Low	3 2 4 3
Picture - Picture Adjust - SUPER RESOLUTION+ - Off	3 2 4 4
Picture - Picture Adjust - Black Level	3 2 5
Picture - Picture Adjust - Black Level - High	3 2 5 1
Picture - Picture Adjust - Black Level - Low	3 2 5 2
Picture - Picture Adjust - DFC	3 2 6
Picture - Picture Adjust - DFC - On	3 2 6 1
Picture - Picture Adjust - DFC - Off	3 2 6 2
Picture - Game Adjust	3 3
Picture - Game Adjust - Response Time	3 3 1
Picture - Game Adjust - Response Time - Faster	3311
Picture - Game Adjust - Response Time - Fast	3 3 1 2
Picture - Game Adjust - Response Time - Normal	3313
Picture - Game Adjust - Response Time - Off	3 3 1 4
Picture - Game Adjust - Freesync	3 3 2
Picture - Game Adjust - Freesync - On	3 3 2 1
Picture - Game Adjust - Freesync - Off	3 3 2 2
Picture - Game Adjust - Black Stabilizer	333
Picture - Game Adjust - Black Stabilizer	3 3 3 1 Slider
Picture - Game Adjust - Cross Hair	3 3 4
Picture - Game Adjust - Cross Hair - Red Cross	3 3 4 1
Picture - Game Adjust - Cross Hair - Green Cross	3 3 4 2
Picture - Game Adjust - Cross Hair - Red Dot	3 3 4 3
Picture - Game Adjust - Cross Hair - Green Dot	3 3 4 4

Menu	Location
Picture - Game Adjust - Cross Hair - Off	3345
Picture - Color Adjust	3 4
Picture - Color Adjust - Gamma	3 4 1
Picture - Color Adjust - Gamma - Mode 1	3411
Picture - Color Adjust - Gamma - Mode 2	3412
Picture - Color Adjust - Gamma - Mode 3	3413
Picture - Color Adjust - Gamma - Mode 4	3 4 1 4
Picture - Color Adjust - Color Temp	3 4 2
Picture - Color Adjust - Color Temp - Custom	3 4 2 1
Picture - Color Adjust - Color Temp - Warm	3 4 2 2
Picture - Color Adjust - Color Temp - Medium	3 4 2 3
Picture - Color Adjust - Color Temp - Cool	3 4 2 4
Picture - Color Adjust - Red	3 4 3
Picture - Color Adjust - Red	3 4 3 1 Slider
Picture - Color Adjust - Green	3 4 4
Picture - Color Adjust - Green	3 4 4 1 Slider
Picture - Color Adjust - Blue	3 4 5
Picture - Color Adjust - Blue	3 4 5 1 Slider
Picture - Color Adjust - Six Color	3 4 6
Picture - Color Adjust - Six Color - Red Hue	3 4 6 1
Picture - Color Adjust - Six Color - Red Hue	3 4 6 1 1 Slider
Picture - Color Adjust - Six Color - Red Saturation	3 4 6 2
Picture - Color Adjust - Six Color - Red Saturation	3 4 6 2 1 Slider
Picture - Color Adjust - Six Color - Green Hue	3 4 6 3
Picture - Color Adjust - Six Color - Green Hue	3 4 6 3 1 Slider
Picture - Color Adjust - Six Color - Green Saturation	3 4 6 4
Picture - Color Adjust - Six Color - Green Saturation	3 4 6 4 1 Slider
Picture - Color Adjust - Six Color - Blue Hue	3 4 6 5
Picture - Color Adjust - Six Color - Blue Hue	3 4 6 5 1 Slider
Picture - Color Adjust - Six Color - Blue Saturation	3 4 6 6
Picture - Color Adjust - Six Color - Blue Saturation	3 4 6 6 1 Slider
Picture - Color Adjust - Six Color - Cyan Hue	3467
Picture - Color Adjust - Six Color - Cyan Hue	3 4 6 7 1 Slider
Picture - Color Adjust - Six Color - Cyan Saturation	3 4 6 8

Menu	Location
Picture - Color Adjust - Six Color - Cyan Saturation	3 4 6 8 1 Slider
Picture - Color Adjust - Six Color - Magenta Hue	3 4 6 9
Picture - Color Adjust - Six Color - Magenta Hue	3 4 6 9 1 Slider
Picture - Color Adjust - Six Color - Magenta Saturation	3 4 6 10
Picture - Color Adjust - Six Color - Magenta Saturation	3 4 6 10 1 Slider
Picture - Color Adjust - Six Color - Yellow Hue	3 4 6 11
Picture - Color Adjust - Six Color - Yellow Hue	3 4 6 11 1 Slider
Picture - Color Adjust - Six Color - Yellow Saturation	3 4 6 12
Picture - Color Adjust - Six Color - Yellow Saturation	3 4 6 12 1 Slider
Picture - Picture Reset	3 5
Picture - Picture Reset - No	3 5 1
Picture - Picture Reset - Yes	3 5 2
Sound	4
Sound - Volume	4 1
Sound - Volume	4 1 1 Slider
Sound - MaxxAudio	4 2
Sound - MaxxAudio - On	4 2 1
Sound - MaxxAudio - Off	4 2 2
General	5
General - Language	5 1
General - Language - English	5 1 1
General - Language - German	5 1 2
General - Language - French	513
General - Language - Spanish	5 1 4
General - Language - Italian	5 1 5
General - Language - Swedish	5 1 6
General - Language - Finnish	5 1 7
General - Language - Portuguese	5 1 8
General - Language - Portuguese (Brazil)	5 1 9
General - Language - Polish	5 1 10
General - Language - Russian	5 1 11
General - Language - Greek	5 1 12
General - Language - Ukrainian	5 1 13
General - Language - Chinese	5 1 14
General - Language - Traditional Chinese	5 1 15
General - Language - Japanese	5 1 16

Menu	Location
General - Language - Korean	5 1 17
General - Language - Hindi	5 1 18
General - SMART ENERGY SAVING	5 2
General - SMART ENERGY SAVING - High	5 2 1
General - SMART ENERGY SAVING - Low	5 2 2
General - SMART ENERGY SAVING - Off	5 2 3
General - Power LED	5 3
General - Power LED - On	5 3 1
General - Power LED - Off	5 3 2
General - Automatic Standby	5 4
General - Automatic Standby - Off	5 4 1
General - Automatic Standby - 4H	5 4 2
General - Automatic Standby - 6H	5 4 3
General - Automatic Standby - 8H	5 4 4
General - HDMI Compatibility Mode	5 5
General - HDMI Compatibility Mode - On	5 5 1
General - HDMI Compatibility Mode - Off	5 5 2
General - DisplayPort 1.2	5
General - DisplayPort 1.2 - Enable	5 6 1
General - DisplayPort 1.2 - Disable	562
General - Buzzer	5 7
General - Buzzer - On	571
General - Buzzer - Off	572
General - OSD Lock	58
General - OSD Lock - On	581
General - OSD Lock - Off	582
General - Information	5 9
General - Information	5 9 1
General - Reset to Initial Setting	5 10
General - Reset to Initial Setting - No	5 10 1
General - Reset to Initial Setting - Yes	5 10 2



To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

#### Supplier's Declaration of Conformity

Trade Name LG

Responsible Party LG Electronics USA, Inc.

Address 111 Sylvan Avenue, North Building,

Englewood Cliffs,NJ 07632

E-mail lg.environmental@lge.com

The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

MODEL		
SERIAL		

(for 34BK650 only)



This Product qualifies for ENERGY STAR® Changing the factory default configuration and settings or enabling certain optional features and functionalities may increase energy consumption beyond the limits required for ENERGY STAR® certification.

Refer to ENERGYSTAR.gov for more information on the ENERGY STAR® program.