



MukikiM LLC  
6812 W Calumet Rd. Milwaukee, WI 53223 USA  
Tel: +1-414-395-7850 | [www.mukikim.com](http://www.mukikim.com)

ELECTRONIC PIANO  
Operating Manual

MODEL: MUK-PN49CLR

## Introduction

Thank you for purchasing our Rock And Roll It Piano!  
This roll-up piano is completely portable and flexible, allowing you to take it with you anywhere.  
Please read the full manual to ensure proper playing and care.


### I. Product Specifications

- Made with 49 standard keys
- 8 different tones to choose from
- 6 demo songs
- Volume control wheel
- Record & playback
- Echo & Sustain
- Power saving function – piano will enter sleep mode after 3 minutes of idling.
- Attached speaker
- Easy connection to headphones or external speakers
- Power with included USB cord or x4 AAA batteries
- Keyboard Size (open): 27.75"x5"x.25"
- Control Panel Size: 3.25"x6"x1"

### II. Product Features

- Piano rolls up into a box, allowing you to take it almost anywhere.
- Piano is suitable for children ages 6+, but can be enjoyed by all ages due to its standard size. Use it for learning or use it for fun!
- Use the "tone" button to switch between 8 tones to find the one that fits your style.
- Can be used with x4 AAA batteries when a power source isn't available
- Connect headphones when you don't want to disturb anyone, or connect a speaker when you want everyone to hear!

### III. Appearance of the structure

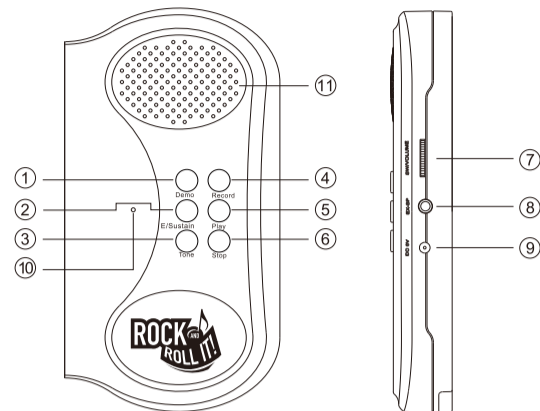

1	Demo	Plays demo songs
2	E/Sustain	Echo/Sustain
3	Tone	Change tones
4	Record	Record your playing
5	Play	Play your recording
6	Stop	Stops playing (works for recordings and demos)
7	On/off/volume	Turn the wheel clockwise (down) to turn on. Keep turning to increase volume. Turn counterclockwise to decrease volume and/or turn off.
8	EX-SP	Place to connect headphones or an external speaker
9	DC5V	Place to connect your USB power cord
10	LED	Lights up (red) when the unit is powered ON
11	Speaker	Sound comes out here

#### IV. Descriptions of Functions

##### 1. Demo

- Press to play a demo song, press it again to stop.
- Continue pressing to switch between songs.
- When demo songs are playing, the piano keys will not work.
- Demo songs will play on repeat until the "demo" or "stop" buttons are pressed.

##### 2. Echo/Sustain

- Press once to activate the echo function.
- Press again to activate the sustain function.
- Press a third time to return to normal.

##### 3. Tone

- Press the tone button to change the piano tone.
- Press again to go to the next tone.
- After the eighth tone, it will cycle back to the first.

##### 4. Record & Play

- Press the record button and the "metronome" sound will begin. Start playing what you want to record now.
- When you're done playing your song, press the play button and your recorded music will play.
- You can record using any of the 8 tones, but you cannot change the tone while recording. You can change it during the playback.
- After playing your recording, the piano will automatically revert back to recording mode. Simply press play if you want to hear your recording again.
- Recordings are not stored in the piano after it is turned off.

##### 5. On/Off/Volume

- To turn the piano on, roll the wheel on the side of the control panel clockwise. To turn it off, roll it counterclockwise.

- A red LED light will appear to signal that the piano is ON.
- To increase the volume, continue turning the wheel clockwise.
- To lower the volume, turn the wheel counterclockwise.

##### 6. Power Saving

- If the piano is not played for 3 minutes, it will enter into "sleep mode".
- Press any key to "wake up".

#### V. Care Instructions

- Remove batteries when not using the piano to avoid damage.
- For best results, use on a flat, level, and dry surface.
- Roll it up loosely. Rolling it too tightly could damage the inner connections.
- Do not attempt to pull, stretch, or twist the piano.
- Do not use it in high temperatures or in wet areas.
- Do not attempt to take it apart.
- Do not use near strong radio waves.

#### VI. Simple Troubleshooting

- If the piano stops working or begins to make abnormal sounds:
  - i. Replace the batteries. Make sure to use brand new batteries of the same brand.
  - ii. If new batteries are not available, plug into USB power.
  - iii. Turn the piano all of the way off and disconnect from power to restore original settings (i.e. unplug from USB cable or remove batteries).

#### VII. Package Contents

- 1 – 49 key piano
- 1 – USB Power Cord
- 1 – User Manual
- 1 – Color coded song booklet

**VII.Rhythm List**

Rhythm Number	Rhythm Name
T00	Acoustic Grand Piano
T01	Orchestral Harp
T02	Church Organ
T03	Tubular Bell
T04	Electric Guitar (jazz)
T05	Violin
T06	String Ensemble 1
T07	Acoustic Guitar (steel)

**VIII.Demo Song List**

Song Number	Song Name
S00	Fleur De Lis
S01	Dream wedding
S02	Kangding love songs
S03	Xinyu
S04	Qinghai Tibet Plateau
S05	In the peach blossom place