

VXR10 PRO

Super-cardioid Condenser
Shotgun Microphone



Powered by
Rycote®

MOVO
Creators Wanted

Instruction Manual

Thanks for choosing MOVO!

The VXR10 PRO is a super-cardioid condenser microphone that delivers lower noise and higher sensitivity sound on your smartphones, tablets, DSLRs, consumer camcorder, PCs, and more.

Due to its plug and play operation and no battery required design, the VXR10 PRO is the perfect audio solution for mobile journalists, professional vloggers and video hobbyists.

The VXR10 PRO features a compact and powerful microphone in a rugged, lightweight aluminum body, perfect for Creators on the go.

The 3.5mm headphone output lets users monitor and playback audio with compatible apps, giving them the ability to ensure the integrity of their audio.

Included detachable Rycote Lyre shock mount provides reliable and solid support, effectively eliminating noise from vibrations and camera handling.

1

Features


- Compatible with smartphones, tablets, DSLRs, consumer camcorders, PCs and more
- Super-cardioid condenser shotgun microphone
- Improved sensitivity and signal to noise ratio
- Plug and play operation
- Durable, lightweight aluminum construction
- 3.5mm headphone output
- Rycote Lyre shock mount and furry windscreen included

Specifications

Transducer:	Electret Condenser
Polar Pattern:	Super-Cardioid
Frequency Response:	20Hz - 18kHz
Sensitivity:	-36dB±3dB (0dB=1V/Pa,1kHz)
Signal to Noise Ratio:	78dB
Plug:	3.5mm TRRS Line-out 3.5mm TRS headphone output
Dimensions:	Φ26x100mm (Φ1x3.9")
Net Weight:	60g (2.1oz)

2

Product Structure

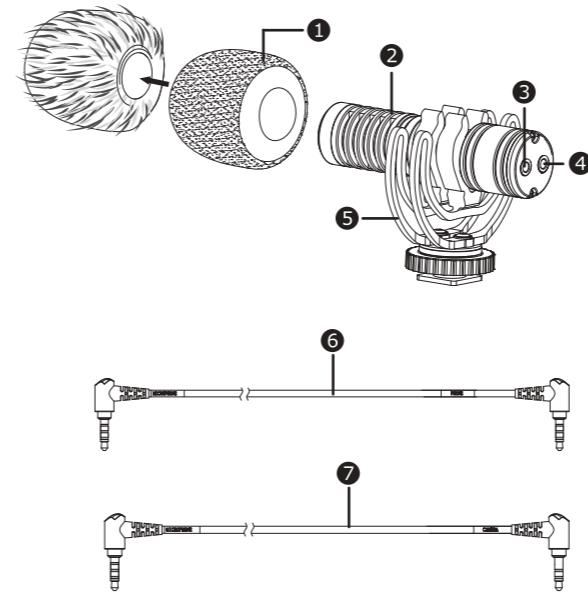

3

1. Furry windscreens
2. VXR10 PRO microphone
3. Audio output jack
4. 3.5mm headphone output
5. Rycote Lyre shock mount
6. 3.5mm TRRS to TRS output cable
7. 3.5mm TRRS to TRRS output cable

What's the difference?

- 1) 3.5mm TRRS to TRS output cable
- For cameras, camcorders, audio recorders and other audio/video recording devices with an audio monitoring jack.
- 2) 3.5mm TRRS to TRRS output cable
- For smartphones, tablets, or Mac.

4



Please read instructions for use thoroughly before using equipment for the first time. Instructions contain valuable information to avoid damage to persons or property.

- Strictly follow all notes on safety in these instructions for use.
- Keep these instructions for use in a safe place. If you sell your equipment or pass it on to someone else, please include these instructions for use.

1. Understand these instructions for use correctly

1.1 Marking on the device

CE This symbol indicates that your device meets the safety requirements of all applicable EU-directives.

Waste disposal and protection of the environment.

Electric and electronic appliances as well as batteries must not be disposed of together with domestic waste.


The user is legally obliged to return electric and electronic appliances as well as batteries to specially set up public collecting points or the sales outlet once they have reached the end of their service life.

Details are regulated by national law. The symbol on the product, the instructions for use, or the packaging refers to these provisions. The recycling, the material-sensitive recycling, or any other form of recycling of waste equipment/batteries is an important contribution to the protection of our environment.

5

Attaching the microphone to smartphones or tablets.


1. Connect 3.5mm TRRS to TRRS output cable into your smartphone, tablet.
2. Open the audio or video recording app and start recording.
3. When finished, plug the 3.5mm headphone output and playback the previous audio you recorded.

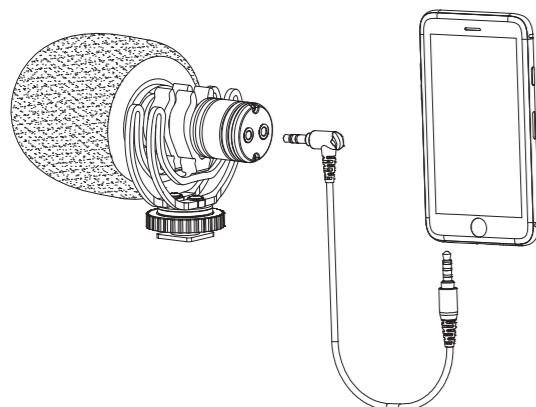

6


Attaching the microphone to cameras, camcorders, audio recorders, and other audio or video recording devices.

1. Twist counter-clockwise to loosen the thumbscrew on the cold shoe mount.
2. Slide the microphone onto the camera's hot shoe mount.
3. Twist clockwise to tighten the thumbscrew to secure onto the shoe mount.

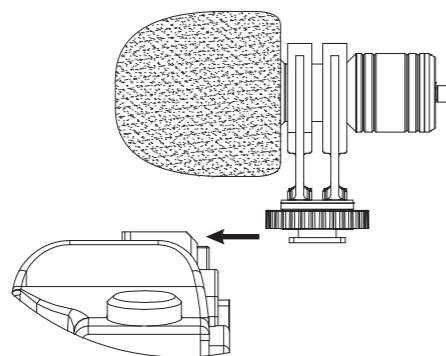



7

4. Plug the 3.5 mm TRS connector into the audio output jack of your device.

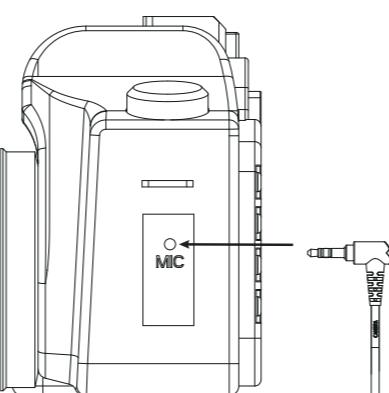

8

Specifications

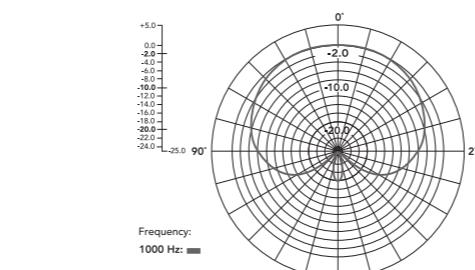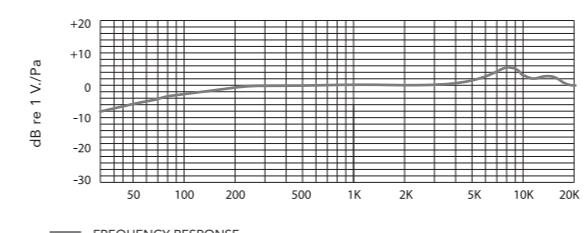

9

Troubleshooting

If you have any problem using the VXR10 PRO components, use the following checklist.

Problem	Solution
The microphone isn't working	Make sure you're using the correct audio connector. For smartphone, tablet or Mac: 3.5mm TRRS to TRRS output cable. For others devices: 3.5mm TRRS to TRS output cable.
Too much ambient noise is being picked up	Make sure that the microphone is as close as possible to the subject. A certain amount of ambient noise is unavoidable in loud environments.

10

HAPPY? LET US KNOW!

We love to hear from customers! Share your experience with others by reviewing your product on Amazon. Scan the QR code below or visit: amazon.com/review/review-your-purchases



NOT HAPPY? LET US HELP!

Have any questions or concerns? Our friendly and responsive customer service wants to make sure you have the best experience possible!

Call us at: 1-800-354-1739 (US)
Monday-Friday: 9 am - 4 pm (PST)
Email us at: support@movophoto.com
Live chat us at: www.movophoto.com

Act Now!

This product includes a 1 year limited warranty. If you register the product within 30 days of purchase, you'll receive an additional 1-year warranty extension for a total of two years of protection.

To register your product and for full details on the warranty, visit www.movophoto.com/warranty or scan QR code:



Facebook & YouTube: /movophotogroup
Twitter & Instagram: @movophoto

Movo Photo Group
www.movophoto.com
support@movophoto.com