Nikon

DIGITAL CAMERA

Z 7 User's Manual

- Read this manual thoroughly before using the camera.
- To ensure proper use of the camera, be sure to read "For Your Safety" (page viii).
- After reading this manual, keep it in a readily accessible place for future reference.

Camera Manuals

For information on special features and on basic shooting and playback, read the *User's Manual* (this manual).

(tills illatidal).	
Table of Contents	ii
• Getting to Know the Camera	1
First Steps	27
Basic Photography and Playback	41
Basic Settings	53
Shooting Controls	69
• The i Button	91
Troubleshooting	157



For detailed information on menus and other camera features, refer to the *Reference Manual* (pdf) or online manual (html), available for viewing on computers, smartphones, or tablets:



• The Reference Manual (pdf): More detailed information is available in the Reference Manual (pdf), which can be found at the Nikon download center.

http://downloadcenter.nikonimglib.com/en/products/472/Z7__.html

nikon download center Z 7

 Online manuals (html): The Reference Manual is also available on our website in html format and can be viewed in a web browser at the following website:

http://onlinemanual.nikonimglib.com/z7/en/

nikon online manuals Z 7

For information on connecting to the camera from a computer or a smart device such as a smartphone or tablet using the SnapBridge app and the camera's built-in Wi-Fi or an optional WT-7 wireless transmitter, download the *Network Guide* (pdf) from the Nikon download center (see above).

Package Contents

Be sure all items listed here were included with your camera.





☐ BF-N1 body cap



☐ DK-29 rubber eyecup (comes attached to camera, ☐ 186)

- Camera
- ☐ EN-EL15b rechargeable Li-ion battery with terminal cover
- ☐ MH-25a battery charger (comes with either an AC wall adapter or power cable of a type and shape that varies with the country or region of sale)
- ☐ AN-DC19 strap
- ☐ Warranty
- ☐ User's Manual

- ☐ EH-7P charging AC adapter (supplied with a plug adapter attached in countries or regions where required; shape depends on country of sale—☐ 29)
- ☐ HDMI/USB cable clip (☐ 188)
- ☐ UC-E24 USB cable
- \square BS-1 accessory shoe cover (\square 187)

Memory cards are sold separately. Purchasers of lens or mount adapter kits should confirm that the package contains a lens or mount adapter (manuals for the lens or adapter may also be provided).

The Nikon Download Center

In addition to the *Reference Manual*, you can also visit the Nikon download center to download product manuals, firmware updates, and software.

http://downloadcenter.nikonimglib.com/

Z 7 Model Name: N1710

About This Manual

Symbols and Conventions

To make it easier to find the information you need, the following symbols and conventions are used:



This icon marks notes, information that should be read before using this product.



This icon marks tips, additional information you may find helpful when using this product.



This icon marks references to other sections in this manual.

Menu items, options, and messages that appear in the camera displays are shown in **bold**. Throughout this manual, the display in camera monitor and viewfinder during shooting is referred to as the "shooting display"; in most cases, the illustrations show the monitor.

Throughout this manual, smartphones and tablets are referred to as "smart devices".

Camera Settings

The explanations in this manual assume that default settings are used.

⚠ For Your Safety

Before using the camera for the first time, read the safety instructions in "For Your Safety" (\square viii).

Table of Contents

Package Contents	I
For Your Safety	viii
Notices	xii
Getting to Know the Camera	1
Parts of the Camera	1
Camera Body	1
The Control Panel	5
The Monitor and Viewfinder	6
Camera Controls	8
The Viewfinder	8
The Monitor Mode Button	9
Touch Controls	10
The DISP Button	
The Sub-Selector	
The AF-ON Button	
The Command Dials	
The MENU Button	
The i Button (1 Icon)	
The Function Buttons (Fn1 and Fn2)	24
First Steps	27
Attach the Camera Strap	27
Charge the Battery	28
The Battery Charger	
Charging AC Adapters	29
Insert the Battery and a Memory Card	32
Attach a Lens	36
Choose a Language and Set the Clock	38

Basic Photography and Playback	41
Taking Photographs (📅 Mode)	41
Shooting Movies (Mode)	45
Basic Playback	49
Viewing Movies	49
Deleting Unwanted Pictures	51
Basic Settings	53
Focus	53
Choosing a Focus Mode	53
AF-Area Mode	55
The Touch Shutter	58
Manual Focus	60
White Balance	62
Silent Photography	66
Rating Pictures	
Protecting Pictures from Deletion	68
Shooting Controls	69
The Mode Dial	69
P: Programmed Auto	70
S: Shutter-Priority Auto	70
A: Aperture-Priority Auto	71
M : Manual	
User Settings: U1, U2, and U3 Modes	73
Long Time-Exposures (Mode M)	76
The ISO (ISO Sensitivity) Button	78
Auto ISO Sensitivity Control	79
The 🗷 (Exposure Compensation) Button	80
The 및/ⓒ (Release Mode/Self-Timer) Button	82
The Self-Timer	85

The Sub-Selector	
Focus-Point Selection	87
Autoexposure (AE) Lock	87
Focus Lock	87
he i Button	91
Using the i Menu	91
The Photo-Mode <i>i</i> Menu	92
Set Picture Control	93
White Balance	98
Image Quality	104
Image Size	106
Flash Mode	
Metering	108
Wi-Fi Connection	109
Active D-Lighting	110
Release Mode	
Vibration Reduction	112
AF-Area Mode	113
Focus Mode	113
The Movie-Mode i Menu	114
Set Picture Control	115
White Balance	115
Frame Size, Frame Rate, and Movie Quality	116
Microphone Sensitivity	118
Choose Image Area	119
Metering	120
Wi-Fi Connection	120
Active D-Lighting	120
Electronic VR	120
Vibration Reduction	121
AF-Area Mode	121
Focus Mode	121

A	Camera	Menus

More information on camera menus is available in a *Reference Manual* that can be downloaded from the Nikon website.

► The Playback Menu: Managing Images	123
The Photo Shooting Menu: Shooting Options	125
'果 The Movie Shooting Menu:	
Movie Shooting Options	133
Custom Settings: Fine-Tuning Camera Settings	139
↑ The Setup Menu: Camera Setup	149
✓ The Retouch Menu: Creating Retouched Copies	154
⇒ My Menu/→ Recent Settings	156
Troubleshooting	157
Problems and Solutions	
Problems and Solutions Battery/Display	158
	158
Battery/Display	158 158 159
Battery/Display Shooting Playback Bluetooth and Wi-Fi (Wireless Networks)	158 158 159 161
Battery/Display Shooting Playback	158 158 159 161
Battery/Display ShootingPlaybackBluetooth and Wi-Fi (Wireless Networks) MiscellaneousIndicators and Error Messages	158 159 161 163 163
Battery/Display ShootingPlayback Playback Bluetooth and Wi-Fi (Wireless Networks) Miscellaneous	158 159 161 163 163

The Camera Display and Control Panel	169
The Monitor: Photo Mode	169
The Monitor: Movie Mode	174
The Viewfinder: Photo Mode	175
The Viewfinder: Movie Mode	177
The Control Panel	178
The Nikon Creative Lighting System	179
Other Accessories	184
Attaching a Power Connector and AC Adapter	189
Caring for the Camera	191
Storage	191
Cleaning	
Image Sensor Cleaning	192
Caring for the Camera and Battery: Cautions	195
Specifications	200
NIKKOR Z 24–70mm f/4 S Lenses	213
The FTZ Mount Adapter	222
Approved Memory Cards	228
Memory Card Capacity	229
Battery Endurance	230
Notices	231
Bluetooth and Wi-Fi (Wireless LAN)	232
Index	236

For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

Keep these safety instructions where all those who use this product will read them.

⚠ DANGER: Failure to observe the precautions marked with this icon carries a high risk of death or severe injury.

⚠ WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.

⚠ **CAUTION**: Failure to observe the precautions marked with this icon could result in injury or property damage.



- Do not use while walking or operating a vehicle.
 Failure to observe this precaution could result in accidents or other injury.
- Do not disassemble or modify this product. Do not touch internal parts that become exposed as the result of a fall or other accident.
 Failure to observe these precautions could result in electric shock or other injury.
- Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the battery or power source.

Continued operation could result in fire, burns or other injury.

 Keep dry. Do not handle with wet hands. Do not handle the plug with wet hands.

Failure to observe these precautions could result in fire or electric shock.

 Do not let your skin remain in prolonged contact with this product while it is on or plugged in.

Failure to observe this precaution could result in low-temperature burns.

 Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.

Failure to observe this precaution could result in explosion or fire.

 Do not directly view the sun or other bright light source through the lens.

Failure to observe this precaution could result in visual impairment.

 Do not aim the flash or AF-assist illuminator at the operator of a motor vehicle.

Failure to observe this precaution could result in accidents.

• Keep this product out of reach of children.

Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.

- Do not entangle, wrap or twist the straps around your neck.
 Failure to observe this precaution could result in accidents.
- Do not use batteries, chargers, or AC adapters not specifically designated for use with this product. When using batteries, chargers, and AC adapters designated for use with this product, do not:
 - Damage, modify, forcibly tug or bend the cords or cables, place them under heavy objects, or expose them to heat or flame.
 - Use travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters.

Failure to observe these precautions could result in fire or electric shock.

 Do not handle the plug when charging the product or using the AC adapter during thunderstorms.

Failure to observe this precaution could result in electric shock.

 Do not handle with bare hands in locations exposed to extremely high or low temperatures.

Failure to observe this precaution could result in burns, or frostbite.



• Do not leave the lens pointed at the sun or other strong light sources. Light focused by the lens could cause fire or damage to product's internal parts. When shooting backlit subjects, keep the sun well out of the frame. Sunlight focused into the camera when the sun is close to the frame could cause fire.

 Turn this product off when its use is prohibited. Disable wireless features when the use of wireless equipment is prohibited.

The radio-frequency emissions produced by this product could interfere with equipment onboard aircraft or in hospitals or other medical facilities.

 Remove the battery and disconnect the AC adapter if this product will not be used for an extended period.

Failure to observe this precaution could result in fire or product malfunction.

 Do not fire the flash in contact with or in close proximity to the skin or objects.

Failure to observe this precaution could result in burns or fire.

 Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight.

Failure to observe this precaution could result in fire or product malfunction.

- Do not look directly at the AF-assist illuminator.
- Failure to observe this precaution could have adverse effects on vision.
- Do not transport cameras or lenses with tripods or similar accessories attached.

Failure to observe this precaution could result in injury or product malfunction.



DANGER (Batteries)

· Do not mishandle batteries.

Failure to observe the following precautions could result in the batteries leaking, overheating, rupturing, or catching fire:

- Use only rechargeable batteries approved for use in this product.
- Do not expose batteries to flame or excessive heat.
- Do not disassemble.
- Do not short-circuit the terminals by touching them to necklaces, hairpins, or other metal objects.
- Do not expose batteries or the products in which they are inserted to powerful physical shocks.

Charge only as indicated.

Failure to observe this precaution could result in the batteries leaking, overheating, rupturing, or catching fire.

 If battery liquid comes into contact with the eyes, rinse with plenty of clean water and seek immediate medical attention.

Delaying action could result in eye injuries.

$\dot{\mathbb{N}}$

WARNING (Batteries)

- Keep batteries out of reach of children. Should a child swallow a battery, seek immediate medical attention.
- Do not immerse batteries in water or expose to rain.
 Failure to observe this precaution could result in fire or product malfunction. Immediately dry the product with a towel or similar object should it become wet.
- Discontinue use immediately should you notice any changes in the batteries, such as discoloration or deformation. Cease charging EN-EL15b rechargeable batteries if they do not charge in the specified period of time.

Failure to observe these precautions could result in the batteries leaking, overheating, rupturing, or catching fire.

- When batteries are no longer needed, insulate the terminals with tape.
 Overheating, rupture, or fire may result should metal objects come into contact with the terminals.
- If battery liquid comes into contact with a person's skin or clothing, immediately rinse the affected area with plenty of clean water.
 Failure to observe this precaution could result in skin irritation.

Notices

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the appearance and specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort has been made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that has been digitally copied or reproduced by means of a scanner, digital camera, or other device may be punishable by law.

Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds, or local government bonds, even if such copies or reproductions are stamped "Sample."

The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited.

Unless the prior permission of the government has been obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards, and tickets, such as passes and meal coupons.

• Comply with copyright notices

Under copyright law, photographs or recordings of copyrighted works made with the camera cannot be used without the permission of the copyright holder. Exceptions apply to personal use, but note that even personal use may be restricted in the case of photographs or recordings of exhibits or live performances.

Use Only Nikon Brand Electronic Accessories

Nikon cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including chargers, batteries, AC adapters, and flash accessories) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

The use of non-Nikon electronic accessories could damage the camera and may void your Nikon warranty. The use of third-party rechargeable Li-ion batteries not bearing the Nikon holographic seal shown at right could interfere with normal operation of the camera or result in the batteries overheating, igniting, rupturing, or leaking.

kon Nikon Nik on Nikon Niko on Mikon Nik

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

▼ Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually-updated information is available on-line at the following sites:

- For users in the U.S.A.: http://www.nikonusa.com/
- For users in Europe and Africa: http://www.europe-nikon.com/support/
- For users in Asia, Oceania, and the Middle East: http://www.nikon-asia.com/ Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently-asked questions (FAOs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. See the following URL for contact information: http://imaging.nikon.com/


Getting to Know the Camera

Take a few minutes to familiarize yourself with the names and functions of camera controls and displays. You may find it helpful to bookmark this section and refer to it as you read through the rest of the manual.


Parts of the Camera

Refer to this section for the names and locations of camera controls and displays.

Camera Body

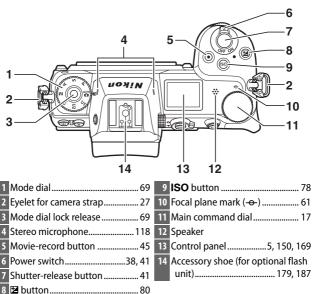

The Camera Body (Continued)

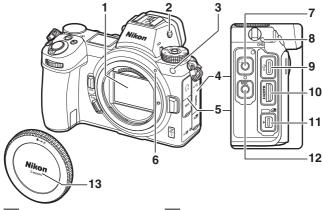

1 Image sensor 192	6 Lens mounting mark36
2 Monitor mode button9, 150	7 Headphone connector 138
3 AF-assist illuminator43, 140	8 CHARGE lamp29
Red-eye reduction lamp 107	9 USB connector 184, 188
Self-timer lamp85	10 HDMI connector 184, 188
4 Cover for accessory terminal	11 Accessory terminal 184
and USB and HDMI	12 Connector for external
connectors	microphone 184
5 Cover for headphone and	13 Rody cap 36 184

☑ Do Not Touch the Image Sensor

microphone connectors


Under no circumstances should you exert pressure on the image sensor, poke it with cleaning tools, or subject it to powerful air currents from a blower. These actions could scratch or otherwise damage the sensor. For information on cleaning the image sensor, see "Image Sensor Cleaning" (

192).



13 Body cap......36, 184

2

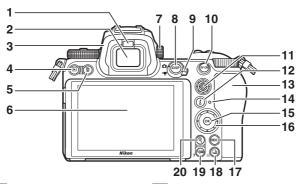

1 Eye sensor8	11 Sub-selector17, 87
2 Viewfinder 6, 8, 175	12 i button21, 91
3 Viewfinder eyepiece186	13 Memory card slot cover 32
4 b button49	14 Memory card access lamp33, 84
5 m button51	15 🕲 button18, 146, 148
6 Monitor6, 10, 169	16 Multi selector18
7 Diopter adjustment control8	17 MENU button
8 DISP button	18 型 (心) button82
9 Photo/movie selector41, 45	19 🥄 (?) button20
10 AF-ON button 17	20 [⊕] button 60


▼ The Monitor

The angle of the monitor can be adjusted as shown.





The Camera Body (Continued)

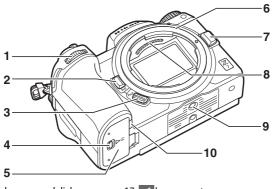

Sub-command dial1/	6 Lens mount36
2 Fn1 button24, 62	7 Lens release button37
3 Fn2 button24, 53	8 CPU contacts
4 Battery-chamber cover latch32	76 Tripod socket
5 Battery-chamber cover32	10 Power connector cover 189

▼ Product Serial Number


The serial number for this product can be found by opening the monitor.



4 Getting to Know the Camera

The Control Panel


The control panel lights when the camera is on. At default settings, the following indicators are displayed; for a full list of the indicators that appear in the control panel, see "The Control Panel" (178).

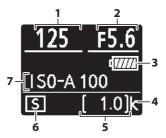


1 Shutter speed70, 71	5 Number of exposures
2 Aperture71	remaining 34, 229
3 Battery indicator 34	Release mode 82
4 "k" (appears when memory remains for over 1000	7 ISO sensitivity
exposures) 34	

The Monitor and Viewfinder

 At default settings, the following indicators appear in the monitor and viewfinder in photo mode; for a full list of indicators, see "The Camera Display and Control Panel" (169).



Monitor

 

1	Shooting mode69
2	Focus point42, 55
3	Release mode82, 111
4	Focus mode53, 130, 137
5	AF-area mode55, 131, 137
6	Active D-Lighting 110, 129, 136
7	Picture Control93, 128, 135
8	White balance62, 98, 127, 134
9	Image area119, 125, 133
10	Image size106, 126
11	Image quality104, 126
12	icon13, 21

	Viewfinder	
21 2422	34567811109	
	S ATS CO MAYA IS A MAYA NORMAS CO	ı
9		
-	IN AFS (v) MAA (MA MAA: MORNEY D)	
2	——————————————————————————————————————	
2	123	
	1/125 /54 Tanakanat 20100 1.05	
		l
	25 -5 6 (1.01)	•
20 1 1	9 18 13 17 16 15 14	


21	U	I	19	10	13	1 /	10	1514
13	Ex	pos	ure ir	ndica	tor			72
	Ex	pos	ure c	omp	ensa	tion	1	
	d	ispl	ay					80
14	"k'	' (a _l	opear	s wh	en n	nem	ory	
	r€	ema	ins fo	or ove	er 10	00		
	e	кро	sures)				34
15	Νι	ımb	er of	expo	sure	S		
	re	ma	ining				3	34, 229
16	ISO) se	nsitiv	ity				78
17	IS() se	nsitiv	ity ir	ndica	tor		78
								r79


18 Aperture71	22 Vibration reduction
	indicator112, 131
	23 Touch shooting10, 58
21 Battery indicator34	24 "Clock not set" indicator 40


The following items appear in movie mode.



 Monitor

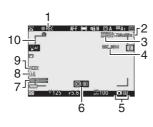



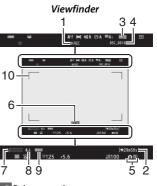

5	Release mode
	(still photography)82
6	Subject tracking 57
7	Sound level118
8	Microphone sensitivity 118, 138
9	Frequency response138

Camera Controls

This section outlines how to use various camera controls and displays.

The Viewfinder

 
Placing your eye to the viewfinder activates the eye sensor, switching the display from the monitor to the viewfinder (note that the eye sensor will also respond to other objects, such as your fingers). The viewfinder can be used for menus and playback if desired.



Eye sensor

The Diopter Adjustment Control

To focus the viewfinder, lift and rotate the diopter adjustment control, being careful not to put your fingers or fingernails in your eve. Push the control back in once focus is adjusted to your satisfaction.




Extended Use

When using the viewfinder for extended periods, you can adjust viewfinder brightness and hue for ease of viewing by selecting Off for Custom Setting d8 (Apply settings to live view).

The Monitor Mode Button

 Press the monitor mode button to cycle between the viewfinder and monitor as follows:





- you take your eye away. • Viewfinder only: The viewfinder is used for shooting, menus, and playback; the monitor remains blank.
- Monitor only: The monitor is used for shooting, menus, and playback; the viewfinder display will remain blank even if you put your eye to the viewfinder.
- Prioritize viewfinder: The camera functions in a manner similar to existing digital SLR cameras. Placing your eye to the viewfinder turns the viewfinder on and taking your eye away turns the viewfinder off. In photo mode, the monitor remains blank. while in movie mode, during playback, or while menus are displayed, the monitor will turn on when you take your eye away from the viewfinder.

Monitor Mode

You can limit the choice of monitor modes available using the **Limit** monitor mode selection option in the setup menu.

Touch Controls

The touch-sensitive monitor can be used to adjust camera settings, focus and release the shutter, view photos and movies, enter text, and navigate the menus. Touch controls are not available while the viewfinder is in use.



■ Focusing and Releasing the Shutter

Touch the monitor to focus on the selected point (touch AF). In photo mode, the shutter will be released when you lift your finger from the display (touch shutter).

Touch AF settings can be adjusted by tapping the \Box icon (\Box 58).





II Adjusting Settings

Tap highlighted settings in the display and choose the desired option by tapping icons or sliders. Press ® to select the chosen option and return to the shooting display or tap to exit without changing settings.





II Playback

Flick left or right to view other pictures during full-frame playback.

In full-frame view, touching the bottom of the display brings up a frame-advance bar. Slide your finger left or right over the bar to scroll rapidly to other pictures.







Frame advance bar

Use stretch and pinch gestures to zoom in and out and slide to scroll. You can also give the display two quick taps to zoom in from full-frame playback or cancel zoom.

To "zoom out" to a thumbnail view, use a pinch gesture in full-frame playback. Use pinch and stretch to choose the number of images displayed from 4, 9, and 72 frames







Guide

II Movie Playback

Tap the on-screen guide to start movie playback (movies are indicated by a 県 icon). Tap the display to pause or resume, or tap to exit to full-frame playback.

II The i Menu

Tap the **1** icon to display the **i** menu during shooting (21, 91).



 
Tap items to view options.



■■ Text Entry


When a keyboard is displayed, you can enter text by tapping the keys (to cycle through the upper- and lower-case and symbol keyboards, tap the keyboard selection button) or move the cursor by tapping in the text display area.

Text display area



II Navigating the Menus

 Slide up or down to scroll.



Tap a menu icon to choose a menu.



Tap menu items to display options and tap icons or sliders to change.



To exit without changing settings, tap 5.



The Touch Screen

The touch screen responds to static electricity and may not respond when covered with third-party protective films, when touched with fingernails or gloved hands, or when touched simultaneously in multiple locations. Do not use excessive force or touch the screen with sharp objects.

Enabling or Disabling Touch Controls

Touch controls can be enabled or disabled using the **Touch controls** option in the setup menu (\square 151).


The DISP Button

Use the **DISP** button to view or hide indicators in the monitor or viewfinder.



■ Photo Mode


In photo mode, pressing the **DISP** button cycles the display as follows:

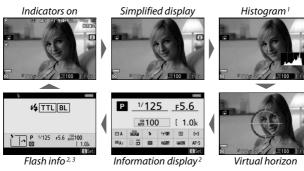

- 1 Not displayed when **Off** is selected for Custom Setting d8 (**Apply settings to live view**) or **On** is selected for **Overlay shooting** in multiple exposure mode.
- 2 Not displayed in the viewfinder.
- 3 Displayed when an optional SB-5000, SB-500, SB-400, or SB-300 flash unit is mounted on the accessory shoe or a WR-R10 wireless remote controller commands a flash unit via radio flash control.


II Movie Mode

In movie mode, pressing the **DISP** button cycles the display as follows:

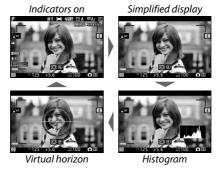


The Sub-Selector

 Use the sub-selector as a joystick to select the focus point, or press the center of the sub-selector to lock focus and exposure (\$\square\$ 87, 88).



The AF-ON Button

 In autofocus mode, the **AF-ON** button can be used to focus.



The Command Dials

 
Use the command dials to adjust shutter speed or aperture or in combination with other buttons to change camera settings.



Main command dial

The MENU Button

Press the MENU button to view the menus.






1 E: Playback menu 123
2 : Photo shooting menu 125
3 ♥: Movie shooting menu 133
4 ★: Custom Settings menu 139
5 Y : Setup menu 149
6 2: Retouch menu 154
7 ⇒/-: My Menu or
recent settings (defaults to
My Menu) 156
8 ②: Help icon20
9 Menu ontions 123

II Using the Menus

You can navigate the menus using the multi selector and $\ensuremath{\mathfrak{B}}$ button.

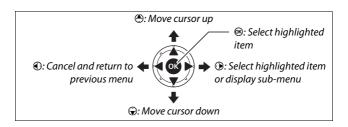

1 Highlight the icon for the current menu.

Press • to highlight the icon for the current menu.





2 Select a menu.

Press 🖰 or 😯 to select the desired menu.



3 Position the cursor in the selected menu.

Press (*) to position the cursor in the selected menu.





4 Highlight a menu item.

Press or to highlight a menu item (items that are displayed in gray are not currently available and cannot be selected).





5 Display options.

Press to display options for the selected menu item.





6 Highlight an option.

Press (*) or (*) to highlight an option (options that are displayed in gray are not currently available and cannot be selected).





7 Select the highlighted item.

Press ® to select the highlighted item. To exit without making a selection, press the MENU button. To exit the menus and return to shooting mode, press the shutter-release button halfway.



You can also navigate the menus using touch controls (\$\sup\$ 14).

✓ The ② (Help) Icon

If a 2 icon appears at the bottom left corner of the display, you can view a description of the currently selected option or menu by pressing the R (?) button. Press 2 or 2 to scroll the text, or press 2 2 (?) again to return to the menus.





The i Button (Iz Icon)

For quick access to frequently-used settings, press the \boldsymbol{i} button or tap the \boldsymbol{i} icon in the display.









Tap the desired item or highlight items and press ⊛ to view options. You can also adjust settings by highlighting items and rotating the command dials. The items displayed in photo mode (□ 92) differ from those displayed in movie mode (□ 114).





The Playback i Menu

Pressing the i button during playback displays a context-sensitive menu of frequently-used playback options.



■ Customizing the i Menu

The items displayed in the photo-mode i menu can be chosen using Custom Setting f1 (**Customize 19 menu**).

1 Select Custom Setting f1.
In the Custom Settings menu,
highlight Custom Setting f1
(Customize ☑ menu) and press ⊛
(for information on using the menus,
see "The MENU Button", □ 18).



2 Choose a position.

Highlight a position in the menu you want to edit and press ®.



3 Choose an option.

Highlight an option and press ® to assign it to the selected position and return to the menu displayed in Step 2. Repeat Steps 2 and 3 as desired.



4 Exit.

Press the MENU button to save changes and exit.

Options That Can Be Assigned to the i Menu

The following options can be assigned to the i menu for photo mode:

- Choose image area
- Image quality
- Image size
- Exposure compensation
- ISO sensitivity settings
- White balance
- Set Picture Control
- Color space
- Active D-Lighting
- Long exposure NR High ISO NR
- Flash mode
- Metering

 
- Focus mode
- AF-area mode
- Vibration reduction
- Auto bracketing
- Multiple exposure • HDR (high dynamic
- range)
- Silent photography Release mode
- Custom control assignment
- Exposure delay mode

- Flash compensation Electronic frontcurtain shutter
 - Apply settings to live view Split-screen display
 - zoom
 - Peaking highlights
 - Monitor/viewfinder brightness Bluetooth
 - connection Wi-Fi connection

The movie-mode *i* menu can be customized using Custom Setting g1 (Customize menu); the options available differ from those for photo mode.

The Function Buttons (Fn1 and Fn2)

The Fn1 and Fn2 buttons can also be used for quick access to selected settings during shooting. The settings assigned to these buttons can be chosen using Custom Setting f2 (Custom control assignment) and the selected setting adjusted either by pressing the button or by pressing the button and rotating the command dials. At default settings, the



Fn2 button

Fn1 button is used for white balance and the **Fn2** button to select focus and AF-area modes

II Customizing the Function Buttons

The function performed by the function buttons in photo mode are chosen using Custom Setting f2 (**Custom control assignment**).

1 Select Custom Setting f2.
In the Custom Settings menu,
highlight Custom Setting f2 (Custom
control assignment) and press
(for information on using the menus,
see "The MENU Button", □ 18).



2 Choose a button.

Highlight the option for the desired button and press ®. Select Fn1 **button** to choose the role played by the Fn1 button, Fn2 button to choose the role played by the Fn2 button.



3 Choose an option.

Highlight an option and press [®] to assign it to the selected button and return to the menu displayed in Step 2. Repeat Steps 2 and 3 to choose the role played by the remaining button.



4 Exit.

Press the MENU button to save changes and exit.

Roles That Can Be Assigned to the Function Buttons

The following roles can be assigned to the function buttons in photo mode:

- AF-ON
- AF lock only
- AE lock (hold)
- AE lock (reset on release)
- AE lock only
- AE/AF lock
- FV lock
- \$ disable/enable
- Preview
- Matrix metering
- Center-weighted metering
- Spot metering
- Highlight-weighted metering
- Bracketing burst

- Sync. release selection
- + NEF (RAW)
- Framing grid displayZoom on/off
- MY MENU
- IVI Y IVIENU
- Access top item in MY MENU
- Playback
- Protect
- Choose image area
- Image quality/size
- White balance
- Set Picture ControlActive D-Lighting
- Metering

- Flash mode/ compensation
- Focus mode/AF-area mode
- Auto bracketing
- Multiple exposure
- HDR (high dynamic range)
- Exposure delay mode
- Shutter spd & aperture lock
- Peaking highlights
- Rating
- Choose non-CPU lens number
- None


The roles played by the function buttons in movie mode can be chosen using Custom Setting g2 (**Custom control assignment**); the options available differ from those for photo mode.

First Steps

Complete the steps in this chapter before taking pictures for the first time.

Attach the Camera Strap

A strap is supplied with the camera; additional straps are available separately. Attach the strap securely to the camera eyelets.

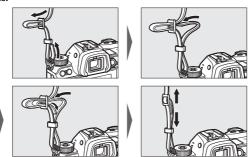

Charge the Battery

The battery can be charged using the supplied battery charger or a charging AC adapter.

The Battery and Charger

 
Read and follow the warnings and cautions in "For Your Safety" (\square viii) and "Caring for the Camera and Battery: Cautions" (\square 195).

The Battery Charger

 
Insert the supplied EN-EL15b battery and plug the charger in. Depending on the country or region, the charger comes with either an AC wall adapter or a power cable.

• AC wall adapter: Insert the AC wall adapter into the charger AC inlet (1). Slide the AC wall adapter latch as shown (2) and rotate the adapter 90 ° to fix it in place (3). Insert the battery and plug the charger in.


AC wall adapter latch







 • **Power cable**: After connecting the power cable with the plug in the orientation shown, insert the battery and plug the cable in.





The **CHARGE** lamp will flash while the battery charges. An exhausted battery will fully charge in about two hours and 35 minutes.





 
Battery charging

Charging complete


Charging AC Adapters

When inserted in the camera, EN-EL15b rechargeable Li-ion batteries will charge while the camera is connected to a charging AC adapter (the charging AC adapter cannot be used to charge EN-EL15a and EN-EL15 batteries; use the supplied MH-25a battery charger instead). An exhausted battery will fully charge in about two hours and 35 minutes. Note that in countries or regions where required, charging AC adapters are supplied with a plug adapter attached; the shape of the plug adapter varies with the country of sale.

Insert the EN-EL15b into the camera (🕮 32).



After confirming that the camera is off, connect the charging AC adapter and plug the adapter in. Insert the plug or plug adapter straight into the socket rather than at an angle, and observe the same precaution when unplugging the charging AC adapter.

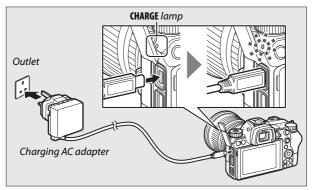

The charging AC adapter can be used to power the camera while the camera is on, but the battery will charge only while the camera is off. The camera **CHARGE** lamp lights amber while charging is in progress and turns off when charging is complete.

 
3 Unplug and disconnect the charging AC adapter when charging is complete.

 
The CHARGE Lamp

If the battery cannot be charged using the charging AC adapter, for example because the battery is not compatible or the temperature of the camera is elevated, the **CHARGE** lamp will flash rapidly for about 30 seconds and then turn off. If the **CHARGE** lamp is off and you did not observe the battery charging, turn the camera on and check the battery level.

Insert the Battery and a Memory Card

Before inserting or removing the battery or memory cards, confirm that the camera power switch is in the **OFF** position. Insert the battery in the orientation shown, using the battery to keep the orange battery latch pressed to one side. The latch locks the battery in place when the battery is fully inserted.









Battery latch

  Holding the memory card in the orientation shown, slide it straight into the slot until it clicks into place.








Removing the Battery

To remove the battery, turn the camera off and open the battery-chamber cover. Press the battery latch in the direction shown by the arrow to release the battery and then remove the battery by hand.



Removing Memory Cards

 After confirming that the memory card access lamp is off, turn the camera off, open the memory card slot cover, and press the card in to eject it (1). The card can then be removed by hand (2).



Battery Level

 
The battery level is shown in the shooting display and control panel while the camera is on.



The battery level display changes as the battery level diminishes, from from through from, from from through from from from the battery level falls to from from suspend shooting and charge the battery or ready a spare battery. When the battery is exhausted, the from will flash; charge the battery or insert a fullycharged spare battery.

Number of Exposures Remaining

When the camera is on, the shooting display and control panel show the number of photographs that can be taken at current settings (values over 1000 are rounded down to the nearest hundred; e.g., values between 1400 and 1499 are shown as 1.4 k).



Memory Cards


- Memory cards may be hot after use. Observe due caution when removing memory cards from the camera.
- Turn the power off before inserting or removing memory cards. Do not remove memory cards from the camera, turn the camera off, or remove or disconnect the power source during formatting or while data are being recorded, deleted, or copied to a computer or other device. Failure to observe these precautions could result in loss of data or in damage to the camera or card.
- Do not touch the card terminals with your fingers or metal objects.
- Do not bend, drop, or subject to strong physical shocks.
- Do not apply force to the card casing. Failure to observe this precaution could damage the card.
- Do not expose to water, heat, high levels of humidity, or direct sunlight.
- Do not format memory cards in a computer.


No Memory Card

If no memory card is inserted, a "no memory card" indicator will appear in the shooting display and [-E-] will appear in both the control panel and the shooting display.

Attach a Lens


Before attaching or removing lenses, confirm that the camera power switch is in the **OFF** position. Be careful to prevent dust from entering the camera when the lens or body cap is removed, and be sure to remove the lens cap before taking pictures. The lens generally used in this manual for illustrative purposes is a NIKKOR Z 24–70mm f/4 S.

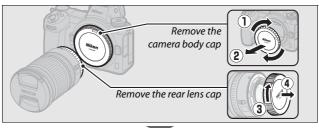

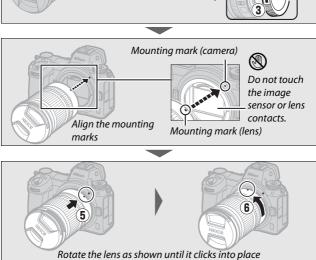

Lenses with Retractable Barrels

 Lenses with retractable barrels must be extended before use. Rotate the lens zoom ring as shown until the lens clicks into the extended position.



▼ Detaching Lenses

 
Be sure the camera is off when removing or exchanging lenses. To remove the lens, press and hold the lens release button (1) while turning the lens clockwise (2). After removing the lens, replace the lens caps and camera body cap.




Choose a Language and Set the Clock

The language option in the setup menu is automatically highlighted the first time menus are displayed. Choose a language and set the camera clock.

Turn the camera on.
Rotate the power switch to **0N**.



 2 Select Language in the setup menu. Press the MENU button to display the camera menus, then highlight Language in the setup menu and press (a) (for information on using menus, see "The MENU Button", 18).





3 Select a language.

Press (*) or (*) to highlight the desired language and press (*) (the languages available vary with the country or region in which the camera was originally purchased).

4 Select **Time zone and date**. Highlight **Time zone and date** and press **③**.



5 Choose a time zone.

Select **Time zone** and choose your current time zone (the display shows selected cities in the chosen zone and the difference between the time in the chosen zone and UTC). Press ® to



save changes and return to the time zone and date menu.

Turn daylight saving time on or off. Select Daylight saving time, then highlight On or Off and press [®]. Selecting On advances the clock by one hour.



7 Set the clock.

Select **Date and time** and use the multi selector to set the clock. Press ® when the clock is set to the current date and time (note that the camera uses a 24-hour clock).



8 Choose a date format.

To choose the order in which the year, month, and day are displayed, select **Date format**, then highlight the desired option and press .



9 Exit to shooting mode.

Press the shutter-release button halfway to exit to shooting mode.



The ⊕ ("Clock Not Set") Icon

The camera clock is powered by an independent, rechargeable power source, which is charged as necessary when the main battery is installed. Two days of charging will power the clock for about a month. If a \oplus icon flashes in the display, the clock has been reset and the date and time recorded with new photographs will not be correct. Use the **Time zone and date** > **Date and time** option in the setup menu to set the clock to the correct time and date (\square 149).

SnapBridge

Use the SnapBridge app to synchronize the camera clock with the clock on a smartphone or tablet (smart device). See SnapBridge online help for details.

Basic Photography and Playback

This chapter explains the basics of taking and viewing photos.

Taking Photographs (Mode)

 
Follow the steps below to take photographs in $\overset{\ \ \, }{\ \ \, }$ (auto) mode, an automatic "point-and-shoot" mode in which the majority of settings are controlled by the camera in response to shooting conditions.

1 Turn the camera on.The monitor and control panel will




2 Select photo mode.
Rotate the photo/movie selector to **a**.

light.



3 Select mmode.

 Pressing the mode dial lock release on top of the camera, rotate the mode dial to mm.



4 Ready the camera.

Hold the handgrip in your right hand and cradle the camera body or lens with your left. Bring your elbows in against the sides of your chest.

Framing photos in the viewfinder



Landscape (wide) orientation



Portrait (tall) orientation

Framing photos in the monitor



Landscape (wide) orientation



Portrait (tall) orientation

5 Frame the photograph. Frame the shot and use the

Frame the shot and use the subselector or multi selector to position the focus point over your subject.



Focus point

6 Focus.

To focus, press the shutter-release button halfway or press the **AF-ON** button (the AF-assist illuminator may light if the subject is poorly lit). If the camera is able to focus, the focus point will be displayed in green; otherwise, the focus point will flash red.





The AF-Assist Illuminator

Do not obstruct the AF-assist illuminator while it is lit.



 


7 Shoot.

Smoothly press the shutter-release button the rest of the way down to take the photograph (you can also take a photograph by touching the monitor: touch your subject to focus and lift your finger to release the shutter). The memory card access lamp will light while the photo is recorded to the memory card. Do not eject the memory card or remove or disconnect the power source until the lamp has gone out and recording is complete.







Memory card

The Standby Timer

If no operations are performed for about 30 seconds, the display will dim for a few seconds before the monitor, viewfinder, and control panel turn off to reduce the drain on the battery. Press the shutter-release button halfway to reactivate the display. The length of time before the standby timer expires



automatically can be selected using Custom Setting c3 (**Power off delay**) > **Standby timer**.

 
Shooting Movies (no Mode)

(auto) mode can also be used for simple, "point-and-shoot" movie recording.

Turn the camera on.
The monitor and control panel will light.




2 Select movie mode.
Rotate the photo/movie selector to \\ \overline{\overl



3 Select mmode.

 Pressing the mode dial lock release on top of the camera, rotate the mode dial to mm.



4 Start recording.

Press the movie-record button to start recording. While recording is in progress, the camera will display a recording indicator and the time remaining. The camera can be refocused at any time during recording by pressing the AF-ON button or tapping your subject in the display. Sound is recorded via the built-in microphone; do not cover the microphone during recording.



Movie-record button

 
Recording indicator

 


Time remaining

5 End recording.

Press the movie-record button again to end recording. The memory card access lamp will light while the camera finishes saving the movie to the memory card. Do not eject the memory card or remove or disconnect the power source until the lamp has gone out and recording is complete.





Memory card access lamp

The 🔯 Icon

A 📉 icon indicates that movies cannot be recorded.

In movie mode, photos can be taken without interrupting recording by pressing the shutter-release button all the way down. A con will flash in the display when a photo is taken.



Taking Photos in Movie Mode

Note that photos can be taken even when the subject is not in focus. Photos are recorded in fine ★-quality JPEG format at the dimensions currently selected for movie frame size. In continuous release modes, the frame advance rate while recording is paused varies with the option selected for Frame size/frame rate, but only one photo will be taken each time the shutter-release button is pressed while recording is in progress. Up to 50 photographs can be taken with each movie.

☑ During Shooting

Flicker, banding, or distortion may be visible in the display and in photos and movies shot under fluorescent, mercury vapor, or sodium lamps or with subjects that are in motion, particularly if the camera is panned horizontally or an object moves horizontally at high speed through the frame. Jagged edges, color fringing, *moiré*, and bright spots may also appear. Bright regions or bands may appear in some areas of the frame with flashing signs and other intermittent light sources or if the subject is briefly illuminated by a strobe or other bright, momentary light source, while noise (randomly-spaced bright pixels, fog, or lines) and unexpected colors may appear if you zoom in on the view through the lens. Flicker may occur when power aperture is used during movie recording.

Avoid pointing the camera at the sun or other strong light sources. Failure to observe this precaution could result in damage to the camera's internal circuitry.

Recording Movies

Recording ends automatically when the maximum length is reached or the memory card fills or if the lens is removed, another mode is selected, or the photo/movie selector is rotated to . Note that the built-in microphone may record sounds made by the camera or lens during vibration reduction, autofocus, or changes to aperture. Optional flash units cannot be used.

Basic Playback

Photographs and movies can be viewed on the camera.

1 Press the button.

A picture will appear in the display.



2 View additional pictures.


Press ① or ② to view additional pictures. When pictures are displayed in the monitor, you can view other pictures by flicking a finger left or right over the display. To end



playback and return to shooting mode, press the shutterrelease button halfway.

Viewing Movies

Movies are indicated by a \P icon. Tap the \bigcirc icon in the display or press \circledcirc to start playback; your current position is shown on the movie progress bar.

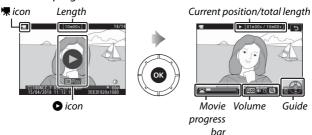

The following operations can be performed:

Operation	Description	
Pause	Pause Press 🕞 to pause playback.	
Play	Press	
Rewind/advance	Press ② to rewind, ③ to advance. Speed increases with each press, from 2× to 4× to 8× to 16×; keep the control pressed to skip to the beginning or end of the movie (the first frame is indicated by a ▶ in the top right corner of the display, the last frame by a ♣). If playback is paused, the movie rewinds or advances one frame at a time; keep the control pressed for continuous rewind or advance.	
Start slow-motion playback	Press 🕏 while the movie is paused to start slow-motion playback.	
Skip 10 s	Rotate the main command dial one stop to skip ahead or back 10 s.	
Skip to last or first frame	Rotate the sub-command dial to skip to the last or first frame.	
Adjust volume	Press [®] to increase volume, [®] (?) to decrease.	
Trim movie	To view movie editing options, pause playback and press the \boldsymbol{i} button.	
Exit	Press ♠ or ▶ to exit to full-frame playback.	
Return to shooting mode	· · · · · · · · · · · · · · · · · · ·	

Deleting Unwanted Pictures

Press the fi button to delete the current picture. Note that pictures cannot be recovered once deleted.

1 Display a picture you wish to delete. Display a photo or movie you wish to delete as described in "Basic Playback" (\$\square\text{Q}\$ 49).



2 Delete the picture.

Press the m button. A confirmation dialog will be displayed; press the m button again to delete the picture and return to playback. To exit without deleting the picture, press ...





Delete

To delete selected pictures, all pictures taken on selected dates, or all pictures in a chosen location on the memory card, use the **Delete** option in the playback menu.



Basic Settings

This chapter covers basic shooting and playback settings.

Focus

Focus can be adjusted automatically, manually, or using touch controls. How the camera focuses is governed by your choice of focus mode and AF-area mode.

Choosing a Focus Mode

The focus mode controls how the camera focuses. The focus mode can be selected using the **Focus mode** items in the i menu and the photo and movie shooting menus (\square 113, 130, 137).



At default settings, the focus mode can also be selected by holding the **Fn2** button and rotating the main command dial (\square 24).







Option	Description
AF-S Single AF	For stationary subjects. Press the shutter-release button halfway to focus. If the camera is able to focus, the focus point will be displayed in green; focus will lock while the shutter-release button is pressed halfway. If the camera fails to focus, the focus point will flash red. At default settings, the shutter can only be released if the camera is able to focus (focus priority).

Option		Description
AF-C	Continuous AF	For moving subjects. The camera focuses continuously while the shutter-release button is pressed halfway; if the subject moves, the camera will predict the final distance to the subject and adjust focus as necessary. At default settings, the shutter can be released whether or not the subject is in focus (release priority).
AF-F	Full-time AF	The camera adjusts focus continuously in response to subject movement or changes in composition. Focus locks when the shutter-release button is pressed halfway. This option is only available in movie mode.
MF	Manual focus	Focus manually (\$\square\$ 60). The shutter can be released whether or not the subject is in focus.

Autofocus

The display may brighten or darken while the camera focuses and the focus point may sometimes be displayed in green when the camera is unable to focus. The camera may be unable to focus in the following situations:

- The subject contains lines parallel to the long edge of the frame
- The subject lacks contrast
- The subject in the focus point contains areas of sharply contrasting brightness, or includes spot lighting or a neon sign or other light source that changes in brightness
- Flicker or banding appears under fluorescent, mercury-vapor, sodium-vapor, or similar lighting
- A cross (star) filter or other special filter is used
- The subject appears smaller than the focus point
- The subject is dominated by regular geometric patterns (e.g., blinds or a row of windows in a skyscraper)

AF-Area Mode

AF-area mode controls how the camera selects the focus-point for autofocus. AF-area mode can be selected using the **AF-area mode** items in the i menu and the photo and movie shooting menus (\square 113, 131, 137).



At default settings, AF-area mode can also be selected by holding the **Fn2** button and rotating the sub-command dial $(\square 24)$.







	Option	Description
[¤] PIN	Pinpoint AF	Use for pinpoint focus on a selected spot in the frame. This option is only available when photo mode is selected and Single AF is chosen for Focus mode . Focusing may be slower than with single-point AF.
[11]	Single-point AF	The camera focuses on a point selected by the user. Use with stationary subjects.
(o)	Dynamic-area AF	The camera focuses on a point selected by the user. If the subject briefly leaves the selected point, the camera will focus based on information from surrounding focus points, letting you concentrate on composition in shots of moving subjects. This option is only available when photo mode is selected and Continuous AF is chosen for Focus mode .

	Option		Description	
E WIE	wide-area AF (S)		As for Single-point AF except that wider focus	
E WIE	DE-L	Wide-area AF (L)	points are used. The focus points for Wide-area AF (L) are wider than those for Wide-area AF (S) .	
[=	=)	Auto-area AF	The camera automatically detects the subject and selects the focus area. At default settings, the camera gives priority to portrait subjects; if a portrait subject is detected, the selected subject will be indicated by a yellow border (if multiple faces are detected, you can choose your subject using the multi selector). Subject tracking (\$\square\$ 57) can be activated by pressing the \$\mathbb{\text{B}}\$ button.	

Quick Focus-Point Selection

For quicker focus-point selection, choose **Every other point** for Custom Setting a5 (**Focus points used**) to use only a quarter of the available focus points (the number of points available for **Wide-area AF (L)** does not change). If you prefer to use the sub-selector for focus-point selection, you can choose **Select center focus point** for Custom Setting f2 (**Custom control assignment**) > **Sub-selector center** to allow the center of the sub-selector to be used to quickly select the center focus point.

II Subject Tracking

When **Auto-area AF** is selected for **AF-area mode**, pressing ® enables focus tracking. The focus point will change to a targeting reticule; position the reticule over the target and either press ® again or press the **AF-ON** button to start



tracking. The focus point will track the selected subject as it moves through the frame (in the case of portrait subjects, focus will track the subject's face). To end tracking, press 8 a third time. To exit subject-tracking mode, press the 8 (?) button.

▼ Subject Tracking

The camera may be unable to track subjects if they move quickly, leave the frame or are obscured by other objects, change visibly in size, color, or brightness, or are too small, too large, too bright, too dark, or similar in color or brightness to the background.

The Touch Shutter

Touch controls can be used to focus and release the shutter. Touch the display to focus and lift your finger to release the shutter.



Tap the icon shown in the illustration to choose the operation performed by tapping the display in shooting mode. Choose from the following options:



- 🚡: Touch the display to position the focus point and focus (autofocus only; the touch shutter cannot be used to focus in manual focus mode). Focus locks while your finger remains on the display; lift your finger to release the shutter. Available only in photo mode.
- LAF: As above, except that lifting your finger from the display does not release the shutter. If auto-area AF is selected for AFarea mode, the camera will track the selected subject as it moves through the frame; to switch to a different subject, tap it in the display.
- © F: Touch shutter disabled.

 
Taking Pictures Using Touch Shooting Options

 
The shutter-release button can be used to focus and take pictures even when the iii icon is displayed to show that touch shooting options are active. Use the shutter-release button to take photographs in continuous shooting mode and during movie recording (touch shooting options can be used only to take pictures one at a time in continuous shooting mode and cannot be used to take photographs during movie recording).

 
In self-timer mode, focus locks on the selected subject when you touch the monitor and the number of shots currently selected in self-timer mode will be taken starting about 10 seconds after you lift your finger from the display.

Manual Focus

Manual focus can be used when autofocus does not produce the desired results. Position the focus point over vour subject and rotate the focus or control ring until the subject is in focus.







When the subject is in focus, the focus point will light green and the in-focus indicator () will appear in the display.

In-focus indicator	Description
•	Subject in focus.
>	Focus point is between camera and subject.
◀	Focus point is behind subject.
(flashes)	Camera unable to determine whether subject is in focus.

Focus distance indicator



In-focus indicator

 
When using manual focus with subjects not suited to autofocus, note that the in-focus indicator (
) may be displayed when the subject is not in focus. Zoom in on the view through the lens and check focus. Use of a tripod is recommended when the camera is having trouble focusing.

Lenses with Focus-Mode Selection

Manual focus can be selected using the controls on the lens.

Focal Plane Position

To determine the distance between your subject and the camera, measure from the focal plane mark (-\(\theta\)) on the camera body. The distance between the lens mounting flange and the focal plane is 16 mm (0.63 in.).



Focal plane mark

Focus Peaking

If focus peaking is enabled using Custom Setting d10 (**Peaking highlights**), objects that are in focus will be indicated by colored outlines in manual focus mode. Note that peaking highlights may not be displayed if the camera is unable to detect outlines, in which case focus can be checked using the view through the lens in the display.



Area in focus

White Balance

White balance ensures that white objects appear white, regardless of the color of the light source. The default setting (() is recommended with most light sources. If the desired results cannot be achieved with auto white balance, choose another option as described below.

White balance can be selected using the **White balance** items in the i menu and the photo and movie shooting menus (\square 98, 127, 134).



At default settings, white balance can also be selected by holding the **Fn1** button and rotating the main command dial $(\square 24)$.







When 個A (Auto), 無 (Fluorescent), 【 (Choose color temperature), or PRE (Preset manual) is selected, you can choose a sub-option by holding the Fn1 button and rotating the sub-command dial.







Option	K*	Description
₩ A Auto		White balance is adjusted automatically for optimal results with most light sources.
Keep white (reduce warm colors)		Eliminate warm color cast produced by incandescent lighting.
Keep overall atmosphere	3500- 8000	Partially preserve warm color cast produced by incandescent lighting.
Keep warm lighting colors		Preserve warm color cast produced by incandescent lighting.
☀A Natural light auto	4500- 8000	When used under natural light, this option produces colors closer to those seen by the naked eye.
☀ Direct sunlight 5200		Use with subjects lit by direct sunlight.
Cloudy	6000	Use in daylight under overcast skies.
å ⊾ Shade	8000	Use in daylight with subjects in shade.
🛧 Incandescent	3000	Use under incandescent lighting.
Fluorescent		
Sodium-vapor lamps	2700	
Warm-white fluorescent	3000	Use under fluorescent lighting;
White fluorescent	3700	choose bulb type according to light
Cool-white fluorescent	4200	source.
Day white fluorescent	5000	
Daylight fluorescent	6500	
High temp. mercury-vapor	7200	
₩B 🗲 Flash	5400	Use with optional flash units.

^{*} Color temperature. All values are approximate and do not reflect fine-tuning (if applicable).

	Option	K*	Description
K	Choose color temperature	2500- 10,000	Choose color temperature from list of values or by holding Fn1 button and rotating sub-command dial.
PRE	Preset manual	_	Measure white balance for subject or light source (press and hold Fn1 button to enter direct measurement mode, 101), copy white balance from existing photograph, or choose existing value by holding Fn1 button and rotating sub-command dial.

^{*} Color temperature. All values are approximate and do not reflect fine-tuning (if applicable).

The photo info for pictures shot using auto white balance lists the color temperature selected by the camera at the time the picture was taken. You can use this as reference when choosing a value for Choose color temperature. To view shooting data during playback, go to



Playback display options in the playback menu and select Shooting data.

▼ ★ A ("Natural Light Auto")

*A (Natural light auto) may not produce the desired results under artificial light. Choose A (Auto) or an option that matches the light source.

▼ Studio Flash Lighting

 
(Auto) may not produce the desired results with large studio flash units. Use preset white balance or set white balance to \$\frac{120}{3}\$ (Flash) and use fine-tuning to adjust white balance.

White Balance Fine-Tuning

At settings other than **Choose color temperature**, white balance can be fine-tuned using the **White balance** items in the i menu and the photo and movie shooting menus (\square 99).

Color Temperature

The perceived color of a light source varies with the viewer and other conditions. Color temperature is an objective measure of the color of a light source, defined with reference to the temperature to which an object would have to be heated to radiate light in the same wavelengths. While light sources with a color temperature in the neighborhood of 5000–5500 K appear white, light sources with a lower color temperature, such as incandescent light bulbs, appear slightly yellow or red. Light sources with a higher color temperature appear tinged with blue.



In general, choose lower values if your pictures have a red cast or to intentionally make colors colder, higher values if your pictures are tinged blue or to intentionally make colors warmer.

Silent Photography

To enable the electronic shutter and eliminate the noise and vibration caused by operation of the mechanical shutter, select **On** for **Silent photography** in the photo shooting menu.

An icon is displayed while silent photography is in effect. When the shutter is released, the display will briefly go dark to signal that a photo has be taken.





Enabling silent photography changes the frame advance rates for continuous release modes (\$\subset\$ 83) and disables some features, including the flash, beep speaker, long exposure noise reduction, and the electronic front-curtain shutter.

Silent Photography

Although the noise of the mechanical shutter is muted, other sounds may still be audible, for example during autofocus or if the MENU or button is pressed when an option other than **Off** is selected for **Vibration reduction**. During silent photography, flicker, banding, or distortion may be visible in the display and in the final picture under fluorescent, mercury vapor, or sodium lamps or with subjects that are in motion, particularly if the camera is panned horizontally or an object moves horizontally at high speed through the frame. Jagged edges, color fringing, *moiré*, and bright spots may also appear. Bright regions or bands may appear in some areas of the frame with flashing signs and other intermittent light sources or if the subject is briefly illuminated by a strobe or other bright, momentary light source.

Rating Pictures

 
Selected pictures can be rated or marked as candidates for later deletion. Ratings can also be viewed in Capture NX-D and ViewNX-i. Protected pictures cannot be rated.

1 Select an image.

Press the **b** button to start playback and display a picture you want to rate.



2 Display the *i* menu. Press the *i* button to view the *i* menu.



3 Select Rating. Highlight Rating and press ®.



4 Choose a rating.

Rotate the main command dial to choose a rating of from zero to five stars, or select fato mark the picture as a candidate for later deletion. Press to complete the operation.



Protecting Pictures from Deletion

Use the **Protect** option in the i menu to protect pictures from accidental deletion. Note that this does NOT prevent pictures being deleted when the memory card is formatted.

 
1 Select an image.

Press the **b** button to start playback and display a picture you want to protect.



$\mathbf{2}$ Display the i menu.

Press the *i* button to view the *i* menu.



3 Select Protect.

Highlight **Protect** and press @. Protected pictures are indicated by a icon; to remove protection, display the picture and repeat Steps 2-3.



Removing Protection from All Pictures

To remove protection from all pictures in the folder or folders currently selected for Playback folder in the playback menu, select Unprotect all in the i. menu.

 
Shooting Controls

This chapter describes controls that can be used during shooting.

The Mode Dial

Press the mode dial lock release and rotate the mode dial to choose from the following modes:

 Auto: A "point-and-shoot" mode in which the camera sets exposure and hue
 41, 45).



Mode dial lock release

- **P Programmed auto**: The camera sets shutter speed and aperture for optimal exposure. Recommended for snapshots and in other situations in which there is little time to adjust camera settings.
- **S Shutter-priority auto**: You choose the shutter speed; the camera selects the aperture for best results. Use to freeze or blur motion.
- A Aperture-priority auto: You choose the aperture; the camera selects the shutter speed for best results. Use to blur backgrounds or bring both foreground and background into focus.
- M Manual: You control both shutter speed and aperture. Set shutter speed to "bulb" or "time" for long time-exposures.
- **U1, U2, U3 User settings modes**: Assign frequently-used settings to these positions for quick recall.

P: Programmed Auto

In this mode, the camera automatically adjusts shutter speed and aperture according to a built-in program to ensure optimal exposure in most situations. Different combinations of shutter speed and aperture that



produce the same exposure can be selected by rotating the main command dial ("flexible program"). While flexible program is in effect, a flexible program indicator (**) is displayed. To restore default shutter speed and aperture settings, rotate the main command dial until the indicator is no longer displayed, choose another mode, or turn the camera off.

S: Shutter-Priority Auto

In shutter-priority auto, you choose the shutter speed while the camera automatically selects the aperture that will produce the optimal exposure. To choose a shutter speed, rotate the main command dial. Shutter speed can be set to "×200" or to values between 30 s and 1/5000 s and can be locked at the selected setting (12) 146).

 


Monitor



A: Aperture-Priority Auto


In aperture-priority auto, you choose the aperture while the camera automatically selects the shutter speed that will produce the optimal exposure. To choose an aperture between the minimum and maximum values for the lens, rotate the sub-command dial. Aperture can be locked at the selected setting (146).






M: Manual

  In manual exposure mode, you control both shutter speed and aperture. Rotate the main command dial to choose a shutter speed, and the sub-command dial to set aperture. Shutter speed can be set to " $\times 200$ " or to values between 30 s and $\frac{1}{5000}$ s, or the shutter can be held open indefinitely for a long time-exposure (\square 76). Aperture can be set to values between the minimum and maximum values for the lens. Use the exposure indicators to check exposure.





Shutter speed and aperture can be locked at the selected settings.

Exposure Indicators

The exposure indicators show whether the photograph would be under- or over-exposed at current settings. Depending on the option chosen for Custom Setting b1 (**EV steps for exposure cntrl**), the amount of under- or overexposure is shown in increments of $\frac{1}{3}$ or $\frac{1}{2}$ EV. If the limits of the exposure metering system are exceeded, the displays will flash.

	Custom Setting b1 set to "1/3 step"		
	Optimal exposure	Underexposed by ⅓ EV	Overexposed by over 3 EV
Monitor	+	+ 	**************************************
Viewfinder	+	+	t

Auto ISO Sensitivity Control (Mode M)

If auto ISO sensitivity control (\bigcirc 79) is enabled, ISO sensitivity will automatically be adjusted for optimal exposure at the selected shutter speed and aperture.

 
User Settings: U1, U2, and U3 Modes

Assign frequently-used settings to the **U1**, **U2**, and **U3** positions on the mode dial.

II Saving User Settings

Follow the steps below to save settings:

1 Select a mode.
Rotate the mode dial to the desired mode.



2 Adjust settings.

Choose a focus point and make the desired adjustments to flexible program (mode P), shutter speed (modes S and M), exposure and flash compensation, aperture (modes A and M), and settings in the photo shooting, movie shooting, and Custom Settings menus.

3 Select Save user settings.
Highlight Save user settings in the setup menu and press ③.



4 Select a position.

 
Highlight Save to U1, Save to U2, or Save to U3 and press ③.

5 Save user settings.

Highlight **Save settings** and press 8 to assign the settings selected in Steps 1 and 2 to the mode dial position selected in Step 4.

■■ Recalling User Settings

Rotating the mode dial to **U1**, **U2**, or **U3** recalls the settings last saved to that position.



■■ Resetting User Settings

To reset settings for U1, U2, or U3 to default values:

1 Select Reset user settings.
Highlight Reset user settings in the setup menu and press ③.



- 2 Select a position.
 Highlight Reset U1, Reset U2, or Reset U3 and press .
- 3 Reset user settings.

 Highlight Reset and press ® to restore default settings for the selected position. The camera will function in mode P.

✓ User Settings

The following cannot be saved to U1, U2, or U3.

Photo shooting menu:

- Storage folder
- Choose image area
- Manage Picture Control
- Multiple exposure Interval timer shooting
- Time-lapse movie
- Focus shift shooting

Movie shooting menu:

- Choose image area
- Manage Picture Control

Long Time-Exposures (Mode M)

Select the following shutter speeds for long time-exposures of moving lights, the stars, night scenery, or fireworks.

- Bulb: The shutter remains open while the shutter-release button is held down.
- Time: The exposure starts when the shutter-release button is pressed and ends when the button is pressed a second time.



 
- Shutter speed: Bulb (35-second exposure)
- Aperture: f/25

To prevent blur, mount the camera on a tripod or use an optional wireless remote controller (**Time** only) or remote cord. Nikon also recommends using a fully-charged battery or an optional AC adapter and power connector to prevent loss of power while the shutter is open. Note that noise (bright spots, randomly-spaced bright pixels, or fog) may be present in long exposures. Bright spots and fog can be reduced by choosing **On** for **Long exposure NR** in the photo shooting menu.

1 Ready the camera.


Mount the camera on a tripod or place it on a stable, level surface.

2 Select mode M.
Rotate the mode dial to M.



3 Choose a shutter speed.

 Rotate the main command dial to choose a shutter speed of **Bulb** or **Time**.



4 Open the shutter.

Bulb: After focusing, press the shutter-release button all the way down. Keep the shutter-release button pressed until the exposure is complete.

Time: Press the shutter-release button all the way down.

5 Close the shutter.

Bulb: Take your finger off the shutter-release button.

Time: Press the shutter-release button all the way down.

The ISO (ISO Sensitivity) Button

Hold the **ISO** button and rotate the main command dial to adjust the camera's sensitivity to light according to the amount of light available. The current setting is shown in the shooting display and control panel. Choose from settings of from ISO 64 to ISO 25600; settings of from about 0.3 to 1 EV below ISO 64 and 0.3 to 2 EV above ISO 25600 are also available for special situations. To mode offers an additional **ISO-A** (auto) option.

ISO button

Main command dial



ISO Sensitivity

The higher the ISO sensitivity, the less light needed to make an exposure, allowing faster shutter speeds or smaller apertures, but the more likely the image is to be affected by noise (randomly-spaced bright pixels, fog, or lines). Noise is particularly likely at settings between **Hi 0.3** and **Hi 2**.

Hi 0.3-Hi 2

The settings **Hi 0.3** through **Hi 2** correspond to ISO sensitivities 0.3–2 EV over ISO 25600 (ISO 32000–102400 equivalent).

Lo 0.3-Lo 1

The settings **Lo 0.3** through **Lo 1** correspond to ISO sensitivities 0.3–1 EV below ISO 64 (ISO 50–32 equivalent). Use for larger apertures or slow shutter speeds when lighting is bright. Highlights may lose some detail; in most cases, ISO sensitivities of ISO 64 or above are recommended.

Auto ISO Sensitivity Control

 
In modes **P**, **S**, **A**, and **M**, auto ISO sensitivity control can be enabled or disabled by holding the **ISO** button and rotating the sub-command dial. When auto ISO sensitivity control is enabled, ISO sensitivity will automatically be adjusted if optimal exposure cannot be achieved at the value selected with the **ISO** button and main command dial. To prevent ISO sensitivity going too high, you can choose an upper limit of from ISO 100 to Hi 2 using the **ISO sensitivity**



ISO button

settings > Maximum sensitivity item in the photo shooting menu.

When auto ISO sensitivity control is enabled, the shooting display will show **ISO AUTO** and control panel **ISO-A**. When sensitivity is altered from the value selected by the user, the altered value is shown in the display.



■ Auto ISO Sensitivity Control

If the ISO sensitivity selected by the user is higher than that chosen for **Maximum sensitivity** when auto ISO sensitivity control is enabled, the value selected by the user will be used instead. When a flash is used, shutter speed will be restricted to values between the speed selected for Custom Setting e1 (**Flash sync speed**) and the speed selected for Custom Setting e2 (**Flash shutter speed**).

The (Exposure Compensation) Button

In modes other than $\overset{\text{\tiny MD}}{\bullet}$, exposure compensation can be used to alter exposure from the value suggested by the camera, making pictures brighter or darker. Choose from values between -5 EV (underexposure) and +5 EV (overexposure) in increments of 1/3 EV. In general, positive values make the subject brighter while negative values make it darker.







-1 EV

No exposure compensation

 
To choose a value for exposure compensation, press the **2** button and rotate the main command dial until the desired value is displayed.





Main command dial

At values other than ± 0.0 , a \square icon will be displayed after you release the \square button. The current value for exposure compensation can be confirmed in the exposure indicator by pressing the \square button.



Normal exposure can be restored by setting exposure compensation to ± 0 . Exposure compensation is not reset when the camera is turned off.

Mode M

In mode M, exposure compensation affects only the exposure indicator; shutter speed and aperture do not change.

▼ Flash Photography

When an optional flash unit is used, exposure compensation affects both flash level and exposure, altering the brightness of both the main subject and the background. Custom Setting e3 (**Exposure comp. for flash**) can be used to restrict the effects of exposure compensation to the background only.

The 🖳 ∕் (Release Mode/Self-Timer) Button







Control panel

The following options are available in photo mode.

	Option	Description
S Single frame	The camera takes one photograph each time the	
	shutter-release button is pressed.	
		While the shutter-release button is held down, the
	밀L Continuous L	camera records 1–5 frames per second. The frame
밀L		rate can be chosen by rotating the sub-command
		dial when Continuous L is highlighted in the
	release-mode menu.	
밀H Continuous H	While the shutter-release button is held down, the	
	camera records up to about 5.5 frames per second.	

Option	Description
밀H [*] Continuous (extended)	While the shutter-release button is held down, the camera records up to about 9 frames per second. Focus and exposure are adjusted to maintain a high frame rate; optional flash units cannot be used. Flicker reduction has no effect.
ॐ Self-timer	Take pictures with the self-timer (\$\square\$ 85).

▼ The Shooting Display

In continuous low-speed and continuous high-speed modes, the display is updated in real time even while shooting is in progress.

Frame Advance Rate

Frame advance rate varies with camera settings. The approximate maximum rates at different settings are given in the table below.

			Silent pho	tography
Release mode	lmage quality	Bit depth	Off	0n
	JPEG/TIFF	_		4 fps
Continuous L	NEF (RAW)/	12	5 fps	
	NEF (RAW) + JPEG	14		3.5 fps
	JPEG/TIFF	_	5.5 fps	4 fps
Continuous H	NEF (RAW)/ NEF (RAW) + JPEG	12	o.J ips	t ips
		14	5 fps	3.5 fps
Continuous H	JPEG/TIFF	_	9 fps	8 fps
(extended)	NEF (RAW)/	12	2 ih2	oips
(extended)	NEF (RAW) + JPEG	14	8 fps	6.5 fps

The Memory Buffer

The camera is equipped with a memory buffer for temporary storage, allowing shooting to continue while photographs are being saved to the memory card. The frame rate will drop when the buffer is full (**r00**). The approximate number of images that can be stored in the buffer at current settings is shown in the exposure-count displays while the shutter-release button is pressed halfway.



While photographs are being recorded to the memory card, the memory card access lamp will light. Depending on shooting conditions and memory card performance, recording may take from a few seconds to a few minutes. Do not remove the memory card or remove or disconnect the power source until the access lamp has gone out. If the camera is switched off while data remain in the buffer, the power will not turn off until all images in the buffer have been recorded. If the battery is exhausted while images remain in the buffer, the shutter release will be disabled and the images transferred to the memory card.

In movie mode, you can choose the operation performed when the shutter-release button is pressed (
45). Regardless of the option selected, a maximum of 50 photos can be taken with each movie.

	Option	Description
S	Single frame	The camera takes one photograph each time the shutter-release button is pressed.
밀	Continuous	The camera takes photographs for up to 3 s at a time while the shutter-release button is held down, up to the maximum displayed when the shutter-release button is pressed halfway. The frame rate varies with the option selected for Frame size/frame rate in the movie shooting menu. Only one photograph can be taken at a time while movie recording is in progress.

The Self-Timer

 
In self-timer mode, pressing the shutter-release button starts a timer, and a photo is taken when the timer expires.

1 Select self-timer mode.

Keeping the □ (③) button pressed, rotate the main command dial to highlight ③ (self-timer).



2 Choose the shutter-release delay. Rotate the sub-command dial to select the shutter-release delay and press ⊛.



3 Frame the photograph and focus. If AF-S is selected for focus mode, the timer will not start unless the camera is able to focus.



4 Start the timer.

Press the shutter-release button all the way down to start the timer. The self-timer lamp will start to flash, stopping two seconds before the photograph is taken.



 


Taking Multiple Shots

Use Custom Setting c2 (**Self-timer**) to choose the number of shots taken, and the interval between the shots taken, when the self-timer finishes counting down.

The Sub-Selector

Use the sub-selector as a joystick to select the focus point, or press the center to lock focus and/or exposure.



Focus-Point Selection

Use the sub-selector to select the focus point in the shooting display. Focus-point selection is not available when auto-area AF is selected for AF-area mode (\$\square\$ 55).



Focus point

Autoexposure (AE) Lock

Pressing the center of the sub-selector locks exposure at the current setting. AE lock can be used to recompose shots after metering a subject that will not be in the selected focus area in the final composition, and is particularly effective with spot or center-weighted metering.

Focus Lock

The center of the sub-selector can be used to lock focus on the current subject when **AF-C** is selected for focus mode. When using focus lock, choose an AF-area mode other than auto-area AF.

■■ Locking Focus and Exposure

Follow the steps below to use focus and exposure lock.

1 Set focus and exposure.

Position the subject in the selected focus point and press the shutter-release button halfway to set focus and exposure. Check that the focus point is displayed in green.

2 Lock focus and exposure.

With the shutter-release button pressed halfway, press the center of the sub-selector to lock both focus and exposure (an **AE-L** icon will be displayed).

Shutter-release button



Sub-selector



3 Recompose the photograph and shoot.

Focus will remain locked between shots if you keep the shutter-release button pressed halfway (AF-S) or keep the center of the sub-selector pressed, allowing several photographs in succession to be taken at the same focus setting.





Do not change the distance between the camera and the subject while focus lock is in effect. If the subject moves, focus again at the new distance.

AF-S

When AF-S is selected for focus mode, focus will lock while the shutterrelease button is pressed halfway (focus will also lock while the center of the sub-selector is pressed).

▼ Using the Shutter-Release Button for Exposure Lock

If **On (half press)** is selected for Custom Setting c1 (**Shutter-release button AE-L**), exposure will lock while the shutter-release button is pressed halfway.

 


The i Button

Pressing the \boldsymbol{i} button displays the \boldsymbol{i} menu: a menu of frequently-used settings for the current mode.

Using the i Menu

Press the *i* button to display the *i* menu.



Highlight items using the multi selector and press \otimes to view options, then highlight an option and press \otimes to select it and return to the \boldsymbol{i} menu (to exit to the previous display without changing settings, press the \boldsymbol{i} button).







The Command Dials


You can also adjust settings for highlighted items by rotating the main command dial to choose an option and then pressing (suboptions, if available, can be selected by rotating the sub-command dial; in some cases, the same options can be selected using either dial). The current option will



also be selected if you highlight another item with the multi selector or press the shutter-release button halfway.

The Photo-Mode i Menu

At default settings, the following items appear in the \boldsymbol{i} menu for photo mode.

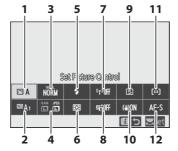

1 Set Picture Control93	7 Wi-Fi connection109
2 White balance98	8 Active D-Lighting110
3 Image quality104	9 Release mode111
4 Image size106	10 Vibration reduction 112
5 Flash mode107	11 AF-area mode113
6 Metering 108	12 Focus mode 113

Set Picture Control

Choose a Picture Control according to the subject or type of scene.

	Option	Description	
⊡ A	Auto	The camera automatically adjusts hues and tones based on the Standard Picture Control. The complexions of portrait subjects will appear softer, and such elements as the foliage and sky in outdoor shots more vivid, than in pictures taken with the Standard Picture Control.	
⊠SD	Standard	Standard processing for balanced results. Recommended for most situations.	
	Neutral	Minimal processing for natural results. Choose for photographs that will later be processed or retouched.	
⊡VI	Vivid	Pictures are enhanced for a vivid, photoprint effect. Choose for photographs that emphasize primary colors.	
⊠MC	Monochrome	Take monochrome photographs.	
Process portraits for skin with natural texture and a rounded feel.			
□LS Landscape Produces vibrant landscapes and cityscapes		Produces vibrant landscapes and cityscapes.	
⊠FL	Flat	Details are preserved over a wide tone range, from highlights to shadows. Choose for photographs that will later be extensively processed or retouched.	
图01- 图20	Creative Picture Control	Choose from the following Picture Controls, each a unique combination of hue, tone, saturation, and other settings tuned for a particular effect: Dream, Morning, Pop, Sunday, Somber, Dramatic, Silence, Bleached, Melancholic, Pure, Denim, Toy, Sepia, Blue, Red, Pink, Charcoal, Graphite, Binary, and Carbon.	

To view Picture Control settings, highlight a Picture Control and press . Changes to settings can be previewed in the display (\$\Pi\$ 95).

The current Picture Control is indicated by an icon in the display during shooting.





■ Modifying Picture Controls

Picture Controls can be modified to suit the scene or the photographer's creative intent. Highlight **Set Picture Control** in the i menu and press \otimes to display the Picture Control list, then highlight a Picture Control and press $\widehat{\ }$ to display



 
Picture Control settings. Press ② or ③ to highlight the desired setting and press ③ or ③ to choose a value in increments of 1, or rotate the sub-command dial to choose a value in increments of 0.25 (the options available vary with the Picture Control selected). Default settings can be restored by pressing the ⑥ button.

After adjusting settings to your satisfaction, press ® to put the changes into effect and return to the *i* menu. Picture Controls that have been modified from default settings are indicated by an asterisk ("*").



▼ Previous Settings

The Δ indicator under the value display in the Picture Control setting menu indicates the previous value for the setting.



✓ The " ✓ A Auto" Picture Control

If △ A Auto is selected for Set Picture Control, settings can be adjusted in the range A-2 to A+2.

The following settings are available:

Option	Description		
Effect level	Mute or heighten the effect of Creative Picture Control.		
Quick sharp	Quickly adjust levels for balanced Sharpening , Midrange sharpening , and Clarity , or select A to let the camera adjust sharpening automatically. You can also		
Sharpening	make individual adjustments to the following parameters: • Sharpening: Control the sharpness of details and outlines.		
Mid-range sharpening	 Mid-range sharpening: Adjust sharpness according the fineness of the patterns and lines in mid-tones affected by Sharpening and Clarity. 		
Clarity	Clarity: Adjust overall sharpness and the sharpness of thicker outlines without affecting brightness or dynamic range.		
Contrast	Adjust contrast manually or select A to let the camera adjust contrast automatically.		
Brightness	Raise or lower brightness without loss of detail in highlights or shadows.		
Saturation	Control the vividness of colors. Select A to adjust saturation automatically according to the type of scene.		
Hue	Adjust hue.		
Filter effects	Simulate the effect of color filters on monochrome pictures.		
Toning	Choose the tint used in monochrome pictures. Pressing when an option other than B&W (black-and-white) is selected displays saturation options.		

"A" (Auto)

Results for auto (A) vary with exposure and the position of the subject in the frame.

Filter Effects

Choose from the following:

Mode	Setting	
Y (yellow)	These options enhance contrast and can be used to tone down the brightness	
O (orange)	of the sky in landscape photographs. Orange produces more contrast than	
R (red)	yellow, red more contrast than orange.	
G (green)	Green softens skin tones and can be used for portraits.	

White Balance

Adjust white balance (for more information, see "White Balance", **4** 62).

Option	Option	
₩B A Auto	# Fluorescent	
Keep white (reduce warm colors)	Sodium-vapor lamps	
Keep overall atmosphere	Warm-white fluorescent	
Keep warm lighting colors	White fluorescent	
☀ A Natural light auto	Cool-white fluorescent	
★ Direct sunlight	Day white fluorescent	
Cloudy	Daylight fluorescent	
☆ ⊾ Shade	High temp. mercury-vapor	
♣ Incandescent	Flash Choose color temperature	
	PRE Preset manual	

Pressing when **Auto** or **Fluorescent** is highlighted displays sub-options for the highlighted item.



 
The current white balance option is indicated by an icon in the display during shooting.



■■ Fine-Tuning White Balance

Selecting **White balance** in the *i* menu displays a list of white balance options. If an option other than **Choose color temperature** is highlighted, fine-tuning options can be displayed by pressing **①**. Any changes to fine-tuning options can be previewed in the display.





Increase amber

Increase magenta

 
Tap the arrows in the display or use the multi selector to fine-tune white balance, or rotate the main or sub-command dial to fine-tune white balance respectively on the Amber–Blue or Green–Magenta axis. Press ® to save settings and return to the ##. menu.

An asterisk ("\mathbf{x}") next to the white balance icon in the shooting display indicates that fine-tuning is in effect.



■ Choosing a Color Temperature

Selecting **White balance** in the i menu displays a list of white balance options. When **Choose color temperature** is highlighted, color temperature options can be viewed by pressing $\widehat{\bullet}$.





Amber–Blue axis

Value for **G**reen–**M**agenta axis

Press $\textcircled{\bullet}$ or $\textcircled{\bullet}$ to highlight digits on the Amber–Blue or Green–Magenta axis and press $\textcircled{\bullet}$ or $\textcircled{\bullet}$ to change. Press $\textcircled{\otimes}$ to save settings and return to the \emph{i} menu. If a value other than zero is selected for the Green–Magenta axis, an asterisk (" \bigstar ") will be displayed next to the white balance icon.

Choose Color Temperature

Note that the desired results will not be obtained with flash or fluorescent lighting. Choose $\square 4$ (Flash) or $\not \coloneqq$ (Fluorescent) for these sources. With other light sources, take a test shot to determine if the selected value is appropriate.

■ Preset Manual

Preset manual is used to record and recall up to six custom white balance settings for shooting under mixed lighting or to compensate for light sources with a strong color cast. Follow the steps below to measure a value for preset manual white balance.

1 Display white balance presets. Highlight Preset manual in the *i* menu white balance display and press \bigoplus to display a list of white balance presets.



2 Select a preset.

Highlight the desired white balance preset (d-1 to d-6) and press

to select the highlighted preset and return to the

menu.



Protected Presets

Presets indicated by a On icon are protected and cannot be changed.

3 Select direct measurement mode. Highlight White balance in the i menu and press and hold w until the PRE icons in the shooting display and control panel start to flash and white balance target (□) is displayed at the selected focus point.





4 Measure white balance.

To measure white balance, tap a white or gray object, or use the multi selector to position the □ over a white or gray area of the display and either press ⊗ or press the shutter-



release button all the way down (note that the \square cannot be repositioned when an optional flash unit is attached, in which case you will need to measure white balance with a white or gray object positioned in the center of the frame).

If the camera is unable to measure white balance, a message will be displayed. Try measuring white balance again with a different target.



5 Exit direct measurement mode.

Press the *i* button to exit direct measurement mode.

Measuring Preset Manual White Balance

Preset manual white balance cannot be measured while HDR or multiple exposure shooting is in progress.

☑ Direct Measurement Mode

Direct measurement mode will end if no operations are performed in the time selected for Custom Setting c3 (**Power off delay**) > **Standby timer**.

Managing Presets

The **White balance** > **Preset manual** option in the photo shooting menu can be used to copy white balance from an existing photograph to a selected preset, add comments, or protect presets.

▼ Preset Manual: Selecting a Preset

To choose a preset, select White balance > Preset manual in the photo shooting menu, then highlight a preset and press . If no value currently exists for the selected preset, white balance will be set to 5200 K, the same as Direct sunlight.



Image Quality

Choose a file format for photographs.

Option	Description		
NEF (RAW) + JPEG fine★	Record two copies of each photo: an NEF		
NEF (RAW) + JPEG fine	(RAW) image and a JPEG copy. Only the JPEG		
NEF (RAW) + JPEG normal★	copy is displayed during playback, but		
NEF (RAW) + JPEG normal	deleting the JPEG copy also deletes the NEF		
NEF (RAW) + JPEG basic★	(RAW) image. The NEF (RAW) image can only		
NEF (RAW) + JPEG basic	be viewed using a computer.		
NEF (RAW)	Record RAW data from the image sensor with no additional processing.		
JPEG fine★	Record photos in JPEG format. Compression		
JPEG fine	increases and file size decreases as quality		
JPEG normal★	progresses from "fine" through "normal" to		
JPEG normal	"basic". Choose options with ★ to maximize quality, options without ★ to ensure that all		
JPEG basic★			
JPEG basic	images have more or less the same file size.		
TIFF (RGB)	Record photos in uncompressed TIFF-RGB format at a bit depth of 8 bits per channel (24-bit color).		

The option currently selected is shown in the display during shooting.



NEF (RAW)

Information on camera settings such as exposure compensation, white balance, and Picture Controls are stored separately from the raw data from the image sensor and can later be modified as often as desired with no deterioration in image quality. You can either copy the images to a computer and adjust settings using Nikon's ViewNX-i or Capture NX-D software, which can be downloaded free of charge from the Nikon Download Center, or use the **NEF (RAW) processing** item in the camera retouch menu. NEF (RAW) images are recorded in NEF format (extension "*.nef").

Image Size

Choose the size at which photographs are recorded.

Option		Description	
	Large	Choose the size for photos recorded in NEF (RAW)	
NEF (RAW)	Medium	format. NEF (RAW) is available only when an NEF	
	Small	(RAW) option is selected for image quality.	
	Large	Choose the size for photos recorded in JPEG or TII format.	
JPEG/TIFF	Medium		
	Small	iorniat.	

The option currently selected is shown in the display during shooting.



The physical dimensions of the photos in pixels varies with the option selected for **Choose image area**.

		lmage size		
		Large	Medium	Small
	FX (36 × 24)	8256 × 5504	6192 × 4128	4128 × 2752
lmage area	DX (24 × 16)	5408 × 3600	4048 × 2696	2704 × 1800
	5:4(30×24)	6880 × 5504	5152 × 4120	3440 × 2752
	1:1(24×24)	5504 × 5504	4128 × 4128	2752 × 2752
	16:9(36×20)	8256 × 4640	6192 × 3480	4128 × 2320

Flash Mode

Choose a flash mode for optional flash units. The options available depend on the mode selected with the mode dial.

	Option	Available in		Option	Available in
*	Fill flash		F REAR	Rear-curtain sync	P, S, A, M
\$⊗	Red-eye reduction	♣, P, S, A, M	③	Flash off	Ã, P, S, A, M
‡⊚ srow	Slow sync + red-eye	P, A			
£	Claureune				

The option currently selected is indicated by an icon in the display during shooting.



Metering

Metering determines how the camera sets exposure. The following options are available:

Option		Description
Ø	Matrix metering	The camera meters a wide area of the frame and sets exposure according to tone distribution, color, composition, and distance for results close to those seen by the naked eye.
the greatest weight to an area in the center frame, the size of which can be chosen usin Custom Setting b3 (Center-weighted area) is the classic meter for portraits and is also recommended when using filters with an		
The camera meters a \$4 mm circle (equivalent approximately 1.5% of the frame) centered or current focus point, making it possible to me off-center subjects (if auto-area AF is in effect camera will instead meter the center focus possible to me off-center subjects (if auto-area AF is in effect camera will instead meter the center focus possible to me off-center subjects (if auto-area AF is in effect camera will instead meter the center focus possible to me off-center subjects (if auto-area AF is in effect camera will instead meters a \$4 mm circle (equivalent approximately 1.5% of the frame) centered or current focus point, making it possible to me off-center subjects (if auto-area AF is in effect camera will instead meters a \$4 mm circle (equivalent approximately 1.5% of the frame) centered or current focus point, making it possible to me off-center subjects (if auto-area AF is in effect camera will instead meter the center focus point, making it possible to me off-center subjects (if auto-area AF is in effect camera will instead meter the center focus point, making it possible to me off-center subjects (if auto-area AF is in effect camera will instead meter the center focus point approximately approxi		The camera meters a $\phi 4$ mm circle (equivalent to approximately 1.5% of the frame) centered on the current focus point, making it possible to meter off-center subjects (if auto-area AF is in effect, the camera will instead meter the center focus point). Spot metering ensures that the subject will be correctly exposed, even when the background is much brighter or darker.
•*	Highlight- weighted metering	The camera assigns the greatest weight to highlights. Use this option to reduce loss of detail in highlights, for example when photographing spotlit performers on-stage.

The option currently selected is indicated by an icon in the display during shooting.



Wi-Fi Connection

Enable or disable Wi-Fi. Enable Wi-Fi to establish wireless connections to smart phones or tablets running the SnapBridge app, which can then be used to download pictures from the camera or control the camera and take pictures remotely. See the *Network Guide* and the SnapBridge app online help for more information.

The camera displays a Wi-Fi icon when Wi-Fi is enabled.



To turn Wi-Fi off, highlight **Wi-Fi connection** in the *i* menu and press ®. If Wi-Fi is currently enabled, a **Close Wi-Fi connection** prompt will be displayed; press ® to end the connection.

Active D-Lighting

Active D-Lighting preserves details in highlights and shadows, creating photographs with natural contrast. Use for high-contrast scenes, for example when photographing brightly lit outdoor scenery through a door or window or taking pictures of shaded subjects on a sunny day. It is most effective when used with matrix metering.






Off

轁 A Auto

Option	Description	
暗 A Auto	The camera automatically adjusts Active D-Lighting in response to shooting conditions (in mode M, however, 時 A Auto is equivalent to 時 Normal).	
暗 H Extra high		
暗 H High	Choose the amount of Active D-Lighting performed from 畸 H* Extra high, 畸 H High, 畸 N Normal, and	
₽₫ N Normal	而可用語用 Extra nigh, 語用 nigh, 語 N Normai, and 語上 Low.	
醋L Low		
₽₫OFF Off	Active D-Lighting off.	

 The option currently selected is indicated by an icon in the display during shooting.



Active D-Lighting

Noise (randomly-spaced bright pixels, fog, or lines) may appear in photos taken with Active D-Lighting. Uneven shading may be visible with some subjects. Active D-Lighting does not apply at high ISO sensitivities (Hi 0.3–Hi 2).

Release Mode

Choose the operation performed when the shutter-release button is pressed all the way down. For more information, see "The \square / \otimes (Release Mode/Self-Timer) Button" (\square 82).

Option	Option	
S Single frame	밀 H Continuous H (extended)	
밀L Continuous L	Self-timer	
및 H Continuous H		

When **Continuous L** or **Self-timer** is highlighted, additional options can be displayed by pressing $\widehat{\phi}$.

Pressing $\widehat{\Leftrightarrow}$ when **Continuous L** is highlighted displays frame advance rate options.



Pressing when **Self-timer** is highlighted displays options for the shutter-release delay and the number of shots taken when the timer expires.



The current release mode is shown by icons in the shooting display and control panel.



Vibration Reduction

Choose whether to enable vibration reduction. The options available vary with the lens.

Option		Description
«ω»ΩΝ On		Choose for enhanced vibration reduction when
(Norma	Normal	photographing static subjects.
((4))SPT	Snort	Choose when photographing athletes and other
(W)311	Jport .	subjects that are moving rapidly and unpredictably.
(4))OFF	0ff	Vibration reduction off.

Options other than **Off** are shown by an icon in the display during shooting.



Vibration Reduction

Vibration reduction may be unavailable with some lenses. When using vibration reduction, wait for the image in the display to stabilize before shooting. With some lenses, the image in the display may also jiggle after the shutter is released; this is normal and does not indicate a malfunction.

Sport or **On** is recommended for panning shots. In **Sport**, **Normal**, and **On** modes, vibration reduction applies only to motion that is not part of the pan (if the camera is panned horizontally, for example, vibration reduction will be applied only to vertical shake).

To prevent unintended results, select **Off** when the camera is mounted on a tripod unless the tripod head is unsecured or the camera is mounted on a monopod, in which case **Normal**, **Sport**, or **On** is recommended.

AF-Area Mode

AF-area mode controls how the camera selects the focus-point for autofocus. For more information, see "AF-Area Mode" (\$\square\$ 55).

Option	Option	
₽N Pinpoint AF	wide-area AF (S)	
[13] Single-point AF	ᄩᆲ Wide-area AF (L)	
[-ṛː-] Dynamic-area AF	[Auto-area AF	

The option currently selected is shown by an icon in the display during shooting.



Focus Mode

The focus mode controls how the camera focuses. For more information, see "Choosing a Focus Mode" (\$\square\$ 53).

Option	Option	
AF-S Single AF	MF Manual focus	
AT C Continuous AE		


AF-C Continuous Al

The option currently selected is shown by an icon in the display during shooting.



The Movie-Mode i Menu

At default settings, the following items appear in the \boldsymbol{i} menu for movie mode.

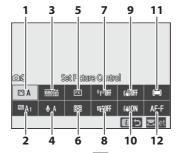

Set Picture Control115	7 Wi-Fi connection 120
White balance115	8 Active D-Lighting120
Frame size and rate/	9 Electronic VR120
image quality116	10 Vibration reduction 121
Microphone sensitivity118	11 AF-area mode 121
Choose image area119	12 Focus mode 121
Metering120	_
	White balance

■ "Same as Photo Settings"

If Same as photo settings is selected for Set Picture Control, White balance, Active D-Lighting, or Vibration reduction in the movie shooting menu, a cicon will appear at the top left corner of the it menu, indicating that the options selected for these settings in photo mode also apply in movie mode and vice versa.

■ "Same as Photo Settings"

If Same as Photo Settings is selected for the settings in photo mode also apply in movie mode and vice versa.

■ "Same as Photo Settings"

If Same as Photo Settings"

If Same as Photo Settings

If Same as P



Set Picture Control

Choose a Picture Control for movie recording. For more information, see "Set Picture Control" (

93).

White Balance

Adjust white balance for movie recording. For more information, see "White Balance" (\square 62, 98).

Frame Size, Frame Rate, and Movie Quality

Select the movie frame size (in pixels) and frame rate. You can also choose from two **Movie quality** options: **High quality** (indicated by frame size/rate icons with " \star ") and **Normal**. Together, these options determine the maximum bit rate, as shown in the following table.

		Max. bit ra	ate (Mbps)	Max.
F	rame size/frame rate ¹	High quality	Normal	recording time
2160 P*	3840 × 2160 (4K UHD); 30p			
2160 P*	3840 × 2160 (4K UHD); 25p			
2160 P*	3840 × 2160 (4K UHD); 24p	144	2	
1080 P*	1920 × 1080; 120p³			
1080 P*	1920 × 1080; 100p³			29 min. 59 s
1080 P*/1080 P	1920 × 1080; 60p	56	28	29111111. 393
1080 PX / 1080 Pm	1920 × 1080; 50p	30	20	
1080 PX / 1080 PD	1920 × 1080; 30p			
1080 108	1920 × 1080; 25p	28	14	
1080 108	1920 × 1080; 24p			
1080 ×4	1920 × 1080; 30p ×4 (slow-mo) ³	36		
1080 24	$1920 \times 1080; 25p \times 4 (slow-mo)^3$	50	2	3 min.
1080 ×5	1920 × 1080; 24p ×5 (slow-mo) ³	29		

¹ Actual frame rates for values listed as 120p, 60p, 30p, and 24p are respectively 119.88 fps, 59.94 fps, 29.97 fps, and 23.976 fps.

The option currently selected is shown by an icon in the display.

 


² Movie quality fixed at High quality.

³ Image area fixed at **DX**; face detection not enabled in auto-area AF AF-area mode.

■■ Slow-Motion Movies

To record silent slow-motion movies, select a "slow-mo" option for **Frame size/frame rate**. Slow-motion movies are recorded at 4 or 5 times the rated speed and play back at the rated speed. Movies shot at **1920** × **1080**; **30p** ×**4** (slow-mo), for example, are recorded at a frame rate of roughly 120 fps and play back at around 30 fps, meaning that 10 seconds recording produces about 40 seconds of footage.



Recording and playback speeds are shown below.

Frame size/frame rate	Recording speed	Normal
1920 × 1080; 30p ×4 (slow-mo)	120p (119.88 fps)	30p (29.97 fps)
顶颌	100p (100 fps)	25p (25 fps)
1920 × 1080; 24p ×5 (slow-mo)	120p (119.88 fps)	24p (23.976 fps)

Slow-Motion Movies

Features such as flicker reduction, electronic vibration reduction, and time code output cannot be used when a "slow-mo" option is selected.

Microphone Sensitivity

Turn the built-in or external microphones on or off or adjust microphone sensitivity. Choose **A** to adjust sensitivity automatically or **Microphone off** to turn sound recording off or adjust microphone sensitivity manually by choosing a value between **1** and **20** (the higher the value, the higher the sensitivity).

At settings other than **QA**, the option currently selected is shown by an icon in the display.



If the sound level is displayed in red, the volume is too high. Reduce microphone sensitivity.




The 🔯 Icon

Movies recorded with the microphone off are indicated by a 🖎 icon in full-frame and movie playback.



Choose Image Area

Choose the size of the area on the image sensor used to record movies. Select **FX** to shoot movies in what is referred to as "FX-based movie format", **DX** to shoot in "DX-based movie format". The differences between the two formats are shown in the illustration.

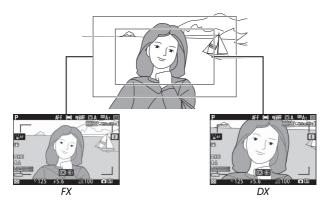

The dimensions of the area recorded vary with the frame size:

Format	Frame size	Area recorded (approximate)
FX-based movie format	3840 × 2160	35.9 × 20.2 mm
i A-based illovie loilliat	1920 × 1080	35.8 × 20.1 mm
DX-based movie format	3840 × 2160	23.5 × 13.2 mm
DA-based Hiovie Ioilliat	1920 × 1080	23.3 \ 13.2 111111

The option currently selected is shown by an icon in the display.



Metering

Choose how the camera sets exposure in movie mode. For more information, see "Metering" (\$\square\$ 108), but note that spot metering is not available.

Wi-Fi Connection

Enable or disable Wi-Fi. For more information, see "Wi-Fi Connection" (\$\subset\$ 109).

Active D-Lighting

Choose an Active D-Lighting option for movie mode. For more information, see "Active D-Lighting" (\square 110). Note that if **Same as photo settings** is selected for **Active D-Lighting** in the movie shooting menu and **Auto** is selected in the photo shooting menu, movies will be shot at a setting equivalent to **Normal**.

Electronic VR

Select **On** to enable electronic vibration reduction in movie mode. Electronic vibration reduction is not available at frame sizes of **1920** \times **1080**; **120p**, **1920** \times **1080**; **100p**, or 1920 \times 1080 (slow-mo). Note that when electronic vibration reduction is on, the angle of view will be reduced, slightly increasing the apparent focal length, and the maximum sensitivity for movie recording is fixed at ISO 25600.

An icon appears in the display while **On** is selected.



Vibration Reduction

Choose vibration reduction option for movie mode. For more information, see "Vibration Reduction" (\square 112).

AF-Area Mode

Choose how the camera selects the focus point when autofocus is enabled in movie mode. For more information, see "AF-Area Mode" (\square 55, 113).

Option	Option	
[13] Single-point AF	[] Wide-area AF (L)	
應기 Wide-area AF (S)	(Auto-area AF	

Focus Mode

Choose how the camera focuses in movie mode. For more information, see "Choosing a Focus Mode" (\$\square\$ 53).

Option	Option
AF-S Single AF	AF-F Full-time AF
AF-C Continuous AF	MF Manual focus



Menu List

This section lists the options available in the camera menus. For more information, see the online manual or the *Reference Manual*, both from Nikon websites.

► The Playback Menu: *Managing Images*

Delete	
Selected	Delete multiple images.
Select date	-
All	-
Playback folder	(defaults to All)
(Folder name)	Choose a folder for playback.
All	-
Current	_
Playback display options	
Add info	Choose the information available in the
Focus point	playback photo information display.
Additional photo info	-
Exposure info	-
Highlights	-
RGB histogram	-
Shooting data	-
Overview	-
None (image only)	-
Image review	(defaults to Off)
0n	Choose whether pictures are displayed
On (monitor only)	automatically immediately after
Off	shooting.
After delete	(defaults to Show next)
Show next	Choose the picture displayed after an
Show previous	image is deleted.
Continue as before	

After burst, show	(defaults to Last image in burst)
First image in burst	Choose whether the camera displays
Last image in burst	the first or the last photo in the burst
	after photos are taken in continuous
	release mode.
Rotate tall	(defaults to On)
On	Choose whether to rotate "tall"
Off	(portrait-orientation) pictures for
	display during playback.
Slide show	
Start	View a slide show of the pictures in the
Image type	current playback folder.
Frame interval	-
Rating	

The Photo Shooting Menu: Shooting Options


Reset photo shooting menu	
Yes	Select Yes to reset photo shooting
No	menu options to their default values.
Storage folder	
Rename	Select the folder in which subsequent
Select folder by number	pictures will be stored.
Select folder from list	
File naming	
File naming	Choose the three-letter prefix used in naming the image files in which photographs are stored. The default prefix is "DSC".
Choose image area	(defaults to FX (36 $ imes$ 24))
FX (36 × 24)	Choose the image area (crop) for
DX (24 × 16)	photos.
5:4(30 × 24)	
1:1(24 × 24)	
16:9 (36 × 20)	

Image quality	(defaults to JPEG normal)
NEF (RAW) + JPEG fine★	Choose a file format and compression
NEF (RAW) + JPEG fine	ratio (image quality). The compression
NEF (RAW) + JPEG normal★	for options indicated by a star ("★")
NEF (RAW) + JPEG normal	prioritizes quality, while that for images
NEF (RAW) + JPEG basic★	—— without a star gives priority to reducing —— file size.
NEF (RAW) + JPEG basic	—— Ille Size.
NEF (RAW)	
JPEG fine★	
JPEG fine	
JPEG normal★	
JPEG normal	
JPEG basic★	
JPEG basic	
TIFF (RGB)	
Image size	
JPEG/TIFF	Choose the image size, in pixels.
NEF (RAW)	Separate options are available for JPEG/
	TIFF and for NEF (RAW) images.
NEF (RAW) recording	
NEF (RAW) compression	Choose the type of compression and
NEF (RAW) bit depth	the bit depth for NEF (RAW) images.
ISO sensitivity settings	
ISO sensitivity	Adjust ISO sensitivity settings for
Auto ISO sensitivity control	photographs.

White balance	(defaults to Auto)
Auto	Match white balance to the light source.
Natural light auto	-
Direct sunlight	-
Cloudy	-
Shade	-
Incandescent	_
Fluorescent	-
Flash	_
Choose color temperature	-
Preset manual	-

Text Entry

A keyboard is displayed when text entry is required. Tap letters on the screen (to cycle through the upper- and lower-case and symbol keyboards, tap the keyboard selection button) or use the multi selector to highlight characters and press ® to insert them at the current cursor position (note that if a character is entered when the field is full, the last character in the field will be deleted). To delete the character under the cursor, press the field button. To move the cursor to a new position, tap the display or rotate the main command dial. To complete entry and return to the previous menu, press \(^{\text{Q}}\). To exit without completing text entry, press MENU.

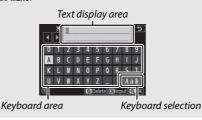

Set Picture Control	(defaults to Auto)
Auto	Choose how new photos will be
Standard	processed. Select according to the type
Neutral	of scene or your creative intent.
Vivid	-
Monochrome	-
Portrait	-
Landscape	-
Flat	-
Dream	-
Morning	-
Pop	-
Sunday	-
Somber	-
Dramatic	-
Silence	-
Bleached	-
Melancholic	-
Pure	-
Denim	-
Toy	-
Sepia	-
Blue	-
Red	-
Pink	-
Charcoal	-
Graphite	-
Binary	-
Carbon	-

Manage Picture Control	
Save/edit	Create custom Picture Controls.
Rename	
Delete	
Load/save	
Color space	(defaults to sRGB)
sRGB	Choose a color space for photographs.
Adobe RGB	
Active D-Lighting	(defaults to Off)
Auto	Preserve details in highlights and
Extra high	shadows, creating photographs with
High	natural contrast.
Normal	
Low	
Off	
Long exposure NR	(defaults to Off)
On	Reduce "noise" (bright spots or fog) in
Off	photos taken at slow shutter speeds.
High ISO NR	(defaults to Normal)
High	Reduce "noise" (randomly-spaced
Normal	bright pixels) in photos taken at high
Low	ISO sensitivities.
Off	
Vignette control	(defaults to Normal)
High	Reduce the drop in brightness at the
Normal	edges of photographs. The effect is
Low	most noticeable at maximum aperture.
Off	
Diffraction compensation	(defaults to On)
On	Reduce the effects of diffraction in
Off	photos taken at small apertures (high f/-numbers).

Auto distortion control	(defaults to On)
On	Reduce barrel distortion when shooting
Off	with wide-angle lenses and reduce pin-
	cushion distortion when shooting with
	long lenses (note that Off may not be
	available with some lenses).
Flicker reduction shooting	(defaults to Off)
On	Reduce the effects of flicker under
Off	fluorescent or mercury vapor lighting.
Metering	(defaults to Matrix metering)
Matrix metering	Choose how the camera meters light
Center-weighted metering	levels to set exposure.
Spot metering	_
Highlight-weighted metering	_
Flash control	
Flash control mode	Choose a flash control mode for
Wireless flash options	optional flash units and adjust settings
Remote flash control	for remote wireless flash units. The
Radio remote flash info	options available vary with the flash
Flash mode	unit or accessory used.
	(defaults to Fill flash)
Fill flash	_ Choose the flash mode.
Red-eye reduction	_
Slow sync + red-eye	_
Slow sync	_
Rear-curtain sync	_
Flash off	
Flash compensation	(defaults to 0.0)
-3.0 - +1.0	Adjust flash compensation.
Focus mode	(defaults to Single AF)
Single AF	Choose how the camera focuses.
Continuous AF	_
Manual focus	

AF-area mode	(defaults to Single-point AF)
Pinpoint AF	Choose how the camera selects the
Single-point AF	focus point for autofocus.
Dynamic-area AF	
Wide-area AF (S)	
Wide-area AF (L)	
Auto-area AF	
Vibration reduction	
On	Reduce blur caused by camera shake.
Normal	The options available vary with the lens.
Sport	
Off	
Auto bracketing	
Auto bracketing set	Adjust auto bracketing settings.
Number of shots	
Increment	
Amount	
Multiple exposure	
Multiple exposure mode	Record from two to ten NEF (RAW)
Number of shots	exposures as a single photograph.
Overlay mode	
Keep all exposures	
Overlay shooting	
Select first exposure (NEF)	
HDR (high dynamic range)	
HDR mode	Preserve details in highlights and
Exposure differential	shadows when photographing high-
Smoothing	contrast scenes.
Save individual images (NEF)	

Interval timer shooting	
Start	Take photographs at the selected
Choose start day/time	interval until the specified number of
Interval	shots has been recorded.
Intervals×shots/interval	
Exposure smoothing	
Silent photography	
Interval priority	
Starting storage folder	
Time-lapse movie	
Start	The camera automatically takes photos
Interval	at selected intervals to create a silent
Shooting time	time-lapse movie.
Exposure smoothing	
Silent photography	
Choose image area	
Frame size/frame rate	
Interval priority	
Focus shift shooting	
Start	Automatically vary focus over a series o
No. of shots	photographs.
Focus step width	
Interval until next shot	
First-frame exposure lock	
Peaking stack image	
Silent photography	
Starting storage folder	
Silent photography	(defaults to Off
On	Eliminate the sound of the shutter.
Off	

慄 The Movie Shooting Menu: Movie Shooting Options

Reset movie shooting menu	
Yes	Select Yes to reset movie shooting
No	menu options to their default values.
File naming	
	Choose the three-letter prefix used in
	naming the image files in which movies
	are stored. The default prefix is "DSC".
Choose image area	(defaults to FX)
FX	Choose the image area (crop) for
DX	movies.
Frame size/frame rate	(defaults to 1920×1080; 60p)
3840×2160; 30p	Choose movie frame size (measured in
3840×2160; 25p	pixels) and frame rate.
3840×2160; 24p	-
1920×1080; 120p	-
1920×1080; 100p	-
1920×1080; 60p	•
1920×1080; 50p	-
1920×1080; 30p	•
1920×1080; 25p	•
1920×1080; 24p	•
1920×1080; 30p ×4 (slow-mo)	•
1920×1080; 25p ×4 (slow-mo)	•
	-

Movie quality	(defaults to High quality)
High quality	Choose movie quality.
Normal	_
Movie file type	(defaults to MOV)
MOV	Choose the movie file type.
MP4	_
ISO sensitivity settings	
Maximum sensitivity	Adjust ISO sensitivity settings for
Auto ISO control (mode M)	movies.
ISO sensitivity (mode M)	_
White balance	(defaults to Same as photo settings)
Same as photo settings	Choose the white balance for movies.
Auto	Select Same as photo settings to use
Natural light auto	the option currently selected for
Direct sunlight	— photos.
Cloudy	_
Shade	_
Incandescent	_
Fluorescent	_
Choose color temperature	_
Preset manual	_

Set Picture Control	(defaults to Same as photo settings)
Same as photo settings	Choose a Picture Control for movies.
Auto	Select Same as photo settings to use
Standard	the option currently selected for
Neutral	photos.
Vivid	_
Monochrome	_
Portrait	_
Landscape	_
Flat	_
Dream	_
Morning	_
Pop	_
Sunday	_
Somber	_
Dramatic	_
Silence	_
Bleached	_
Melancholic	_
Pure	_
Denim	_
Toy	_
Sepia	_
Blue	_
Red	_
Pink	_
Charcoal	_
Graphite	_
Binary	_
Carbon	_

Manage Picture Control	
Save/edit	Create custom Picture Controls.
Rename	
Delete	
Load/save	
Active D-Lighting	(defaults to Off)
Same as photo settings	Preserve details in highlights and
Extra high	shadows, creating movies with natural
High	contrast. Select Same as photo
Normal	settings to use the option currently
Low	—— selected for photos.
Off	
High ISO NR	(defaults to Normal)
High	Reduce "noise" (randomly-spaced
Normal	bright pixels) in movies recorded at high
Low	ISO sensitivities.
Off	
Vignette control	(defaults to Normal)
Same as photo settings	Reduce the drop in brightness at the
High	edges of the frame. Select Same as
Normal	photo settings to use the option
Low	currently selected for photos.
Off	
Diffraction compensation	(defaults to On)
On	Reduce the effects of diffraction in
Off	movies taken at small apertures (high
	f/-numbers).

(defaults to On)
Reduce barrel distortion when shooting
with wide-angle lenses and reduce pin-
cushion distortion when shooting with
long lenses.
(defaults to Auto)
Reduce flicker and banding caused by
fluorescent or mercury-vapor lighting
during movie recording.
(defaults to Matrix metering)
Choose how the camera meters light
levels to set exposure when filming
movies.
(defaults to Full-time AF)
Choose how the camera focuses.
_
(defaults to Auto-area AF)
(defaults to Auto-area AF) Choose how the camera selects the
· · · · · · · · · · · · · · · · · · ·
Choose how the camera selects the
Choose how the camera selects the
Choose how the camera selects the
Choose how the camera selects the focus point for autofocus.
Choose how the camera selects the focus point for autofocus. (defaults to Same as photo settings) Reduce blur caused by camera shake. The options available vary with the lens.
Choose how the camera selects the focus point for autofocus. (defaults to Same as photo settings) Reduce blur caused by camera shake. The options available vary with the lens. Select Same as photo settings to use
Choose how the camera selects the focus point for autofocus. (defaults to Same as photo settings) Reduce blur caused by camera shake. The options available vary with the lens.

Electronic VR	(defaults to Off)
On	Choose whether to enable electronic
Off	vibration reduction in movie mode.
Microphone sensitivity	(defaults to Auto)
Auto	Turn the built-in or external
Manual	microphones on or off or adjust
Microphone off	microphone sensitivity.
Attenuator	(defaults to Disable)
Enable	Reduce microphone gain and prevent
Disable	audio distortion when recording
	movies in loud environments.
Frequency response	(defaults to Wide range)
Wide range	Choose the frequency response for the
Vocal range	built-in and external microphones.
Wind noise reduction	(defaults to Off)
On	Choose whether to enable the built-in
Off	microphone's low-cut filter to reduce
	wind noise.
Headphone volume	(defaults to 15)
0-30	Adjust volume for third-party
	headphones.
Timecode	
Record timecodes	Adjust time code settings and choose
Count-up method	whether to record time codes with
Timecode origin	movies.
Drop frame	_

✔ Custom Settings: Fine-Tuning Camera Settings

Reset custom settings	
Yes	Select Yes to reset Custom Settings to
No	their default values.
a Autofocus	
a1 AF-C priority selection	(defaults to Release)
Release	Choose whether photos can be taken
Focus	before the camera has focused in focus mode AF-C .
a2 AF-S priority selection	(defaults to Focus)
Release	Choose whether photos can be taken
Focus	before the camera has focused in focus mode AF-S .
a3 Focus tracking with lock-on	(defaults to 3)
Blocked shot AF response	Choose how autofocus responds to
	changes in the distance to the subject in
	focus mode AF-C.
a4 Auto-area AF face detection	(defaults to On)
<u>On</u>	Choose whether the camera detects
Off	and focuses on faces in auto-area AF AF-
	area mode.
a5 Focus points used	(defaults to All points)
All points	Choose the number of focus points
Every other point	available for manual focus-point
	selection.
a6 Store points by orientation	(defaults to No)
Yes	Choose whether the camera stores the
No	focus points for "tall" and "wide"
	orientations separately.

a7 AF activation	(defaults to Shutter/AF-ON)
Shutter/AF-ON	Choose whether the camera focuses
AF-ON only	when the shutter-release button is pressed halfway. If AF-ON only is
	selected, the camera will not focus
	when the shutter-release button is
	pressed halfway.
a8 Limit AF-area mode selection	
Pinpoint AF	Choose the options that can be selected
Single-point AF	by rotating the sub-command dial
Dynamic-area AF	when AF-area mode is assigned to the
Wide-area AF (S)	− i menu or a camera control.
Wide-area AF (L)	_
Auto-area AF	_
a9 Focus point wrap-around	(defaults to No wrap)
Wrap	Choose whether focus-point selection
No wrap	"wraps around" from one edge of the
	display to another.
a10 Focus point options	
Manual focus mode	Adjust settings for the focus-point
Dynamic-area AF assist	display.
a11 Low-light AF	(defaults to Off)
On	Choose On for more accurate (if
Off	sometimes slower) focus in low light
	when AF-S is selected for focus mode.
a12 Built-in AF-assist illuminator	(defaults to On)
On	Choose whether the AF-assist
Off	illuminator lights to assist focus when
	lighting is poor.

a13 Manual focus ring in AF mode	(defaults to Enable)
Enable	This option is available with compatible
Disable	lenses. Select Disable to prevent the
	focus ring being used for focus in
	autofocus mode.
b Metering/exposure	
b1 EV steps for exposure cntrl	(defaults to 1/3 step)
1/3 step	Select the size of the increment for
1/2 step	adjustments to shutter speed, aperture,
	ISO sensitivity, and exposure and flash
	bracketing and compensation.
b2 Easy exposure compensation	(defaults to Off)
On (Auto reset)	_ Choose whether exposure
0n	compensation can be adjusted solely by
Off	rotating a command dial, without
12.6 / 11.1	pressing the 🗷 button.
b3 Center-weighted area	(defaults to ϕ 12 mm)
φ 12 mm	Choose the size of the area given the
Average	most weight in center-weighted
h. Fine tune entired concerns	metering.
b4 Fine-tune optimal exposure	Fig. 4
Matrix metering	Fine-tune exposure for each metering method. Higher values produce
Center-weighted metering	brighter exposures, lower values darker
Spot metering	exposures.
Highlight-weighted metering	exposures.
c Timers/AE lock	
c1 Shutter-release button AE-L	(defaults to Off)
On (half press)	Choose whether exposure locks when
On (burst mode)	the shutter-release button is pressed.
Off	_
c2 Self-timer	
Self-timer delay	Choose the length of the shutter release
Number of shots	delay, the number of shots taken, and
Interval between shots	the interval between shots in self-timer mode.

c3	Power off delay	
Pla	yback	Choose how long the control panel and
Me	nus	camera displays remain on when no
lma	nge review	operations are performed.
Sta	ndby timer	-
d S	hooting/display	
d1	CL mode shooting speed	(defaults to 3 fps)
5 fp	os–1 fps	Choose the frame advance rate for low-
		speed continuous release mode.
d2	Max. continuous release	(defaults to 200)
1–2	200	Choose the maximum number of shots
		that can be taken in a single burst in
_		continuous release modes.
d3	Sync. release mode options	(defaults to Sync)
Syn	C	Choose whether the shutter releases on
No	sync	remote cameras synchronize with the
		shutter release on the master camera.
	Exposure delay mode	(defaults to Off)
3 s-	-0.2 s, Off	In situations in which the slightest
		camera movement can blur pictures,
		shutter release can be delayed until
		approximately 0.2 to 3 seconds after the shutter-release button is pressed.
A.C	Electronic front-curtain shutter	(defaults to Disable)
Fna		Enable the electronic front-curtain to
		eliminate blur caused by the motion of
DIS	able	the mechanical shutter.
46	Limit selectable image area	the mechanical stratter.
	(36×24)	Choose the options available when
_	` '	image-area selection is assigned to the
	(24 × 16)	i menu or to the command dials and a
_	4 (30 × 24)	camera control.
	1 (24 × 24)	-
16:	: 9 (36 × 20)	

d7 File number sequence	(defaults to On)
On	Choose how the camera assigns file
Off	numbers.
Reset	_
d8 Apply settings to live view	(defaults to On)
On .	When On is selected, the effects of
Off	camera settings on color and brightness
	can be previewed in the viewfinder or
	monitor shooting display.
d9 Framing grid display	(defaults to Off)
0n	Choose On to display a grid for
Off	reference when framing shots.
d10 Peaking highlights	
Peaking level	Adjust settings for the manual focus
Peaking highlight color	peaking display, which uses outlines to
	show objects that are in focus.
d11 View all in continuous mode	(defaults to On)
On	If Off is selected, the display will go
Off	blank during burst photography.
e Bracketing/flash	
e1 Flash sync speed	(defaults to 1/200 s)
1/200 s (Auto FP)-1/60 s	Choose a flash sync speed.
e2 Flash shutter speed	(defaults to 1/60 s)
1/60 s-30 s	Choose the slowest shutter available
	when the flash is used in modes P and A.
e3 Exposure comp. for flash	(defaults to Entire frame)
Entire frame	Choose how the camera adjusts flash
Background only	level when exposure compensation is
- ,	used.

e4 Auto \$ ISO sensitivity control	(defaults to Subject and background)
Subject and background	Choose whether auto ISO sensitivity
Subject only	control for flash photography is
	adjusted to correctly expose both the
	subject and background or the main
	subject only.
e5 Modeling flash	(defaults to On)
On	Choose On to preview lighting effects
Off	when using optional flash units
	compatible with the Nikon Creative
	Lighting System.
e6 Auto bracketing (mode M)	(defaults to Flash/speed)
Flash/speed	Choose the settings affected when
Flash/speed/aperture	exposure and/or flash bracketing is
Flash/aperture	enabled in mode M .
Flash only	_
e7 Bracketing order	(defaults to MTR > under > over)
MTR > under > over	Choose the bracketing order for
Under > MTR > over	exposure, flash, and white balance
	bracketing.

Fixing Shutter Speed at the Flash Sync Speed Limit

To fix shutter speed at the sync speed limit in mode **S** or **M**, choose a speed one setting slower than the slowest speed possible (30 s or **Time**). A flash sync indicator ("X") will appear in the display and control panel together with the flash sync speed.

Auto FP High-Speed Sync

Auto FP high-speed sync allows the flash to be used at the highest shutter speed supported by the camera, making it possible to choose the maximum aperture for reduced depth of field even in bright sunlight. The flash information display shows "FP" when 1/200 s (Auto FP) is selected.

f Controls f1 Customize 63 menu	
Choose image area	Choose the options displayed in the i
Image quality	menu for photo mode.
Image size	
Exposure compensation	
ISO sensitivity settings	
White balance	
Set Picture Control	
Color space	
Active D-Lighting	
Long exposure NR	
High ISO NR	
Metering	
Flash mode	
Flash compensation	
Focus mode	
AF-area mode	
Vibration reduction	
Auto bracketing	
Multiple exposure	
HDR (high dynamic range)	
Silent photography	
Release mode	
Custom control assignment	
Exposure delay mode	
Electronic front-curtain shutter	
Apply settings to live view	
Split-screen display zoom	
Peaking highlights	
Monitor/viewfinder brightness	
Bluetooth connection	
Wi-Fi connection	

f2 Custom control assignment	
Fn1 button	Choose the functions performed by
Fn2 button	camera controls in photo mode.
AF-ON button	_
Sub-selector	
Sub-selector center	_
Movie record button	
Lens Fn button	_
Lens control ring	
f3 OK button	
Shooting mode	Choose the role assigned to the ™
Playback mode	button during shooting (photo mode) and playback.
f4 Shutter spd & aperture lock	
Shutter speed lock	Lock shutter speed at the value
Aperture lock	currently selected in mode S or M , or
	aperture at the value currently selected
	in mode A or M .
f5 Customize command dials	
Reverse rotation	Customize the operation of the main
Change main/sub	and sub-command dials.
Menus and playback	_
Sub-dial frame advance	
f6 Release button to use dial	(defaults to No)
Yes	Selecting Yes allows adjustments that
No	are normally made by holding a button
	and rotating a command dial to be
	made by rotating the command dial after the button is released.
f7 Reverse indicators	(defaults to — (initialization)
f7 Reverse indicators	
†ahinininini	Choose whether the exposure indicator is displayed with positive values at the
–₄հումիումե+	right and negative values at the left or
	vice-versa.

g Movie	
g1 Customize 🗗 menu	
Choose image area	Choose the options displayed in the $m{i}$
Frame size and rate/Image quality	menu for movie mode.
Exposure compensation	
ISO sensitivity settings	
White balance	
Set Picture Control	
Active D-Lighting	
Metering	
Focus mode	
AF-area mode	
Vibration reduction	
Electronic VR	
Microphone sensitivity	
Attenuator	
Frequency response	
Wind noise reduction	
Headphone volume	
Peaking highlights	
Highlight display	
Monitor/viewfinder brightness	
Bluetooth connection	
Wi-Fi connection	
g2 Custom control assignment	
Fn1 button	Choose the functions performed by
Fn2 button	camera controls in movie mode. Note
AF-ON button	that if Record movies is selected for
Sub-selector center	 Shutter-release button, the shutter- release button cannot be used for any
Shutter-release button	 release button cannot be used for any operation other than recording movies.
Lens control ring	operation other than recording movies.

g3 OK button	(defaults to Select center focus point)
Select center focus point	Choose the role assigned to the ™
Zoom on/off	button in movie mode.
Record movies	
None	
g4 AF speed	
-5-+5	Choose the focus speed for movie
When to apply	mode.
g5 AF tracking sensitivity	(defaults to 4)
1-7	Choose the speed of the focus response
	in movie mode.
g6 Highlight display	
Display pattern	Choose how highlights (bright areas of
Highlight display threshold	the frame) are shown in movie mode.

↑ The Setup Menu: Camera Setup

Format memory card	
	Select Yes to format the memory card. Note that formatting permanently deletes all pictures and other data on the card. Be sure to make backup copies before formatting.
Save user settings	
Save to U1	Save current settings to the selected
Save to U2	mode dial position.
Save to U3	
Reset user settings	
Reset U1	Reset settings for the selected mode
Reset U2	dial position to default values.
Reset U3	
Language	
	Choose a language for camera menus and messages. The languages available vary with the country or region in which the camera was originally purchased.
Time zone and date	
Time zone	Set the camera clock.
Date and time	
Date format	
Daylight saving time	
Monitor brightness	(defaults to 0)
-5-+5	Adjust monitor brightness.
Monitor color balance	
	Adjust monitor color balance.

Viewfinder brightness	(defaults to Auto)
Auto	Adjust viewfinder brightness.
Manual	
Viewfinder color balance	
	Adjust viewfinder color balance.
Control panel brightness	(defaults to Auto)
Auto	Adjust control panel brightness.
Manual	
Off	
Limit monitor mode selection	
Automatic display switch	Choose the monitor modes that can be
Viewfinder only	selected using the monitor mode
Monitor only	button.
Prioritize viewfinder	
Information display	(defaults to Dark on light)
Dark on light	Adjust the information display for
Light on dark	different viewing conditions.
AF fine-tune	
AF fine-tune (On/Off)	Fine-tune focus for different lens types.
Saved value	Use only when required.
Default	
List saved values	
Non-CPU lens data	
Lens number	Record information on non-CPU lenses
Focal length (mm)	attached via a mount adapter.
Maximum aperture	
Clean image sensor	
Clean now	Vibrate the image sensor to remove
Automatic cleaning	dust.
Image Dust Off ref photo	
Start	Acquire reference data for the Image
Clean sensor and then start	Dust Off option in Capture NX-D.

Image comment	
Attach comment	Add a comment to new pictures as they
Input comment	are taken. Comments can be viewed as
	metadata in ViewNX-i or Capture NX-D.
Copyright information	
Attach copyright information	Add copyright information to new
Artist	pictures as they are taken. Copyright
Copyright	information can be viewed as metadata
	in ViewNX-i or Capture NX-D.
Beep options	
Beep on/off	Choose the pitch and volume of beeps
Volume	made by the camera.
Pitch	
Touch controls	
Enable/disable touch controls	Adjust touch control settings.
Full-frame playback flicks	_
HDMI	
Output resolution	Adjust settings for connection to HDMI
Advanced	devices.
Output range	
External recording control	
Output data depth	
N-Log setting	
View assist	
Location data	
Standby timer	Adjust location data settings.
Position	_
Set clock from satellite	
Wireless remote (WR) options	
LED lamp	Adjust LED lamp and link mode settings
Link mode	for optional wireless remote controllers.

Assign remote (WR) Fn button	(defaults to None)
AF-ON	Choose the role played by the Fn button
AF lock only	on optional wireless remote controllers
AE lock (Reset on release)	_
AE lock only	
AE/AF lock	_
FV lock	_
Disable/enable	
Preview	_
+ NEF (RAW)	
None	
Airplane mode	(defaults to Disable)
Enable	Select Enable to disable the camera's
Disable	built-in Bluetooth and Wi-Fi functions.
	The Bluetooth and Wi-Fi functions of
	optional peripheral devices connected
	to the camera can only be disabled by disconnecting the devices.
Connect to smart device	disconnecting the devices.
	Comment to a superitude of a superitude of
Pairing (Bluetooth)	Connect to a smart phone or tablet and adjust settings once connected. See
Select to send (Bluetooth)	SnapBridge online help.
Wi-Fi connection	— Shapbhage offiline fielp.
Send while off	
Connect to PC	
Wi-Fi connection	Adjust settings for connection to
Connection type	computers using the camera's built-in
Network settings	Wi-Fi. For more information, see the Network Guide.
Options	Network Guide.
MAC address	

A - - - - - - - - - - - - - - - (MD) F-- b-----

Wireless transmitter (WT-7)		
Wireless transmitter (W1-7) Wireless transmitter	A divise settings for some setion to	
	Adjust settings for connection to	
Choose hardware	computers or ftp servers via wireless or	
Network settings	Ethernet networks using an optional	
Options	WT-7 wireless transmitter. This option is	
	available only when a WT-7 is connected.	
C	connected.	
Conformity marking		
	View some of the standards with which	
	the camera complies.	
Battery info		
	View information on the battery	
	currently inserted in the camera.	
Slot empty release lock	(defaults to Enable release)	
Release locked	Choose whether the shutter can be	
Enable release	released when no memory card is	
	inserted.	
Save/load settings		
Save settings	Save camera settings to or load camera	
Load settings	settings from a memory card. Settings	
-	files can be shared with other cameras	
	of the same model.	
Reset all settings		
Reset	Reset all settings except Language and	
Do not reset	Time zone and date to their default	
	values.	
Firmware version		
	View the current camera firmware	
	version.	

"Reset All Settings"

Copyright information and other user-generated entries are also reset. We recommend that you save settings using the **Save/load settings** option in the setup menu before performing a reset.

✓ The Retouch Menu: Creating Retouched Copies

NEF (RAW) processing	
Select image(s)	Create JPEG copies of NEF (RAW)
Select date	photographs.
Select all images	
Trim	
	Create a cropped copy of the selected photograph.
Resize	
Select image(s)	Create small copies of selected
Choose size	photographs.
D-Lighting	
	Brighten shadows.
Red-eye correction	
	Correct "red-eye" in photos taken with a flash.
Straighten	
	Create straightened copies. Copies can
	be straightened by up to 5° in
	increments of approximately 0.25°.
Distortion control	
Auto	Reduce barrel distortion in photos
Manual	taken with wide-angle lenses or pin-
	cushion distortion in photos taken with
	telephoto lenses. Select Auto to let the
	camera correct distortion automatically.
Perspective control	
	Reduce the effects of perspective in
	photos taken looking up from the base of a tall object.

Image overlay	
	Combine two existing NEF (RAW) photos to create a single picture that is saved separately from the originals. This option is only available in the ☑ tab.
Trim movie	
	Trim footage to create edited copies of movies.
Side-by-side comparison	
	Compare retouched copies to the originals. This option is only available if the retouch menu is displayed by pressing <i>i</i> and selecting Retouch in full-frame playback when a retouched image or original is displayed.

➡ My Menu/**➡** Recent Settings

Add items		
PLAYBACK MENU	Create a custom menu of up to 20 items selected from the playback, photo shooting, movie shooting, Custom Setting, setup, and retouch menus.	
PHOTO SHOOTING MENU		
MOVIE SHOOTING MENU		
CUSTOM SETTING MENU		
SETUP MENU	-	
RETOUCH MENU	_	
Remove items		
	Delete items from My Menu.	
Rank items		
	Change the order of the items in My	
	Menu.	
Choose tab	(defaults to MY MENU)	
MY MENU	Choose the menu displayed in the "My	
RECENT SETTINGS	Menu/Recent Settings" tab. Select	
	RECENT SETTINGS to display a menu	
	listing the 20 most recently-used	
	settings.	

Troubleshooting

You may be able to resolve any issues with the camera by following the steps below. Check this list before consulting your retailer or Nikon-authorized service representative.

Check the common problems listed in the following sections:

STEP 1

- "Problems and Solutions" (III 158)
- "Indicators and Error Messages" (164)

STEP 2

Turn the camera off and remove the battery. After waiting for about a minute, re-insert the battery and turn the camera on.

If you have just finished shooting, wait at least a minute before removing the battery, as the camera may still be writing data to the memory card.

Search Nikon websites.

STEP 3

For support information and answers to frequently asked questions, visit the website for your country or region (\(\simeg \text{xiv}\)). To download the latest firmware for your camera, visit: \(http://downloadcenter.nikonimglib.com\)

STEP 4

Consult a Nikon-authorized service representative.

Restoring Default Settings

Depending on current settings, some menu items and other features may be unavailable. To access menu items that are grayed out or features are otherwise unavailable, try restoring default settings using the **Reset all settings** item in the setup menu (\square 153). Note, however, that wireless network profiles, copyright information, and other usergenerated entries will also be reset. We recommend that you save settings using the **Save/load settings** option in the setup menu before performing a reset.

Problems and Solutions

Solutions to some common issues are listed below.

Battery/Display

The camera is on but does not respond: Wait for recording to end. If the problem persists, turn the camera off. If the camera does not turn off, remove and reinsert the battery or, if you are using an AC adapter, disconnect and reconnect the AC adapter. Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by removing or disconnecting the power source.

The viewfinder or monitor does not turn on: Choose a different monitor mode using the monitor mode button.

The viewfinder is out of focus: Rotate the diopter adjustment control to focus the viewfinder. If this does not correct the problem, select **AF-S**, single-point AF, and the center focus point, and then frame a high-contrast subject in the center focus point and press the shutter-release button halfway to focus the camera. With the camera in focus, use the diopter adjustment control to bring the subject into clear focus in the viewfinder.

The displays turn off without warning: Choose longer delays for Custom Setting c3 (**Power off delay**).

The control panel is unresponsive and dim: Control panel response times and brightness vary with temperature.

Shooting

The camera takes time to turn on: Delete files or folders.

The shutter-release is disabled:

- The memory card is full.
- Release locked is selected for Slot empty release lock in the setup menu and no memory card is inserted.
- Mode S selected with Bulb or Time chosen for shutter speed.

The camera is slow to respond to the shutter-release button: Select **Off** for Custom Setting d4 (**Exposure delay mode**).

Only one shot is taken each time the shutter-release button is pressed in continuous release modes: Turn HDR off.

Photos are out of focus: To focus using autofocus, select **AF-S**, **AF-C**, or **AF-F** for focus mode. If the camera is unable to focus using autofocus (\square 54), use manual focus or focus lock.

Beeps do not sound:

- Off is selected for **Beep options** > **Beep on/off** in the setup menu.
- AF-C is selected for focus mode.
- On is selected for Silent photography in the photo shooting menu.

The full range of shutter speeds is not available: A flash in use. Flash sync speed can be selected using Custom Setting e1 (Flash sync speed); when using compatible flash units, choose 1/200 s (Auto FP) to access the full range of shutter speeds.

Focus does not lock when the shutter-release button is pressed halfway: When AF-C is selected for focus mode, focus can be locked by pressing the center of the sub-selector.

The focus point cannot be changed: Focus-point selection is unavailable in auto-area AF: choose another AF-area mode.

The camera is slow to record photos: Turn long exposure noise reduction off.

Photographs and movies do not appear to have the same exposure as the preview shown in the display: To preview the effects of changes to settings that affect exposure and color, select **On** for Custom Setting d8 (**Apply settings to live view**). Note that changes to **Monitor brightness** and **Viewfinder brightness** have no effect on images recorded with the camera.

Flicker or banding appears in movie mode: Select Flicker reduction in the movie shooting menu and choose an option that matches the frequency of the local AC power supply.

Bright regions or bands appear in the view through the lens: The shot is being framed under flashing sign, flash, or other light source with brief duration.

Smudges appear in photographs: Clean the front and rear lens elements. If the problem persists, perform image sensor cleaning.

Shooting ends unexpectedly or does not start: Shooting may end automatically to prevent damage to the camera's internal circuits if the ambient temperature is high or the camera has been used extensively for burst shooting, movie recording, or the like. If you are unable to shoot because the camera has overheated, wait for the internal circuits to cool and then try again. Note that the camera may feel warm to the touch, but this does not indicate a malfunction.

Image artifacts appear in the display during shooting: "Noise" (randomly-spaced bright pixels, fog, or lines) and unexpected colors may appear if you zoom in on the view through the lens. Randomly-spaced bright pixels, fog, or bright spots may also arise as a result of increases in the temperature of the camera's internal circuits during shooting; turn the camera off when it is not in use. At high ISO sensitivities, noise may become more noticeable in long exposures or in pictures recorded when the camera temperature is elevated. Note that the distribution of noise in the display may differ from that in the final picture. To reduce noise, adjust settings such as ISO sensitivity, shutter speed, or Active D-Lighting.

The camera cannot measure white balance: The subject is too dark or too bright. Images cannot be selected as source for preset white balance: The images in question were not created with the Z7.

White balance bracketing is unavailable:

- An NEF (RAW) or NEF+JPEG image quality option is selected for image quality.
- Multiple exposure shooting is on.

The effects of Picture Controls differ from image to image: Auto is selected for Set Picture Control, a Picture Control based on Auto is selected, or A (auto) is selected for Quick sharp, contrast, or saturation. For consistent results over a series of photographs, choose another setting.

Metering cannot be changed: Autoexposure lock is in effect.

Exposure compensation cannot be used: Choose mode P, S, or A.

Noise (reddish areas or other artifacts) appears in long time-exposures: Enable long exposure noise reduction.

The AF-assist illuminator does not light:

- Select On for Custom Setting a12 (Built-in AF-assist illuminator).
- The illuminator does not light in movie mode or when AF-C or MF is selected for focus mode.

Sound is not recorded with movies: Microphone off is selected for Microphone sensitivity in the movie shooting menu.

Playback

NEF (RAW) images are not played back: The pictures were taken at image qualities of NEF + JPEG.

The camera does not display pictures recorded with other cameras: Pictures recorded with other makes of camera may not be displayed correctly.

Some photos are not displayed during playback: Select All for Playback folder.

"Tall" (portrait) orientation photos are displayed in "wide" (landscape) orientation:

- Select **On** for **Rotate tall** in the playback menu.
- The photos are displayed in image review.
- The camera was pointed up or down when photo was taken.

Pictures cannot be deleted: The pictures are protected. Remove protection.

Pictures cannot be retouched: The picture cannot be edited with this camera.

The camera displays a message stating that the folder contains no images: Select All for Playback folder.

Pictures cannot be printed: NEF (RAW) and TIFF photos cannot be printed by direct USB connection. Transfer the photos to a computer and print them using Capture NX-D. NEF (RAW) photos can be saved in JPEG format using the NEF (RAW) processing option in the retouch menu.

Pictures are not displayed on HDMI devices: Confirm that an HDMI cable (available separately) is connected.

Output to HDMI devices does not function as expected:

- Check that the HDMI cable is correctly connected.
- Select Off for HDMI > Advanced > External recording control in the setup menu.
- Check again after selecting **Reset all settings** in the setup menu.

The Image Dust Off option in Capture NX-D does not have desired effect: Image sensor cleaning changes the position of dust on the image sensor. Dust off reference data recorded before image sensor cleaning is performed cannot be used with photographs taken after image sensor cleaning is performed; similarly, dust off reference data recorded after image sensor cleaning is performed cannot be used with photographs taken before image sensor cleaning is performed.

Computers do not display NEF (RAW) images the same way as the camera does: Third-party software does not display effects of Picture Controls, Active D-Lighting, vignette control, or the like. Use Capture NX-D or ViewNX-i. Pictures cannot be transferred to a computer: The computer operating system is not compatible with the camera or image transfer software. Use a card reader or card slot to copy the pictures to a computer.

Bluetooth and Wi-Fi (Wireless Networks)

Smart devices do not display the camera SSID (network name):

- Confirm that **Disable** is selected for **Airplane mode** in the camera setup menu.
- Confirm that Enable is selected for Connect to smart device > Pairing (Bluetooth) > Bluetooth connection in the camera setup menu.
- Try turning the smart device Wi-Fi off and then on again.

The camera cannot connect to wireless printers and other wireless devices: This camera can connect only to computers and smart devices.

Miscellaneous

The date of recording is not correct: The camera clock is less accurate than most watches and household clocks. Check the clock regularly against more accurate timepieces and reset as necessary.

Some menu items cannot be selected: Some options are not available at certain combinations of settings or when no memory card is inserted. Note that the **Battery info** option is not available when camera is powered by an AC adapter and power connector (available separately) or by a charging AC adapter.

Indicators and Error Messages

This section lists the indicators and error messages that appear in the control panel and camera display.

Indicators

The following indicators appear in the control panel and/or camera display:

Indicator				
Camera		Ducklass	Solution	
display	panel	Problem	55.00.00	
4_4		Low battery.	Ready a fully-charged spare battery.	
€# (flashes)		Battery exhausted.	Recharge or replace battery.	
		Battery info unavailable.	Battery cannot be used. Contact Nikon-authorized service representative.	
(IIdSIIES)	Battery not supported.	Replace with Nikon battery.		
		Battery temperature high.	Remove battery and wait for it to cool.	
► ◀ (flashes)	_	Camera unable to focus using autofocus.	Change composition or focus manually.	
F		Lens is not correctly attached.	Ensure that lens is correctly attached.	
Bulb (flashes) Time (flashes)		Bulb selected in mode S .	Change shutter speed or select	
		Time selected in mode S.		
	i sy ihes)	Processing in progress.	Wait until processing is complete.	

Indicator			
Camera display	Control panel	Problem	Solution
(flashes)		Flash has fired at full power; photo may be underexposed.	Check photo in display; if underexposed, adjust settings and try again.
(Exposure indicators and shutter speed or aperture display flash) Full (flashes)		Subject too bright; photo will be overexposed.	 Decrease ISO sensitivity. Use optional ND filter. In mode: S Increase shutter speed A Choose a smaller aperture (higher f-number)
		Subject too dark; photo will be underexposed.	 Increase ISO sensitivity. Use optional flash. In mode: S Lower shutter speed A Choose larger aperture (lower f-number)
		Memory insufficient to record further pictures at current settings, or camera has run out of file or folder numbers.	 Reduce quality or size. Delete pictures after copying important images to computer or other device. Insert new memory card.
_	rr shes)	Camera malfunction.	Release shutter. If error persists or appears frequently, consult Nikon-authorized service representative.

Error Messages

Error messages in the camera display are sometimes accompanied by indicators in the control panel.

Control					
Message panel Problem		Solution			
No memory card.	[-E-]	Camera cannot detect memory card.	Turn camera off and confirm that card is correctly inserted.		
Cannot access this memory card. Insert another card.	Card, Err (flashes)	Error accessing memory card.	 Use Nikon-approved card. If error persists after card has been repeatedly ejected and reinserted, card may be damaged. Contact retailer or Nikon-authorized service representative. 		
		Unable to create new folder.	Delete files or insert new memory card after copying important pictures to computer or other device.		
This card is not formatted. Format the card.	For (flashes)	Memory card has not been formatted for use in camera.	Format memory card or insert new memory card.		
Unable to start live view. Please wait.	_ _		Wait for the internal circuits to cool before resuming shooting.		
Folder contains no images.	_	No viewable pictures on memory card. No viewable pictures in folder(s) selected for playback.	Insert memory card containing viewable pictures. Use Playback folder item in playback menu to select folder containing viewable pictures.		

Message	Control Message panel Problem		Solution
Cannot display this file.	_	File was edited on computer or does not comply with DCF standards, or file is corrupt.	File cannot be viewed on camera.
Cannot select this file.	cannot be		Pictures created with other devices cannot be retouched.
This movie cannot be edited.	_	Selected movie cannot be edited.	 Movies created with other devices cannot be edited. Movies must be at least two seconds long.
Check printer.	_	Printer error.	Check printer. To resume, select Continue (if available) *.
Check paper.	_	Paper in printer is not of selected size.	Insert paper of correct size and select Continue *.
Paper jam.	Danoriam		Clear jam and select Continue *.
Out of paper.	_	Printer is out of paper.	Insert paper of selected size and select Continue *.
Check ink supply. — Ink error.		Ink error.	Check ink. To resume, select Continue *.
Out of ink. — Printer is out of ink.		Replace ink and select Continue *.	

^{*} See printer manual for more information.



Technical Notes


Read this chapter for information on the camera display, compatible accessories, cleaning and storing the camera, and device specifications.

The Camera Display and Control Panel

Refer to this section for information on the indicators in the camera display (monitor and viewfinder) and control panel. For illustrative purposes, the displays are shown with all indicators lit.

The Monitor: Photo Mode

The following indicators appear in the monitor in photo mode.

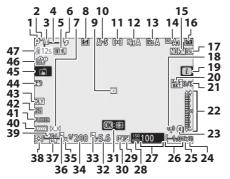


1 Shooting mode69	6 Flash mode107
2 Flexible program indicator 70	7 Focus indicator 60
3 User setting mode73	8 Release mode 82, 111
4 AF-area brackets55	9 Focus point42, 55
5 Interval timer indicator132	10 Focus mode53, 130, 137
"Clock not set" indicator 40	

11	AF-area mode55, 131, 137	25	"k" (appears when memory
12	Active D-Lighting 110, 129, 136		remains for over 1000
13	Picture Control93, 128, 135		exposures)34
14	White balance62, 98, 127, 134	26	Number of exposures
	Image quality 104, 126		remaining34, 229
	Image area119, 125, 133	27	ISO sensitivity78
	Image size106, 126	28	ISO sensitivity indicator78
	Wi-Fi connection indicator 109		Auto ISO sensitivity indicator79
	∄ icon13, 21	29	Exposure compensation
	Exposure and flash bracketing		indicator80
	indicator131		Flash compensation indicator 130
	WB bracketing indicator	31	Subject tracking57
	ADL bracketing indicator131	32	Aperture71
	HDR indicator131	33	Aperture lock icon146
	Multiple exposure indicator 131	34	Shutter speed70, 71
21	Position of current frame in	35	Flash sync indicator144
	bracketing sequence131	36	Shutter speed lock icon 146
	ADL bracketing amount 131	37	FV lock indicator182
	HDR exposure differential 131	38	Metering 108, 130, 137
	Number of exposures (multiple	39	Autoexposure (AE) lock87
22	exposure)131	40	Battery indicator34
22	Exposure indicator72 Exposure compensation		Flicker detection130
	display80	42	Silent photography66
	Bracketing progress indicator:		Electronic front-curtain
	Exposure and flash		shutter142
	bracketing131	43	Exposure delay mode 142
	WB bracketing131	44	Vibration reduction
	ADL bracketing131		indicator 112, 131
23	Bluetooth connection	45	Touch shooting 10, 58
	indicator152		Live view preview indicator 143
	Airplane mode152		Temperature warning 171
24	Flash-ready indicator183		1 - 1 - 1 - 1

Temperature Warnings


If the camera temperature becomes elevated, a temperature warning will be displayed together with a count-down timer (the timer turns red when the thirty second mark is reached). In some cases, the timer may be displayed immediately after the camera is turned on. When the timer reaches zero, the shooting display will turn off automatically to protect the camera's internal circuits.

■■ The Information Display

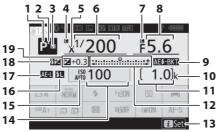

	Shooting mode9
2	Flexible program indicator70
3	User setting mode73
4	Shutter speed lock icon146
5	Flash sync indicator144
6	Shutter speed70, 71
7	Aperture lock icon146
8	Aperture71
9	Exposure and flash bracketing
	indicator131
	WB bracketing indicator 131
	ADL bracketing indicator 131
	HDR indicator131
	Multiple exposure indicator 131
10	"k" (appears when memory
	remains for over 1000
	exposures)34
11	Number of exposures
''	remaining34, 229
	Terriaining


	13
12	Exposure indicator72
	Exposure compensation
	display80
	Bracketing progress indicator:
	Exposure and flash
	bracketing 131
	WB bracketing131
	ADL bracketing131
13	icon13, 21
14	ISO sensitivity78
15	ISO sensitivity indicator78
	Auto ISO sensitivity indicator79
16	FV lock indicator 182
17	Autoexposure (AE) lock87
18	Flash compensation indicator 130
19	Exposure compensation
	indicator80
	Exposure compensation
	value80

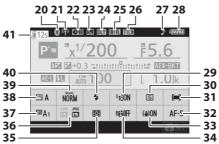

20 Bluetooth connection	29 Built-in Wi-Fi 109, 152
indicator152	30 Release mode 82, 111
Airplane mode152	31 AF-area mode55, 131, 137
Wi-Fi connection indicator 109	32 Focus mode53, 130, 137
22 Long exposure noise reduction	33 Vibration reduction 112, 131
indicator129	34 Active D-Lighting 110, 129, 136
23 Silent photography	35 Metering 108, 130, 137
shutter142	36 Image size106, 126
24 Exposure delay mode142	37 White balance62, 98, 127, 134
25 Interval timer indicator	38 Picture Control93, 128, 135
"Clock not set" indicator	39 Image quality 104, 126
26 Flash control mode130	40 Flash mode107
27 "Beep" indicator151	41 Temperature warning171
28 Battery indicator34	

The Monitor: Movie Mode

The following indicators appear in the monitor in movie mode.

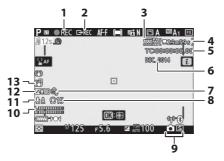


1	Recording indicator45	7 V	Vind noise reduction1	38
	"No movie" indicator46	8 H	leadphone volume1	38
2	External recording control 151	9 R	Release mode	
3	Frame size and rate/image		(still photography)	82
	quality116, 133, 134	10 S	ound level1	18
4	Time remaining45	11 N	Aicrophone sensitivity 118, 1	38
5	Time code138	12 F	requency response1	38
	File name 133			

The Viewfinder: Photo Mode

11 Image quality......104, 126


The following indicators appear in the viewfinder in photo mode.

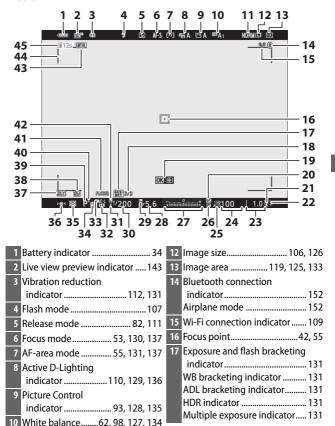

10	Position of current frame in	20	Amortura 71
10			Aperture71
	bracketing sequence	29	Aperture lock icon 146
	ADL bracketing amount	30	Shutter speed70, 71
	HDR exposure differential 131	31	Flash sync indicator144
	Number of exposures (multiple exposure) 131	32	FV lock indicator182
19	Subject tracking57	33	Autoexposure (AE) lock87
	Flash compensation indicator 130	34	User setting mode73
	"k" (appears when memory	35	Metering 108, 130, 137
•	remains for over	36	Focus indicator60
	1000 exposures)34	37	Exposure delay mode142
22	Flash-ready indicator183	38	Silent photography66
	Number of exposures		Electronic front-curtain
	remaining34, 229		shutter142
24	ISO sensitivity78	39	Shooting mode69
	ISO sensitivity indicator78	40	Flexible program indicator70
	Auto ISO sensitivity indicator79	41	Flicker detection130
26	Exposure compensation	42	Shutter speed lock icon146
	indicator80	43	Interval timer indicator 132
27	Exposure indicator72		"Clock not set" indicator40
	Exposure compensation	44	AF-area brackets55
	display80	45	Temperature warning 171
	Bracketing progress indicator:		
	Exposure and flash		
	bracketing131		
	WB bracketing131		
	ADI bracketing 131		

The Viewfinder: Movie Mode

The following indicators appear in the viewfinder in movie mode.

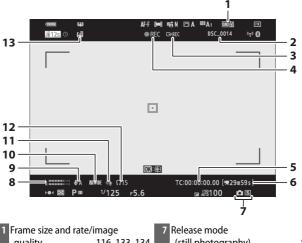

1	Frame size and rate/image	7	Release mode
	quality116, 133, 134		(still photography)82
2	File name133	8	Sound level118
3	External recording control151	9	Microphone sensitivity 118, 138
	Recording indicator45		
	"No movie" indicator46	11	Wind noise reduction138
5	Time code138	12	Headphone volume138
6	Time remaining 45	13	Electronic VR indicator 120, 138

The Control Panel



1 Shutter-speed lock icon146	8 Number of exposures
2 Shutter speed70, 71	remaining34, 229
3 Exposure compensation	9 Release mode82
indicator80	10 ISO sensitivity78
Exposure compensation value80	11 Flash compensation indicator 130
4 Aperture lock icon146	"Flash off" icon107
5 Aperture71	12 Flash sync indicator 144
6 Battery indicator34	
7 "k" (appears when memory remains for over 1000 exposures)34	

The Nikon Creative Lighting System

Nikon's advanced Creative Lighting System (CLS) offers improved communication between the camera and compatible flash units for improved flash photography.

CLS-Compatible Flash Units

The following features are available with CLS-compatible flash units:

			SB-5000	SB-910 SB-900 SB-800	SB-700	SB-600	SB-500	SU-800	SB-R200	SB-400	SB-300
	i-TTL	i-TTL balanced fill flash ¹	~	~	~	~	~	_	_	~	~
S	I-IIL	Standard i-TTL fill flash	/ 2	✓ ²	~	✓ 2	~	_	_	~	~
ingl	⊗a	Auto aperture	~	✓ 3	_	_	_	_	_	_	_
Single flash	A	Non-TTL auto	_	✓ 3	_	_	_	_	_	_	_
55	GN	Distance-priority manual	~	~	~	_	_	_	_	_	_
	М	Manual	~	~	~	~	✓ ⁴	_	_	✓ 4	✓ 4
	RPT	Repeating flash	~	~	_	_	_	_	_	_	

				SB-5000 >	SB-910 SB-900 SB-800	SB-700	SB-600	SB-500	SU-800	SB-R200	SB-400	SB-300	
		Remot	e flash control	~	~	~	_	✓ 4	1	_	_	_	
		i-TTL	i-TTL	~	~	~	_	✓ 4	_	_	_		
용	Master	[A:B]	Quick wireless flash control	~	_	~	_	_	√ 5	_	_		
tical	ster	⊗A	Auto aperture	~	~	_	_	_	_	_	_	—	
ΙAd		A	Non-TTL auto	_	_	_	_	_	_	_	_	<u> </u>	
/anc		М	Manual	~	~	~	_	✓ ⁴	_	_	_	$\overline{}$	
ed ₩		RPT	Repeating flash	~	~	_	_	_	_	_	_	<u> </u>	
/irel		i-TTL	i-TTL	~	~	~	1	~	_	~	_	_	
Optical Advanced Wireless Lighting	, ,	[A:B]	Quick wireless flash control	~	~	~	~	~	_	~	_	_	
ing	ote	⊗ a/a	Auto aperture/ Non-TTL auto	✓ 6	✓ 6	_	_	_	_	_	_	_	
			М	Manual	~	~	~	~	~	_	~	_	_
		RPT	Repeating flash	~	~	~	~	~	_	_	_	<u> </u>	
Radio-controlled Advanced Wireless Lighting			✓ 7	_	_	_	_	_	_	_	_		
Color information communication (flash)			~	~	~	~	~	_	_	~	~		
Color information communication (LED light)			_	_	_	_	~	_	_	_	_		
Auto FP High-Speed Sync ⁸			~	~	~	~	~	~	~	_	<u> </u>		
FV lock ⁹			~	~	~	~	~	~	~	~	~		
Red-eye reduction			~	~	~	~	~	_	_	~	_		
Camera modeling illumination			~	~	~	~	~	~	~	_	_		
Uni	ified	flash co	ontrol	~	_	_	_	~	_	_	~	~	
Camera flash unit firmware update				~	✓ 10	~	_	~	_	_	_	~	

- 1 Not available with spot metering.
- 2 Can also be selected with flash unit.
- 3 **SA/A** mode selection performed on flash unit using custom settings.
- 4 Can only be selected using the camera **Flash control** option.
- 5 Available only during close-up photography.
- 6 Choice of **A** and **A** depends on the option selected with the master flash.
- 7 Supports the same features as remote flash units with optical AWL.
- 8 Available only in i-TTL, \otimes A, A, GN, and M flash-control modes.
- 9 Available only in i-TTL flash control mode or when the flash is set to emit monitor pre-flashes in A or A flash control mode.
- 10 Firmware updates for the SB-910 and SB-900 can be performed from the camera.

The SU-800 Wireless Speedlight Commander

When mounted on a CLS-compatible camera, the SU-800 can be used as a commander for SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, or SB-R200 flash units in up to three groups. The SU-800 itself is not equipped with a flash.

Modeling Illumination

Pressing the control to which **Preview** has been assigned using Custom Setting f2 (**Custom control assignment**) causes CLS-compatible flash units to emit a modeling flash. This feature can be used with Advanced Wireless Lighting to preview the total lighting effect achieved with multiple flash units; the effect is best viewed by looking directly at the subject rather than at the camera display. Modeling illumination can be turned off using Custom Setting e5 (**Modeling flash**).

▼ Flash Compensation

In i-TTL and auto aperture (

A) flash control modes, the flash compensation selected with the optional flash unit or the camera

Flash control option is added to the flash compensation selected with the Flash compensation option in the photo shooting menu.

Other Flash Units

The following flash units can be used in non-TTL auto and manual modes.

Flash	Flash unit	SB-80DX, SB-28DX, SB-28, SB-26, SB-25, SB-24	SB-50DX, SB-23, SB-29, SB-21B, SB-29S	SB-30, SB-27 ¹ , SB-22S, SB-22, SB-20, SB-16B, SB-15
A	Non-TTL auto	~	_	~
М	Manual	V	V	V
555	Repeating flash	V	_	_
REAR	Rear-curtain sync ²	V	V	~

¹ Flash mode is automatically set to TTL and shutter-release is disabled. Set flash unit to A (non-TTL auto flash).

2 Available when camera is used to select flash mode.

☑ Using FV Lock with Optional Flash Units

FV lock is available with optional flash units in TTL and (where supported) monitor pre-flash $\mathfrak{B}A$ and monitor pre-flash A flash control modes (see the manual provided with the flash unit for more information). Note that when Advanced Wireless Lighting is used to control remote flash units, you will need to set the flash control mode for the master or at least one remote group to TTL, $\mathfrak{B}A$, or A. The area metered for FV lock is as follows:

Flash unit	Flash mode	Metered area	
Stand-alone flash unit	i-TTL	6-mm circle in center of frame	
Statiu-alone mash unit	⊗a	Area metered by flash exposure meter	
Used with other flash units	i-TTL	Entire frame	
(Advanced Wireless Lighting)	⊗a	Area metered by flash exposure meter	
(Maraneca Wileless Eighting)	A	Area metereu by nasn exposure meter	

Notes on Optional Flash Units

Refer to the flash unit manual for detailed instructions. If the unit supports CLS, refer to the section on CLS-compatible digital SLR cameras. Note that the Z 7 is not included in the "digital SLR" category in the SB-80DX, SB-28DX, and SB-50DX manuals.

i-TTL flash control can be used at ISO sensitivities between 64 and 12800. At values over 12800, the desired results may not be achieved at some ranges or aperture settings. If the flash-ready indicator (\$\frac{1}{2}\$) flashes for about three seconds after a photograph is taken in i-TTL or non-TTL auto mode, the flash has fired at full power and the photograph may be underexposed (CLS-compatible flash units only).

When an SC-series 17, 28, or 29 sync cable is used for off-camera flash photography, correct exposure may not be achieved in i-TTL mode. We recommend that you select standard i-TTL fill-flash. Take a test shot and view the results in the camera display.

In i-TTL, use the flash panel or bounce adapter provided with the flash unit. Do not use other panels such as diffusion panels, as this may produce incorrect exposure.

In mode **P**, the maximum aperture (minimum f-number) is limited according to ISO sensitivity, as shown below:

	Maximum aperture at ISO equivalent of:								
64	100	200	400	800	1600	3200	6400	12800	
3.5	4	4.8	5.6	6.7	8	9.5	11	13	

If the maximum aperture of the lens is smaller than given above, the maximum value for aperture will be the maximum aperture of the lens.

AF-assist illumination is provided by the camera, not the flash unit; the SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, and SB-400 do, however, provide red-eye reduction.

Noise in the form of lines may appear in flash photographs taken with an SD-9 or SD-8A high-performance battery pack attached directly to the camera. Reduce ISO sensitivity or increase the distance between the camera and the power pack.

Other Accessories

A variety of accessories are available for your Nikon camera.

it variety or	accessories are available for your tylkorreamera.
Power sources	EN-EL15b Rechargeable Li-ion Battery: Additional EN-EL15b batteries are available from local retailers and Nikon service representatives. EN-EL15a/EN-EL15 batteries can also be used. MH-25a Battery Charger: The MH-25a can be used to recharge EN-EL15b batteries. MH-25 battery chargers can also be used. EH-7P Charging AC Adapter: The EH-7P can be used to charge EN-EL15b batteries inserted in the camera (the battery only charges when the camera is off). It cannot be used to charge EN-EL15a/EN-EL15 batteries. EP-5B Power Connector, EH-5c and EH-5b AC Adapters: These accessories can be used to power the camera for extended periods. The EP-5B is required to connect the camera to the EH-5c/EH-5b; see "Attaching a Power Connector and AC Adapter" (□ 189) for details.
Filters	 Neutral Color (NC) filters can be used to protect the lens. To prevent ghosting, avoid using filters when the subject is framed against a bright light, or when a bright light source is in the frame. Center-weighted metering is recommended if matrix metering fails to produce the desired results for filters with exposure factors (filter factors) over 1× (Y44, Y48, Y52, O56, R60, X0, X1, C-PL, ND2S, ND4, ND4S, ND8, ND8S, ND400, A2, A12, B2, B8, B12). See the filter manual for details. Filters intended for special-effects photography may interfere with autofocus or the in-focus indicator (●).
Mount adapters	FTZ Mount Adapter (🕮 222)

Remote cords	MC-DC2 Remote Cord (length 1 m/3 ft 4 in.): When connected
	to the camera accessory terminal, the MC-DC2 can be
	used to release the shutter remotely.
GPS units	GP-1/GP-1A GPS Unit: When connected to the camera
	accessory terminal, existing GP-1/GP-1A units can be
	used to record the current latitude, longitude, altitude,
	and UTC (Universal Coordinated Time) with pictures
	taken with the camera. Note that production of GP-1/
	GP-1A units has ended.
USB cables	• UC-E24 USB cable: A USB cable with a type C connector for
	connection to the camera.
	• UC-E25 USB cable: A USB cable with two type C connectors.
HDMI cables	HC-E1 HDMI Cable: An HDMI cable with a type C connector
	for connection to the camera and a type A connector for
	connection to HDMI devices.
Accessory shoe	BS-1 Accessory Shoe Cover: A cover protecting the accessory
covers	shoe when no flash unit is attached.
Body caps	BF-N1 Body Cap: The body cap prevents dust entering the
	camera when a lens is not in place.
Wireless	WT-7 Wireless Transmitter: Use the WT-7 to upload pictures
transmitters	over a wireless network, to control the camera from a
	computer running Camera Control Pro 2 (available
	separately), or to take and browse pictures remotely from
	a computer or smart device.
	Note : A wireless network and some basic network knowledge is required
	when using a wireless transmitter. Be sure to update the wireless transmitter
	software to the latest version.

Wireless remote controllers

- WR-R10 Wireless Remote Controller/WR-T10 Wireless Remote
 Controller: When a WR-R10 wireless remote controller is
 attached to the accessory terminal, the camera can be
 controlled wirelessly using a WR-T10 wireless remote
 controller (when connecting the WR-R10, be sure the
 cover for the accessory terminal and the USB and HDMI
 connectors is fully open). The WR-R10 can also be used
 to control radio-controlled flash units. For synchronized
 release involving more than one camera, ready multiple
 cameras with paired WR-R10 units attached.
- WR-1 Wireless Remote Controller: WR-1 units are used with WR-R10 or WR-T10 wireless remote controllers or with other WR-1 remote controllers, with the WR-1 units functioning as either transmitters or receivers. As a transmitter, the WR-1 can be used to control the camera and take pictures via signals transmitted to a receiver (a WR-R10 or a second WR-1) connected to the camera accessory terminal, while as a receiver it receives remote commands from a WR-T10 or a separate WR-1 transmitter.

Note: Be sure the firmware for the WR-R10 and WR-1 has been updated to the latest version (WR-R10 firmware version 3.0 or later and WR-1 firmware version 1.0.1 or later). For information on firmware updates, see the Nikon website for your area.

Viewfinder eyepiece accessories

DK-29 Rubber Eyecup: The DK-29 makes the image in the viewfinder easier to see, preventing eye fatigue.





Microphones • ME-1 Stereo Microphone: Connect the ME-1 to the camera microphone jack to record stereo sound and reduce the chance of picking up equipment noise (such as the sounds produced by the lens during autofocus). • ME-W1 Wireless Microphone: Use this wireless Bluetooth microphone for off-camera recording. Software Camera Control Pro 2: Control the camera remotely from a computer and save photographs directly to the computer hard disk. When Camera Control Pro 2 is used to capture photographs directly to the computer, a PC connection indicator (PC) will appear in the control panel.

Note: Use the latest versions of Nikon software; see the Nikon website for your region for the latest information on supported operating systems. At default settings, Nikon Message Center 2 will periodically check for updates to Nikon software and firmware while you are logged in to an account on the computer and the computer is connected to the Internet. A message is automatically displayed when an update is found.

Availability may vary with country or region. See our website or brochures for the latest information

Attaching and Removing the Accessory Shoe Cover


The BS-1 accessory shoe cover slides into the accessory shoe as shown. To remove the cover, hold the camera firmly, press the cover down with a thumb and slide it in the direction shown.





The HDMI/USB Cable Clip

To prevent accidental disconnection, attach the supplied clip to HDMI cables or to the supplied USB cable as shown (the illustration shows the USB cable; note that the clip may not fit all third-party HDMI cables). Keep the monitor in the storage position when using the cable clip.

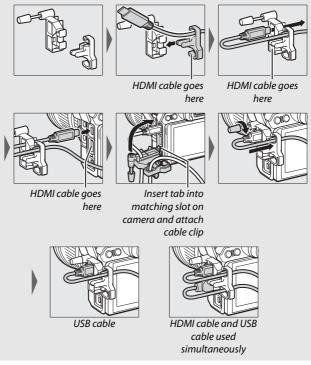

Attaching a Power Connector and AC Adapter

Turn the camera off before attaching an optional power connector and AC adapter.

1 Ready the camera.


Open the battery-chamber

- (1) and power connector
- (2) covers.




2 Insert the EP-5B power connector.

Be sure to insert the connector in the orientation shown, using the connector to keep the orange battery latch pressed to one side. The latch locks the connector in place when the connector is fully inserted.

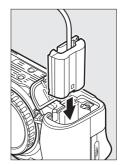

 3 Close the batterychamber cover. Position the power connector cable so that it passes through the power connector slot and close the battery-chamber cover.



4 Connect the EH-5c/EH-5b AC adapter.

Connect the AC adapter power cable to the AC socket on the AC adapter (3) and the power cable to the DC socket (4). A

→ icon is displayed when the camera is powered by the AC adapter and power connector.



Caring for the Camera

Learn how to store, clean, and care for your camera.

Storage

When the camera will not be used for an extended period, remove the battery and store it in a cool, dry area with the terminal cover in place. To prevent mold or mildew, store the camera in a dry, well-ventilated area. Do not store your camera with naphtha or camphor moth balls or in locations that:

- are poorly ventilated or subject to humidities of over 60%,
- are next to equipment that produces strong electromagnetic fields, such as televisions or radios, or
- are exposed to temperatures above 50 °C (122 °F) or below -10 °C (14 °F)

Cleaning

Do not use alcohol, thinner, or other volatile chemicals.

- Camera body: Use a blower to remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off sand or salt with a cloth lightly dampened in distilled water and dry thoroughly. Important: Dust or other foreign matter inside the camera may cause damage not covered under warranty.
- Lenses, viewfinder: Glass surfaces are easily damaged. Remove dust and lint with a blower. If using an aerosol blower, keep the can vertical to prevent the discharge of liquid. To remove fingerprints and other stains, apply a small amount of lens cleaner to a soft cloth and clean with care.
- Monitor: Remove dust and lint with a blower. When removing fingerprints and other stains, wipe the surface lightly with a soft cloth or chamois leather. Do not apply pressure, as this could result in damage or malfunction.

Image Sensor Cleaning

If you suspect that dirt or dust on the image sensor is appearing in photographs, you can clean the sensor using the **Clean image sensor** option in the setup menu. The sensor can be cleaned at any time using the **Clean now** option, or cleaning can be performed automatically when the camera is turned off. If image sensor cleaning fails to resolve the problem, contact a Nikonauthorized service representative.

II "Clean Now"

Holding the camera base down, select **Clean image sensor** in the setup menu, then highlight **Clean now** and press ®. The camera will check and clean the image sensor. No other operations can be performed until cleaning is complete; do not remove or disconnect the power source until cleaning ends and the setup menu is displayed.







Image Sensor Cleaning

Using camera controls during shutdown interrupts image sensor cleaning.

If image sensor cleaning is performed several times in succession, image sensor cleaning may be temporarily disabled to protect the camera's internal circuitry. Cleaning can be performed again after a short wait.

II "Automatic Cleaning"

Choose from the following options:

(A)IIIII (IA) AT	The image sensor is automatically cleaned during shutdown each time the camera is turned off.
Cleaning off	Automatic image sensor cleaning off.

1 Select Automatic Cleaning.
Display the Clean image sensor
menu as described in "'Clean Now'"
(□ 192). Highlight Automatic
Cleaning and press ⊕.



2 Select an option. Highlight an option and press ®.



▼ Servicing the Camera and Accessories

The camera is a precision device and requires regular servicing. Nikon recommends that the camera be inspected by the original retailer or a Nikon-authorized service representative once every one to two years, and that it be serviced once every three to five years (note that fees apply to these services). Frequent inspection and servicing are particularly recommended if the camera is used professionally. Any accessories regularly used with the camera, such as lenses or optional flash units, should be included when the camera is inspected or serviced.

Caring for the Camera and Battery: Cautions

Do not drop: The product may malfunction if subjected to strong shocks or vibration.

Keep dry: This product is not waterproof, and may malfunction if immersed in water or exposed to high levels of humidity. Rusting of the internal mechanism can cause irreparable damage.

Avoid sudden changes in temperature: Sudden changes in temperature, such as those that occur when entering or leaving a heated building on a cold day, can cause condensation inside the device. To prevent condensation, place the device in a carrying case or plastic bag before exposing it to sudden changes in temperature.

Keep away from strong magnetic fields: Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the display, damage data stored on the memory card, or affect the product's internal circuitry.

Do not leave the lens pointed at the sun: Do not leave the lens pointed at the sun or other strong light source for an extended period. Intense light may cause the image sensor to deteriorate or produce a white blur effect in photographs.

Turn the product off before removing or disconnecting the power source: Do not unplug the product or remove the battery while the product is on or while images are being recorded or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry. To prevent an accidental interruption of power, avoid carrying the product from one location to another while an AC adapter is connected.

Cleaning: When cleaning the camera body, use a blower to gently remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off any sand or salt using a cloth lightly dampened in pure water and then dry the camera thoroughly. In rare instances, static electricity may cause the LCD displays to light up or go dark. This does not indicate a malfunction, and the display will soon return to normal.

Lenses, viewfinders, and other glass elements are easily damaged. Dust and lint should be gently removed with a blower. When using an aerosol blower, keep the can vertical to prevent discharge of liquid. To remove fingerprints and other stains from glass surfaces, apply a small amount of lens cleaner to a soft cloth and wipe the glass carefully.

Do not touch the image sensor: Under no circumstances should you exert pressure on the image sensor, poke it with cleaning tools, or subject it to powerful air currents from a blower. These actions could scratch or otherwise damage the sensor. For information on cleaning the image sensor, see "Image Sensor Cleaning" (

192).



Image sensor

Lens contacts: Keep the lens contacts clean and be careful not to touch them with your fingers or with tools or other objects.

Storage: To prevent mold or mildew, store the camera in a dry, well-ventilated area. If you are using an AC adapter, unplug the adapter to prevent fire. If the product will not be used for an extended period, remove the battery to prevent leakage and store the camera in a plastic bag containing a desiccant. Do not, however, store the camera case in a plastic bag, as this may cause the material to deteriorate. Note that desiccant gradually loses its capacity to absorb moisture and should be replaced at regular intervals.

To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting it away.

Store the battery in a cool, dry place. Replace the terminal cover before putting the battery away.

Notes on the monitor and viewfinder: These displays are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.

Images in the monitor may be difficult to see in a bright light. Do not apply pressure to the monitor, as this could cause damage or malfunction. Dust or lint can be removed with a blower. Stains can be removed by wiping lightly with a soft cloth or chamois leather. Should the monitor break, care should be taken to avoid injury from broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes and mouth.

Should you feel unwell or experience any of the following symptoms while framing shots in the viewfinder, discontinue use until your condition improves: nausea, eye pain, eye fatigue, dizziness, headache, stiffness in your neck or shoulders, carsickness, or loss of hand-eye coordination. The same applies should you start to feel unwell when watching the shooting display flicker rapidly on and off during burst photography.

Noise in the form of lines may in rare cases appear in pictures that include bright lights or back-lit subjects.

The battery and charger: Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries and chargers:

- Use only batteries approved for use in this equipment.
- Do not expose the battery to flame or excessive heat.
- Keep the battery terminals clean.
- Turn the product off before replacing the battery.
- The battery may become hot while in use. Observe caution when handling the battery immediately after use.

- Remove the battery from the camera or charger when not in use and replace the terminal cover. These devices draw minute amounts of charge even when off and could draw the battery down to the point that it will no longer function. If the battery will not be used for some time, insert it in the camera and run it flat before removing it from the camera for storage. The battery should be stored in a cool location with an ambient temperature of 15 °C to 25 °C (59 °F to 77 °F; avoid hot or extremely cold locations). Repeat this process at least once every six months.
- Turning the camera on or off repeatedly when the battery is fully discharged will shorten battery life. Batteries that have been fully discharged must be charged before use.
- The internal temperature of the battery may rise while the battery is in
 use. Attempting to charge the battery while the internal temperature is
 elevated will impair battery performance, and the battery may not
 charge or charge only partially. Wait for the battery to cool before
 charging.
- Charge the battery indoors at ambient temperatures of 5 °C to 35 °C (41 °F to 95 °F). Do not use the battery at ambient temperatures below 0 °C (32 °F) or above 40 °C (104 °F); failure to observe this precaution could damage the battery or impair its performance. Capacity may be reduced and charging times increase at battery temperatures from 0 °C (32 °F) to 15 °C (59 °F) and from 45 °C (113 °F) to 60 °C (140 °F). The battery will not charge if its temperature is below 0 °C (32 °F) or above 60 °C (140 °F).
- If the CHARGE lamp flashes quickly (about eight times a second) during charging, confirm that the temperature is in the correct range and then unplug the charger and remove and reinsert the battery. If the problem persists, cease use immediately and take battery and charger to your retailer or a Nikon-authorized service representative.
- Do not move the charger or touch the battery during charging. Failure
 to observe this precaution could in very rare instances result in the
 charger showing that charging is complete when the battery is only
 partially charged. Remove and reinsert the battery to begin charging
 again.

- Battery capacity may temporarily drop if the battery is charged at low temperatures or used at a temperature below the temperature at which it was charged. If the battery is charged at a temperature below 5 °C (41 °F), the battery life indicator in the **Battery info** display may show a temporary decrease.
- Continuing to charge the battery after it is fully charged can impair battery performance.
- A marked drop in the time a fully charged battery retains its charge when used at room temperature indicates that it requires replacement. Purchase a new EN-EL15b battery.
- The supplied power cable and AC wall adapter are for use with the MH-25a only. Use the charger with compatible batteries only. Unplug when not in use.
- Do not short the charger terminals. Failure to observe this precaution could result in overheating and damage to the charger.
- Charge the battery before use. When taking photographs on important
 occasions, ready a spare battery and keep it fully charged. Depending
 on your location, it may be difficult to purchase replacement batteries
 on short notice. Note that on cold days, the capacity of batteries tends
 to decrease. Be sure the battery is fully charged before taking
 photographs outside in cold weather. Keep a spare battery in a warm
 place and exchange the two as necessary. Once warmed, a cold battery
 may recover some of its charge.
- Recycle rechargeable batteries in accord with local regulations, being sure to first insulate the terminals with tape.

The charging AC adapter: Observe the precautions below when using the charging AC adapter.

- Do not move the camera during charging. Failure to observe this
 precaution could in very rare instances result in the camera showing
 that charging is complete when the battery is only partially charged.
 Disconnect and reconnect the adapter to begin charging again.
- Do not short the adapter terminals. Failure to observe this precaution could result in overheating and damage to the adapter.
- Unplug the adapter when it is not in use.

Specifications

Nikon Z 7 Digital Camera

	<u> </u>
Туре	
Туре	Digital camera with support for
	interchangeable lenses
Lens mount	Nikon Z mount
Lens	
Compatible lenses	Z mount NIKKOR lenses
	• F mount NIKKOR lenses with mount adapter;
	restrictions may apply
Effective pixels	
Effective pixels	45.7 million
Image sensor	
Image sensor	35.9 × 23.9 mm CMOS sensor (Nikon FX format)
Total pixels	46.89 million
Dust-Reduction System	Image Dust Off reference data (requires
	Capture NX-D); image sensor cleaning
Storage	
Image size (pixels)	• FX (36×24) image area
	8256 × 5504 (Large: 45.4 M)
	6192 × 4128 (Medium: 25.6 M)
	4128 × 2752 (Small: 11.4 M)
	• DX (24×16) image area
	5408 × 3600 (Large: 19.5 M)
	4048 × 2696 (Medium: 10.9 M)
	2704 × 1800 (Small: 4.9 M)
	• 5 : 4 (30×24) image area
	6880 × 5504 (Large: 37.9 M)
	5152 × 4120 (Medium: 21.2 M)
	3440 × 2752 (Small: 9.5 M)
	• 1 : 1 (24×24) image area
	5504 × 5504 (Large: 30.3 M)
	4128 × 4128 (Medium: 17.0 M)
	2752 × 2752 (Small: 7.6 M)

Storage	
Image size (pixels)	• 16 : 9 (36×20) image area
	8256 × 4640 (Large: 38.3 M)
	6192 × 3480 (Medium: 21.5 M)
	4128 × 2320 (Small: 9.6 M)
	Photographs taken during movie recording at a frame
	size of 3840 \times 2160: 3840 \times 2160
	Photographs taken during movie recording at other
	frame sizes: 1920×1080
File format	NEF (RAW): 12 or 14 bit (lossless compressed, compressed, or uncompressed); large, medium, and small available (medium and small images are recorded at a bit depth of
	12 bits using lossless compression)
	• TIFF (RGB)
	 JPEG: JPEG-Baseline compliant with fine (approx. 1 : 4), normal (approx. 1 : 8), or basic (approx. 1 : 16) compression; optimal quality compression available NEF (RAW)+JPEG: Single photograph recorded in
	both NEF (RAW) and JPEG formats
Picture Control System	Auto, Standard, Neutral, Vivid, Monochrome, Portrait, Landscape, Flat, Creative Picture Controls (Dream, Morning, Pop, Sunday, Somber, Dramatic, Silence, Bleached, Melancholic, Pure, Denim, Toy, Sepia, Blue, Red, Pink, Charcoal, Graphite, Binary, Carbon); selected Picture Control can be modified; storage for custom Picture Controls
Media	XQD memory cards
File system	DCF 2.0, Exif 2.31, PictBridge
Viewfinder	
Viewfinder	1.27-cm/0.5-in. approx. 3690k-dot (Quad VGA) OLED with color balance and auto and 11-level manual brightness controls
Frame coverage	Approx. 100% horizontal and 100% vertical
Magnification	Approx. $0.8 \times (50 \text{ mm lens at infinity, } -1.0 \text{ m}^{-1})$

Viewfinder	
	21 mm (–1.0 m ⁻¹ ; from center surface of
Eyepoint	, ,
	viewfinder eyepiece lens)
Diopter adjustment	$-4 - +2 \text{ m}^{-1}$
Eye sensor	Automatically switches between monitor and
	viewfinder displays
Shutter	
Туре	Electronically-controlled vertical-travel focal-
	plane mechanical shutter; electronic front-
	curtain shutter; electronic shutter
Speed	$\frac{1}{8000}$ – 30 s in steps of $\frac{1}{3}$ or $\frac{1}{2}$ EV, bulb, time,
	X200
Flash sync speed	$X = \frac{1}{200}$ s; synchronizes with shutter at $\frac{1}{200}$ s or
	slower; Auto FP High-Speed sync supported
Release	
Release mode	Single frame, low-speed continuous, high-
	speed continuous, high-speed continuous
	(extended), self-timer
Approximate maximum	• Low-speed continuous: 1–5 fps
frame advance rate	• High-speed continuous: 5.5 fps (14-bit NEF/RAW:
(measured under Nikon-	5 fps)
specified test conditions)	High-speed continuous (extended): 9 fps (14-bit NEF/RAW: 8 fps)
Self-timer	2 s, 5 s, 10 s, 20 s; 1–9 exposures at intervals of
	0.5, 1, 2, or 3 s
Exposure	
Metering system	TTL metering using camera image sensor
Metering mode	Matrix metering
•	Center-weighted metering: Weight of 75% given
	to 12 mm circle in center of frame; weighting
	can instead be based on average of entire
	frame
	• Spot metering: Meters 4 mm circle (about 1.5%
	of frame) centered on selected focus point
	Highlight-weighted metering

Exposure	
Range (ISO 100, f/2.0 lens,	-3 - +17 EV
20 °C/68 °F)	
Mode	Auto (🛱); programmed auto with flexible
	program (P); shutter-priority auto (S); aperture-
	priority auto (A); manual (M); user settings (U1,
	U2, U3)
Exposure compensation	-5 - +5 EV in increments of ⅓ or ½ EV available
	in modes P, S, A, and M
Exposure lock	Luminosity locked at detected value
ISO sensitivity	ISO 64 – 25600 in steps of 1/3 or 1/2 EV. Can also
(Recommended Exposure	be set to approx. 0.3, 0.5, 0.7, or 1 EV (ISO 32
Index)	equivalent) below ISO 64 or to approx. 0.3, 0.5,
	0.7, 1, or 2 EV (ISO 102400 equivalent) above
	ISO 25600; auto ISO sensitivity control available
Active D-Lighting	Can be selected from Auto, Extra high, High,
	Normal, Low, or Off
Multiple exposure	Add, average, lighten, darken
Other options	HDR (high dynamic range), photo mode flicker
	reduction
Focus	
Autofocus	Hybrid phase-detection/contrast AF with AF
	assist
Detection range (ISO 100,	-1 - +19 EV (-4 - +19 EV with low-light AF)
f/2.0 lens, 20 °C/68 °F)	
Lens servo	Autofocus (AF): Single-servo AF (AF-S);
	continuous-servo AF (AF-C); full-time AF (AF-F;
	available only in movie mode); predictive
	focus tracking
	Manual focus (M): Electronic rangefinder can be
	used
Focus points	493 (single-point AF)
AF-area mode	Pinpoint, single-point, and dynamic-area AF
	(pinpoint and dynamic-area AF available in
	photo mode only); wide-area AF (S); wide-area
	photo mode only), which area / it (5), which area

Focus	
Focus lock	Focus can be locked by pressing shutter-release
	button halfway (single-servo AF) or by pressing
	center of sub-selector
Vibration reduction (VR)	
Camera VR	5-axis image sensor shift
Lens VR	Lens shift (available with VR lenses)
Flash	
Flash control	TTL: i-TTL flash control; i-TTL balanced fill-flash is
	used with matrix, center-weighted, and
	highlight-weighted metering, standard i-TTL
	fill-flash with spot metering
Flash mode	Front-curtain sync, slow sync, rear-curtain sync,
	red-eye reduction, red-eye reduction with slow
	sync, slow rear-curtain sync, off
Flash compensation	$-3 - +1$ EV in increments of $\frac{1}{3}$ or $\frac{1}{2}$ EV available
	in modes P, S, A, and M
Flash-ready indicator	Lights when optional flash unit is fully charged;
	flashes as underexposure warning after flash is
	fired at full output
Accessory shoe	ISO 518 hot-shoe with sync and data contacts
	and safety lock
Nikon Creative Lighting	i-TTL flash control, radio-controlled Advanced
System (CLS)	Wireless Lighting, optical Advanced Wireless
	Lighting, modeling illumination, FV lock, Color
	Information Communication, Auto FP High-
	Speed Sync, unified flash control
White balance	
White balance	Auto (3 types), natural light auto, direct
	sunlight, cloudy, shade, incandescent,
	fluorescent (7 types), flash, choose color
	temperature (2500 K–10,000 K), preset manual
	(up to 6 values can be stored), all except choose
	color temperature with fine-tuning

Bracketing	
Bracketing types	Exposure, flash, white balance, and ADL
Movie	
Metering system	TTL exposure metering using main image sensor
Metering mode	Matrix, center-weighted, or highlight-weighted
Frame size (pixels) and frame rate	• 3840 × 2160 (4K UHD); 30p (progressive), 25p, 24p • 1920 × 1080; 120p, 100p, 60p, 50p, 30p, 25p,
	24p • 1920×1080 (slow-mo); 30p ×4, 25p ×4, 24p ×5 Actual frame rates for 120p, 100p, 60p, 50p, 30p, 25p, and 24p are 119.88, 100, 59.94, 50, 29.97, 25, and 23.976 fps respectively; quality selection available at all sizes except 3840 × 2160, 1920 × 1080 120p/100p, and 1920 × 1080 slow-mo, when quality is fixed at ★ (high)
File format	MOV, MP4
Video compression	H.264/MPEG-4 Advanced Video Coding
Audio recording format	Linear PCM, AAC
Audio recording device	Built-in stereo or external microphone with attenuator option; sensitivity adjustable
ISO sensitivity (Recommended Exposure	• 🛣: Auto ISO sensitivity control (ISO 64 to 25600)
Index)	 P, S, A: Auto ISO sensitivity control (ISO 64 to Hi 2) with selectable upper limit M: Auto ISO sensitivity control (ISO 64 to Hi 2) available with selectable upper limit; manual selection (ISO 64 to 25600 in steps of 1/3 or 1/2 EV) with additional options available equivalent to approximately 0.3, 0.5, 0.7, 1, or 2 EV (ISO 102400 equivalent) above ISO 25600
Active D-Lighting	Can be selected from Same as photo settings, Extra high, High, Normal, Low, or Off

Movie	
Other options	Time-lapse movies, electronic vibration
other options	reduction, time codes, movie log output (N-Log)
**	reduction, time codes, movie log output (N-Log)
Monitor	
Monitor	8-cm/3.2-in., approx. 2100k-dot tilting TFT
	touch-sensitive LCD with 170° viewing angle,
	approximately 100% frame coverage, and color
	balance and 11-level manual brightness controls
Playback	
Playback	Full-frame and thumbnail (4, 9, or 72 images)
	playback with playback zoom, playback zoom
	cropping, movie playback, photo and/or movie
	slide shows, histogram display, highlights,
	photo information, location data display,
	picture rating, and auto image rotation
Interface	
USB	Type C connector (SuperSpeed USB); connection
	to built-in USB port is recommended
HDMI output	Type C HDMI connector
Accessory terminal	Can be used with MC-DC2 and other optional
	accessories
Audio input	Stereo mini-pin jack (3.5 mm diameter; plug-in
	power supported)
Audio output	Stereo mini-pin jack (3.5 mm diameter)
Wi-Fi/Bluetooth	
Wi-Fi	Standards:
	- IEEE 802.11b/g/n/a/ac (U.S.A., Canada, Mexico)
	- IEEE 802.11b/g/n/a (other countries in the
	Americas)
	Operating frequency:
	- 2412–2462 MHz (channel 11) and 5180–
	5825 MHz (U.S.A., Canada, Mexico)
	- 2412–2462 MHz (channel 11) and 5180–
	5805 MHz (other countries in the Americas)
	Maximum output power (EIRP):
	- 2.4 GHz band: 7.0 dBm
	- 5 GHz band: 12.1 dBm
	Authentication: Open system, WPA2-PSK

Wi-Fi/Bluetooth	
Bluetooth	Communication protocols: Bluetooth Specification Version 4.2 Operating frequency: Bluetooth: 2402–2480 MHz Bluetooth Low Energy: 2402–2480 MHz
Range (line of sight)	Approximately 10 m (32 ft) without interference; range may vary with signal strength and presence or absence of obstacles
Power source	
Battery	One EN-EL15b rechargeable Li-ion battery; EN-EL15a/EN-EL15 can also be used, but note that fewer pictures can be taken on a single charge and that charging AC adapter can be used to charge EN-EL15b batteries only
Charging AC adapter	EH-7P charging AC adapter
AC adapter	EH-5c/EH-5b AC adapter (requires EP-5B power connector, which is available separately)
Tripod socket	
Tripod socket	1/4 in. (ISO 1222)
Dimensions/weight	
Dimensions (W \times H \times D)	Approx. $134 \times 100.5 \times 67.5 \text{ mm} (5.3 \times 4 \times 2.7 \text{ in.})$
Weight	Approx. 675 g (1 lb. 7.9 oz.) with battery and memory card but without body cap; approx. 585 g/1 lb. 4.7 oz. (camera body only)
Operating environment	

Operating environment	
Temperature	0 °C-40 °C (+32 °F-104 °F)
Humidity	85% or less (no condensation)

- Unless otherwise stated, all measurements are performed in conformity with Camera and Imaging Products Association (CIPA) standards or guidelines.
- All figures are for a camera with a fully-charged battery.
- The sample images displayed on the camera and the images and illustrations in the manuals
 are for expository purposes only.
- Nikon reserves the right to change the appearance and specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

■■ MH-25a Battery Charger

Rated input	AC 100-240 V, 50/60 Hz, 0.23-0.12 A
Rated output	DC 8.4 V/1.2 A
Supported batteries	Nikon EN-EL15b rechargeable Li-ion batteries
Charging time	Approx. 2 hours and 35 minutes at an ambient temperature of 25 °C (77 °F) when no charge remains
Operating temperature	0 °C-40 °C (+32 °F-104 °F)
Dimensions (W \times H \times D)	Approx. $95 \times 33.5 \times 71$ mm $(3.7 \times 1.3 \times 2.8$ in.), excluding projections
Length of power cable	Approx. 1.5 m (4.9 ft), if supplied
Weight	Approx. 115 g (4.1 oz), excluding supplied power connector (power cable or AC wall adapter)

The symbols on this product represent the following:

 \sim AC, === DC, \square Class II equipment (The construction of the product is double-insulated.)

■■ EH-7P Charging AC Adapter

Rated input	AC 100-240 V, 50/60 Hz, MAX 0.5 A
Rated output	DC 5.0 V/3.0 A
Supported batteries	Nikon EN-EL15b rechargeable Li-ion batteries
Operating temperature	0 °C-40 °C (+32 °F-104 °F)
Dimensions (W \times H \times D)	Approx. 65.5 × 26.5 × 58.5 mm (2.6 × 1.1 ×
	2.4 in.), excluding plug adapter
Weight	Approx. 125 g (4.5 oz), excluding plug adapter

The EH-7P is supplied with a plug adapter attached in countries or regions where required; the shape of the plug adapter varies with the country of sale. Do not attempt to remove the plug adapter, as this could damage the product.

The symbols on this product represent the following:

 \sim AC, == DC, \square Class II equipment (The construction of the product is double-insulated.)

■■ EN-EL15b Rechargeable Li-ion Battery

Туре	Rechargeable lithium-ion battery
Rated capacity	7.0 V/1900 mAh
Operating temperature	0 °C-40 °C (+32 °F-104 °F)
Dimensions (W \times H \times D)	Approx. $40 \times 56 \times 20.5 \text{ mm} (1.6 \times 2.2 \times 0.8 \text{ in.})$
Weight	Approx. 80 g (2.9 oz), excluding terminal cover

Nikon reserves the right to change the appearance and specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

Trademark Information

IOS is a trademark or registered trademark of Cisco Systems, Inc., in the United States and/or other countries and is used under license. Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries. Mac, macOS, OS X, Apple®, App Store®, the Apple logos, iPhone®, iPad®, and iPod touch® are trademarks of Apple Inc. registered in the U.S. and/or other countries. Android is a trademark of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. The PictBridge logo is a trademark. XQD is a trademark of Sony Corporation. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing,

HOMI

Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Nikon Corporation is under license.

All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

FreeType License (FreeType2)

Portions of this software are copyright © 2012 The FreeType Project (http://www.freetype.org). All rights reserved.

MIT License (HarfBuzz)

Portions of this software are copyright © 2018 The HarfBuzz Project (http://www.freedesktop.org/wiki/Software/HarfBuzz). All rights reserved.

AVC Patent Portfolio License

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE http://www.mpeqla.com

Disposing of Data Storage Devices

Please note that deleting images or formatting memory cards or other data storage devices does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Care should be taken to avoid injury when physically destroying data storage devices.

Before discarding the camera or transferring ownership to another person, you should also use the **Reset all settings** option in the camera setup menu to delete network settings and other personal information.

Supported Standards


- DCF Version 2.0: The Design Rule for Camera File System (DCF) is a standard widely used in the digital camera industry to ensure compatibility among different makes of camera.
- Exif version 2.31: The camera supports Exif (Exchangeable Image File Format for Digital Still Cameras) version 2.31, a standard in which information stored with photographs is used for optimal color reproduction when the images are output on Exif-compliant printers.
- PictBridge: A standard developed through cooperation with the digital camera and printer industries, allowing photographs to be output directly to a printer without first transferring them to a computer.
- HDMI: High-Definition Multimedia Interface is a standard for multimedia interfaces used in consumer electronics and AV devices capable of transmitting audiovisual data and control signals to HDMIcompliant devices via a single cable connection.

NIKKOR Z 24-70mm f/4 S Lenses

This section is included as a lens manual for purchasers of the NIKKOR Z 24–70mm f/4 S lens kit. Note that lens kits may not be available in some countries or regions.

Using the Lens

■ Parts of the Lens: Names and Functions

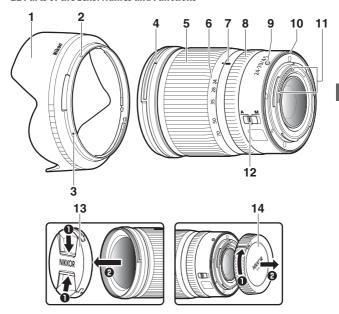

		Lens hoods block stray light that would
1	Lens hood	otherwise cause flare or ghosting. They also
		serve to protect the lens.
2	Lens hood lock mark	
3	Lens hood alignment mark	Use when attaching the lens hood.
4	Lens hood mounting mark	Use when attaching the lens hood.
5	Zoom ring	Rotate to zoom in or out. Be sure to extend the lens before use.
6	Focal length scale	Determine the approximate focal length when
7	Focal length mark	zooming the lens in or out.
8	Control ring	Autofocus mode selected: In autofocus mode, you can rotate this customizable ring to perform a function selected with the camera. Manual focus mode selected: Rotate to focus.
9	Lens mounting mark	Use when mounting the lens on the camera.
10	Rubber lens-mount gasket	_
11	CPU contacts	Used to transfer data to and from the camera.
12	Focus-mode switch	Choose A for autofocus, M for manual focus. Note that regardless of the setting chosen, focus must be adjusted manually when manual focus mode is selected using camera controls.
13	Front lens cap	_

■■ Attachment and Removal

Attaching the Lens

 
- 1 Turn the camera off, remove the body cap, and detach the rear lens cap.
- 2 Position the lens on the camera body, keeping the mounting mark on the lens aligned with the mounting mark on the camera body, and then rotate the lens counterclockwise until it clicks into place.

Removing the Lens

- 1 Turn the camera off.
- **2** Press and hold the lens release button while turning the lens clockwise.

■ Before Use

The lens is retractable and must be extended before use. Rotate the zoom ring as shown until the lens clicks into the extended position. Pictures can only be taken when the focal length mark points to positions between 24 and 70 on the focal length scale.




To retract the lens, rotate the zoom ring in the opposite direction, stopping when you reach the (\bullet) position on the focal length scale.

If the camera is turned on with the lens retracted, a warning will be displayed. Extend the lens before use.

■■ Attaching and Removing the Lens Hood

 To remove the hood, reverse the above steps.



When attaching or removing the hood, hold it near the ● symbol on its base and avoid gripping it too tightly. The hood can be reversed and mounted on the lens when not in use.

■■ When the Lens Is Attached

The focus position may change if you turn the camera off and then on again after focusing. Refocus before shooting. If you have focused on a pre-selected location while waiting for your subject to appear, we recommend that you do not turn the camera off until the picture is taken.

Precautions for Use

- Do not pick up or hold the lens or camera using only the lens hood.
- Keep the CPU contacts clean.
- Should the rubber lens-mount gasket be damaged, cease use immediately and take the lens to a Nikon-authorized service center for repair.
- Replace the front and rear lens caps when the lens is not in use.
- To protect the interior of the lens, store it out of direct sunlight.
- Keep the lens dry. Rusting of the internal mechanism can cause irreparable damage.
- Leaving the lens in extremely hot locations could damage or warp parts made from reinforced plastic.
- Rapid changes in temperature may cause damaging condensation inside and outside the lens. Before taking the lens from a warm to a cold environment or vice versa, place it in its case or a plastic bag to slow the change in temperature.

Lens Care

- Removing dust is normally sufficient to clean the glass surfaces of the lens.
- Smudges and fingerprints can be removed from fluorine-coated lens elements using a soft, clean cotton cloth or lens cleaning tissue; clean from the center outwards using a circular motion. To remove stubborn stains, wipe gently using a soft cloth lightly dampened with a small amount of distilled water, ethanol, or lens cleaner. Any drop-shaped marks left from this process on the water- and oil-repellent surface can subsequently be removed with a dry cloth.
- When cleaning lens elements that are not fluorine-coated, remove smudges and fingerprints using a soft, clean cotton cloth or lens cleaning tissue lightly dampened with a small amount of ethanol or lens cleaner. Wipe gently from the center outwards in a circular motion, taking care not to leave smears or touch the lens with your fingers.
- Never use organic solvents such as paint thinner or benzene to clean the lens.
- Neutral Color (NC) filters (available separately) and the like can be used to protect the front lens element.
- If the lens will not be used for an extended period, store it in a cool, dry location to prevent mold and rust. Do not store in direct sunlight or with naphtha or camphor moth balls.

Accessories

II Supplied Accessories

- LC-72B 72 mm snap-on Front Lens Cap
- LF-N1 Rear Lens Cap
- HB-85 Bayonet Hood
- CI-C1 Lens Case

▼ Using the Lens Case

- The case is intended to protect the lens from scratches, not from falls or other physical shocks.
- The case is not water resistant.
- The material used in the case may fade, bleed, shrink, or change color when rubbed or wet.
- Remove dust with a soft brush.
- Water and stains can be removed from the surface with a soft, dry cloth. Do not use alcohol, benzene, thinner, or other volatile chemicals.
- Do not store in locations exposed to direct sunlight or high temperatures or humidity.
- Do not use the case to clean the monitor or lens elements.
- Be careful that the lens does not fall from the case during transport.

Material: Polyester

II Compatible Accessories

72 mm screw-on filters

Filters

Use only one filter at a time. Remove the lens hood before attaching filters or rotating circular polarizing filters.

Specifications

Mount	Nikon Z mount			
Focal length	24 – 70 mm			
Maximum aperture	f/4			
Lens construction	14 elements in 11 groups (including 1			
	aspherical ED element, 3 aspherical elements,			
	elements with Nano Crystal Coat, and a			
	fluorine-coated front lens element)			
Angle of view	• FX format: 84° – 34° 20′			
	• DX format: 61° – 22° 50′			
Focal length scale	Graduated in millimeters (24, 28, 35, 50, 70)			
Focusing system	Internal focusing system			
Minimum focus distance	0.3 m (0.99 ft) from focal plane at all zoom			
	positions			
Diaphragm blades	7 (rounded diaphragm opening)			
Aperture range	f/4 – 22			
Filter-attachment size	72 mm (P = 0.75 mm)			
Dimensions	Approx. 77.5 mm maximum diameter ×			
	88.5 mm (distance from camera lens mount			
	flange when lens is retracted)			
Weight	Approx. 500 g (1 lb 1.7 oz)			

Nikon reserves the right to change the appearance, specifications, and performance of this product at any time and without prior notice.


The FTZ Mount Adapter

This mount adapter allows Nikon F mount NIKKOR lenses to be mounted on Nikon Z mount mirrorless cameras. It cannot be mounted on F mount (Nikon digital SLR) or 1 mount cameras (Nikon 1 advanced cameras with interchangeable lenses) or used with 1 NIKKOR lenses. This section is included as a mount-adapter manual for purchasers of the mount-adapter kit. Note that mount-adapter kits may not be available in some countries or regions.

Note that depending on the lens, the adapter may limit autofocus or other camera features. For more information, visit the Nikon website.

The Mount Adapter

II Parts of the Adapter

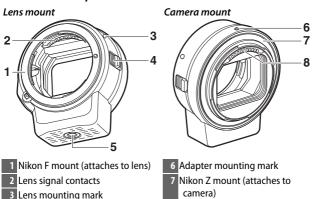

8 CPU contacts

4 Lens release
5 Tripod socket

■■ Attachment and Removal

Turn the camera off before attaching the adapter to or removing it from the camera or attaching lenses to or removing lenses from the adapter. Choose a location out of direct sunlight and be careful to prevent dust from entering the devices. While attaching lenses, avoid pressing the camera or adapter lens release.

Attaching the Adapter and Lens

- 1 Remove the body and rear lens caps from the adapter and the body cap from the camera.
- 2 Attach the adapter to the camera.
 Keeping the adapter mounting mark aligned with the mounting mark on the camera




body $(\hat{\mathbf{1}})$, position the adapter on the camera and then rotate it counterclockwise until it clicks into place $(\hat{\mathbf{2}})$.

3 Remove the rear lens cap.

4 Attach the lens to the adapter.


Keeping the lens mounting mark aligned with the lens mounting mark on the adapter (③), position the lens on the adapter and then rotate it counterclockwise until it clicks into place (④).

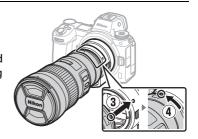

Detaching the Lens and Adapter

1 Detach the lens.

Press and hold the adapter lens release (①) while turning the lens clockwise (②). Attach the front and rear caps to the lens after removal.

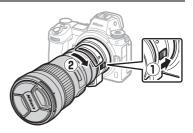

2 Detach the adapter.

Press and hold the camera lens release button (3) while turning the adapter clockwise (4). After removing the adapter, attach the body and

rear caps to the adapter and the body cap to the camera.



CPU Lenses with Aperture Rings

Select minimum aperture (the highest f/-number) before attaching CPU lenses equipped with aperture rings.

✓ Incompatible Lenses and Accessories

The following lenses and accessories cannot be used. Attempting to forcibly attach any of this equipment could damage the adapter or the lens. Individual variation may render lenses other than those listed below incompatible; do not use force if you encounter resistance when attempting to attach a lens.

- Non-Al lenses
- IX-NIKKOR
- TC-16A AF Teleconverter
- Lenses that require the AU-1 focusing unit (400mm f/4.5, 600mm f/5.6, 800mm f/8, 1200mm f/11)
- Fisheye (6mm f/5.6, 7.5mm f/5.6, 8mm f/8, OP 10mm f/5.6)
- 2.1cm f/4
- K2 Extension Ring
- 180–600mm f/8 ED (serial numbers 174041–174180)
- 360–1200mm f/11 ED (serial numbers 174031–174127)
- 200–600mm f/9.5 (serial numbers 280001–300490)
- AF lenses for the F3AF (AF 80mm f/2.8, AF 200mm f/3.5 ED, TC-16 AF Teleconverter)
- PC 28mm f/4 (serial number 180900 or earlier)

- PC 35mm f/2.8 (serial numbers 851001–906200)
- PC 35mm f/3.5 (old type)
- Reflex 1000mm f/6.3 (old type)
- NIKKOR-H Auto 2.8cm f/3.5 (28mm f/3.5) lenses with serial numbers below 362000
- NIKKOR-S Auto 3.5cm f/2.8 (35mm f/2.8) lenses with serial numbers below 928000
 - NIKKOR-S Auto 5cm f/2 (50mm f/2)
- NIKKOR-Q Auto 13.5cm f/3.5 (135mm f/3.5) lenses with serial numbers below 753000
- Micro-NIKKOR 5.5cm f/3.5
- Medical-NIKKOR Auto 200mm f/5.6
- Auto NIKKOR Telephoto-Zoom 85–250mm f/4–4.5
- Auto NIKKOR Telephoto-Zoom 200–600mm f/9.5–10.5

Using the Mount Adapter

- Autofocus may not function as expected when the adapter is used with an F-mount NIKKOR lens. If the camera has trouble focusing, set the AF-area mode to single point and select the center focus area, or focus manually.
- With some lenses, the camera vibration reduction feature may not function as expected or may cause vignetting or a drop in peripheral illumination.

Precautions for Use

- When using the adapter with lenses weighing over 1300 g (2 lb 13.9 oz), support the lens when holding the camera and do not use the camera strap. Failure to observe these precautions could damage the camera lens mount.
- When using telephoto lenses equipped with a tripod collar, attach the tripod to the lens tripod collar rather than to the adapter tripod socket.
- Keep the CPU and lens signal contacts clean.
- Keep the adapter dry. Rusting of the internal mechanism can cause irreparable damage.
- Leaving the adapter in extremely hot locations could damage or warp parts made from reinforced plastic.

Caring for the Adapter

- Do not touch the interior of the mount adapter. Use a blower or soft brush to remove dust, being careful not to rub or scratch the inside of the adapter.
- When cleaning the adapter, use a blower to remove dust and lint and then wipe the adapter gently with a soft, dry cloth.
- Never use organic solvents such as paint thinner or benzene to clean the adapter.
- If the adapter will not be used for an extended period, store it in a cool, dry location to prevent mold and rust. Do not store in direct sunlight or with naphtha or camphor moth balls.

Accessories

■■ Supplied Accessories

- BF-1B Body Cap
- LF-N1 Rear Lens Cap

Specifications

Туре	Mount adapter	
Supported cameras	Nikon Z mount mirrorless cameras	
Dimensions	Approx. 70 mm diameter (excluding projections) × 80 mm	
Weight	Approx. 135 g (4.8 oz)	

Nikon reserves the right to change the appearance, specifications, and performance of this product at any time and without prior notice.

Approved Memory Cards

The camera can be used with XQD memory cards. Cards with write speeds of 45 MB/s ($300\times$) or better are recommended for movie recording; slower speeds may interrupt recording or cause jerky, uneven playback. For information on compatibility and operation, contact the manufacturer.

Memory Card Capacity

The following table shows the approximate number of pictures that can be stored on a 64 GB Sony G-series QD-G64E XQD card at different image quality and size settings when **FX** (36×24) is selected for **Choose image area** (as of May 2018).

				No. of	Buffer	
lmage quality		lmage size	File size 1	images ¹	capacity ²	
NEF (RAW)	Lossless compressed	12-bit	Large	44.7 MB	748	23
			Medium	31.5 MB	1000	19
			Small	24.5 MB	1400	19
		14-bit		55.8 MB	654	19
	Compressed	12-bit	1	40.7 MB	1000	23
		14-bit	Large	49.4 MB	845	19
	II	12-bit		74.1 MB	748	23
	Uncompressed	14-bit		85.1 MB	654	18
TIFF (RGB)		Large	134.6 MB	412	21	
		Medium	76.5 MB	723	22	
		Small	34.8 MB	1500	25	
Fine		Large	17.2 MB	1900	25	
			Medium	11.7 MB	3200	25
JPEG ³			Small	6.8 MB	6500	25
	Normal		Large	11.8 MB	3700	25
			Medium	7.0 MB	6400	25
			Small	3.5 MB	12,700	25
	Basic		Large	3.8 MB	7500	25
			Medium	2.6 MB	12,300	25
			Small	1.6 MB	24,100	25

¹ All figures are approximate. File size varies with scene recorded.

² Maximum number of exposures that can be stored in memory buffer at ISO 100. May drop in some situations, for example at image qualities marked with a star ("**) or if auto distortion control is on.

³ Figures assume size-priority JPEG compression. Selecting an image-quality option marked with a star ("**"; optimal compression) increases the file size of JPEG images; number of images and buffer capacity drop accordingly.

Battery Endurance

The approximate length of footage or number of shots that can be recorded with a fully-charged EN-EL15b¹ battery varies with the monitor mode. The figures for photographs² are as follows:

Viewfinder only: 330 shots
Monitor only: 400 shots

The figures for movies ³ are:

The figures for movies 3 are

- Viewfinder only: 85 minutes
 Manitor only: 85 minutes
- Monitor only: 85 minutes

Actions such as the following can reduce battery endurance:

- Keeping the shutter-release button pressed halfway
- Repeated autofocus operations
- Taking NEF (RAW) photographs
- Slow shutter speeds
- Using camera Wi-Fi (wireless LAN) and Bluetooth features
- Using the camera with optional accessories connected
- Repeatedly zooming in and out

To ensure that you get the most from rechargeable Nikon EN-EL15b batteries:

- Keep the battery contacts clean. Soiled contacts can reduce battery performance.
- Use batteries immediately after charging. Batteries will lose their charge if left unused.
- 1 EN-EL15a/EN-EL15 batteries can also be used, but note that fewer pictures can be taken on a single charge. Endurance varies with the condition of the battery, the temperature, the interval between shots, and the length of time menus are displayed.
- 2 CIPA standard. Measured at 23 °C/73.4 °F (±2 °C/3.6 °F) with a NIKKOR Z 24–70mm f/4 S lens under the following test conditions: one photograph taken at default settings once every 30 s.
- 3 Measured at 23 °C/73.4 °F (±2 °C/3.6 °F) with the camera at default settings and a NIKKOR Z 24–70mm f/4 S lens under conditions specified by the Camera and Imaging Products Association (CIPA). Individual movies can be up to 29 minutes 59 seconds in length; recording may end before these limits are reached if the camera temperature rises.

Notices

Notices for Customers in the U.S.A.

The Battery Charger

IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS

DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet if needed. This power unit is intended to be correctly oriented in a vertical or floor mount position.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



Nikon

Z 7

CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A. Tel.: 631-547-4200

Power Cable

At voltages over AC 125 V (U.S.A. only): The power cable must be rated for the voltage in use, be at least AWG no. 18 gauge, and have SVG insulation or better with a NEMA 6P-15 plug rated for AC 250 V 15 A.

Notice for Customers in Canada

CAN ICES-3 B / NMB-3 B

Bluetooth and Wi-Fi (Wireless LAN)

This product is controlled by the United States Export Administration Regulations (EAR). The permission of the United States government is not required for export to countries other than the following, which as of this writing are subject to embargo or special controls: Cuba, Iran, North Korea, Sudan, and Syria (list subject to change).

The use of wireless devices may be prohibited in some countries or regions. Contact a Nikon-authorized service representative before using the wireless features of this product outside the country of purchase.

The Bluetooth transmitter in this device operates in the 2.4 GHz band.

Notice for Customers in the U.S.A. and Canada

This device complies with part 15 of FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Compliance with FCC requirement 15.407(c)

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Frequency Tolerance: ±20 ppm

FCC Radio Frequency Interference Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Co-location

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A. Tel.: 631-547-4200

FCC/ISED RF Exposure Statement

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. This product has been tested and found to comply with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. Please refer to the SAR test report that was uploaded to FCC website.

Compliance with RSS-247 Issue 2 §6.4

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Notices for Customers in the French Overseas Collectivity of Saint Martin

Hereby, Nikon Corporation declares that the radio equipment type Z 7 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: http://imaaina.nikon.com/support/pdf/DoC N1710.pdf.

Security

Although one of the benefits of this product is that it allows others to freely connect for the wireless exchange of data anywhere within its range, the following may occur if security is not enabled:

- Data theft: Malicious third-parties may intercept wireless transmissions to steal user IDs, passwords, and other personal information.
- Unauthorized access: Unauthorized users may gain access to the network and alter data or perform other malicious actions. Note that due to the design of wireless networks, specialized attacks may allow unauthorized access even when security is enabled.
- Unsecured networks: Connecting to open networks may result in unauthorized access. Use secure networks only.

Conformity Marking

The standards with which the camera complies can be viewed using the **Conformity marking** option in the setup menu.

Certificates

México

IFETEL: RCPMU1M18-0171

1MW

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Index

Symbols	⊕ icon40
(Auto mode)41, 45, 69	Numerics
P (Programmed auto)69, 70	1:1 (24 × 24)106
S (Shutter-priority auto)69, 70	16:9 (36 × 20)106
A (Aperture-priority auto)69, 71	5 : 4 (30 × 24)106
M (Manual)69, 71	
U1/U2/U3 69, 73	<u>A</u>
§ (Single frame) 82, 85, 111	AC adapter 184, 189
밐L (Continuous L) 82, 111	Accessories184
및 H (Continuous H) 82, 111	Accessory terminal206
및 I (Continuous H (extended))83,	Active D-Lighting 110, 120
111	AE lock
🕉 (Self-timer)83, 85, 111	AF53
ោ (Pinpoint AF)55, 113	AF lock87, 88
[12] (Single-point AF)55, 113, 121	AF-area mode55, 113, 121
[•] (Dynamic-area AF)55, 113	AF-assist43
្ហើរទៀន (Wide-area AF (S))56, 113, 121	AF-C 54, 113, 121
հեթ (Wide-area AF (L)) 56, 113, 121	AF-F 54, 121
(Auto-area AF)56, 113, 121	AF-0N button17
(Matrix) 108	AF-S53, 113, 121
⊚ (Center-weighted)108	Aperture71
⊙ (Spot)108	Aperture-priority auto71
* (Highlight-weighted) 108	Attaching the lens36
♦ (Red-eye reduction)107	Auto (Set Picture Control)93
\$ slow (Slow sync) 107	Auto (White balance) 63, 98
Frear (Rear-curtain sync)107	Auto ISO sensitivity control79
(Exposure compensation)80	Auto-area AF 56, 113, 121
▶ button49	Autoexposure lock87, 88
m button51	Autofocus53
MENU button18	Automatic display switch9
및 (항) button82	В
ISO button78, 79	
9≅ (?) button	Battery 28, 32, 184, 209
<i>i</i> button21, 91	Battery charger28, 208
® button	Battery endurance230
(In-focus indicator)	Battery level34
🗲 (Flash-ready indicator) 183	Body cap36, 185

Bulb76	Delete51
C	Delete current image51
	Diopter adjustment control8
Cable clip188	Direct sunlight (White balance) 63,
Camera Control Pro 2187	98
Capture NX-D67	DISP button15
Center-weighted108	Download centeri
CHARGE lamp29, 30	DX106
Charging AC adapter29, 184, 199,	DX format119
208	Dynamic-area AF55, 113
Charging the battery28	E
Choose color temp. (White balance).	
64, 98, 100	Edit movie50
Choose image area106, 119	Electronic VR120
Clean image sensor192	Error messages 164, 166
Clock38, 40	Exif212
Clock battery40	Exposure72, 80
Cloudy (White balance)63, 98	Exposure compensation80
Color temperature 64, 100	Exposure indicator72
Command dial17	Exposure lock 87, 88
Compatible lenses200	Exposures remaining34
Continuous82, 85, 111	External microphone118, 187
Continuous H82, 111	Eye sensor8
Continuous H (extended) 83, 111	F
Continuous L82, 111	·
Continuous release mode 82, 85, 111	Filter effects97
Control panel5, 178	Fine-tuning white balance99
Control ring60, 214	Flash 107, 179
CPU contacts214	Flash (White balance)63, 98
Creative Lighting System (CLS) 179	Flash mode107
Creative Picture Control93	Flash ready indicator183
Custom control assignment24	Flat (Set Picture Control)93
Custom Settings139	Flexible program70
Customize menu22	Flick11
D	Fluorescent (White balance) 63, 98
	Fn1 button24
Date and time39	Fn2 button24
Date format40	Focal length216
Daylight saving time39	Focal length scale216
DCF212	Focal plane mark61
Default settings157	Focus indicator60

Focus mode53, 113, 121	LO/8
Focus point87	M
Frame rate	M (medium)106
Frame size/frame rate116	Main command dial17
Full-frame playback11, 49	Manual71
Function buttons24	Manual focus 54, 60, 113, 121
FV lock182	Matrix metering108
FX106, 119	Maximum aperture183
17100, 119	Maximum sensitivity79
Н	Memory buffer84
HDMI212	Memory card
HDMI cable	
Help20	Memory card capacity229 Menu list123
•	
Hi	Metering108 MF54, 113, 121
5 5	
Highlight-weighted108	Microphone
Histogram15	Microphone sensitivity
1	Minimum aperture225 Mode dial69
106 110	Mode dial lock release
Image area106, 119	Monitor
Image quality 104	Monitor mode button9
Image sensor 2, 192, 196	
Image size	Monitor pre-flash182
Incandescent (White balance).63, 98	Monochrome (Set Picture Control)
In-focus indicator60	93
Information display 15, 172	Mount adapter222
ISO sensitivity	Movie quality116
i-TTL179	Movie shooting menu133
J	Movie-record button46
	Movies45, 49, 114
JPEG 104	Multi selector
L	My Menu156
	N
L (large) 106	
Landscape (Set Picture Control) 93	Natural light auto (White balance)
Language38	63, 98
Lens36, 213	NEF (RAW)104
Lens mount36	Neutral (Set Picture Control) 93
Lens mounting mark36	Number of shots230

0	Reset user settings74
0.1:	Restoring default settings157
Online manual123	Retouch menu154
P	RGB104
Photo shooting menu 125	<u>S</u>
Photo/movie selector41, 45	S (small)106
PictBridge212	Same as photo settings114
Picture Controls93	Save user settings73
Pinpoint AF 55, 113	Self-timer83, 85, 111
Playback11, 49	Sensitivity78
Playback menu123	Set Picture Control93
Playback zoom12	Setup menu149
Portrait (Set Picture Control)93	Shade (White balance)98
Power connector184, 189	Shutter speed70, 71
Power switch38	Shutter-priority auto70
Preset manual (White balance)64,	Shutter-release button 43, 44
98, 101	Silent photography66
Press the shutter-release button all	Single frame82, 85, 111
the way down44	Single-point AF55, 113, 121
Press the shutter-release button	Size106
halfway43	Slow sync107
Prioritize viewfinder9	Slow-motion movies117
Problems and solutions158	Smart device40, 109
Product serial number4	SnapBridge40
Programmed auto70	Specifications200
Protecting photographs68	Spot108
Q	Standard (Set Picture Control) 93
	Standard i-TTL fill-flash179
Quick sharp96	Standby timer44
R	Sub-command dial17
	Subject tracking57
Rear-curtain sync107	Sub-selector17, 87
Recent settings156	
Rechargeable Li-ion battery . 28, 184, 209	T
Red-eye reduction 107	Text entry
Release mode82, 111	Thumbnail
Remote cord	TIFF (RGB)104
Removing the lens from the camera	Tilting monitor
37	Time
31	Time zone39

Time zone and date39
Touch controls10, 58
Touch screen10, 58
Touch shutter 10, 58
Trademark Information 210
Trimming movies50
Tripod76
Troubleshooting 157
U
User settings73
V
Vibration reduction 112
Viewfinder8, 175
Viewfinder eyepiece8, 186
Viewfinder eyepiece cap 186
Viewfinder focus 8
ViewNX-i67
Virtual horizon15, 16
Vivid (Set Picture Control)93
Volume50
W
WB (White balance)62, 98
White balance62, 98
Wide-area AF56, 113, 121
Wi-Fi109
Wireless remote controller 186
Wireless transmitter (WT-7) 185
X
XQD memory card228







		_







No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.