




USER MANUAL WS-RC-C2

Guangdong NanGuang
Photo&Video Systems Co., Ltd

Product Details

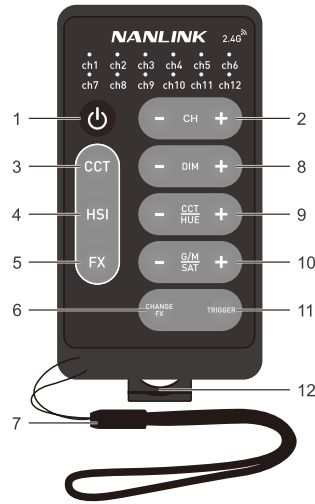

Detailed Description

- | | |
|---------------------|---------------------------|
| 1. Switch/Reset Key | 7. Safety Strap |
| 2. CH + - Key | 8. DIM + - Key |
| 3. CCT Key | 9. CCT/HUE + - Key |
| 4. HSI Key | 10. G/M & SAT + - Key |
| 5. FX Key | 11. TRIGGER Key |
| 6. CHANGE FX Key | 12. Button Battery Holder |

Usage

1. Switch/Reset Key
Press Switch/Reset key, the DIM function of the fixture will reset to 0%, press the Switch/Reset key again to restore the previous setting of DIM.

2. CH Setting

Press CH + - key to select the channel address corresponding to the fixture you wish to control. There are 12 channel addresses for selection, the channel address of the remote controller must match with the fixture's.

3. CCT Setting

Press CCT key to select CCT mode, then press + - to adjust the value of CCT.

4. Color Setting

Press HSI key to select color mode, then press + - to adjust the value of CCT, HUE, G/M and SAT.

5. FX Setting

Press FX key to select FX mode, then press CHANGE FX key to change the function of the special effect, press TRIGGER key to manually trigger the effect.

Notice

1. Please use CR2032 button battery to power the remote controller.
2. The Switch/Reset key is only used to adjust the DIM function of the fixture/s, and can't power on or off the fixture/s.
3. The special effect control function of the remote controller is only applicable to the fixtures using the new protocol, and cannot control the fixtures which using the old protocol.
4. When the remote controller is not in use for a long time, please remove the battery to avoid mildew and corrosion of the internal circuit.
5. The remote controller should be placed where it won't be at risk of getting wet or exposed to extreme temperatures.



WWW.NANLINK.COM

+86-754-85300887

+86-754-85751187

service@nanlite.com


Zhanglin,324,Dongli Chenghai Shantou
Guangdong China



产品使用手册 WS-RC-C2

广东南光影视器材有限公司

产品结构

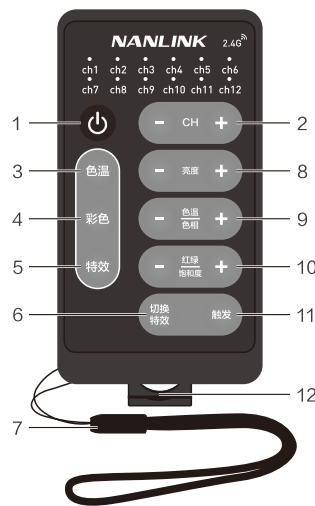

结构说明

- | | |
|-----------|-----------------|
| 1. 开关键 | 7. 遥控器吊绳 |
| 2. CH+ -键 | 8. 亮度+ -键 |
| 3. 色温键 | 9. 色温/色相 + -键 |
| 4. 彩色键 | 10. 红绿/饱和度 + -键 |
| 5. 特效键 | 11. 触发键 |
| 6. 切换特效键 | 12. 纽扣电池卡座 |

使用说明

1. 开关键:
按下开关键, 灯具亮度变为0%, 再按下开关键, 灯具亮度恢复之前设置的亮度。
2. CH设置:
按CH + -键, 选择与灯具对应的通道地址码, 共有12个通道地址码可以选择, 遥控器选择的通道地址码需与灯具设置的通道地址码一致。

3. 色温设置:

按色温键选择色温模式, 再按+ -键调节灯具色温数值。

4. 彩色设置:

按彩色键选择彩色模式, 再按+ -键调节灯具色温、色相、红绿和饱和度数值。

5. 特效设置:

按特效键选择特效模式, 再按切换特效键选择灯具特效功能, 按触发键可以触发灯具手动特效。

注意事项

1. 遥控器请使用CR2032纽扣电池。
2. 遥控器开关键只能控制灯具亮度, 不能控制灯具开关机。
3. 遥控器控制特效功能只适用于使用新协议的灯具, 使用旧协议的灯具无法用此遥控器控制特效功能。
4. 遥控器长期不使用时, 请取出电池, 避免电池发霉而腐蚀内部电路。
5. 遥控器请放置在干燥通风良好的环境, 避免受潮。



WWW.NANLINK.COM

0754-85300887

0754-85751187

sales@nanlite.com

广东省汕头市澄海区东里镇国道324
樟林路段