

Magnus Camera Rickshaw Support (RCSW-MGNS)

Assembly Manual



■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Main Frame of Magnus Camera Rickshaw



Jockey Wheels



Seat & Seat Post



Wheels

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Magnus Rickshaw Setup

Begin by taking out the mainframe from the case.

- Now open up the Steering bar section, adjust it at the desired angle, and secure with provided knobs.



ATTACHING JOCKEY WHEELS

Remove the caster lock nut and, connect it with the mainframe.



NOTE: *We recommend to attach the caster locking nut from the top of the jockey wheel shaft for safekeeping.*



- For adjusting the friction of jockey wheel, tighten / loosen the provided knob.



- Open up the outer locking lever on the main axle to attach both main wheels. The pull-pin will click on its place, now secure the locking lever to secure main wheels.



- To disassemble the wheel, open-up outer locking lever and pull the Lever to release the wheel.



ATTACHING SEAT

Place seat post onto seat-bridge, set the desired height position, insert safety pin to secure as shown.



- Use locking knob to secure seat.



Seat Position: Adjust fore/aft seat position by loosening the seat bridge locking knobs. remembering to re-tighten them once the required position is found.



NOTE: Tyres are deflated for shipping, please inflate to desired pressure. Maximum pressure limits are printed on the tyres.

- **Jockey Wheel:** The rear pneumatic Jockey wheels run in any direction smoothly; straight, left/right or circular. Angle adjustment knob provides different shooting angles with stable performance. The Jockey wheels are removable.



- **Foot Rest Position:** To Adjust the foot rest position, loosen the locking knob, adjust the foot rest to the appropriate position and tighten the locking knob.



- To adjust the axle width, release the inner axle locking lever and extend the axle on both sides to desired length and lock the inner lever.



YOUR PROAIM MAGNUS VERSATILE CAMERA RICKSHAW SUPPORT ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.