


Airwave Vibration Isolator Arm (VI-252-00)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

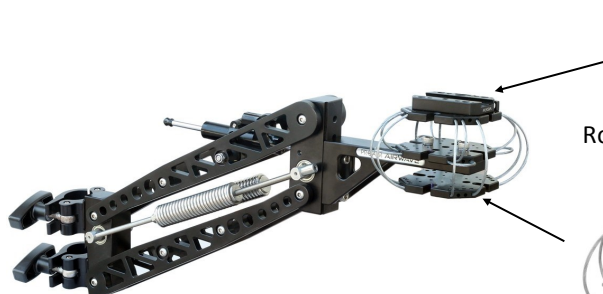

Proaim Airwave Vibration Isolator Arm



Ronin Mounting Plate



Isolator




Flight Case

All rights reserved.


No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Airwave Arm Setup



- Loosen Pole Clamps via knobs. Insert a pole into clamps and tighten them properly.

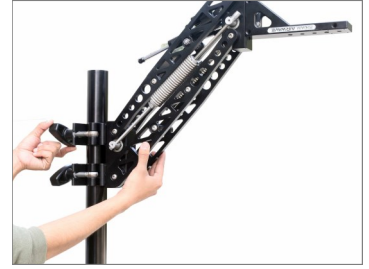

- Attach Isolator onto the nose bracket of Airwave Arm with help of bolts. Then tighten these bolts with allen key.

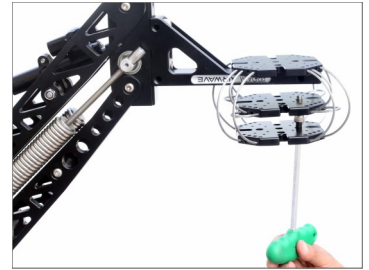

NOTE: Nose Bracket can be adjusted on two levels, top and bottom, as shown in image.

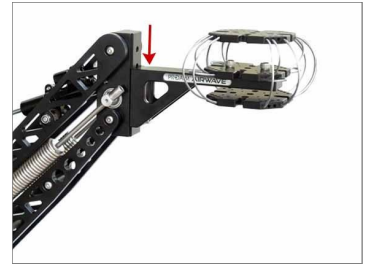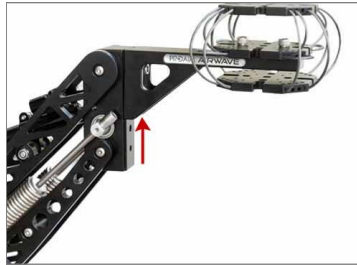


NOTE: Nose Plate can also be mounted in the opposite direction.



Spring Adjustment


NOTE: Load Capacity can be easily adjusted by adjusting springs. Adjust both springs equally.

- Loosen springs to decrease the weighing capacity & tighten them to increase the weighing capacity.

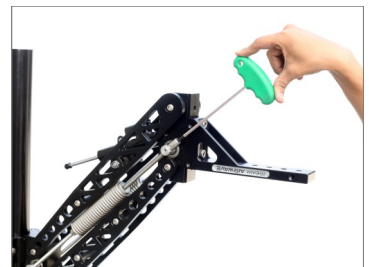

NOTE: *It is very important to check the movement of arm.*

- With arm at levelled position or slightly above the horizontal position, push down the front of arm. It moves 3 to 4 times before reaching normal position.

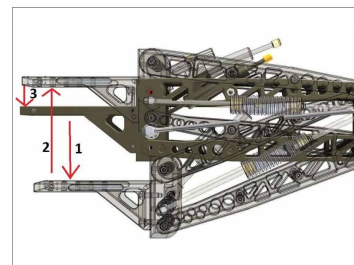


- To adjust the dampening effect, turn the provided knob from H(Hard) to S(Soft) if the arm is too rigid or from S(Soft) to H(hard) if the arm is too soft.




■ Attaching the Ronin

- In order to mount Ronin setup without Isolator, attach Ronin Plate onto the Nose as shown in image.

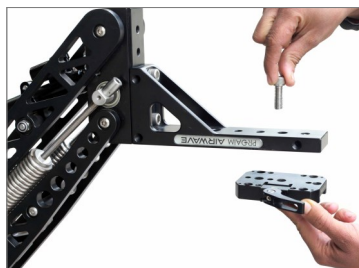

- Ronin can be easily attached onto Isolator with 1/4"-20 and 3/8"-16 threads. Then lock the Ronin plate.

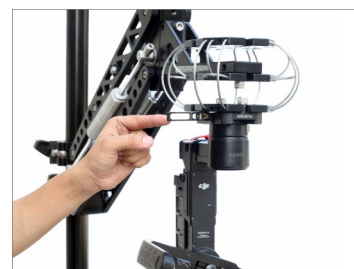

**YOUR PROAIM AIRWAVE VIBRATION ISOLATOR ARM
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.