

【Keygrip Control Camera Operation Instruction】

Camera Model: **Z CAM E2**

Three-stage lever function can be set as:

IRIS / ISO / Shutter / ND / CCT / FPS / VRF / RES / Zoom / Focus+/- / playback / MENU / FN / F1 / F2 / F3

Operation instruction:

(1) Middle key of Scroll wheel :

Click for the OK function; The effect of long-press is the same as the effect of long-press of joystick;

(2) The up /down Keys of joystick :

When the current three-stage lever functions is IRIS / ISO / Shutter / ND / CCT / FPS / RES / VRF / Focus +/- adjustment Zoom, the UP and DOWN keys are to add and subtract for the corresponding function key, and long press for "continuous control";

(3) The middle of the joystick :

● When the current three-stage lever functions is MENU / FN / F1 / F2 / F3 / playback, Click to enable these features; If the Three-way toggle switch is for other functions, click for the OK function;

● When the current three-stage lever functions is IRIS / ISO / Shutter / ND / CCT / FPS / VRF / RES / Zoom / Focus, Long press to enable these features; If the Three-way toggle switch is for other functions, Long press for focus function; the UP/DOWN key is the UP/DOWN function (long press for continuous sending);

Camera Model: **PANASONIC**

Three-stage lever function can be set as:

IRIS / Shutter / ISO / WB / CCT / Focus+/-

Operation instruction:

(1) Middle key of Scroll wheel :

The function of the joystick and middle key of Scroll wheel are same;

(2) The up /down Keys of joystick :

The UP/ DOWN keys are correspond to the increase/decrease adjustment of the functions set by the current three-stage lever (long press and short press have the same effect, except Focus adjustment); Long press the central button for "Focus" function;

(3) Record button :

Press record button and the middle button of Scroll wheel Will trigger focus function, Release to take picture;

Camera Model: **Z CAM E2_COM/CTRL**

Three-stage lever function can be set as:

IRIS / ISO / Shutter / WB / CCT / TINT/ EV / FPS / VRF / RES / ZOOM / playback / MENU / FN / F1 / F2 / F3

Operation instruction:

(1) Middle key of Scroll wheel :

Click for the OK function; The effect of long-press is the same as the effect of long-press of joystick;

(2) The middle of the joystick :

● When the current three-stage lever functions is MENU / FN / F1 / F2 / F3 / playback, Click to enable these features, If the Three-way toggle switch is for other functions, click for the OK function;

● When the current three-stage lever functions is IRIS / ISO / Shutter / WB / CCT / TINT/ EV / FPS / VRF / RES/ ZOOM , click for the OK function; control the position of the focus with focus wheel;

Camera Model: **BMPCC**

Three-stage lever function can be set as:

IRIS / Focus+/-

Operation instruction:

(1) Middle key of Scroll wheel :

The function of the joystick and middle key of Scroll wheel are same;

(2) The up /down Keys of joystick:

The UP/ DOWN keys are correspond to the increase/ decrease adjustment of the functions set by the current three-stage lever (long press for continuous control);The central button is for Focus function;

Camera Model: **BMPCC BT (4K / 6K)**

Three-stage lever function can be set as:

IRIS / ISO / Shutter / WB / CCT / TINT / ZOOM / Focus+/- / FPS / RES

Operation instruction:

(1) Middle key of Scroll wheel :

The function of the joystick and middle key of Scroll wheel are same;

(2) The up /down Keys of joystick:

- The UP/ DOWN keys are correspond to the increase/ decrease adjustment of the functions set by the current three-stage lever (long press for continuous control);
- If not using Tilta Nucleus N/M Focus Follow, the Wheel' s function is Focus adjustment;

*Instruction: Focus wheel can be used to control the FOCUS When the BMPCC4K is not connected to the motor, Don't need to set .when use BMPCC6K to control the FOCUS ,user should set the FOCUS function in the three-stage switch, use the up and down of the joystick to control(FOCUS Control function of BMPCC6K will be used after upgrading of the Bluetooth);

Camera Model: **RED**

Three-stage lever function can be set as:

IRIS / ISO / Shutter / playback / MENU / F1 / F2 / F3

Operation instruction:

(1) Middle key of Scroll wheel :

Click - Always OK function; Long press for focus function; The " + " and " - " of the Scroll wheel corresponds to the left and right adjustment;

(2) The middle of the joystick :

- When the current three-stage lever function is set as ISO/IRIS/Shutter, the UP/DOWN keys are for the increase / decrease of;
- When the current three-stage lever function is set as MENU / F1 / F2 / F3 / playback, Click the central button for the corresponding function, UP/DOWN/ LEFT/ RIGHT is for up/ down/ left/ right function respectively. ("1, 2, 3 in the Menu-> Setting->Setup->Keys->SoftKeys are set as F1/ F2 / F3, please set them to the according function in advance in case of need; If the Three-way toggle switch is for other functions, click for the OK function (The function of (Long press /click) are same, If the Three-way toggle switch is for other functions, Long press for focus function));
- If RED is equipped with motorized lens and no motor is connected, the focus wheel will control the focus of RED; If the motor is connected, the focus wheel will control the motor;

(3) The Control interface of RED is "camera remote" ,The control interface of motor is always "motor" ;

Camera Model: **CANON**

Three-stage lever function can be set as:

IRIS / ISO / Shutter / EV / WB / CCT / Focus+/-

Operation instruction:

(1) Middle key of Scroll wheel :

The function of the joystick and middle key of Scroll wheel are same;

(2) The middle of the joystick :

- Long press the left button for LV control; Long press central button for Focus;
- The UP/DOWN key is for increase/decrease of the current three-stage lever function.(long press and short press are the same effect);

(3) Record button :

Press record button and the middle button of Scroll wheel Will trigger focus function, Release to take picture;

Camera Model: **SONY LANC**

Three-stage lever function can be set as:

IRIS / Focus+/- / ZOOM / F_Wheel / MENU / FN / Mag / Peaking / display

Operation instruction:

(1) Middle key of Scroll wheel :

Click - Always OK function , Long press -OK function as well ;

(2) The middle of the joystick:

● When the current three-stage lever functions is IRIS / ZOOM / F_Wheel / Focus+/- , the up/down keys are for the increase/decrease of the corresponding function, left / right are the left/right function, and the central button is "confirm" function;

● When the current three-stage lever functions is MENU / FN / MAG / Peaking / Display, click the central button to activate the corresponding function, If the Three-way toggle switch is for other functions, Others are OK function, At this point, up/down/ left/ right is for up/ down/ left/right function respectively; (The function of (Long press /click) are same) ;

Camera Model: **SONY MULTI**

Three-stage lever function can be set as:

ZOOM / IRIS / Shutter / ISO / GRID

Operation instruction:

(1) Middle key of Scroll wheel :

The function of the joystick and middle key of Scroll wheel are same;

(2) The middle of the joystick:

● When the current three-stage lever functions is ZOOM / IRIS / Shutter / ISO, the UP/DOWN keys are for the increase/decrease of the corresponding function, Long press the central button for "Focus" function;

● When the current three-stage lever functions is GRID, the central button is for GRID function (long press and click are the same effect);

(3) Record button :

Press record button and the middle button of Scroll wheel Will trigger focus function, Release to take picture;

Camera Model: **CANON LANC**

Three-stage lever function can be set as:

IRIS / Focus+/- / MENU / Mag / display / FN

Operation instruction:

(1) Middle key of Scroll wheel :

Click - Always OK function , Long press -OK function as well;

(2) The middle of the joystick :

● When the current three-stage lever function is IRIS / Focus+/- adjustment, the UP/DOWN key are for the increase / decrease of the corresponding function, LEFT/RIGHT are the left/right function, and the central button is "confirm" function (The function of (Long press /click) are same) ;

● When the current three-stage lever function is FN / MENU / MAG / display, Click the central button to activate the corresponding function, If the Three-way toggle switch is for other functions, Others are OK function, At this point, UP/DOWN/ LEFT/ RIGHT is for up/ down/ left/ right respectively (The function of (Long press /click) are same) ;

*For C300 The FN and Display function are not supported but C200 can be supported;

Camera Model: **SONY-FW50**

Three-stage lever function can be set as:

F_Wheel / H_Wheel / C1 / C2 / C3

Operation instruction:

(1) Middle key of Scroll wheel :

Click for the OK function; The effect of long-press is the same as the effect of long-press of joystick;

(2) The up /down Keys of joystick:

When the current three-stage lever functions is F_Wheel / H_Wheel, the UP/DOWN keys are for the increase/ decrease adjustment of the corresponding function, (long press continuous control,click for "single control";

(3) The middle of the joystick:

When the current three-stage lever functions is C1,C2,C3, the central button is the corresponding function (long press and short press are the same effect); If not, the middle button is the focus function;

(4) Record button:

The recording button is C1 function. (It is recommended to set the C1 key as recording function for ease of use);

Camera Model: **SONY-FZ100**

Three-stage lever function can be set as:

F_Wheel / H_Wheel / C1 / C2

Operation instruction:

(1) Middle key of Scroll wheel :

Click - Always OK function , Long press -OK function as well ;

(2) The middle of the joystick :

● When the current three-stage lever functions is F_Wheel / H_Wheel, the UP/DOWN keys are for the increase/ decrease adjustment of the corresponding function, (long press continuous control, click for "single control") left / right / upper left / bottom left / upper right / bottom right keys are the left / right / upper left / bottom left / upper right / bottom right function respectively of the camera's multifunction button;

● When the current three-stage lever functions is C1,C2, Click the central button to correspond to the corresponding function , If the Three-way toggle switch is for other functions, Others are OK function, At this point, left / right / upper left / bottom left / upper right / bottom right keys are the left / right / upper left / bottom left / upper right / bottom right function respectively of the camera's multifunction button;

(3) Record button :

Function for C1, (It is recommended to set the C1 key as recording function for ease of use);