



Quick Guide PLUS® IIIe

FCC/IC: 340.00 - 354.00 MHz

CE: 433.42 - 434.42 MHz

Thank you for your purchase of this PocketWizard radio! Please read this Quick Guide thoroughly before operating.

Visit wiki.pocketwizard.com for complete operating instructions.





Congratulations and thank you for your purchase of a PocketWizard Plus IIIe Transceiver!

The Plus IIIe is our most reliable and easy to use solution for remote flash and camera triggering available. It is a feature packed wireless radio trigger system for cameras and flashes, giving you high performance, consistency, and dependability for all types of remote photography.

Key Features

Incredible Range and Reliability

With the new E Series technology, the Plus IIIe can trigger remote cameras and flashes in the toughest situations from thousands of meters (yards) away.

Auto Sensing Transceiver

The Plus IIIe will automatically switch between transmitting and receiving as needed with our patented auto sensing technology. Simply make connections and start working with near zero configuration time.

32 E Channels and 80 LR (Long Range) Channels

Choose your own Channel so there's no interference from other shooters.

Quad Zone Triggering

Now available on all 112 Channels. Wirelessly activate or deactivate your remote flashes or cameras in 4 separately controllable Zones.

Remote Camera Triggering

Set up as many remote cameras as you want to catch a different angle from one single trigger. Two stage triggering gives you faster response time to catch the action.

Auto Relay

Trigger remote flashes in sync with your remote camera for even more creative and professional images.

PocketWizard Compatibility

The Plus IIIe will work with all PocketWizard E Series radios and you can downgrade the firmware to work with all Legacy PocketWizards as well. (note: FCC and CE PocketWizard radios work on different frequencies-all of your radios must have the same frequency to be compatible.)

Camera & Flash Compatibility

The Plus IIIe will work with virtually any camera or flash capable of triggering from a center pin trigger or with the appropriate sync cable and can sync a flash in manual mode, up to your camera's X-sync speed. It does not support TTL communication.

Simple User Interface

Everything is right at your fingertips with the intuitive soft touch keypad. Press any button (except test) to illuminate the LCD if you're in low light.

Fast and Easy Setup

On the camera, slide it into the hot shoe and tighten the locking ring. Connect the flash to your remote radio by using the secure miniphone connection. Turn on the radios, match the Channels and Zones, and you're ready to go!

PLUS IIIe Auto Sensing Transceiver



 
 
PLUS IIIe Auto Sensing Transceiver

NOTE:

*You need at least two PocketWizard E Series radios.
Batteries not Included.*




Included:




Frequency

FCC/IC:
340.00 – 354.00 MHz
(< 1 mW)

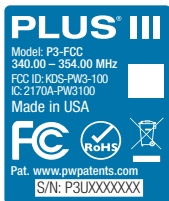

CE:
433.42 – 434.42 MHz
(< 1mW)

For

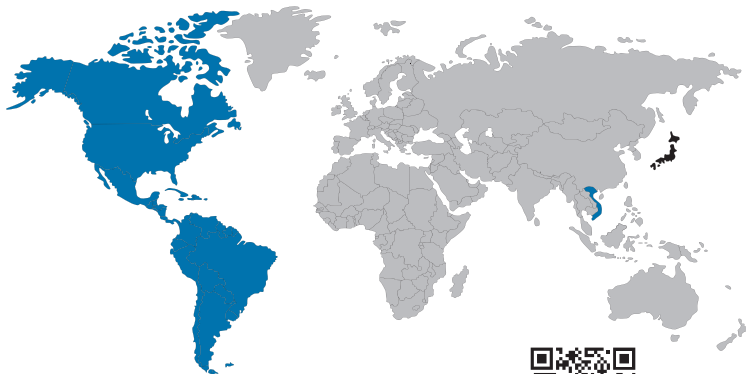

FCC/IC and CE radios are not compatible with each other.

PocketWizard.com/wheretobuy/frequency



Plus IIIe Transceiver Basics



PocketWizard Compatibility

PocketWizard uses two different families of firmware to control their radio: Legacy and E Release. The firmware installed in this Plus IIIe is the E Release and your radio is a member of the PocketWizard E Series family. The E Release uses a new communication protocol that enables your Plus IIIe to have greater range, enhanced reliability, and more features than a Plus III using the Legacy firmware.

This Plus IIIe will work with any other PocketWizard that has been upgraded to E Release firmware operating on the same frequency. PocketWizard offers two frequencies: FCC for North and South America and CE versions for most of the rest of the world. E Series firmware will not work with Legacy firmware but the Plus IIIe can be downgraded to the Legacy firmware to work with Legacy PocketWizard radios (such as the Plus II, MultiMAX, FlexTT5, etc). It can be upgraded again as often as you like at no additional cost. Your existing radios may be upgradeable.

If you choose to downgrade your Plus IIIe to Legacy firmware, some functions and settings may operate differently. Please refer to wiki.pocketwizard.com for a list of compatible radios, information on how to upgrade or downgrade your PocketWizards using the PocketWizard Utility, and how to use Legacy firmware with your Plus IIIe.

Channels & Zones

Your Plus IIIe needs to be on the same Channel and Zone as other PocketWizard radios to work together. Channels can be set via the Plus IIIe's Channel up/down buttons  . The Plus IIIe has 4 Zones (ABCD). See "Channels & Zones" section (pg. 15) for more info.

Plus IIIe Transceiver Basics

Batteries

Make sure batteries are properly installed (pg. 5). The Plus IIIe will operate reliably using almost any pair of ~1.5 volt AA (IEC: LR6) batteries. Rechargeable batteries will work, though operation time may be reduced and battery level display may not be as accurate. Always turn off all equipment (PocketWizard radios, flashes, cameras, etc) before making connections or replacing batteries. Remove batteries during storage.


Powering on/off

Hold down the Power/Mode button for about two seconds to power on or power off the unit. When turning on, the status LED will blink a red-green-red-green pattern once for E Release firmware (or a single bold green blink if unit has been downgraded to Legacy firmware) then blink every few seconds to indicate normal operation. See the Status LED section (pg. 16) for details about power levels. It will blink red when a trigger is transmitted or received.

USB

The Plus IIIe's mini B USB port is located on the underside by the hot shoe. It can be used with the PocketWizard Utility to install firmware updates or downgrade to Legacy firmware. It can also be used to power the unit with a compatible AC adapter or USB power source. See wiki.PocketWizard.com for more details.

Triggering a Remote Flash

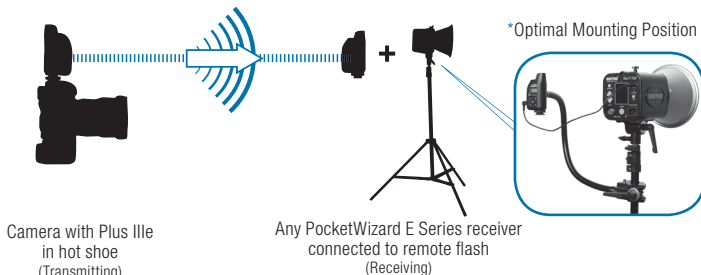

Triggering a Remote Flash with your Plus IIIe Transceiver


1. Attach a Plus IIIe to your camera's hot shoe. Slide a Plus IIIe into your camera's hot shoe and twist locking ring until snug. Do not overtighten. You may also connect the Plus IIIe to your camera's PC sync port using the included cable.
2. Connect a Plus IIIe to your remote flash via the appropriate sync cable.
3. Select a Channel and Zone A, B, C, or D via Channel up/down buttons Δ ∇ and Zone Toggle Buttons. Set any other PocketWizard radios to a matching Channel and Zone. (See the "Using Zones" section (pg. 15) for more information)
4. Take pictures normally at or below your camera's X-sync speed.

**Notes: The Plus IIIe does not support TTL communication.
Flashes must be set to Manual.**

Momentarily pressing the TEST button will test trigger the flash.

*See wiki.PocketWizard.com for more mounting suggestions.

Triggering a Remote Camera

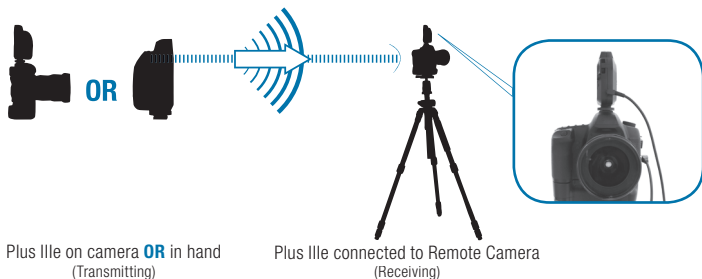

Triggering a Remote Camera with your Plus IIIe Transceiver

1. Connect a Plus IIIe to your remote camera via the appropriate remote camera cable. The receiving Plus IIIe does not need to be in the hot shoe.
2. Select a Channel and Zone A, B, C, or D via the Channel up/down buttons $\Delta \nabla$ and Zone Toggle Buttons.
3. Full Press \bullet the TEST button on the transmitting PocketWizard radio or the shutter button on the handheld camera to fire the remote camera. See page 16 for details about half press. \smile

Remote camera cables not included.

Find the correct cable for your remote camera or flash:


pocketwizard.com/cablefinder



Auto-Relay



NOTE: Auto-Relay allows you to trigger remote flashes in sync with a remote camera and requires three PocketWizard radios. With Auto-Relay, not all radios are set to the same Channel: The relaying radio transmits on one Channel higher than it received on. Visit wiki.PocketWizard.com for additional information.

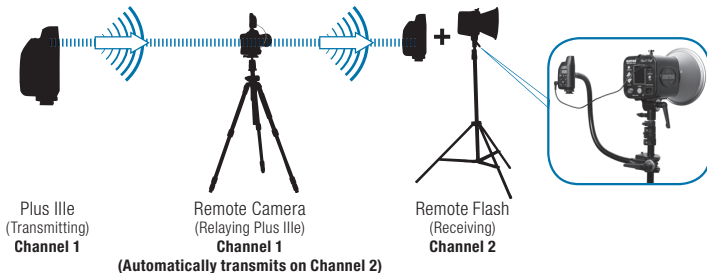

Using Auto-Relay

1. Set the transmitting PocketWizard radio in your hands to Tx Mode and the desired Channel and Zone.
2. Connect the Relaying Plus IIIe's Flash/Camera Port to the remote camera triggering port of the camera via a remote camera cable and place the radio in the camera's hot shoe.
3. Set the Relaying Plus IIIe attached to your remote camera to TxRx Mode and also to the same Channel and Zone as the transmitting PocketWizard radio in your hands.
4. Connect a remote flash to a receiving PocketWizard radio via the appropriate sync cable and set it to TxRx or Rx ONLY Mode and one Channel higher than the transmitting PocketWizard radio in your hands. Match the Zones to the other Plus IIIe radios.
5. Press and release TEST on the transmitting PocketWizard to fire the remote camera. Remote flashes will be automatically synchronized with the remote camera.

Triggering Modes: Transmit & Receive

Modes of Operation

Your Plus IIIe Transceiver supports six modes of triggering for different applications. You can switch between modes by pressing and quickly releasing the MODE button.



TxRx Mode allows the radio to be used as a transmitter attached to a camera or as a receiver connected to a remote flash or remote camera. As an Auto-Sensing Transceiver, the Plus IIIe automatically switches between transmit and receive. This is the default mode.



Tx ONLY Mode disables all receiving (**Rx**) functionality and allows you to use your Plus IIIe as a transmitter only. Use this mode when sharing remote flashes with other photographers. This mode will prevent other photographers from triggering the Plus IIIe on your camera.



Rx ONLY Mode disables all transmit (**Tx**) functionality allowing you to use your Plus IIIe radios as receivers for remote flashes or remote cameras. Use this mode when you do not want a remote Plus IIIe to perform relay functions when mounted in the shoe of a remote camera, or to prevent a remote Plus IIIe from triggering other radios when its TEST button is pressed.

Triggering Modes: HSR & LR



HSR (High Speed Receive) Mode shortens the contact time of the Flash/Camera Port, allowing for triggering of remote cameras or flashes at higher FPS (frames per second). This radio does not support HSS (High Speed Sync).



LR (Long Range) Mode dramatically increases the maximum range of a radio in a given shooting environment. LR Mode must be enabled on both transmitting and receiving radios. Use when triggering remote cameras at greater distances. It can also be used with remote flash, but there will be a reduction in maximum X-sync speed. Line of sight is recommended.



Hit Mode button to select LR mode. You can now choose from LR Channels 1-80. E Channels 1-32 and LR Channels 1-80 use different frequencies and will not trigger each other. Both the transmitting and receiving radios must be set to the same type of Channel.

NOTE: If you are using a Plus IIIe set to LR mode in a remote camera's hot shoe, the remote Plus IIIe will automatically engage Auto Relay mode and send out a transmitting signal on the next highest Channel, whether you are using a remote flash or not. If you do not want that behavior, remove the Plus IIIe from the hot shoe, disable the camera's hot shoe, or cover the center pin contacts to prevent engaging Auto Relay.



If you choose to downgrade your Plus IIIe to Legacy firmware, Long Range settings operate differently. Please see wiki.PocketWizard.com for details.

Triggering Modes: RP



RP (Repeater) Mode allows you add one or more Plus IIIe radio(s) between a pair of transmitting and receiving units to increase maximum triggering distance. For example, if you can reach 200 meters, you can add a Repeater to reach 400 meters. This mode can be used when triggering remote cameras. It can also be used with flash but there is a reduction in maximum X-sync speed. This is not the same operation as Auto-Relay Mode.



RP mode with E Release firmware requires a multiple Channel setup. Set the transmitting and first Repeater radio to the same Channel. Then increase the Channel number for each successive repeater unit. Make sure each Repeating radio can only receive the signal from one other radio, otherwise an endless loop could occur. Put the transmitting radio into Tx ONLY Mode for best results.

For example:

If you are using one Repeater in the middle, set the transmitting and Repeater radio to Channel 1. Set the receiving radio to Channel 2. (Ch1>Ch1>Ch2). If you are using a total of five radios for very long distance, set the transmitter and first Repeater to Channel 1, the second Repeater to Channel 2, the third Repeater to Channel 3, and the receiving radio to Channel 4. (Ch1>Ch1>Ch2>Ch3>Ch4).



If you choose to downgrade your Plus IIIe to Legacy firmware, Repeater settings operate differently. Please see wiki.PocketWizard.com for details.

Channels and Zones

NOTE: This PocketWizard Plus IIIe uses the new E Release firmware. This protocol will not work with Legacy firmware. This Plus IIIe can be downgraded via the Utility to work with Legacy firmware. Please see wiki.PocketWizard.com for more information.

Channels 32 | 80 E Channels | LR Channels

The Plus IIIe Transceiver supports 32 different E Channels and 80 different LR Channels. Each Channel represents a digital code transmitted on specific PocketWizard radio frequencies. This enables many photographers to work in the same area or for one photographer to exclusively control different sets of receivers. A Plus IIIe will trigger any number of receiving PocketWizard radios set to the same Channel. Radios set to different Channels will not trigger each other.

Press the Channel up/down buttons   to change Channels.

Using Zones

Zones can be used to toggle remote cameras or flashes on or off from a transmitting PocketWizard radio. Zones can also be used when sharing flashes with another photographer so only some of the remote flashes are shared, even when using the same Channel.


Zones A, B, C, and D are selectable via the Plus IIIe's Zone Toggle Buttons and are available on all E and LR Channels. The enabled Zones are displayed in a box on the right side of the LCD. You can enable any combination of all four Zones. A receiving Plus IIIe will only trigger if the transmitting PocketWizard radio has at least one matching Zone enabled.

NOTE: If you choose to downgrade to Legacy firmware, Channels and Zones will operate differently. Please see wiki.PocketWizard.com for details.



Other Functions


Status LED/Battery Level Indicator

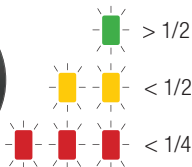Status LED blinks regularly to show battery level and illuminates red briefly when the radio sends or receives a signal. The front LCD panel will also show a battery level indicator.



TEST Button (Two Stage Trigger)

Half pressing  the TEST button on a handheld transmitting Plus IIIe can wake up and pre-trigger a remote camera when using a Plus IIIe or Plus IVE as the receiving radio with the correct remote camera cable (available separately). Half pressing  the test button will make the camera respond more quickly and consistently but also reduces battery life. It will not affect remote flashes.

Fully pressing  the TEST button fires any remote cameras or flashes connected to receiving PocketWizard radios set to the same Channel and Zones.

Reset

To reset your Plus IIIe Transceiver to the default setting, hold the TEST button as you power the radio on. The default mode after a reset is **TxRx** on **Channel 1** with **all Zones** enabled.

More Information

Please search for Plus IIIe at wiki.PocketWizard.com for the most up to date and detailed information about your Plus IIIe.

Technical Information

Frequency: Plus® IIIe FCC/IC: 340.00 – 354.00 MHz
Plus® IIIe CE: 433.42 – 434.42 MHz


Transmit Output Power: Less than 1 milliwatt (1/1000 of a watt)

Batteries: 2 x AA (IEC:LR6) Alkaline recommended for ~50 hour life.
External USB Power at ~5 volts and < 100mA

Triggering Delay: 1/1200 of a second

Operating Temperature:

Above -15° C (5° F) and
below 50° C (120° F)
Always use fresh batteries
in cold temperatures.

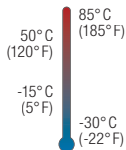

Storage Temperature (without battery):

Above -30° C (-22° F) and
below 85° C (185° F)
without batteries.

Flash/Camera Port Sync Voltage Tolerance: 300 Volts

Backlit LCD: The Plus IIIe's backlit LCD activates automatically when any button other than TEST is pressed. It turns off after 5 seconds.

LEDs: Red LEDs are used for dim light application and do not indicate a hazardous status.

Maximum Sync Voltage: 300 V

Radio delay: 1/1200s

X-Sync: Up to 1/250, 14.5 FPS

Dimensions:

10.7 cm (4.2") x 5.3 cm (2.1") x 3.0 cm (1.2")

Weight: <110 g (3.9 oz)

Sustaining High Performance

NOTE: Your PocketWizard radios use the environment as a medium for transmitting and receiving radio signals. The performance of your radios depends on their placement in the environment, nearby radio interference, and the radios' orientation and position relative to each other.



Best Acceptable Poor Worst
Orientation of transmitting and receiving Plus IIIe's for optimal radio reception.



Keep radios away from metal, concrete, or high water-content objects.



Wireless Basics

The Plus IIIe is designed to work in many challenging environments. For the best performance with any radio, maintain a line of sight between radios and keep antennas parallel. Make sure radios are not near any large metal, concrete, or high water-content objects. People and trees are mostly water! Make sure radios are not blocked by these objects or by hills.

The Plus IIIe Transceiver's antenna is omnidirectional and its orientation should not significantly impact performance in most shooting scenarios, but optimizing for radio reception will always improve the maximum range.

Maintain at least a 12\" distance between antennas. Avoid direct antenna contact with anything metallic. "Dead spots" have a number of causes, but the solution is usually the same: move the radio a few inches or feet away from the problem area. Always obey the laws of physics.

USA - The FCC wants you to know:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Mounting and cable connections detailed in this document represent the intended usage, however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Consult the dealer or an experienced radio or television technician for help.

USA / Canada

This device complies with Part 15 of the FCC rules and with Industry Canada Licence-exempt RSS Standards. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Transceiver FCC ID Number: KDS-PW3-100
Transceiver CANADA IC: 2170A-PW3100

Simplified EU Declaration of Conformity

Hereby, LPA Design Inc. South Burlington VT USA declares that the radio equipment type PocketWizard Plus IIIe CE wireless photographic remote control is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.pocketwizard.com/support/reference/CE/



© 2019 LPA Design. All rights reserved. Product features and specifications are subject to change without notice. PocketWizard, ControlTL, MiniTT1, FlexTT5, FlexTT6, HyperSync, Plus, and MultiMAX are either trademarks or registered trademarks of LPA Design. All other trademarks contained herein are the property of their respective owners.

Patent information: www.pwpatents.com

13425 v 1.0