

RA163 DISTRIBUTION AMPLIFIER





FFATURES

- Stereo 4 channel or Mono 8 channel audio distribution
- Front panel volume controls
- Balanced inputs and outputs

SPECIFICATIONS

Input Impedance: 20 $K\Omega$ Balanced

Max Input Level: +22 dBV

Output Impedance: 100 Ω Balanced

Max Output Level: +24 dB
Max Gain: 20 dB
S/N Ratio: >90 dB

Frequency Response: 10 Hz - 40 kHz, +/- 1 dB

THD: <.008%

Power: 120 VAC 50-60 Hz, 15VA Size: 19" x 1.75" x 6.5"

19" x 1.75" x 6.5" (48 x 4.5 x 17 cm)

Weight: 7 lbs. (3 kg)



Quick Start Operation Guide

INTRODUCTION

Thank you for your purchase of the ROLLS RA163 Distribution Amplifier. This unit will distribute a mono signal to eight outputs, or a stereo signal to four right and four left outputs. The outputs are designed to drive high-level balanced lines in a sound distribution system.

NOTE: THIS MANUAL ASSUMES THE USER HAS A BASIC WORKING KNOWLEDGE OF AUDIO ELECTRONICS, BALANCED AND UNBALANCED CONNECTIONS, AND PROPER SIGNAL LEVEL SETTING.

DESCRIPTION FRONT PANEL



Mono 1 - 8 / Stereo 1 - 4: These volume controls vary the level of signal for each indicated output.

<u>+20dB/0dB Gain switch</u>: Depressing this switch provides 20 dB of gain to the input signal.

pwr: LED indicating the unit's power status.

STEREO/MONO CONFIGURATION

Use the 2X4 - 1X8 switch to change the stereo/mono configuration of the RA163. Follow the silk screening on the unit for proper connection.

REAR PANEL



<u>120 VAC 50/60 HZ 15 VA</u>: IEC Power Connector - Connect to the power cord, and to a properly grounded AC source.

INPUTS Right/Mono and Left: Balanced XLR jacks.

MONO 1 - 8, STEREO 1 - 4: Balanced XLR output jacks.

INSTALLATION

Install the RA163 in a standard 19" rack. The unit is intended for installations where several zones or areas need to be controlled and a high level balanced signal is required to drive the input lines.

SCHEMATIC

