- WARM LIGHT

USING BACK PANEL TO ADJUST BRIGHTNESS AND KELVIN TEMPERATURE

- (1) Turn on by pushing On/Off button to the ON position.
- (2) Adjust brightness by turning the controller knob clockwise to brighten or counterclockwise to dim. There is a second controller knob on the front of the light for self-portrait applications. All adjustments are the same for both controller knobs.

(3) To adjust Kelvin temperature, press controller knob in one time. Once the Kelvin Temperature Readout begins to flash, turn the controller knob counterclockwise for warmer or clockwise for cooler Kelvin temperature output. The Savage Luminous Pro LED Ringlight Plus can be set to control groups of other lights together when using the included remote control. Multiple lights in the same group can be controlled independently of each other using separate channels. Savage's Edgelight Pro LED panels are compatible with and can be used with the same remote as the Ringlight Plus using the group and channel functions.

(4) To select a "Channel", press and hold the controller knob until the channel indicator begins to flash and then remove finger from controller knob. While the channel selector is flashing, turn the channel selector knob counterclockwise to select a lower channel number or clockwise to select a higher channel. If the controller number is pressed in for 2 seconds, it will alternate between the group selector and the channel selector until you remove your finger. Select any channel between 1 and 50. If more than one Savage Ringlight Plus is being used or if using in conjunction with the Savage Edge Light Pro, all units that are on the same channel and in the same group will be controlled simultaneously using the included remote control. Any lights that are not in the selected channel or group will not be controlled.

(5) It is possible to control groups of lights in addition to operating them on multiple channels. For instance, you can set one or more lights to Group A and other sets of lights to Group B, Group C through Group F (6 Groups). You can then control all lights in the same group simultaneously if they are all on the same channel 1-50. Individual lights in the same group can also be adjusted independently within the same group if they are set to different channels. To set the group number for a particular light, press the controller knob in and hold for 2 seconds. When the Group selector begins to flash, remove your finger. Before the third flash, turn the Group selector counterclockwise to select a lower group or clockwise to select a higher group. When the controller knob is pressed in and held, it will alternate between the Group Selector and the Channel Selector. Remove you finger while the desired selector is flashing.



USING THE INCLUDED REMOTE CONTROL

- (1) Make sure the power button on the back of Ringlight Plus is in the On position. The On/Off switch on the remote control will not function if the light's power switch is off.
- (2) Press the remote control power button one time.
- (3) The Group and Channel settings on the remote control must match the group and power setting on the light's back display. The remote control will not control the Ringlight Plus unless the groups and channels match.
- (4) Adjust the channel setting on the remote control by pressing the Ch/Grp button until the channel number begins to flash. Change to higher channels by pushing the + symbol on the remote and lower channels by pressing the symbol.
- **(5)** Select the Group number on the remote by pressing the Ch/Grp button until the group letter begins to flash. Use the + button to select a lower letter in the alphabet and the minus button to select a higher letter.
- (6) After the channel/group numbers are set to the corresponding channel/group numbers on the back of the light, press + to brighten and to darken.
- (7) To change the Kelvin temperature, press the Set button on the remote until the Kelvin temperature readout begins to flash. Use the + to cool the color temperature of the light and the button to warm. Only use included Sony NP-F batteries with the AC power cord removed. Only use the AC power cord when the batteries are removed.

