

SJCAM

EMPOWER YOUR DREAMS



SJ9 STRIKE

USER MANUAL



INTRODUCTION

Dreams allow us to be bigger than who we currently are. Our mission is to bring you closer to what you most dare to be, your passion, your greatness, and for you to be able to share them with others.

In our last decade of experience in advancing Product Research and Development, we have gained the recognition and trust from customers and retailers all over the world, making us realize what needs to be done in order to encourage people to create more, explore further and farther, and make dreams happen.

Having our own factory and a facility of more than 500 employees, we have full control of overseeing all the processes in every step of the way, giving us the freedom to be more versatile and highly responsive to the ever-growing demands of the market, all for the purpose of our commitment to empower your dreams.

-SJCAM CEO



Congratulations on your new SJCAM Action Camera!

We know you're excited to use your *SJ9 STRIKE*, please take time to read this manual before doing anything with it. There's plenty you can do, so you need to familiarize yourself with the features now to get the most out of it.

It is important to keep your camera's firmware up to date. You may connect your camera via WiFi to the *SJCAM ZONE app* to automatically download and install the latest firmware, or visit www.sjcam.com/firmware.

CAUTION!

1. This is a high-precision product. Do not drop.
2. Do not expose the unit to strong magnetic fields, such as electric motors, magnets and machinery that use strong radio waves.
3. Never leave the unit in high-temperature areas. Electronics and optics can be damaged under prolonged exposure to heat.
4. Although this model is waterproof without needing an additional housing, it is important to check that all seals are intact and all doors are properly closed before submerging the camera in water.
5. Always store extra batteries in a compartment away from any sharp metals and moisture.
6. Avoid extended periods of battery charging. Keep it away from children and pets while charging to avoid accidents.

SJCAM **SJ9 STRIKE** SPECIFICATIONS

CHIPSET: Ambarella H22 S85

SENSOR: SONY IMX377

SENSOR RESOLUTION: 12 MegaPixels

FRONT SCREEN: 0.96 OLED

MAIN SCREEN: 2.33" IPS Touch Screen

LENS: 7G (2 Aspheric Lens included)

ANGLE: 170°

APERTURE: F 2.8

FOCAL LENGTH: 2.8 MM

VIDEO RESOLUTION: 4K:(3840×2160)25/30/50/60fps,

1440P:(1920×1440) 25/30/50/60fps,

1080P:(1920×1080) 24/25/30/50/60/120fps. 720P:(1280×720) 240fps

BATTERY CAPACITY : 1300mAh Detachable Battery

WEIGHT: 85 G

DIMENSION: 62.5 MM 41 MM 28.8 MM

SYSTEM: WINDOWS 7, 8X or above /OS X® 10.8 or above

STORAGE SUPPORTED: MicroSD, UP TO 128GB

VIDEO FORMAT: MP4 (H264/H265)

DECODE FORMAT: H.264

VIDEO FORMAT: MOV, MP4

PHOTO RESOLUTIONS: 12M (4000×3000 4:3), 10M(3648×2736 4:3),8M 16:9 (3840×2160 16:9),



8M 4:3(3264×2448 4:3), 5M(2595×1944 4:3, 3M(2048×1536 4:3), 2MHD (1920X1080 16:9)

IMAGE FORMAT: JPG

WIFI : 2.4 G/5G (802.11 A/B/G/N)


GYRO STABILIZATION: 6-Axis Gyroscope

BATTERY DURATION (APPROX.): 100 Minutes for 4K@30fps

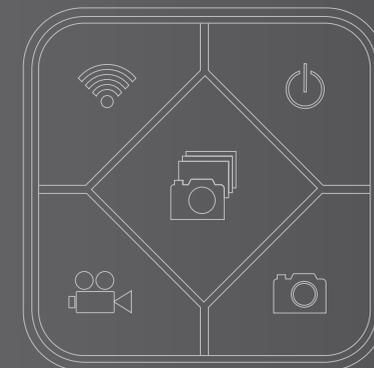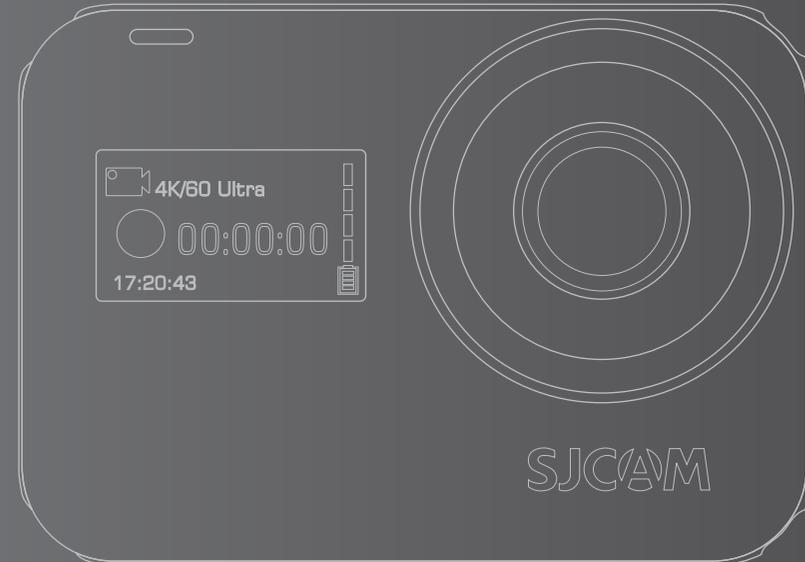

PARTS OF YOUR CAMERA

SJ9 STRIKE

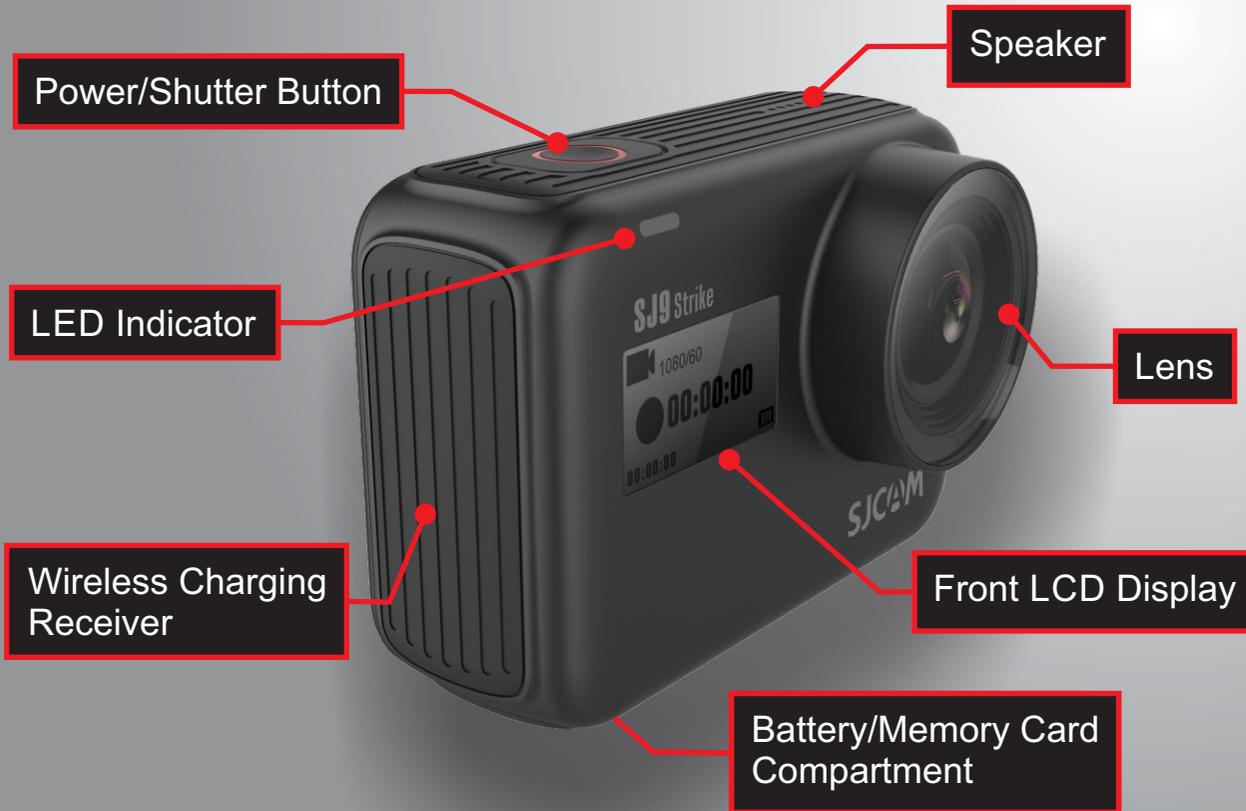

SJCAM

SJ SMART REMOTE (Optional)




WIFI On/Off Switch

Camera-Off Button

Burst Shot Button

Record Video Start/Stop

Shutter Button

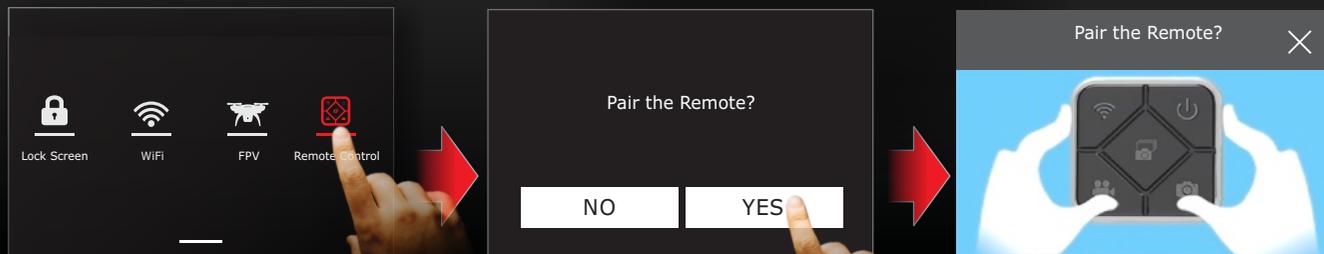

To pair your remote to your SJ8 PRO: Swipe down from the top > Select Remote Control
Tap the "YES" to start pairing. A picture instruction will appear. Press the Video and Photo buttons on the Remote simultaneously. "Pairing Complete" will show when successful.

Once your Remote is paired, you will never need to pair it again.
When the SJ9 STRIKE is powered on, SJ Remote can begin sending commands to your camera.

The Remote is tested to work at a maximum distance of 10 meters (30 feet) away from your SJ8 PRO unobstructed Line-Of-Sight. Distance may be affected severely by obstacles in the path of the signal.

SJ REMOTE BATTERY:
The battery on your Remote will last you a long time as it only uses power when you press any of the buttons.

The remote is powered with a Lithium CR2032 button-cell battery.

*Shown here is SJ Remote Version2.
It can be momentarily submerged in water up to 3 Meters (approx: 10feet).
Ver.1 has white icon labels, not waterproof, and production has been discontinued.

SJ9 STRIKE

POWERING THE CAMERA ON

SJCAM



On the top right side of your camera is the Power/Shutter Button. Press and hold it down to start your camera.



The SJCAM splash-screen will briefly show while the camera initializes, and will immediately proceed to the Main Screen.

NOTE: If firmware files are present in the memory card it will initialize and begin installation. The camera will then proceed to the Main Screen, ready for use.

SJ9 STRIKE

INSERTING A MICRO SD CARD INTO THE CAMERA



Open the battery cover by sliding the lock with your fingernail towards the direction shown above.
Swing the battery cover outward.

Locate the card slot, and insert the microSD with the label side facing the battery.

HINT: The arrow on the battery also points to where the card slot is, aside from showing the battery's orientation.

Gently push the card in until it clicks into place.

To remove the card, just reverse illustrations 2 & 3.

NOTE: To make sure you do not lose any data, only remove or insert your card while the camera is completely turned off.

SJ9 STRIKE

REPLACING THE BATTERY

SJCAM



1 Open the battery cover by sliding the lock with a fingernail.



2 While pressing on the lock, swing the battery door open. Grab the pull-tab with your fingers.



3 Pull the battery out. Insert a freshly-charged battery in.

NOTE: The battery will only go in in only one direction. Check that the arrow printed on the label at the bottom points to the front of the camera, which also points to the MicroSD slot.

SJ9 STRIKE

INSERTING A USB-C CABLE

SJCAM



Locate the covered USB-C port on the left side of the camera. Use a fingernail to slide the lock open. Swing the door outwards.

Firmly insert the USB-C cable included in the package all the way in. A LED charging indicator is next to the socket.

The USB-C port can be used for a variety of purposes. It may be used to transfer files, charge the battery, connect a microphone, and using a special adaptor: output digital or analog video.

The Main Screen

Elapsed Time | Time left on Card

5G WiFi Active | Frequency

Microphone Active

Current Mode Icon
Icon shows what mode you are currently in.

Battery Level Indicator
Displays approximate power left on the battery. Battery blinks when almost empty.

Current Date & Time

Microphone Active

Status Indicator Light
Tells you whether the camera is active even when the screen is off.

Gyro Stabilization (On)
An indicator showing that the Gyro Sensor is active. Will not show when turned off.

Go to Playback Mode
Tap this icon to go to the camera's gallery and view the videos and photos you have recorded.

Zoom Controls
Tap the (+) or (-) magnifying glass icons to change the digital zoom factor.

Current Resolution / Options

Current Shutter Speed Details

Current ISO Details + Current Mode
Top displays the ISO Settings, bottom shows the current mode you're in. Swipe up for Mode selection.

Current Mode Settings
Access and make changes to the settings of the mode you are currently in.

Go to Settings
Tap this icon to access and make changes to the General System Settings.


The Main Screen has many nested menus available by tapping or swiping.

You can also hide all the icons on screen to use the viewfinder without the onscreen icons and indicator labels by tapping anywhere in the middle.


Toggles Screen




Playback Options

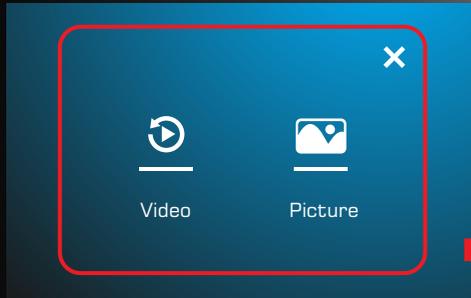


General Settings

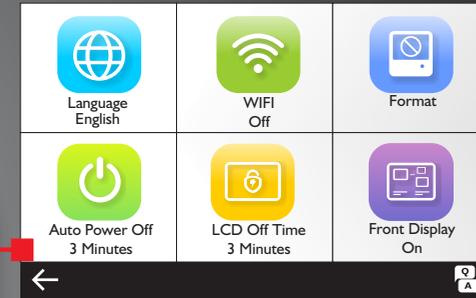

Resolution Options

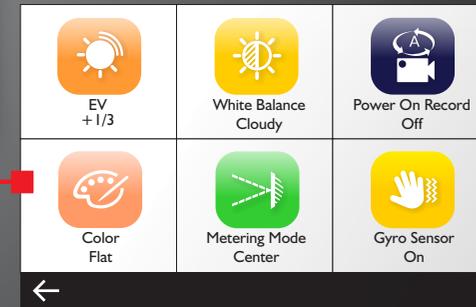

Mode Settings

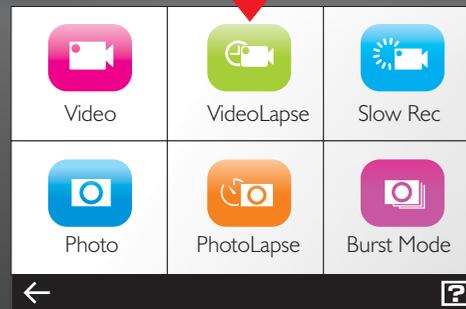

Mode Selection

← Goes back to the Main Screen

? More information on Modes

QA Common Questions and Answers

Toggles Screen



To get here,
swipe down from top.



Lock Screen

Lock Screen

Turns off the display and disables the touchscreen to avoid accidental taps. Swipe the key icon to the lock to enable the touchscreen again.



WiFi

WiFi Toggle

Enable or disable the WiFi by tapping this and setting it.



FPV

FPV

Enable or disable FPV (First-Person View) via a special cable. Cable sold separately.



Remote Control

Remote Toggle

Enable the remote by tapping this and setting it to ON. You will also see the Pair SJRemote option here.

Swipe-up
Handle

Swipe Up to return to Main Screen


Swipe this up to hide the Toggles Screen

▶ Playback Screen

Elapsed Time
Shows how much of the file is being played


Go to previous file ◀
Tap or swipe right to get to the previous file.

Back to File Gallery ◀
Returns to the file selection screen.

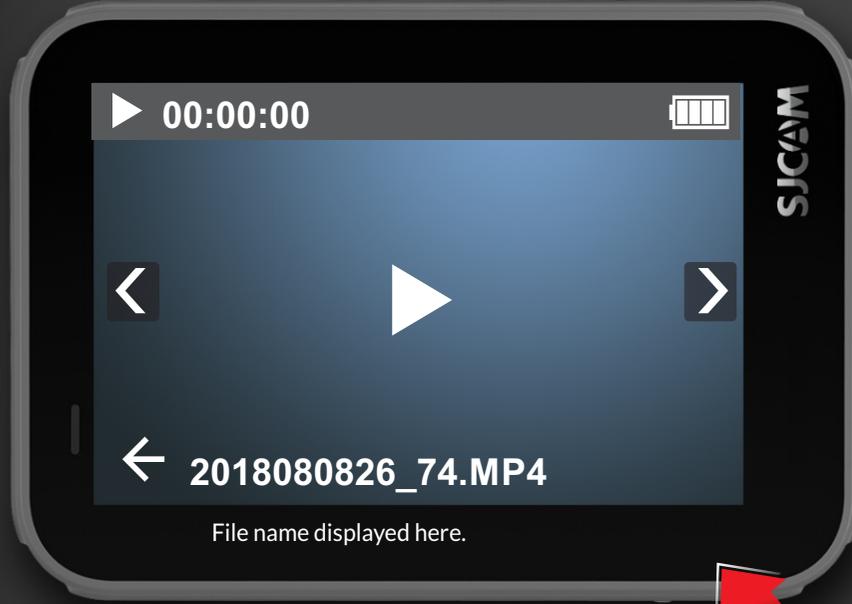


Battery Status Indicator
Shows how much power is left.

Go to Next File ▶
Tap or swipe left to get to the next file.

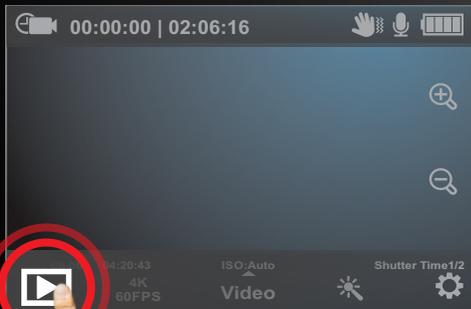

Main Screen

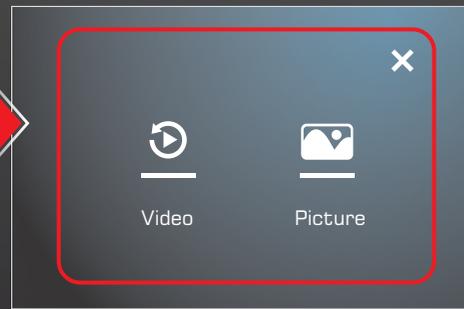


File Type Selection



File Selection

Mode Selection

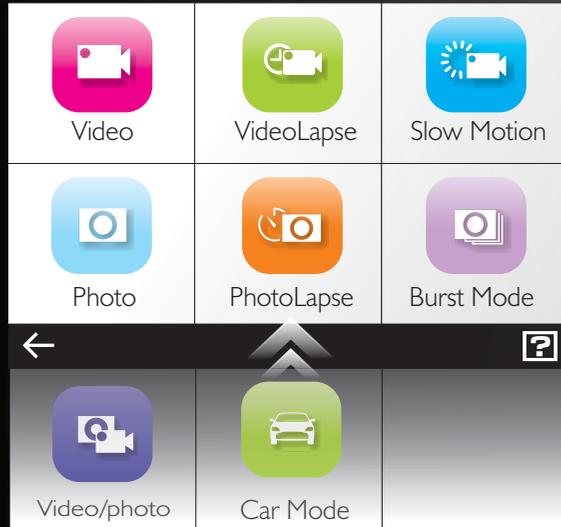

Exit to Main Screen
Tap the back-arrow icon to exit.

Hints, Tips, & FAQ
For more information, tap the [?] icon on the lower right.

To get here,
tap this, or swipe up.



Mode for recording videos.



Timelapse photography stitched on-cam to produce a video.

VideoLapse



For recording video in slow motion.

Slow Motion



Still photograph mode.

Photo



A series of still photos for creating timelapse. Each photo will have its own file.

PhotoLapse



Fast multiple succession of snapshots, choose the number of photos desired (Max: 10).

Burst Mode



For recording video while a sequence of photos is taken at a set interval.

Photo+Video



Automatically starts the camera and begins recording once the engine is started (Car Charger Cable Accessory required).

Car Mode

Swipe UP to access Video+Photo, and Car Modes.



Mode Settings Screen



Current Menu Options

Depending on what mode you are in, the menu options will vary. All the options for the particular mode will appear by scrolling down for other items. Once set, the settings will be the same for that particular Mode every time you go back until you change it again.


← Tap this arrow icon to exit.

↑ Scroll up for more Mode Settings

To get here, tap this.



You can switch to text-only menu by going to General Settings and choose "Classic" in User Interface options.

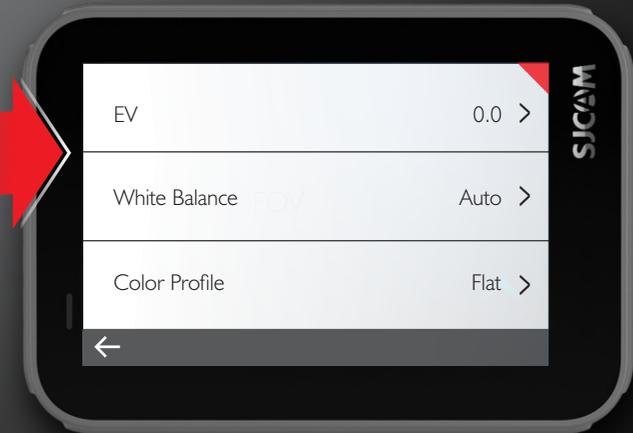

The Front Screen

Current Mode Icon


Icon will show what mode you are currently in.
The options will vary depending on the mode.

Camera Activity Ball

The ball will appear steady when in standby mode.
The ball will blink when shooting a video.

Current Time

Displays current time in digits.

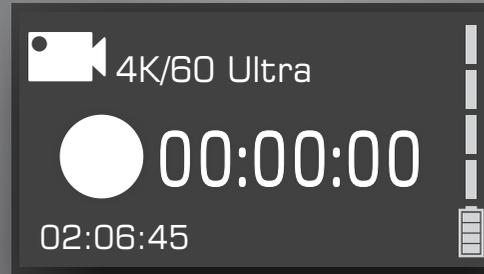

Current Resolution / Frame Rate

Will display the set resolution size and the accompanying frames per second.

Elapsed Time / Shots Taken

Shows the length of time you are recording.
Or the number of images that are stored.

Battery Meter

Displays approximate power left on the battery. Battery blinks when almost empty.

You can enable or disable the front screen by going to the General Settings menu, and choose "Off" in "Front Display"



RESOLUTION SELECTION

4K (3840x2160)	60 fps >
4K Ultra (3840x2160)	30 fps >
2.7K (2720x1520)	30 fps >

Video Modes

- 4K** • 3840x2160
- *Framerates: 24, 25, 30, 50, & 60 fps*
- 4K Ultra** • 3840x2160
- *Framerates: 24 & 30fps*
- 2.7K** • 2720x1520
- *Framerates: 24, 25, 30, 50, & 60 fps*
- 1440p** • 2560x1440 •
- *Framerates: 24, 25, 30, 50, & 60 fps*
- 1080p** • 1920x1080
- *Framerates: 24, 25, 30, 50, 60, & 120 fps*
- 1080p Ultra** • 1920x1080
- *Framerates: 50 & 60 fps*
- 720p** • 1280x720 • 240fps

12MP 4000x3000 4:3
10MP 3468x2736 4:3
8MP 3840

Photo Modes

- 12MP • 4000x3000 • Aspect Ratio 4:3
- 10MP • 3648x2736 • Aspect Ratio 4:3
- 8MP • 3840x2160 • Aspect Ratio 16:9
- 8MP • 3624x2448 • Aspect Ratio 4:3
- 5MP • 2592x1994 • Aspect Ratio 4:3
- 3MP • 2048x1536 • Aspect Ratio 4:3
- 2MP • 1920x1080 • Aspect Ratio 16:9



IMPORTANT!

To ensure you get the full potential of your SJ9 STRIKE, it is very strongly advised that you use at least a **Class 10 U3** card of a known brand, purchased from a reputable seller.

This model uses a high-performance processor which requires writing image data at high speeds. Using a low-speed card may result in erratic camera performance; the camera may overheat, and photos/videos may have issues being recorded.

SJ9 STRIKE supports microSD cards up to 128GB, and can read and write in either a FAT32 or ExFAT filing system.

MODE SETTINGS - Page 1



EV
+1/3

EV • Exposure Value - Adjust the exposure for the amount of light allowed in. Set this value low to compensate if the scene is too bright; set high when too dark. High EV takes longer for images to be taken, and subject may blur if moving.



White Balance
Cloudy

WHITE BALANCE • Adjusts the color temperature of the recording to compensate for ambient lighting.



Power On Record
Off

POWERON RECORD • Sets whether the camera automatically begins recording once the camera is turned on. This feature is for video mode only.



Color Profile
Flat

COLOR PROFILE • You are given 2 preset choices: SJCAM - Vivid, and Flat. Choose Flat to preserve color dynamics; SJCAM - Vivid to enhance colors.



Metering Mode
Center


METERING • Tells the camera which portion of the scene takes priority when setting the brightness level of the whole image. Options: Average, Center Weighted, or Spot.



Gyro Sensor
On

GYRO SENSOR • Enable the Gyro Sensor to smoothen out shakiness during recording. Disable the Gyro Sensor when not needed, to gain full field-of-view of the set resolution.

EV works by controlling how much light is allowed in.

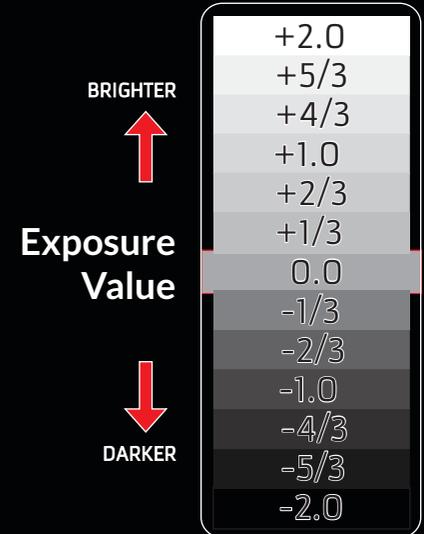

HINT: You will know if the Gyro Sensor is active when you see this blinking hand icon near the battery status display.

MODE SETTINGS - Page 2



Video Quality
Normal

ENCODING • H.264 is a standard for writing video files, high compatibility with video players. H.265 is a newer standard that compresses video much better for smaller file sizes and faster streaming, may require you to update your video player's codec.



Volume
8

VOLUME • Sets the microphone sensitivity for how loud or how soft sound is recorded into the video.
CAUTION: Setting this too high in small, enclosed spaces may distort the recorded audio.



Sharpness
Normal

SHARPNESS • Sets how much image detail is saved. A higher setting will produce sharper images at the expense of file size. Setting this low will smoothen annoying closely-knit fine lines.



Distortion Correc...
On

DISTORTION CORRECTION • Enable this setting to remove the fisheye effect that is inherent in wide-angle lenses. **NOTE:** Minor cropping of the image will occur for this to be possible.



Loop Recording
Off


LOOP RECORDING • Allows continuous recording when the memory card is full by recording over the oldest file in the folder.



File Size
5 Minutes

FILE SIZE • Manually sets the limit of file size length..
NOTE: Cards formatted in FAT32 will have a maximum file size of 4GB, regardless of resolution or length of recording. Your SJ8 PRO supports ExFAT file format which removes this limitation.

A visual explanation of how Distortion Correction works.

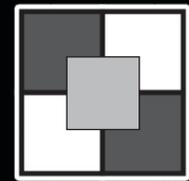

DISTORTION CORRECTION
ON



DISTORTION CORRECTION
OFF



CAUTION: When using your camera as a dashcam, use a car charger cable and remove the internal battery to avoid overcharging/overheating.



WARNING!

Operating your camera while driving a vehicle is potentially dangerous. It is strongly advised that you setup your camera **BEFORE** your trip.

MODE SETTINGS - Page 3



Encoding
H264

VIDEO QUALITY • Gives you the option of recording video in high bitrate for more image detail per frame, but will result in much bigger file sizes.



Photo Quality
Fine

PHOTO QUALITY • Presets for making adjustments on how much detail is written in photos. Options: Fine, Standard, and Economy.



ISO
6400

ISO • Adjusts the image sensor's sensitivity to light. A higher ISO will collect more light at the expense of adding noise (grain) into the image when set too high.



Audio
On

AUDIO • Enables or disables sound recording on your video footage.



Time Stamp
Off

TIME STAMP • When enabled, will display the date and time of your recording. Great when doing timelapse videos, or for making a documentary. Otherwise just turn it off.



Shutter Speed
1/500

SHUTTER SPEED • Controls how long the image sensor stays "open" to capture an image. Fast shutter speeds allow less light, freezing movement better. Slow shutter speeds allow more light but may blur moving objects. Very long exposure settings are best for night photography.

METERING OPTIONS



AVERAGE

Prioritizes the whole scene's lighting.



CENTER

Prioritizes the middle part of the frame.



SPOT

Prioritizes only a very small portion of the center of the scene.

MODE SETTINGS - Page 4



RAW
Off

RAW • Enables or disables saving pictures as image sensor data onto a file (.RAW), preserving image details for editing later. Requires a converter for use with image manipulation software.
NOTE: RAW is not readily viewable until converted or output to JPEG.



VideoLapse
1 Second

VIDEOLAPSE • Takes a series of photos at set intervals to create a video file that is immediately playable without requiring to stitch each image together. This setting is only available in VideoLapse mode.



Shutter Speed
2X

SLOW MOTION • Speeds up very slow objects or scenes such as sunsets for playing back in standard speed to create a video that shows very slow movement. This setting is only available in Slow Motion mode.



Photolapse Interval
1 Second

PHOTOLAPSE INTERVAL • Sets how far apart each frame is recorded. Longer intervals make slow moving objects like clouds appear to move much faster than short intervals.



Some menu items have screen hints to make it easier to understand and use.



H.265

High Efficiency Video Coding

H.265, also known as HEVC (or High Efficiency Video Coding), is a new industry standard in video encoding which writes much smaller video filesizes without compromising image quality. HEVC is created so that large video files can stream much faster over networks, and have less storage requirement.

GENERAL SETTINGS - Page 1

Language
English

LANGUAGE › Options for system language.

WiFi
Off

WiFi • Switches WiFi communication to app on or off. When active: scan networks, select your camera's SSID and then connect on your phone before opening the SJCAM app.

WiFi Frequency
2.4 GHz

WiFi FREQUENCY • Switch from either standard 2.4GHz, or 5GHz (faster and farther reach).



Format

FORMAT • Completely erases everything on the memory card, then sets it up as a new drive. SJ8 PRO supports both FAT32 and ExFAT. Format the card to ExFAT on your desktop whenever possible, to allow recording files more than 4GB in size.

Auto Power Off
5 Minutes

AUTO POWER OFF • Automatically turns the camera off at a preset time. Works only if the camera is on standby and not recording.

LCD Off Time
3 Minutes

LCD OFF TIME • Automatically turns the display off at a preset time. To wake up the display, simply tap the screen or short-press any button once.

**POWER-RELATED TIPS**

- To conserve power, you may turn off the front screen if you are not using it.
- Set the Auto Power Off to 3 minutes to get the most out of your battery's charge. If no activity is detected within this period, your camera will power off.
- Go to LCD Off Time and set it to the shortest possible time. Configure the lightset so you know whether you're recording or not.
- Plan your video recordings ahead to maximize battery power.
- When recording, avoid constantly checking the LCD to see if the camera is running. LCDs use up a lot of battery power. Use the indicator lights instead to know the status.
- Your camera uses a Lithium battery, you can charge it even if you only used half the capacity.
- Get a charger and spare battery, and interchange between batteries to relieve your current battery from constant-use stresses.
- For faster charging, turn the camera off while it is plugged in.

GENERAL SETTINGS - Page 2



Front Display
On

FRONT DISPLAY • Enables or disables the small front LCD when not needed.



Indicator Lights
On

INDICATOR LIGHTS • Turns on or off all status indicator lights on the camera.



Keypad Tone
On

KEYPAD TONE • Enables or disables system sounds as an audible indicator of status and button presses.



Rotate
Off

ROTATE • Flips the recording 180-degrees. Turn this on when mounting the camera in an upside-down position such as on a car windshield or bike handlebar to keep the screen right side up.



Brightness

BRIGHTNESS • Screen brightness adjustment. Set to max when in bright daylight; or dim, when in the dark. Tap the X on upper right corner to exit.



Color Temperature

COLOR TEMPERATURE • Sets the screens color temperature. Slide to the left for warm (reddish), slide right for cooler (bluish). Tap the X on upper right corner to exit.



WIRELESS-CHARGING

Your SJ9 can be alternatively charged using a wireless charging dock. it allows you to charge the battery without having to open any of the ports, which lessens the wear-and-tear caused by repeated opening and closing of the doors.

SJ9 STRIKE

GENERAL SETTINGS - Page 3



External Microphone
Off

EXTERNAL MICROPHONE • Enables or disables external microphone. External microphone must be inserted first into the USB slot (sold separately).



Date / Time

DATE / TIME • Sets camera system date and time. Files will be labeled according to the setting here. Date / Time will also appear when Time Stamp is enabled.



Gimbal Control
Off

GIMBAL CONTROL • Enables or disables camera buttons being controlled from the gimbal.



Frequency
60Hz

FREQUENCY • Sets the screen refresh rate. This setting is dependent on country's electricity Alternating Current (AC) standards. May also be used to counter screen flicker or wagon-wheel effect.



Default Setting

DEFAULT SETTING • Resets all the camera's settings to factory defaults.



Display ISO
Off

DISPLAY ISO • Enables or disables displaying ISO setting information on the main screen.



CAUTION:

- Make sure the black rubber seals behind the access doors are present, aligned and set properly.

- Check for hair, dirt, dust, or other debris that may get caught between the doors and the camera body as they may cause a slow leak that may eventually flood the inside when fully submerged.

- Always check that both the battery and USB port doors are closed shut all the time.

- Always wash the camera housing with clean freshwater after every dive to rinse off any salts or other contaminants. Keep both access doors closed while doing this.

- Wipe off excess water with a clean cloth then air-dry. Once dry, open and clean the doors.

Note: For dives deeper than 5 Meters, it is important to use a waterproof housing specifically designed for the Sj9 Series. Sold separately.

Sj9 STRIKE

GENERAL SETTINGS - Page 4



User Interface
SJCAM

USER INTERFACE • Options to switch to standard text-only or colored icon-based user interface.



Version

VERSION • Shows the version number of the installed firmware, including the date of installer's release.



You can access the Frequently Asked Questions and answers by going to General Settings screen and tap this Q&A icon on the bottom right.



Scroll up for more.

DIGITAL ZOOM

You can zoom in and out of your scene by tapping the zoom controls on the main screen. Note that this is a digital zoom, and only performs a crop of the actual image.



ZOOM IN



ZOOM OUT



TROUBLESHOOTING

SOUND IS DISTORTED

Microphone volume is too loud. Lower the microphone's sensitivity level to keep the audio from distorting.

FILES NOT IN CORRECT ORDER

The system time has been reset. Check the camera's system time by going to General Settings, Date & Time, and adjust to your current time. This mostly happens when the battery is removed for a long period.

NO FILE FOUND

System cannot read the storage media. Ensure that the card is properly installed. Card should either be formatted to FAT32 or ExFAT (suggested).

CAMERA TAKES TOO LONG TO START

Possibly a firmware installation file is in the memory card and needs to be removed.

SLOW CARD WARNING

Memory card installed is below the recommended card type. Replace with a fast Class 10 card, U3-type recommended.

VIDEO RECORDING TOO SHORT


Memory card is not compatible with the camera. Replace card with the appropriate speed type.

CAMERA KEEPS REBOOTING

Possibly a firmware installation file is in the memory card and needs to be removed.

DOES NOT TURN ON WHEN USING BATTERY

Check that the terminal contacts at the end of the battery compartment are not bent or dislodged. If this is the case, contact SJCAM support.

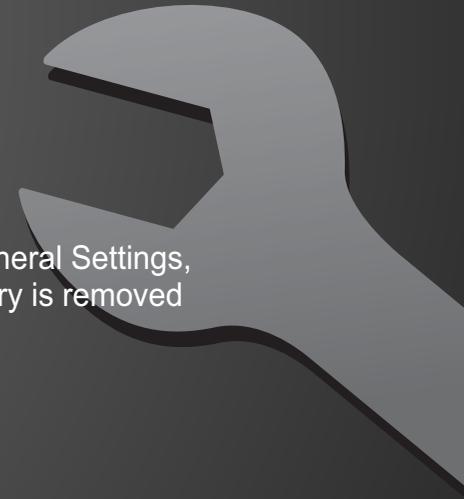

FILE MANAGEMENT

You can transfer files from your camera by using any of these 4 methods.

1. Via USB cable connected from your camera's USB-C slot to a Windows or Mac computer:
 - a) Connect the USB-C cable, choose "Mass Storage Device" on your camera.
 - b) Your device will show as a drive on your File Manager (Explorer on Windows; Finder in OSX)
2. Via WIFI through the SJCAM Zone App:
 - a) Connect your camera to your phone: Device Settings>Wifi>Choose your camera
 - b) Go to the app, tap the Gallery icon, then download the files you wish to transfer by tapping the Down arrow icon next to each file
3. By using a microSD card adaptor:
 - a) Power off your camera and remove the microSD card.
 - b) Insert it to a card adaptor and plug it to your computer.
 - c) Your card will show as a drive on your File Manager.
 - d) When you're done transferring files, right-click the drive > choose "Eject" before removing the card from your computer.
4. By transferring the microSD card to your smartphone with removable storage:
 - a) Power off your camera and remove the microSD card;
 - b) Insert the microSD to your mobile device;
your microSD card will show up as a drive on your mobile device's file manager;
 - c) Transfer the files you choose to your mobile device;
 - d) When you're done, "eject" the microSD card by choosing "Unmount"

Optional: Format the microSD card on your camera to remove files added by your mobile device.



SJCAM STRIKE
6RS

Get the app.



Follow us



Visit us at www.sjcam.com

For technical assistance, go to support.sjcam.com