

SEKONIC

Light Meter

Operating Manual


LITEMASTER PRO

L-478DR-PX

L-478DR-A-PX

L-478DR-U-PX

Phottix®

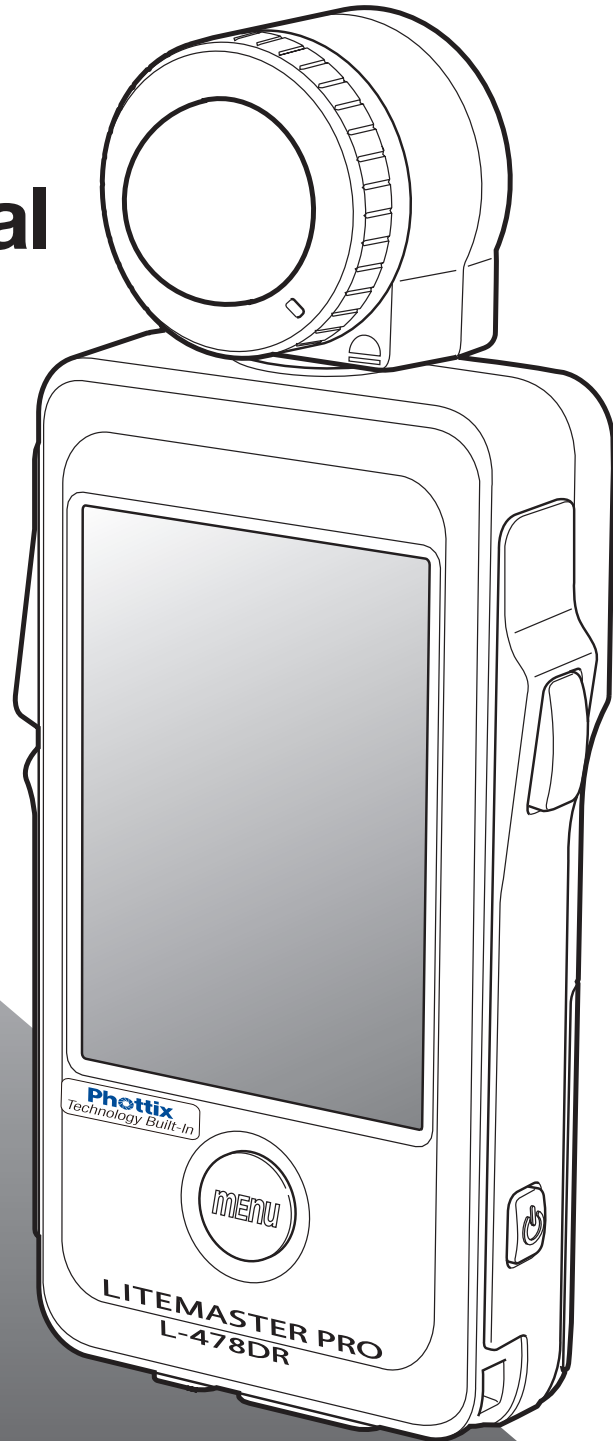

This manual is specific for Phottix® operation.
Please read the operating manual and safety precaution
carefully to fully understand the features of this product before
use and keep it for future use.
Keep the operating manual in a safe place.

Table of Contents

1 About Phottix System.....	3
1-1. How to use L-478DR-PX Series with Phottix	3
1-2. Turning the Power ON	3
1-3. Setting Radio Flash Mode in Custom Setting	4
2 Measuring	5
2-1. Selecting the Channel and Group	5
2-2. Measuring in Radio Flash Mode.....	6
2-2-1. How to use Radio Triggering.....	6
2-2-2. How to use Flash Control Mode	7
2-3. Measuring in Radio Multiple (Cumulative) Flash Mode	8
3 Functions.....	9
3-1. Custom Setting Function.....	9
3-1-1. Custom Setting Function List	9
3-1-2. How to enter Custom Setting	9
4 Specifications	10
5 Legal Requirements	10
 FCC & IC Compliance	 11

Phottix® is the registered trademark and Strato™ is the trademark of Phottix Hong Kong Ltd.

1 About Phottix System

1-1. How to use L-478DR-PX Series with Phottix System Products

Plug-in external or built-in Phottix receivers are required to work with the Phottix radio system.

Radio triggering enables a single photographer to easily trigger and control flash units. The radio transmitter built into the L-478DR-PX Series is only compatible with Phottix radio system.

Please read the instruction manuals provided with these products for details about using them.


Please go to <http://www.phottix.com/> to learn more about their products and compatibilities.

! Note

- Successful radio triggering depends on several factors. Please read these setup steps before using the L-478DR-PX Series to radio trigger flash units.
 1. It is the best to position the meter in sight of the radio receiver.
 2. Position the radio receiver so that it is away from large metallic objects, concrete, or containers of water (like people).
 3. When triggering a studio-type flash using the connecting cables included with the Strato II set, be sure to position the Strato II within line of sight so that the Strato II is above the flash body or generator pack.
 4. Sometimes, conditions do not allow radio reception. These could include strong local radio interference or being near objects that block or absorb the signal. Repositioning the radio, even slightly, can reestablish contact. Alternatively, check to see if the radio receiver is behind objects that absorb or block radio waves, such as concrete, metal or low hill.
 5. Operation is the best when the meter to receiver distance is within 30 meters. The working distance of the radio triggering system can vary with the orientation and location of the meter and receivers.

1-2. Turning the Power ON



Press and hold the Power button for about 1 second to start up the meter. The startup screen will be displayed, followed by the Measuring screen.

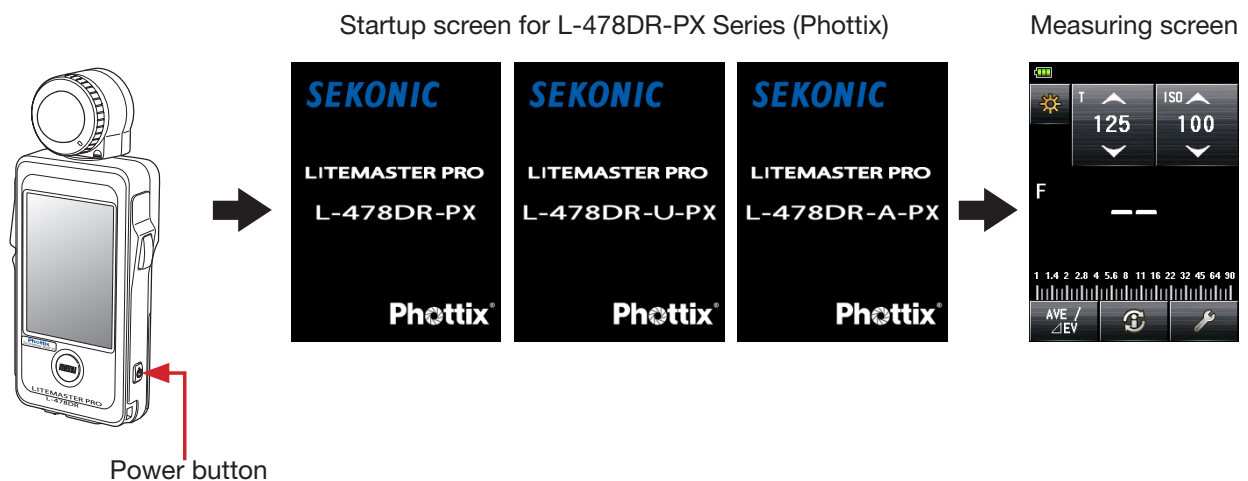

1-3. Setting Radio Flash Mode in Custom Setting

Make sure the Radio Mode is set to “On” in Custom Setting in the meter.


- 1) Press the Menu button on the meter to open the Menu screen.
- 2) Touch **[3. Custom Setting]** and select **[c) Radio Mode]** under **[6. Flash Mode]** in the displayed Menu screen.
- 3) Touch the radio button to select “On” to activate the Radio Flash Mode.

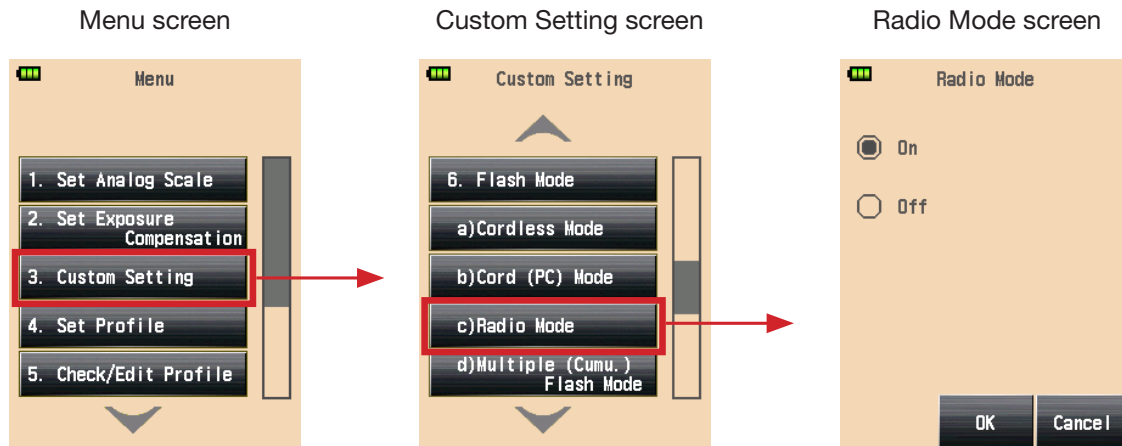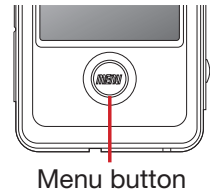

- 4) Touch **[OK]** to complete the setting and return to the Custom Setting screen. (Touch **[Cancel]** to return to the Custom Setting screen without change.)
- 5) Press the Menu button at the Custom Setting screen to return to the top of Menu screen. Press the Menu button again to return to the Measuring screen.
- 6) In the Radio Flash mode, the Measuring screen shows the setting of the channel number and groups selected.


CH1 ABCD Channel and groups


Measuring screen
(Radio Triggering screen)

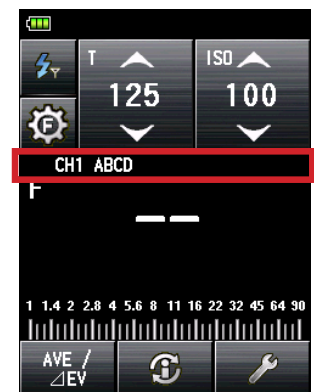

2 Measuring

2-1. Selecting the Channel and Groups

- 1) Touch the Tool Box icon () at the bottom right of the Measuring screen to display the Tool Box screen.
- 2) Touch the **[STRATO CH/Group]** button to display the STRATO CH/Group Setting screen.
- 3) Touch the arrows ▲/▼ or slide your finger over the screen to select a channel from 1 to 4.
- 4) Touch one or more Groups (A, B, C, D) to select the flash Groups you want to use.
* Groups to use can be selected from Flash Control screen as well.
- 5) Touch **[OK]** to confirm settings and return to the Measuring screen. (Touch **[Cancel]** to go back to the Measuring screen without change.)

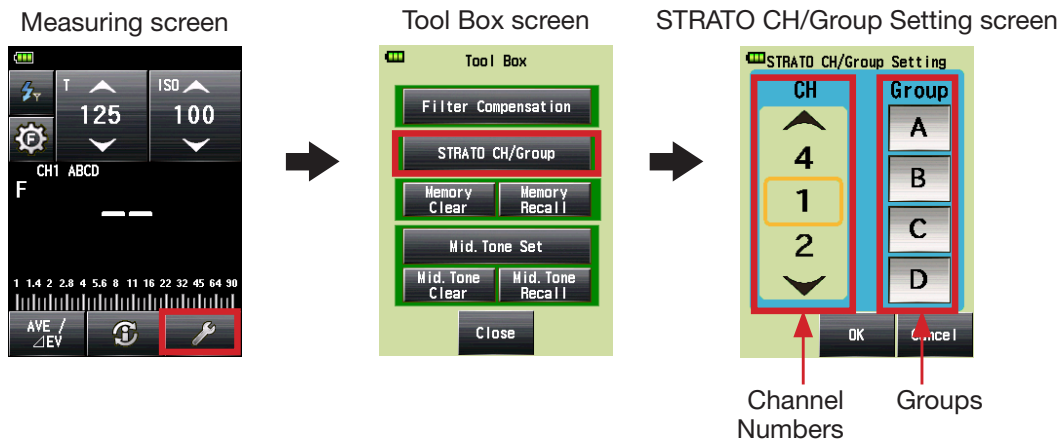

! Note

- Set both the meter and plug-in external or built-in Phottix receivers to the same channel and Group(s) to use.


Reference

- The last selected Groups in either Flash Control screen or STRATO CH/Group Setting screen in Tool Box are activated in Measuring screen.


2-2. Measuring in Radio Flash Mode

2-2-1. How to use Radio Triggering

- 1) Touch the Measuring mode icon (☀️) at the top left of the Measuring screen and then select the Radio Flash Mode (⚡️).

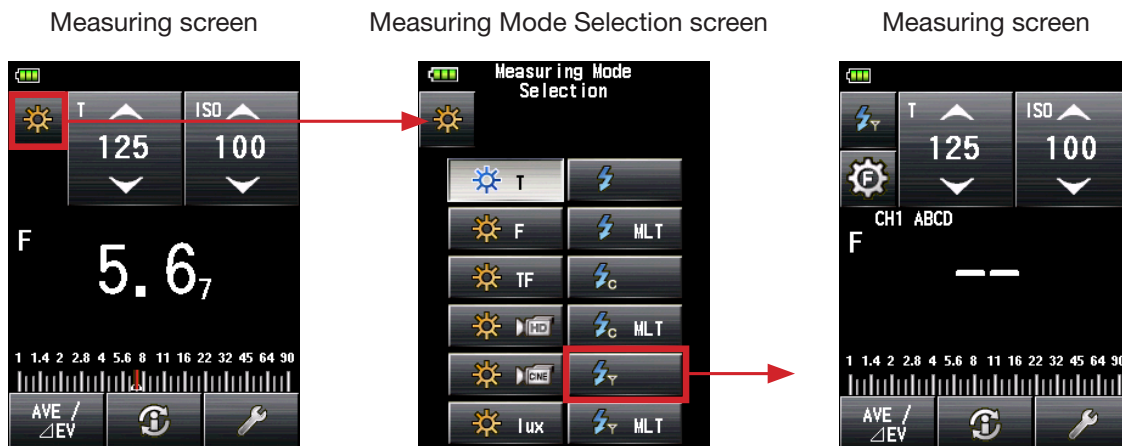

- 2) Set ISO sensitivity on the ISO icon.
- 3) Set shutter speed on the T (shutter speed) icon.
- 4) Make sure that the channel and Groups are the same for the meter and receivers in use.
* Select the Group to trigger from the Flash Control screen (See below) or Tool Box. Then return to the Measuring screen to take the flash measurement.
- 5) Press the Measuring button to trigger the flash units. The measured value (f-stop) is displayed.

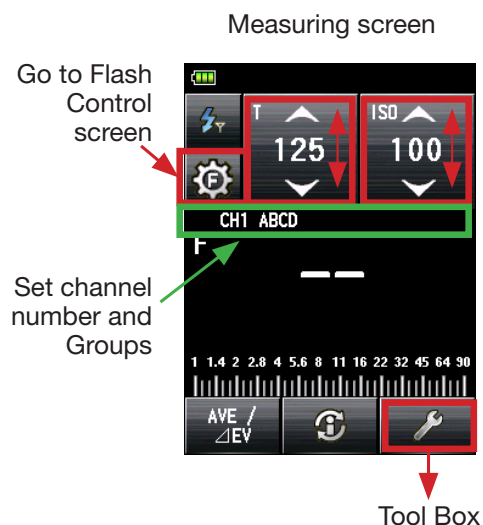

! Note

- When firing the flash, if the flash brightness is 8EV lower than the ambient light, the meter may fail to detect the flash light. In this case, make measurements using the Cord (PC) Flash Mode (See L-478 Series Common Operating Manual for details).
- Rapid start fluorescent lamps and special lighting are sometimes mistaken for flash, and accidentally measured. In this case, make measurements using the Cord (PC) Flash Mode (See L-478 Series Common Operating Manual for details)
- The waveform of a flash bulb has a slight slope and there is a possibility that the light meter cannot recognize the flashbulb in Cordless Flash Mode. In this case, make measurements using the Cord (PC) Flash Mode (See L-478 Series Common Operating Manual for details).

Measuring screen (After Measurement)



2-2-2. How to use Flash Control Mode


- 1) Touch the Flash Control icon (⚙️) on the Measuring screen to display the Flash Control screen.
- 2) Select one or more Groups (A to D) **3** and press the Measuring button to trigger the flash units for the selected Groups.
- 3) The measured value is displayed at the center of screen **1** and over the selected Group button **2**.
- 4) Manually set the flash power level to the flash unit.
- 5) Press the Measuring button to trigger the flash again for measurement to confirm that the flash power is set to desired value.
- 6) Repeat 2) to 5) above to select and measure other Groups **3** until all flash units have been measured and the desired F-number is above each Group button **2**.
- 7) Select all Groups you want to use for the final exposure measurement, and press the Measuring button. Measured value for each Group **2** will not change. The F-number for the measured brightness of all lights will be displayed in the center of screen **1** as total exposure.

* To set ISO sensitivity and shutter speed, press the Radio Flash Mode icon (⚡) to go back to the Measuring screen.


* If you want to change the channel, press the CH/Group Selection icon (⚙️) to directly go to Strato CH/Group Setting screen (black background). When pressing **[OK]**, the screen goes back to the Group Measuring screen.



Flash Control screen

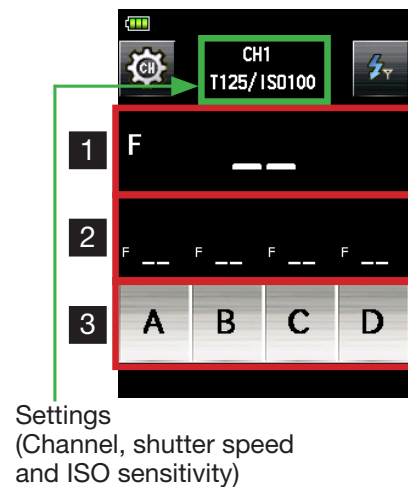


STRATO CH/Group Setting screen

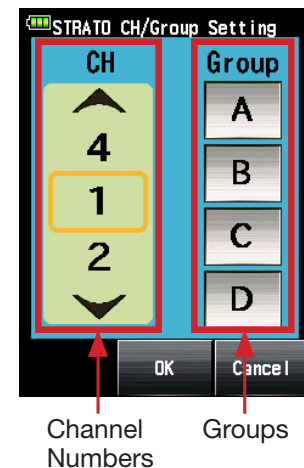


2-3. Measuring in Radio Multiple (Cumulative) Flash Mode

- 1) Touch the Measuring mode icon (☀️) at the top left of the Measuring screen and then select the Radio Multiple (Cumulative) Flash Mode (⚡ MLT).

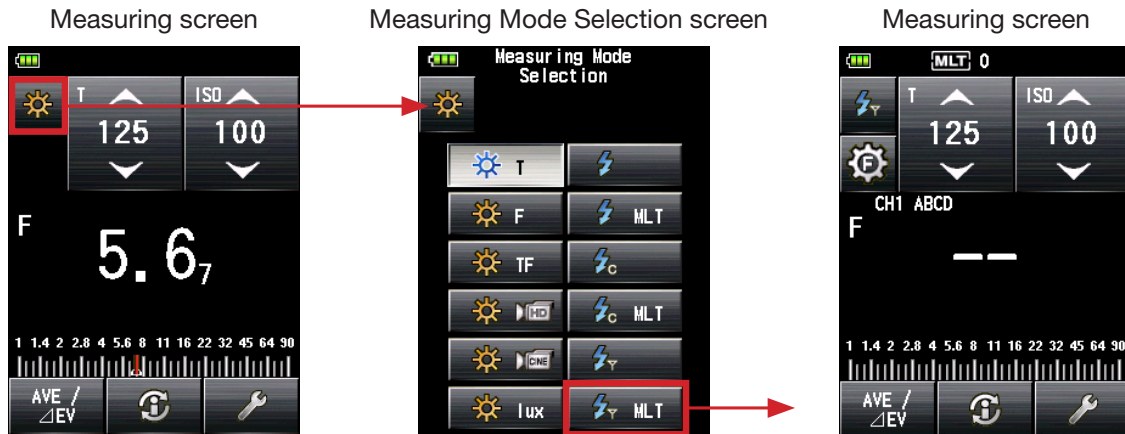

- 2) Set ISO sensitivity on the ISO icon.
 - 3) Set shutter speed on the T (shutter speed) icon.
 - 4) Make sure that the channel and Group are the same for the meter and receivers in use.
- * Select the Group to trigger from the Flash Control screen (See below) or Tool Box. Then return to the Measuring screen to take the flash measurement.
- 5) Press the Measuring button to trigger the flash units. The measured value (f-stop) is displayed.
 - 6) Repeat 5) above until you get the accumulated measured value (f-stop) you want to use. The number of cumulative flashes is displayed at the top of screen.

* It is not possible to take cumulative flash measurements while the meter displays the Flash Control screen. Be sure to set the meter to display the main Measuring screen when taking cumulative flash measurements. The measured value will be cleared when going from the Measuring screen to the Flash Control screen when in Radio Multi (Cumulative) Flash Mode.

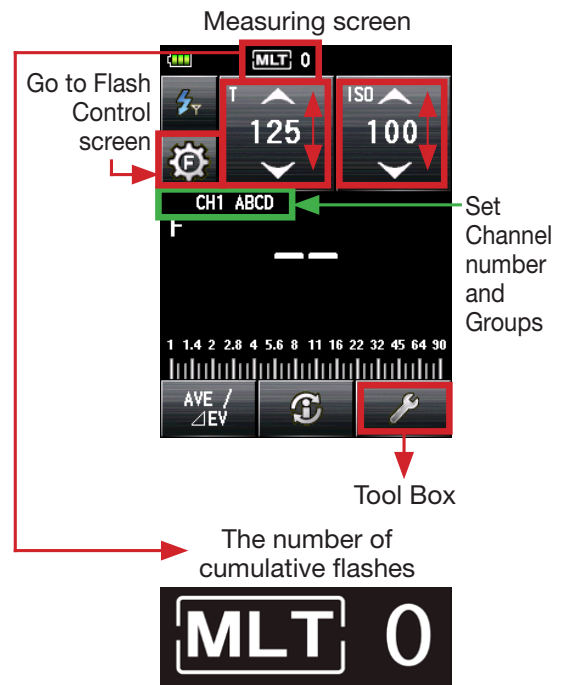

! Note

- When firing the flash, if the flash brightness is 8EV lower than the ambient light, the meter may fail to detect the flash light. In this case, make measurements using the Cord (PC) Flash Mode (See L-478 Series Common Operating Manual for details).
- Rapid start fluorescent lamps and special lighting are sometimes mistaken for flash, and accidentally measured. In this case, make measurements using the Cord (PC) Flash Mode (See L-478 Series Common Operating Manual for details)
- The waveform of a flash bulb has a slight slope and there is a possibility that the light meter cannot recognize the flashbulb in Cordless Flash Mode. In this case, make measurements using the Cord (PC) Flash Mode (See L-478 Series Common Operating Manual for details).

Measuring screen (After measurement)



3 Functions

3-1. Custom Setting Function

This enables quick and easy setup of individual meter preference.
For other Custom Setting, please refer to the L-478 Series Common Operating Manual.
Custom Setting specific to L-478DR-PX Series for Phottix is as follows.


3-1-1. Custom Setting Function List

Setting No.	Custom Setting Name	Item			Default Setting
6	Flash Mode*1	On	Off	-	On
c)	Radio Mode*1	On	Off	-	On


*1 When Flash Mode is set to “Off”, the sub settings of all flash modes: a) Cordless Mode to d) Multiple (Cumulative) Flash Mode cannot be selected.

3-1-2. How to enter Custom Setting

- 1) Press the Menu button on the meter to open the Menu screen.
- 2) Touch **[3.Custom Setting]** and select **[c)Radio Mode]** under **[6. Flash Mode]** in the displayed Menu screen.
- 3) Touch the radio button to select On or Off.

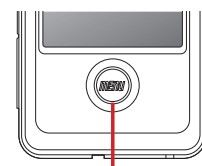

Menu button

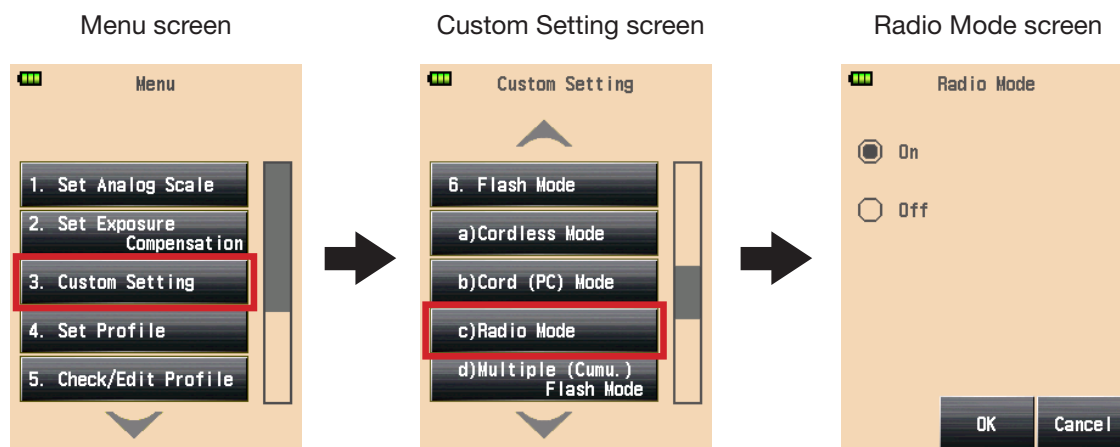

- 4) Touch **[OK]** to complete the setting and return to the Custom Setting screen. (Touch **[Cancel]** to return to the Custom Setting screen without change.)
- 5) Press the Menu button at the Custom Setting screen to return to the top of Menu screen. Press the Menu button again to return to the Measuring screen.

4 Specifications

Radio wave frequency band:2.4GHz
Channel:1 to 4
Group: A to D
Radio triggering range: 30 meter (100 feet)



! Note

- The working distance of the radio triggering system can vary with the orientation and location of the meter and receivers.

5 Legal Requirements

■ Legal Requirements

This product complies with the following legal requirements.

Destination	Standard		Details
Europe		SAFETY	EN 60950-1:2006 + A1:2010 + A2:2013
		EMC	EMS: EN55024:2010 EMI : EN55022:2010 : EN55032:2012/AC:2013
		Wireless	R&TTE Directive 1999/5/EC EN300 440-2 V1.4.1 (2010-08) EN301 489-1 V1.9.2 (2011-09) EN301 489-17 V2.2.1 (2012-09) EN62479:2010
		Environmental	WEEE, RoHS, REACH
North America		EMC	FCC Part15 SubpartB ClassB
		Wireless	FCC Part15 SubpartC
	IC (Canada)	EMC	ICES-003
		Wireless	RSS-210 Issue8

FCC & IC compliance information

Warning

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant.

To Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determine by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules and also with RSS-210 of Industry Canada. Operation is subject to the following two condition: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Model	FCC ID Number	IC Number	Note
L-478DR-PX	2AGF8-TXMEPA	20931-TXMEPA	The approval of this rule is obtained with radio transmitter module.

SEKONIC CORPORATION

7-24-14, Oizumi-Gakuen-cho, Nerima-ku Tokyo

178-8686 JAPAN

TEL +81-3-3978-2335 FAX +81-3-3978-5229

<http://www.sekonic.com>

©2015 SEKONIC CORPORATION All Rights Reserved.

JR6L9761-B_PX-en-00

JANUARY 2016