 


SLiDCO

 
**X8 FOLDING ELECTRIC
SCOOTER**

MANUAL

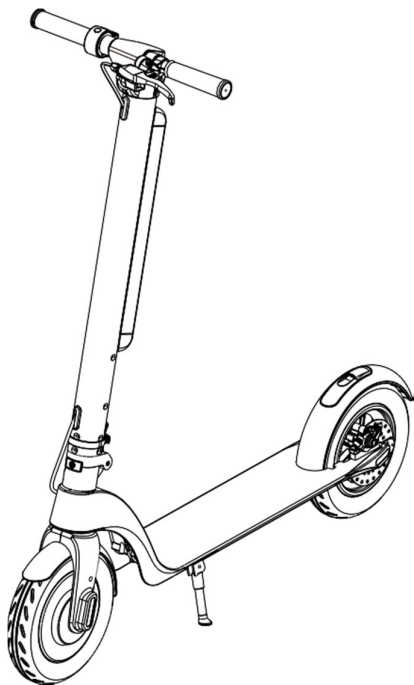



SLIDGO GO-X8
Folding E-scooter
User Manual

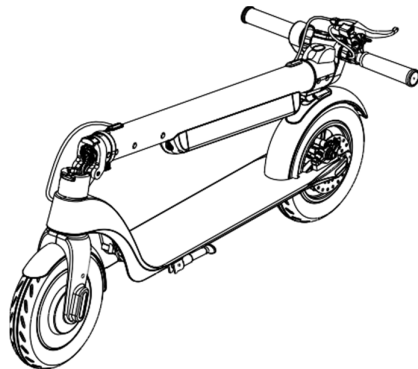

About the manual

- Congratulations on your purchase of the E-scooter.
- For your riding Safety, please read this user manual carefully before using
- Learning all the safety warning and tips listed in this manual are essential
- Please note "warnings" and "tips" below prior to using

Warnings: Improper operation may result in personal injury.

Tips: Helpful advice & clues for the usage of E-scooter.

- Should you have any concerns, please contact the supplier immediately.
- Fully charge the battery for 12 hours before first use

Tips:

- A. Children below 14 years old should be accompanied by an adult.
- B. Please start the scooter in the slowest speed to ensure you are comfortable with the controls and feel of the scooter
- C. Please read this manual carefully before you ride the electric scooter
- D. Be sure to follow the cleaning and maintenance guide after each use

WARNING!

IMPROPER USE OF THE SCOOTER AND/OR FAILURE TO READ THIS USER MANUAL MAY LEAD TO SERIOUS BODILY INJURY. SELLER WILL TAKE NO RESPONSIBILITY FOR ANY INJURIES CAUSED BY IMPROPER OR CARELESS USE.

Content

1. Safety Notes	3-5
2. Product Introduction	6-10
3. How to ride	11-12
4. Battery Instruction	13-14
5. Parameter	15
6. Maintenance	16
7. Trouble shooting	17
8. Packing List	17
9. Product Quality Certificate	18
10. Product Warranty Card	18

 
1 Safety Notes

1.1 About safety

- There's risk for any vehicle, including e-scooter. For your safety, please learn to ride safely and obey the rules. Please check if the tire is damaged, all connections are tight and secure.
- Any conversion of the scooter is prohibited as it will change its performance or damage the structure. This voids your warranty and may cause injury.
- Please do not operate your scooter if it has been immersed or with water. This may cause damage to the electrical system and braking mechanism.

1.2 Safety Precautions

To avoid injury, you should be familiar with this manual and keep the scooter in good condition.

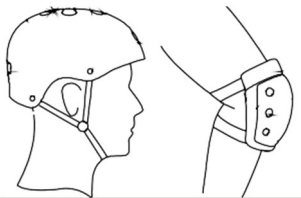

Safety equipment should include, helmet, knee and elbow pads, kneecap, elbow pads and so on.



DO NOT ride when it rains.



⚠ DO NOT ride with two or more people.



⚠ DO NOT ride if pregnant.



⚠ Max Load 250 Lbs.



 
⚠ DO NOT ride after drinking or taking medicine.




⚠ DO NOT call or listen to music when you ride the e-scooter.



⚠ Be aware of your surroundings and avoid sudden inclines, loose gravel, mud, snow, wet patches, and uneven pavement

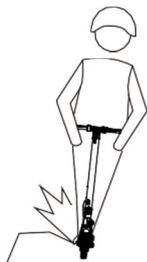


⚠ Avoid construction zones


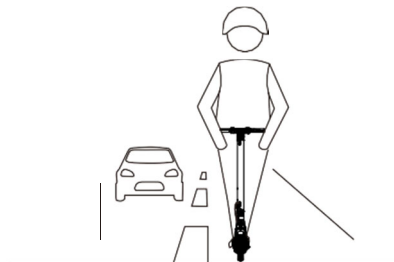 


⚠ DO NOT use on highways

2 Production Introduction

   2.1 Overall View

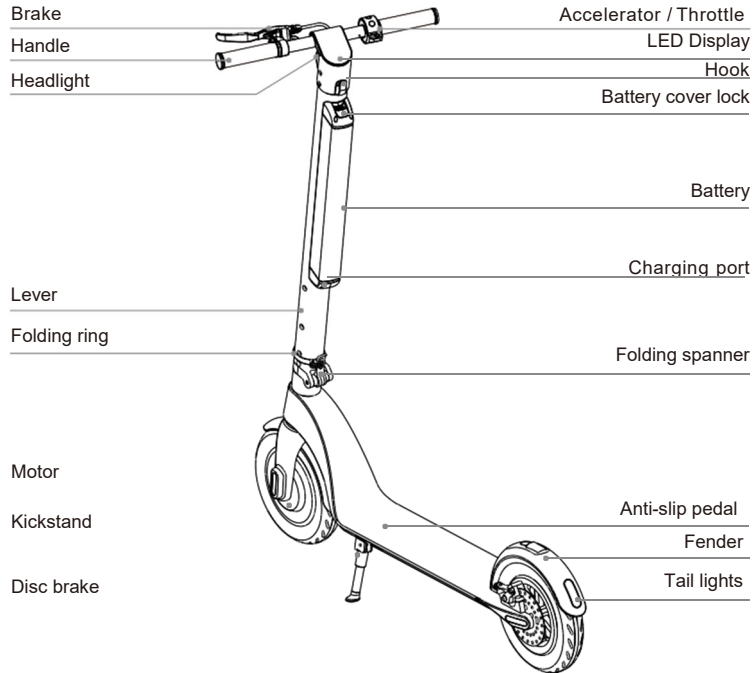

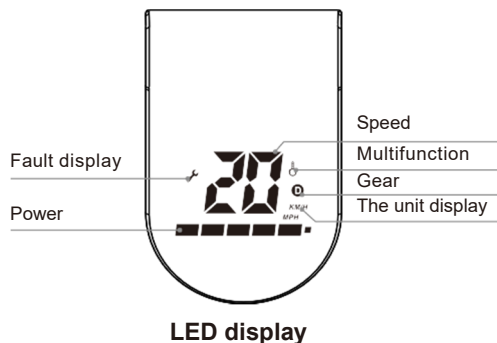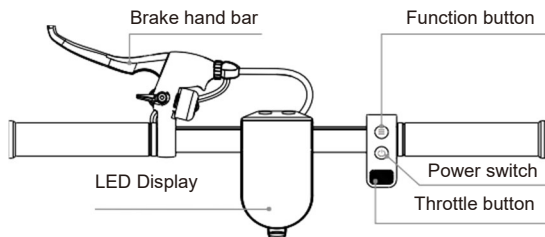

Instructions of Buttons

1. **Power Switch:** Long press the power button to turn on/off.

2. **Function key:**

A: Short press function key: Cycle to switch gears.

Beginner mode: Gear indicator  is not displayed.

Normal mode: Gear indicator  shows white.

Sports mode: Gear indicator  shows red.

B: Shortly press the function key twice to turn on/off the headlights, and the taillights are always on.

 
3. **Accelerator:** Press the acceleration button to start and accelerate.

4. **Brake:** Hold the brake handle to brake. Lightly step on the rear fender to assist the brakes.

5. **Cruise mode:** Keep the current speed for 6 seconds to enter the cruise mode;

Exit the cruise mode when pressing accelerator again or brake.


2.2 Pre-assembly instructions

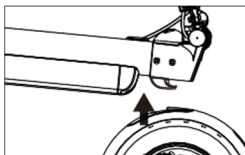


1. Pull up the lever while pressing down the rear wheel fender.




 
2. Fasten the folding spanner and use the folder fixing ring to fix the folder wrench.

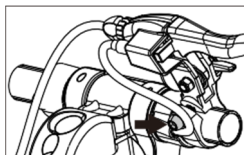

 3. Fix the brake lever with M5 hex wrench.

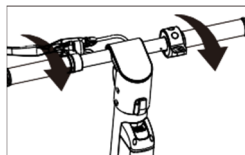

  4. Tighten handlebars (Pay attention to the direction of rotation when tighten).

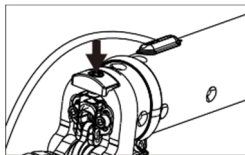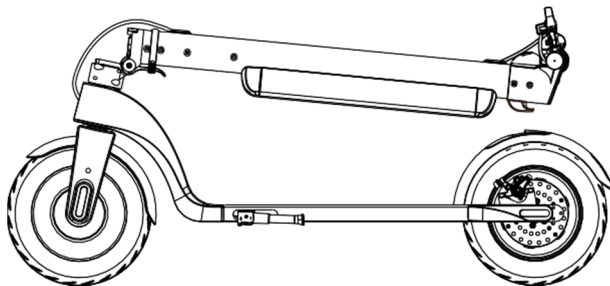


5. Adjusting the folding nut properly according to the shaking situation of lever.


2.3 Folding chart




 
1. Loosen the folder fixing ring.

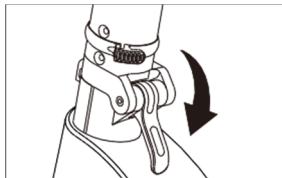

 2. Open the folder wrench.

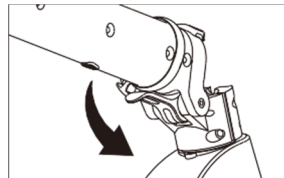


  3. Fold the pole and fix the wrench.

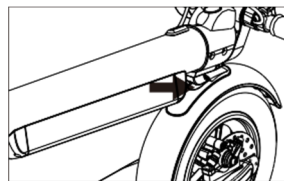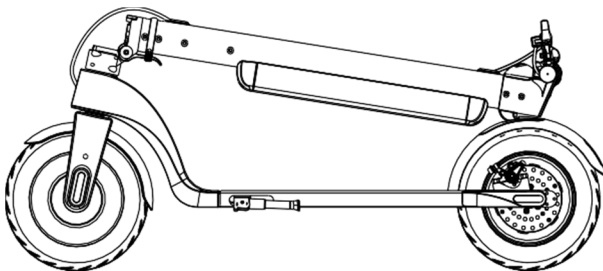


4. Gently press down to hook.

 
2.4 How to uninstall / install the battery

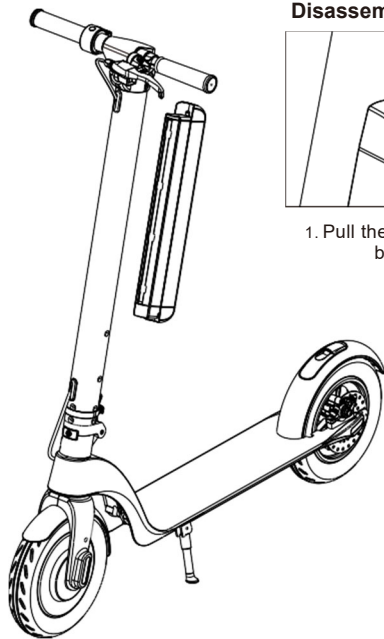


Disassembly

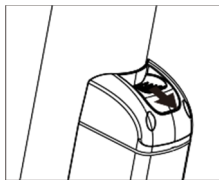 

 1. Pull the lock on the battery case.

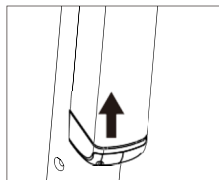


 2. Push the battery up from the bottom.

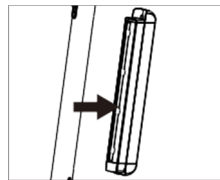


3. After pushing the battery up, then pull it out horizontally.

 Install

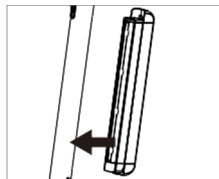


 1. Insert the battery horizontally into the pole.

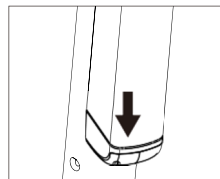


2. Push down until the lock latch of the battery box is tightened.

 3 How to ride the scooter

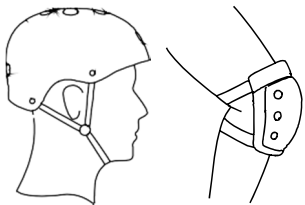

 Wear helmets and other protective equipment before riding;

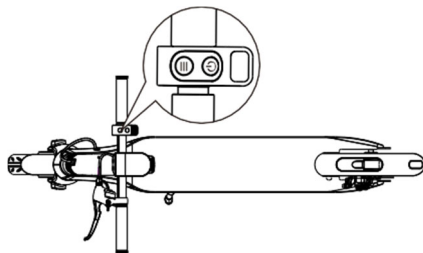

1. Press the POWER button for 2 seconds.



2. Put one foot on the platform, Push off the ground with your other foot.



3. Balance both feet on your scooter and enjoy your ride.



4. Press the throttle button slightly on your right hand to start and rotate the handle to turn.



5. Continuously press throttle to speed up.



6. Grasp the brake handle to slow down or stop.



7. Safely dismount when the scooter has come to a stop.

4 Battery Instruction

The instruction shows how to charge and maintain the battery, some safety notices and the specification. Please use the battery properly according to this instruction to prolong the battery life and its performance.

4.1 Battery Parameters

Name	Parameter	Name	Parameter	Name	Parameter
Type	Li-ion battery	Working Temperature	0°C-35°C	Store Time (-10°C-40°C)	3 months (full charge)
Charging Time	5-7 hours	Charging Temperature	0°C-35°C	Initial Volume	7.8Ah/10Ah
Voltage	36V	Max Charging Voltage	42V	Max Charging Current	2A

4.2 Battery Safety

Do not continue to use the battery when the following conditions occur:

- The battery of the electric scooter should be used only with local law. Only for professionals to disassemble and maintain the battery.
- Odor or excessive heat; leak any substance; do not touch anything leaking from the battery.
- Do not let children and animals touch the battery. Must unplug the charger before installing the battery or riding. In the case of charging, it is very dangerous to do anything related to electric vehicles.
- If you want the electric scooter to run most efficiently, the battery must be charged and used within the temperature range indicated in the battery specifications.
- Lithium batteries are considered dangerous and require local law to allow transportation.
- The battery contains dangerous substances. Please do not open the battery. Do not insert anything into the battery.
- It is forbidden to charge a lithium battery that has been over-discharged. A battery that has been over-discharged has a safety hazard and can only be scrapped.

 
Tip: When the internal temperature of the battery exceeds 45 °C, the battery is protected.

- ⚠ Do not charge the battery at high temperature (45 ° C) or Charge the battery in a high temperature (40 ° C) environment. Only
⚠ use the original charging equipment to charge the electric scooter.

4.3 Charging step

- Open the charging port cover, Make sure the charging port is clean and dry.
- Connect the charger with the battery and the other end with power (100V-240V;50/60Hz), make sure the charging indicator is on.
- When the charger indicator is red, it will charge normally. Otherwise, please check if the plug is connected properly.
- When the charger indicator is green, charging is complete.

Charging method:

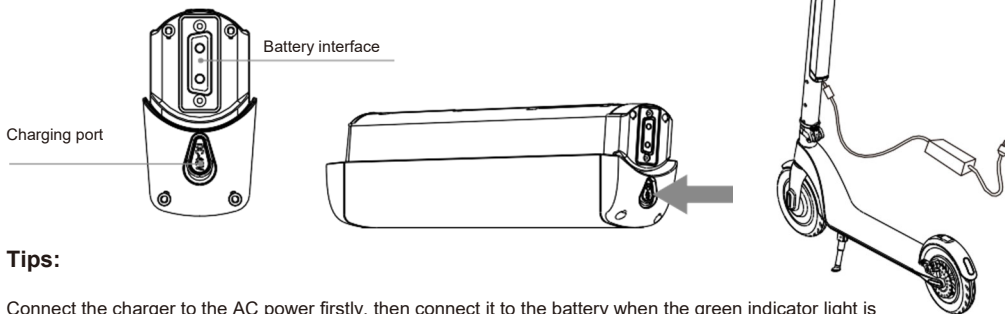


Tips:

Connect the charger to the AC power firstly, then connect it to the battery when the green indicator light is normally on.

After charging, cover the dustproof rubber to prevent something from entering the charging port and causing battery failure.

5 Specification

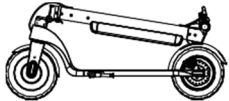Item	10 inch
Product	
Scooter Specification	
Unfolded size	1083*420*1186mm
Folded size	1083*420*460mm
Height from pedal to ground	115mm
Net weight	15kg
Basic Information	
Capacity	36V/7.8Ah or 10Ah
Moto power	36V/350W
Mileage per charge	30-45km
Max speed	20km/h
Max loading	100kg
Climbing angle	15°
Charger Specification	
Input voltage	100-240Vac
Frequency	50-60Hz
Output voltage	42V
Output current	2A
Store temperature	-10°C-35°C

6 Maintenance

Maintenance considerations:

- Make sure the electric scooter charger and charging line are disconnected and ensure that the electric scooter is off.
- Wipe the shell with a soft cloth to clean the electric scooter. Please don't put more lubricating oil on bearing when you do the maintenance for it.

Warning

- It is forbidden to clean electric scooters by using water cannon or soaking in liquid. This will cause permanent damage of the electronic devices in the host.

Storage

- Please charge your electric scooter before storage, for preventing the battery from discharging too long time. Please ensure charge at least once every three months.
- If the storage environment temperature is lower than 0 °C, please don't charge electric scooter. Please put it in inside environment temperature (above 10 °C) and then charge, storage temperature is - 10 °C to 35 °C.
- Please keep the electric scooter in a suitable place indoor, dry and appropriate temperature. You can mask the electric scooter to prevent from the dust.

Warning

- In order to protect the user's safety, the user cannot take apart the electric scooter, otherwise, the user will give up the maintenance warranty rights of the product automatically.

7 Trouble shooting

Please contact the sales office or the dealer with no hesitate for repair when the electric scooter fails to ride normally.

Description of adverse phenomena	Solution
unable starting up	Check to see if the battery is powered
cannot charge	<ol style="list-style-type: none">1. Check whether the plug board has electricity ;2. Check the charger whether connect AC plug (the light whether is on);3. Check the plug of the charger and the charging port of the whole scooter have been inserted correctly.
No horn、no blue tooth signal	Check the Bluetooth switch whether turn on.

8 Packing List

Electric scooter packing list:

E-scooter:

Charger:

Manual

Screws & Wrench: 1set

Please contact us with no hesitate if there is any breakage or missing when you open package. We will replace it for you as soon as possible.

Have a nice day!

9 Product Quality Certificate

This product is qualified by passing QC inspection and allowed to be sold on the market.

The warranty card It takes effect upon manufacturer's seal and passing with serial number) regular sales invoice is effective maintenance certificate. Please keep the warranty card properly.

Release date:

QC Qualified Seal:

10 Product Warranty Card

User Files

User Name		Sex		Age	
Address					
Telephone				Zip	
Purchase Site					
Purchase Price			Serial Number		
Commodity And Specifications			The User Signature		
Dealers Signature					

We shall provide warranty service due to non-artificial quality problems.

1. One year warranty to the main body including handlebar stem, Motor, Charger...
2. Battery is 6 months warranty period,
3. Plastic Decorative cover, rubble Handlebar, rear wheel is not in the scope of warranty.
4. All of damage by man—made (open the housing, tear off the sticker, unmorally using), or losing this card we will not guarantee.

ONE YEAR SLIDGO LIMITED WARRANTY

SLIDGO warrants to the original purchaser that your SLIDGO GO-X8 E-Scooter shall be free from defects in material and workmanship for the period of three (3) years from the date of purchase (or delivery as may be required in certain jurisdictions), or thirty (30) days after replacement, whichever comes later.

SLIDGO's entire liability and your exclusive remedy for any breach of warranty shall be, at SLIDGO's option, to repair or replace the hardware, provided that the hardware is returned to the point of purchase or such other place as SLIDGO may direct with a copy of the sales receipt or dated itemized receipt. SLIDGO may, at its option, replace your product, offer to provide a functionally equivalent product, or repair any product with new, refurbished or used parts as long as such parts are in compliance with the product's technical specifications. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover problems or damage resulting from accident, abuse, misapplication, or any unauthorized repair, modification or disassembly, improper operation or maintenance, normal wear and tear, or usage not in accordance with

product instructions or connection to improper voltage supply, use of consumables, such as replacement batteries, not supplied by SLIDGO, except where such restriction is prohibited by applicable law.

Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser and the country in which the product was purchased. This warranty gives you specific legal rights, and you may also have other rights, including a longer warranty duration that may vary under local laws.

To start a warranty claim contact the SLIDGO Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to SLIDGO, along with the RMA number and proof of purchase.

Questions about our product line? Need Product Support?

We are proud of our products and celebrate our customers. We are with you, from product selection to everyday use. Be secure with your purchase and reach us as you need.

Email us: brands@adorama.com Call: 212-647-9300

Address: Adorama Brands, 42 West 18th Street, New York, NY 10011

You can always contact us at BRANDS@ADORAMA.COM for personal technical support. Our website contains a wide range of Support and FAQ pages with valuable technical assistance.

SLIDGO is a registered trademark of ADORAMA CAMERA.

© 2020 Adorama Camera, Corp. All Rights Reserved.