

**QUICK RELEASE  
SLING STRAP BLACK**



**SLINGER**

# Congratulations on your Slinger Quick Release Sling Strap, Black.


Welcome to a world that is full of creative and comprehensive accessory with the Slinger Quick Release Sling Strap in elegant sleek black finish. This manual is your accompany to its full potential and capabilities. Whether you're a seasoned videographer/photographer, an aspiring filmmaker, or an enthusiastic amateur, Slinger made this guide for endless safety, trust, convenience and comfort to support your photographic journey that offers exceptional balance and functional possibilities. Follow this step-by-step manual to learn how to set up, maintain, and use your camera strap for optimal longevity and performance. Let's get started on improving your photographic adventure with confidence and ease!

In this section, we'll delve into the main parts that make up the core of your Slinger Quick Release Sling Strap. Understanding the composition used in your equipment is essential to maximize its performance and longevity.

Please refer to the corresponding numbers in the table for each part mentioned on the attached picture.

## Parts to Remember

1. Nylon Webbing Strap
2. Microfiber Leather Pad
3. Patented Quick Release Buckle (x2)
4. New Arca-Type Quick Release Plate
5. Length Quick Adjuster (x2)

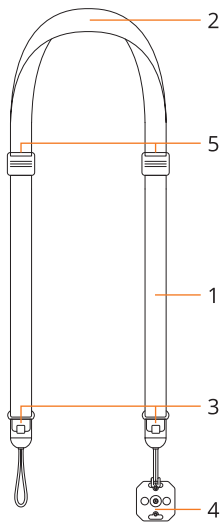

It is a reliable companion in your photography session whether you are capturing photo shoot or just a smooth and dramatic video footage. In this section, we will guide you through the process of securely using your **Slinger Quick Release Sling Strap**.


## **1. Unpacking and Inspection**

1. Carefully remove the item from the packaging.
2. Refer to the table mentioned to verify the parts included in.
3. Examine each part to make sure everything is complete and no defect.

## **2. Option to Use as a Shoulder Strap or Neck Strap**


### **2.1 Detach the Quick Release Buckles**

1. To unleash the 2 quick release buckles swiftly and safely, press down firmly on the square button, while holding it, slide the adapter smoothly out of its slot to disengage. This action allows you to seamlessly detach your camera without fuss, ensuring a secure but easy release.

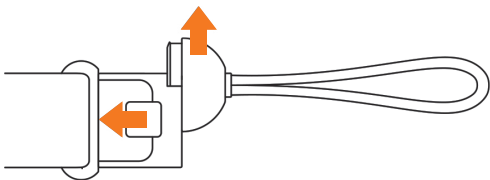


## 2.2 Secure the Quick Release Adapter to the Camera's Eyelet

2. Align the quick-release adapter with the camera's body eyelet, which is usually found on the side where the strap is attached. Make sure the adapter is securely linked by inserting and fastening it in place. For steady support and optimum performance when carrying your camera, this step is essential.

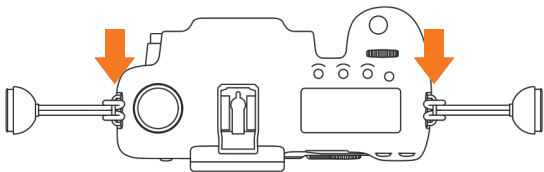


## 2.3 Attach the Adapter and Lock It in Place

3. Next, slide the quick-release adapter directly into the designated slot on the strap until you hear a clear "click", signifying that it is securely locked in place.

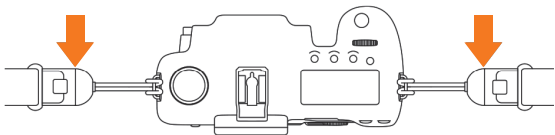

## 2.4 Adjust the Strap Length for Comfort

4. You can now finally customize the strap to your ideal length by gently and simply pulling on the length adjuster located along the shoulder strap. This allows you to find the perfect fit, ensuring your camera hangs comfortably and is readily accessible.

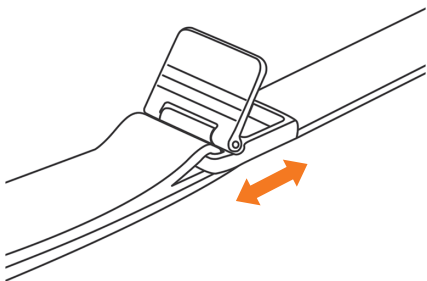


## 2.5 Ready to Flaunt and Enjoy!

5. If everything is securely in its place, your strap is ready to go on any trip or sessions with you. The strap is adaptable enough to fit in any variety of situation and style, whether you fashionably wear it over your shoulder or around your neck.

### 3. Option to Use as a Sling Strap

#### 3.1 Detach the Quick Release Buckles


1. To unleash the 2 quick release buckles swiftly and safely, press down firmly on the square button, while holding it, slide the adapter smoothly out of its slot to disengage. This action allows you to seamlessly detach your camera without fuss, ensuring a secure but easy release.

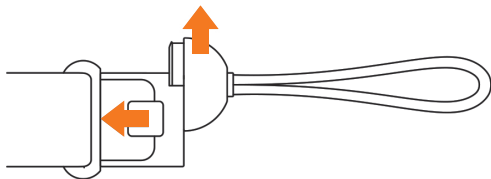




### 3.2 Secure the One Quick Release Adapter to the Camera's Eyelet

2. Next step, slide the one quick-release adapter directly into the designated slot on the strap until you hear a clear "click", signifying that it is securely locked in place.

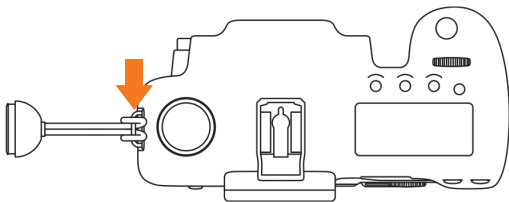


### 3.3 Assemble the Quick Release Adapter to the Quick Release Plate

3. Start this by aligning the quick release adapter with the corresponding slot on the quick release plate. Ensure that the adapter is properly oriented, matching any guides or notches to ensure a secure fit. Just carefully connect the adapter to the plate, making sure it sits firmly in place before proceeding.

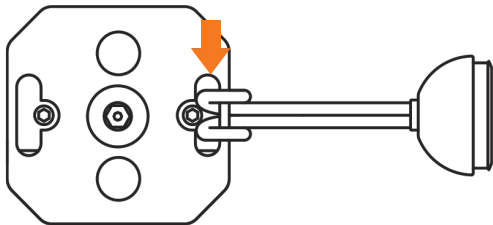


### 3.4 Tighten the 1/4"-20 Screw Using the Black Hex Wrench

4. Once the quick release adapter is securely attached to the quick release plate, locate the 1/4"-20 screw on the plate. Using the black hex wrench, insert the wrench into the screw's socket. Turn the wrench clockwise to tighten the screw, securing the quick release plate to the camera tripod socket hole. Ensure the screw is tightly fastened, but avoid overtightening, which could damage the threading.

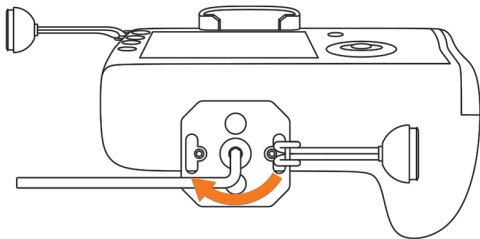


### 3.5 Insert the Quick Release Adapter into the Slot and Lock in Place

5. With the adapter now securely attached to the quick release plate, slide the entire assembly into the corresponding slot on your tripod or mounting system. Push the adapter forward until you hear or feel it click into place, signalling that it is locked securely. This click indicates that the adapter is properly engaged, and the system is ready for use.

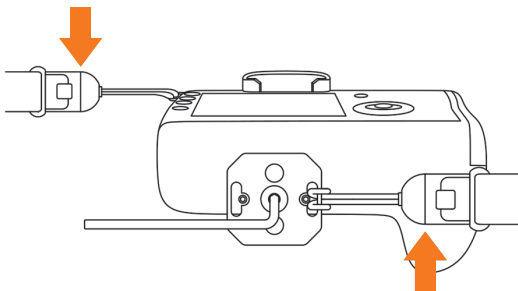

### 3.6 Adjust the Strap Length for Comfort

6. You can now finally customize the strap to your ideal length by gently and simply pulling on the length adjuster located along the shoulder strap. This allows you to find the perfect fit, ensuring your camera hangs comfortably and is readily accessible.

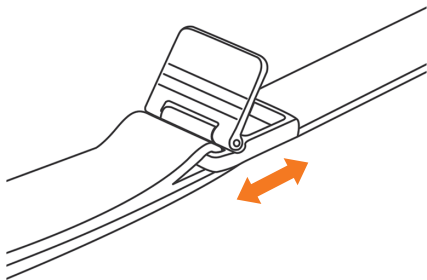

### 3.7 Ready to Flaunt and Enjoy!


7. If everything is securely in its place, your strap is ready to go on any trip or sessions with you. The strap is adaptable enough to fit in any variety of situation and style while you fashionably wear it on as a sling type.

By following these instructions, you can easily detach and reattach the **Patented New Quick Release Buckle** whenever needed, ensuring that the system remains secure and functional.

## 1. Use the Quick Release Buckle


### 1.1 Detach the Quick Release Buckle

1. Simply press down firmly on the square button, while holding it, slide the adapter smoothly out of its slot to disengage. This action allows you to seamlessly detach your camera without fuss, ensuring a secure but easy release.



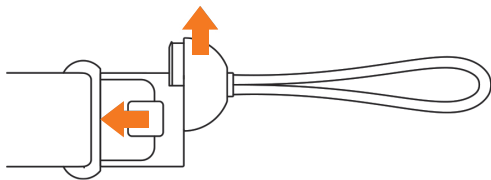


## 1.2 Attach the Quick Release Buckle

- Slide the quick release adapter into the slot, ensuring proper alignment. Once fully inserted, press gently until you hear it click, indicating that the adapter is securely locked in place.

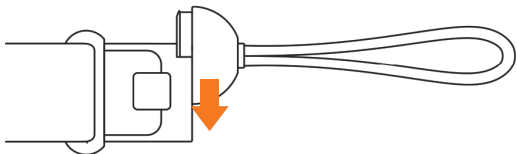


If you wish to showcase your strap while wearing it, you have the flexibility to select the style that best suits your comfort and personal preference; **(A) Shoulder Strap, (B) Neck Strap, (C) Sling Strap.** Depending on how you wish to carry your equipment.

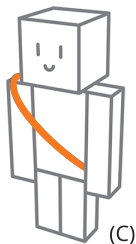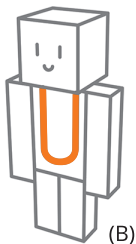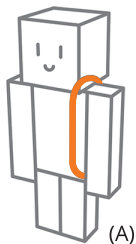

To **mount the sling strap to a tripod**, the quick release plate is designed with a New Arca-Type system, making it compatible with Arca-style tripod clamps. Follow the instruction below to securely attach the quick release plate to your tripod, ensuring stability and ease of use.

1. The quick release plate of sling strap features a New Arca-Type of design, allowing it to be simply attached to Arca System Tripod. To mount it, screw the knob counterclockwise to release the quick release clamp and mount the plate onto the clamp. Next step is screwing the knob clockwise to secure. Alternatively, you can mount it to the tripod via the 1/4"-20 socket hole of the quick release plate.

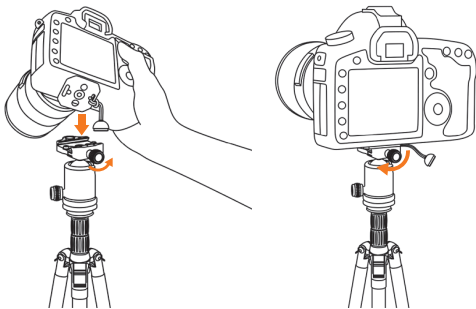



By following these tips and practicing with the Slinger Quick Release Sling Strap, it can help you capture smoother and more professional video or photo footage for your projects.

Unlock Your Creative Vision with Precision and Seamlessness – Elevate Your Photography with Slinger!



## ONE-YEAR SLINGER LIMITED WARRANTY

Slinger warrants to the original purchaser that your Slinger product shall be free from defects in material and workmanship for the period of one (1) year from the date of purchase (or delivery as may be required in certain jurisdictions), or thirty (30) days after replacement, whichever comes later.

Slinger's entire liability and your exclusive remedy for any breach of warranty shall be, at Slinger's option, to repair or replace the hardware, provided that the hardware is returned to the point of purchase or such other place as Slinger may direct with a copy of the sales receipt or dated itemized receipt. Slinger may, at its option, replace your product, offer to provide a functionally equivalent product, or repair any product with new, refurbished or used parts as long as such parts are in compliance with the product's technical specifications. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer, or for any additional period of time that may be applicable in your jurisdiction. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.


This warranty does not cover problems or damage resulting from accident, abuse, misapplication, or any unauthorized repair, modification or disassembly, improper operation or maintenance, normal wear and tear, or usage not in accordance with product instructions or connection to improper voltage supply, use of consumables, such as replacement batteries, not supplied by Slinger, except where such restriction is prohibited by applicable law.

Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser and the country in which the product was purchased. This warranty gives you specific legal rights, and you may also have other rights, including a longer warranty duration that may vary under local laws.


To start a warranty claim contact the Slinger Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Slinger, along with the RMA number and proof of purchase.

### Question about our product line? Need Product Support?

We are proud of our products and celebrate our customers. We are with you, from product selection to everyday use. Be secure with your purchase and reach us as you need.

 212-647-9300

 [brands@adorama.com](mailto:brands@adorama.com)

 Adorama Brands,  
42 West 18th Street,  
New York, NY 10011

You can always contact us at [BRANDS@ADORAMA.COM](mailto:BRANDS@ADORAMA.COM) for personal technical support. Our website contains a wide range of Support and FAQ pages with valuable technical assistance.

Slinger is a registered trademark of ADORAMA CAMERA

© 2024 Adorama Camera, Corp.

All Rights Reserved.



SLSSORB