




SONY® Burano Top Plate and Side Rails

The Sony Burano Top Plate mounts to the Sony Burano camera using 4 screws. It works with the Sony handle and has 3 mounting positions for the Sony handle so you can get it right where you want it. The top plate has integrated NATO rail on top for mounting our Tactical Handle. It can slide forward/back for balance. There are coldshoe slots in the back for mounting accessories as well as bi-directional NATO rail mounts to mount Sony's LCD directly to the plate if you are using a different viewfinder like the Kameleon EVF PRO. There are also multiple 1/4-20 and 3/8-16 screw holes and 15mm rod locks for mounting top rails.

The Sony Burano Side Rails mount to the Burano Top Plate and VCT Baseplate. These items are required to use the Side Rails. The Side Rails are NATO rails for mounting handgrips and accessories. They have M6 Rosettes for mounting handgrips and multiple 1/4-20 and 3/8-16 screw holes.

Parts & Features

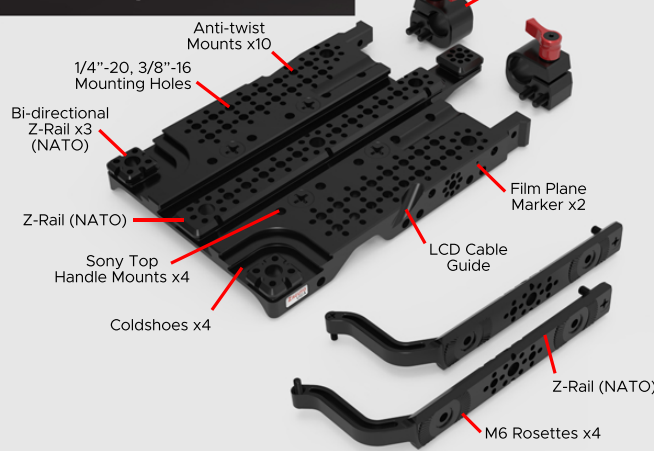

Optional Accessories



Assembling Sony Burano Top Plate



Step 1

Remove film plane screw from camera and install on top plate (two locations).




Step 2

Place Top Plate on camera and secure with 4 included screws.




Step 3

If purchased, attach Side Rails to Top Plate.

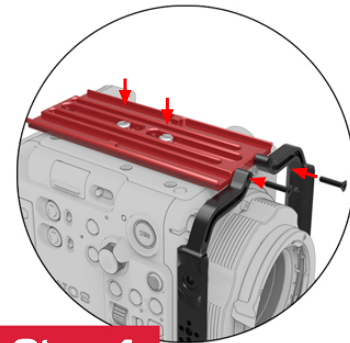

Step 4

Flip camera over and loosely attach VCT Red Plate to bottom of camera. Slide Red Plate flush with front edge of camera as shown, and tighten Red Plate.

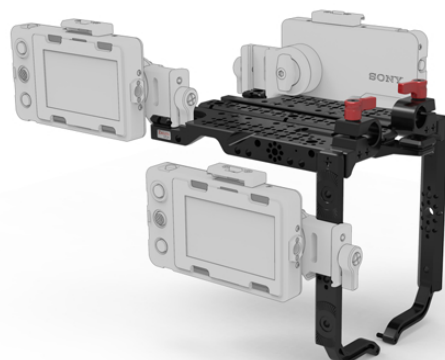

Burano LCD Monitor can be mounted in various locations on the Top Plate or Side Rails.



Check out our tutorial videos at zacuto.com

Call us at
312-863-3456