


# MS-200D+

## MULTISTOMP

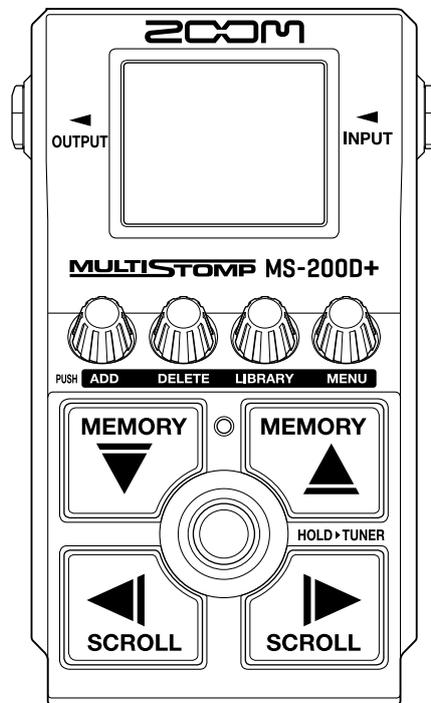

## Operation Manual

You must read the Usage and Safety Precautions before use.

©2024 ZOOM CORPORATION

Copying or reprinting this manual in part or in whole without permission is prohibited.

Product names, registered trademarks and company names in this document are the property of their respective companies. All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.

Proper display is not possible on grayscale devices.

# Notes about this Operation Manual

---

You might need this manual in the future. Always keep it in a place where you can access it easily. The contents of this document and the specifications of the product could be changed without notice.

- Microsoft and Windows are trademarks of the Microsoft group of companies.
- iPad, iPadOS, Lightning and Mac are trademarks of Apple Inc.
- App Store is a service mark of Apple Inc.
- IOS is a registered trademark or trademark of Cisco Systems, Inc. and affiliated companies in the USA and other countries, and it is used under license.
- USB Type-C is a trademark of the USB Implementers Forum.
- The illustrations and display screens in this document could differ from the actual product.

# Terms used in this manual

---

## Patch memory

Patch memories store effects along with their on/off states and parameter setting values, allowing easy recall. Effects are saved and recalled in units of patch memories. Up to 2 effects can be added to a patch memory, and up to 250 patch memories can be stored.

## LIBRARY

Various guitar effects are ready in the LIBRARY. Effects can be selected from the LIBRARY to be added to patch memories.

## Category

Effects are grouped by types into categories. The display backlight color changes according to the category.

## AUTO SAVE

This function automatically saves changes to patch memory and effect settings.

## ECO MODE

This function will automatically turn the power off 10 hours after the last operation.

## PRESELECT

This function allows continued use of the current patch memory sound while switching to another patch memory at a distant number.

# Contents

---

Notes about this Operation Manual.....	2
Terms used in this manual.....	3
MS-200D+ overview.....	6
Signal flow.....	6
Patch memory structure.....	7
Functions of parts.....	8
Top.....	8
Back.....	9
Overview of operation screens.....	10
Home Screen.....	10
LIBRARY Screen.....	11
MENU Screen.....	12
Making connections.....	15
Turning the power on/off.....	16
Turning the power on.....	16
Turning the power off.....	17
Adjusting effects.....	18
Turning effects on/off.....	18
Replacing effects.....	20
Adjusting effect parameters.....	22
Adding effects.....	24
Deleting effects.....	26
Changing the order of effects.....	28
Changing effect routing.....	30
Setting the footswitch function on the Home Screen.....	32
Switching patch memories.....	34
Using the preselect function.....	35
Turning the PRESELECT function ON/OFF.....	35
Selecting patch memories when PRESELECT is ON.....	37
Managing patch memories.....	38
Changing patch memory names.....	38
Copying and saving patch memories.....	40
Erasing patch memories.....	42
Creating patch memories.....	44
Restoring patch memories to original settings.....	46
Using the tuner.....	48
Activating the tuner.....	48
Changing tuner settings.....	49
Operating the MS-200D+ from an iPhone/iPad.....	53
Making unit settings.....	55

Adjusting the overall output level..... 55

Setting the AUTO SAVE function.....56

Setting the sound on the LIBRARY Screen..... 57

Setting the type of batteries used.....58

Adjusting the backlight brightness..... 59

Adjusting the display contrast.....60

Setting the ECO MODE..... 61

Managing the firmware.....62

    Checking the firmware version..... 62

    Updating.....62

Restoring factory default settings..... 63

Checking the latest information for the MS-200D+..... 64


Appendix..... 65

    Troubleshooting..... 65

Specifications.....66

# MS-200D+ overview

## Signal flow

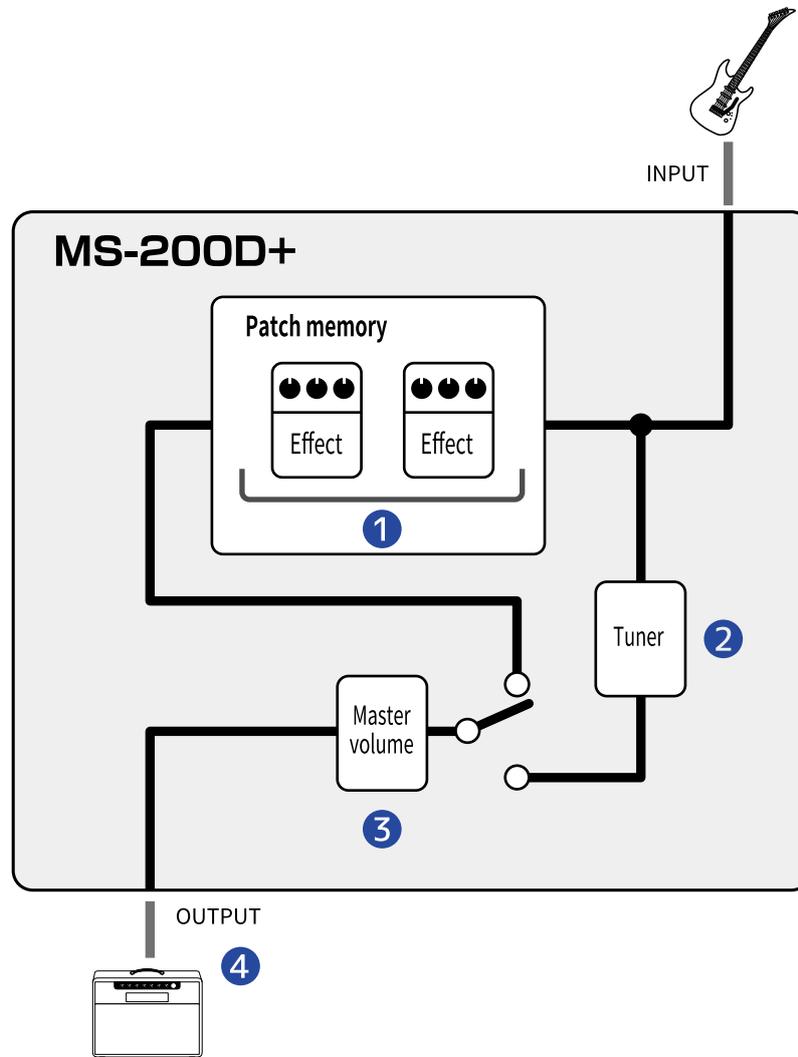


- 1 Patch memory**  
The input guitar sound passes through effects in order. (→ [Adjusting effect parameters](#))
- 2 Tuner**  
Use this to tune the connected guitar. (→ [Using the tuner](#))
- 3 Master volume**  
This adjusts the overall volume. This setting is retained even when the patch memory is changed. (→ [Adjusting the overall output level](#))
- 4 OUTPUT**  
Connect an amp here.

# Patch memory structure

## Patch memories


These store the effects used, their order, on/off states and parameter settings. Effects are saved and recalled in units of patch memories. Up to 250 of these can be stored.

The MS-200D+ can be used to freely combine 2 effects.

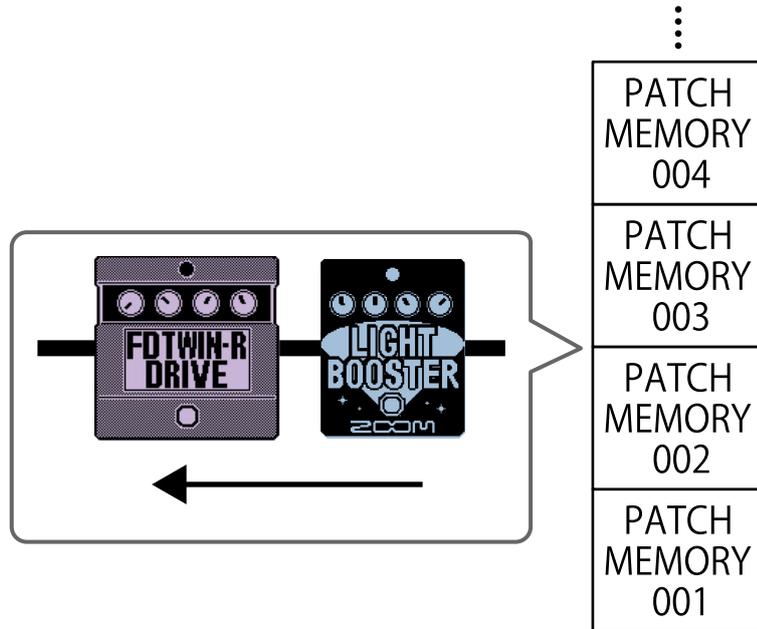

# Functions of parts

## Top

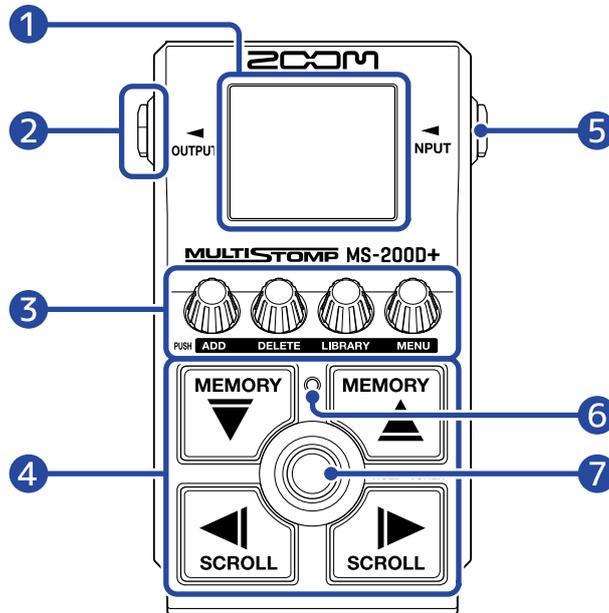

### 1 Display

This shows information, including the name of the selected effect along with its parameter values.

### 2 Output jack

Connect an amp or another effect here.

### 3 Parameter knobs

Use these to adjust effect parameters and make various settings.

### 4 Direction buttons

Use these to select patch memories and effects, for example. They can be operated by foot.

### 5 Input jack


Connect a guitar or another effect here.

### 6 On/Off indicator

Use this to check if the effect is on or off.

### 7 Footswitch

Use this to turn effects on and off.

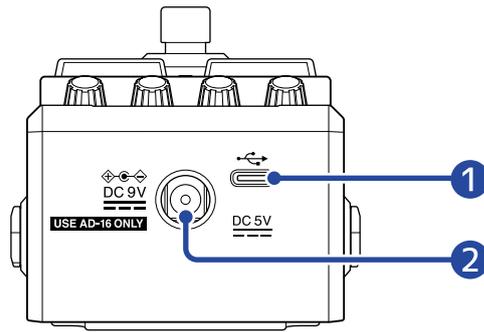

**1** USB (Type-C) port

Connect this to a computer, iPhone or iPad.  
This supports operation on USB bus power.

**2** DC 9V AC adapter connector

Connect a dedicated AC adapter (ZOOM AD-16) here.

# Overview of operation screens

The MS-200D+ is operated by using its buttons and knobs while looking at screens on the display. This section explains those screens.

## Home Screen

This appears when the power is turned on.

Effects in the selected patch memory are shown. The patch memory can be edited and its effects turned on and off.



- Use  and  to select patch memories.
- Use  and  to select the effects in the patch memory. When selecting effects, numbers will show their order.

The backlight color changes according to the category of the selected effect.




## Opening the Home Screen

- If the [MENU Screen](#) is open, press  .
- If the [LIBRARY Screen](#) is open, press  to confirm the selected effect.

# LIBRARY Screen

Effects in patch memories can be changed.

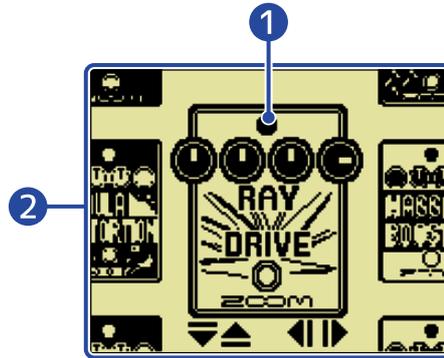

## 1 Selected effect

The selected effect is shown larger in the middle.

The backlight color changes according to the category of the selected effect.

## 2 Effect list

Effects in the same category are ordered vertically. Use  and  to select effects in the same category.

Use  and  to select effects in different categories.

## Opening the LIBRARY Screen


On the [Home Screen](#), use  and  to select the effect to replace, and press .

## Closing the LIBRARY Screen

Press  to confirm the selected effect and reopen the [Home Screen](#).

# MENU Screen

Various MS-200D+ settings can be made.

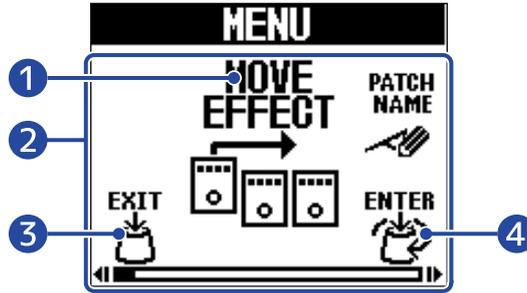

## 1 Selected setting item

The selected setting item is shown larger in the middle.

## 2 Setting items

Setting items are shown with icons. Turn  to select them.


## 3 EXIT

This reopens the [Home Screen](#).


## 4 ENTER

This shows the selected setting item.

## Using the MENU Screen

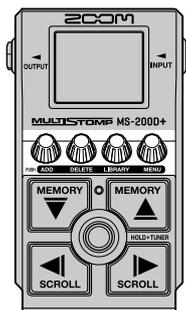

1. Press  to open the MENU Screen.

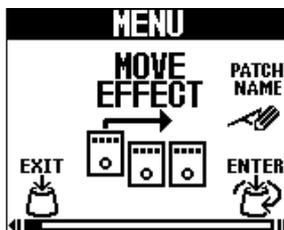


2. Turn  to show the icon for the desired setting item.

Please see the linked reference sections for details about each setting.

	<p>Change the effect order. (→ <a href="#">Changing the order of effects</a>)</p>		<p>Change the patch memory name. (→ <a href="#">Changing patch memory names</a>)</p>
	<p>Change the effect routing. (→ <a href="#">Changing effect routing</a>)</p>		<p>Set the function of the footswitch on the <a href="#">Home Screen</a>. (→ <a href="#">Setting the footswitch function on the Home Screen</a>)</p>
	<p>Restore the patch memory to its original settings. (→ <a href="#">Restoring patch memories to original settings</a>)</p>		<p>Copy and save patch memories. (→ <a href="#">Copying and saving patch memories</a>)</p>
	<p>Create a new patch memory. (→ <a href="#">Creating patch memories</a>)</p>		<p>Erase a patch memory. (→ <a href="#">Erasing patch memories</a>)</p>
	<p>Adjust the overall output level. (→ <a href="#">Adjusting the overall output level</a>)</p>		<p>Turn the AUTO SAVE function on/off. (→ <a href="#">Setting the AUTO SAVE function</a>)</p>
	<p>Turn the PRESELECT function on/off. (→ <a href="#">Using the preselect function</a>)</p>		<p>Set the sound used on the LIBRARY Screen. (→ <a href="#">Setting the sound on the LIBRARY Screen</a>)</p>
	<p>Set the type of batteries used. (→ <a href="#">Setting the type of batteries used</a>)</p>		<p>Adjust the backlight brightness. (→ <a href="#">Adjusting the backlight brightness</a>)</p>
	<p>Adjust the display contrast. (→ <a href="#">Adjusting the display contrast</a>)</p>		<p>Turn the ECO MODE on/off. (→ <a href="#">Setting the ECO MODE</a>)</p>
	<p>Restore settings to their factory defaults. (→ <a href="#">Restoring factory default settings</a>)</p>		<p>Check the firmware version. (→ <a href="#">Checking the firmware version</a>)</p>
	<p>Show a 2D code for checking MS-200D+ operation procedures. (→ <a href="#">Checking the latest information for the MS-200D+</a>)</p>		

3. Press .

This opens the selected setting screen.  
(This example is when "AUTO SAVE" is selected.)

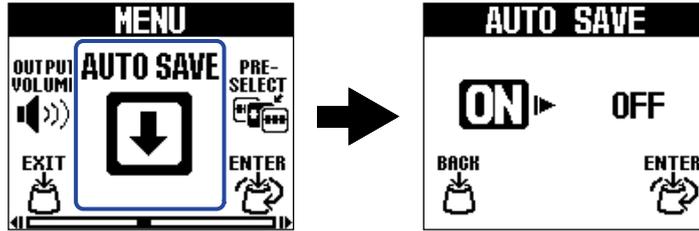

4. Turn  to select a setting.

The selected setting is highlighted.



5. Press .

This confirms the setting.


---

#### HINT

When a setting screen is open, press  to return to the [Home Screen](#) or top [MENU Screen](#).

- When  appears at the bottom left of the screen, this opens the [Home Screen](#).
  - When  appears at the bottom left of the screen, this opens the [MENU Screen](#).
-

# Making connections

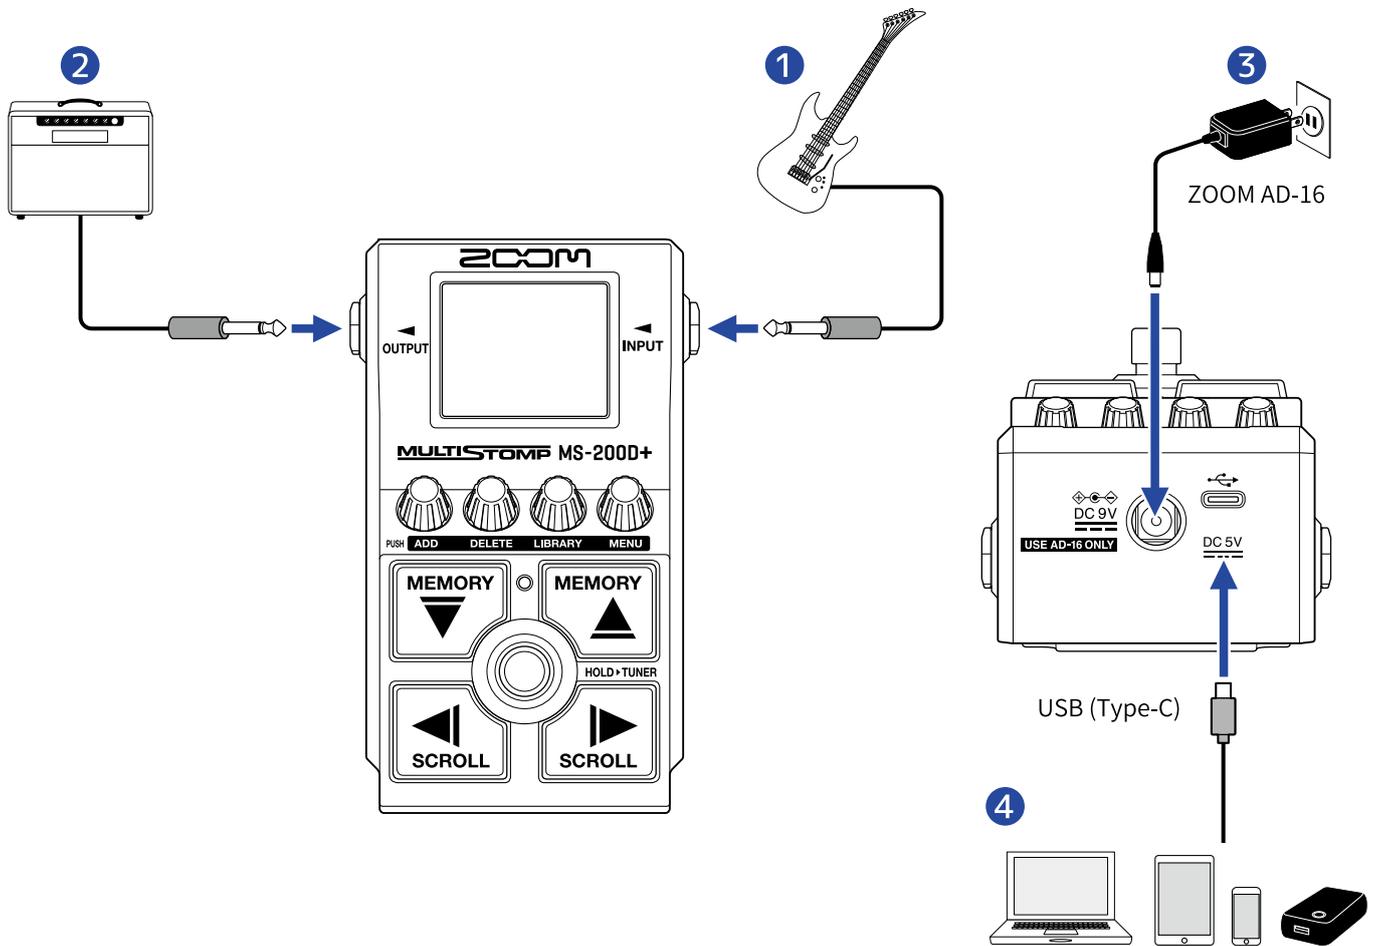

- 1 Guitar
- 2 Guitar amp
- 3 AC adapter (ZOOM AD-16)
- 4 Computer (Mac/Windows), iPhone/iPad or portable battery

Connect with a USB cable (Type-C).

This port can be used to update the firmware, use Handy Guitar Lab for MS-200D+ or provide power with a portable battery.

The Handy Guitar Lab for MS-200D+ iOS/iPadOS app can be used to manage patch memories and to edit and add effects. Handy Guitar Lab for MS-200D+ can be downloaded from the App Store.

# Turning the power on/off

## Turning the power on

1. Minimize the volume of the amp.


### NOTE

To prevent noise and malfunction, connect a guitar amp before turning the power on.

2. Supplying power

#### ■ Using batteries

Open the cover on the bottom and install batteries into the battery compartment.

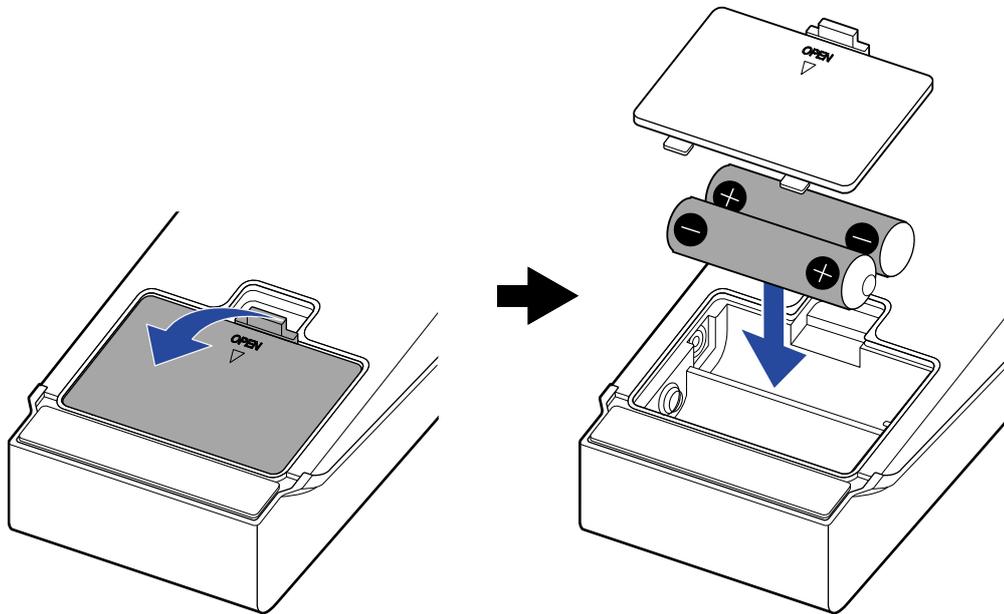


### NOTE

- Use only one type of battery (alkaline, NiMH or lithium) at a time.
- Set the type of battery used correctly so that the amount of remaining battery charge can be shown accurately. (→ [Setting the type of batteries used](#))

### ■ Using an AC adapter

Use a ZOOM AD-16 AC adapter, which is specified for this unit.

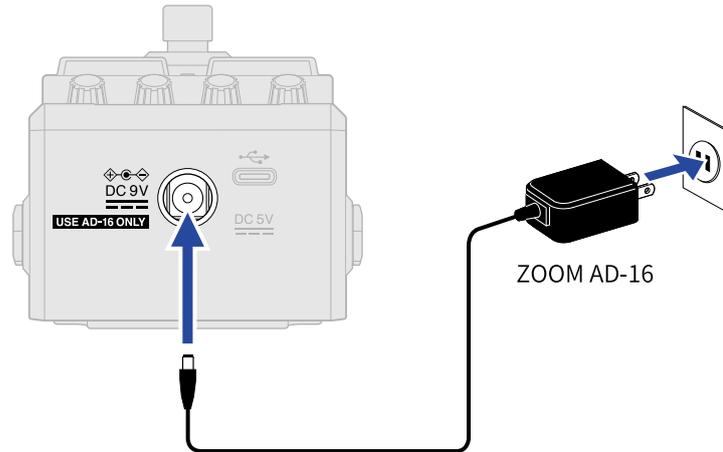

When an AC adapter is connected, the MS-200D+ will power on.

### 3. Connect a cable to the INPUT jack.

When using batteries for power, connecting a cable to the INPUT jack will turn on the power. This turns the MS-200D+ power on and opens the [Home Screen](#).



### 4. Raise the amp volume.

#### ECO MODE overview

- By default, ECO MODE is set to ON, so the power will automatically turn off if no use occurs for 10 hours.
- ECO MODE can also be turned OFF. (→ [Setting the ECO MODE](#))

## Turning the power off

### 1. Minimize the volume of the amp.

### 2. Disconnect the cable from the INPUT jack.

#### ■ If using batteries

Disconnect the cable from the INPUT jack to turn off the display and the power.

#### ■ If using an AC adapter

Disconnect the AC adapter to turn off the display and the power.

# Adjusting effects

Patch memories can be edited, including replacing effects and adjusting parameters.


## Saving changes

- When the AUTO SAVE function is on, changes to patch memories will be saved automatically. (The default setting is ON.) (→ [Setting the AUTO SAVE function](#))
- If the AUTO SAVE function is off, patch memories will not be saved automatically. When the content of a patch memory has been changed, **EDITED** will appear at the top right of the display, showing that it is different from the saved settings. Save them as necessary. (→ [Copying and saving patch memories](#))



## Turning effects on/off


On the [Home Screen](#), the effects used in the patch memory are shown and can be turned on and off using the footswitch.

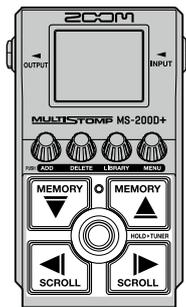


1. Use  and  on the [Home Screen](#) to select a patch memory with an effect you want to turn on/off (→ [Switching patch memories](#)).

2. Use  and  to select the effect you want to turn on/off.

One effect in the patch memory is shown on the display.

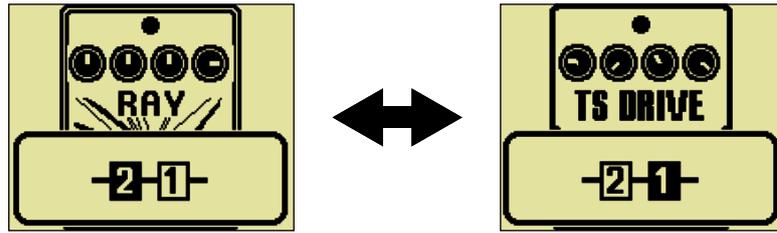

3. Press  to turn the effect on/off.

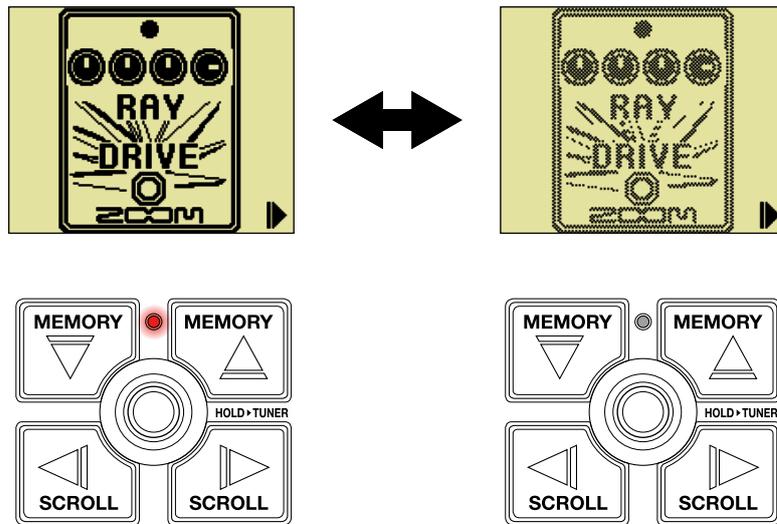

The On/Off indicator lights when the effect is on.

When the effect is off, the On/Off indicator is unlit and the effect icon will appear faded on the display.


---

## HINT

- Some effects assign special functions to the footswitch. (This includes effects that turn on only while the footswitch is being pressed, for example.) Special functions can be selected on the Effect Adjustment Screen. → ([Footswitch special functions](#))
  - The footswitch function can be set to either “SINGLE EFFECT ON/OFF” or “ALL EFFECT ON/OFF” for each patch memory separately. (→ [Setting the footswitch function on the Home Screen](#))
-


# Replacing effects

Effects in a patch memory can be replaced with other effects as desired.

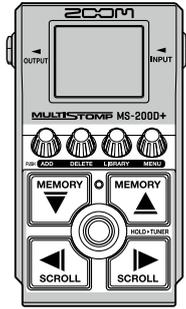

1. Use  and  on the [Home Screen](#) to select the patch memory with an effect that you want to replace (→ [Switching patch memories](#)).

2. Use  and  to select the patch you want to replace.

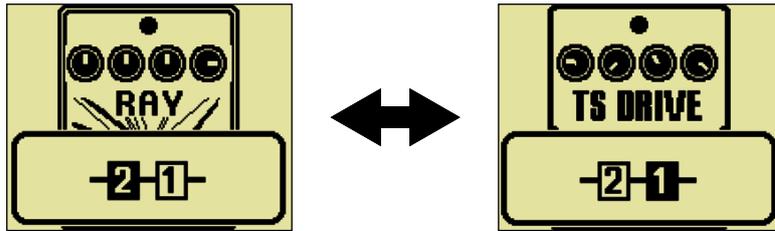


3. Press .

This opens the [LIBRARY Screen](#) that shows all the effects.

When the LIBRARY Screen is open, you can preview the sound of only the selected effect or the entire patch memory. (→ [Setting the sound on the LIBRARY Screen](#))

4. Use , ,  and  to select effects.

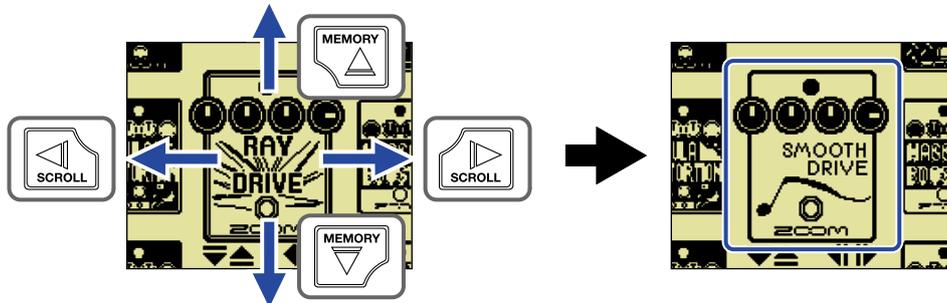

## HINT

Turn  to show the Effect Adjustment Screen where the parameters of the selected effect can be adjusted. (→ [Adjusting effect parameters](#))

5. Press .

This replaces the selected effect and reopens the [Home Screen](#).



**NOTE**


If an effect has been deleted using the Handy Guitar Lab for MS-200D+ app, disabled.



will appear and it will be


# Adjusting effect parameters

The individual effects used in patch memories can be adjusted.

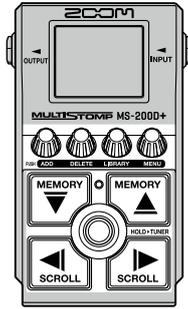

1. Use  and  on the [Home Screen](#) to select the patch memory with an effect that you want to adjust (→ [Switching patch memories](#)).

2. Use  and  to select the effect with parameters that you want to adjust.

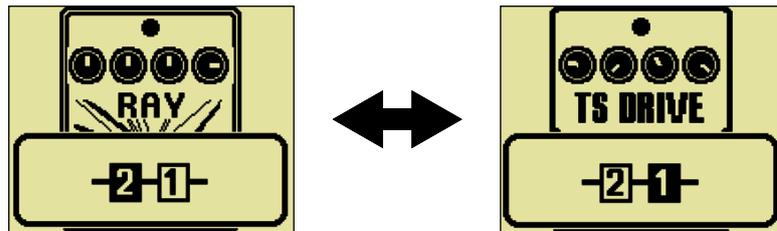


3. Turn .

This opens the Parameter Adjustment Screen of the selected effect.




4. Turn  to adjust an effect parameter.

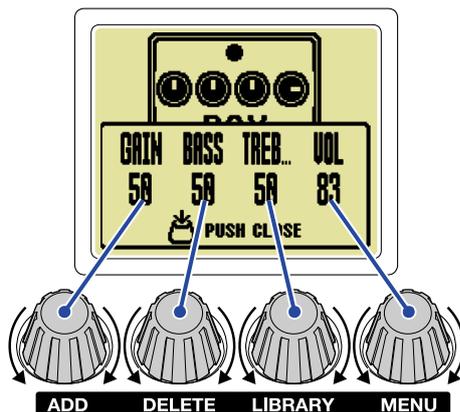

Press  to return to the original screen.

When parameters are on multiple pages, ◀ and ▶ will appear at the bottom of the screen.

Use  and  to show the parameters to be adjusted.

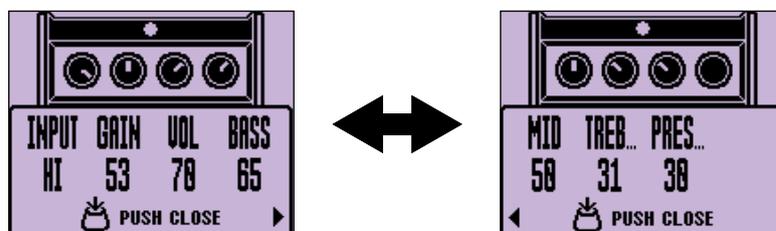

## Footswitch special functions


Some effects assign special functions to the footswitch, including turning the effect on only while the footswitch is being pressed. The name of the parameter that selects the special function will appear highlighted on the display.




# Adding effects

Effects can be added to patch memories.

The MS-200D+ can be used to freely combine 2 effects.

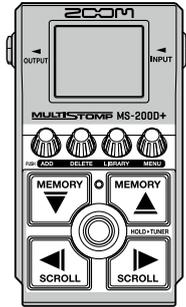

1. Use  and  on the [Home Screen](#) to select the patch memory to which you want to add an effect (→ [Switching patch memories](#)).

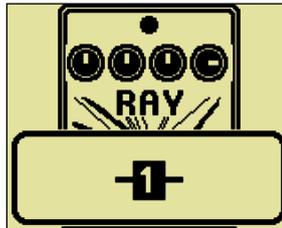


2. Press .

This opens the ADD EFFECT Screen.



3. Turn  to select whether to add on the left or the right, and press .

This opens the [LIBRARY Screen](#) that shows all the effects. Select the effect to add. (→ [Replacing effects](#))

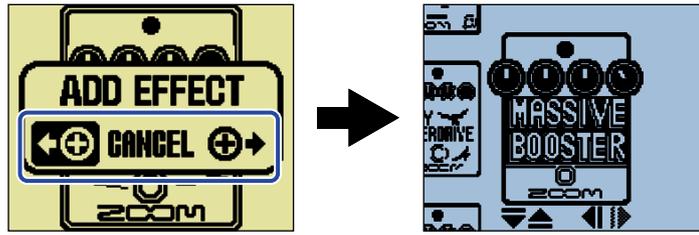

To cancel adding an effect, turn  on the ADD EFFECT Screen and select "CANCEL". Then, press




#### NOTE

If  is pressed when 2 effects have already been added to the patch memory, the following message will appear and adding the effect will fail. In this case, delete an effect from the patch memory first. (→ [Deleting effects](#))




# Deleting effects

Effects in patch memories can be deleted.

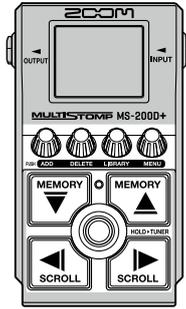

1. Use  and  on the [Home Screen](#) to select the patch memory with the effect that you want to delete (→ [Switching patch memories](#)).

2. Use  and  to select the effect to delete.

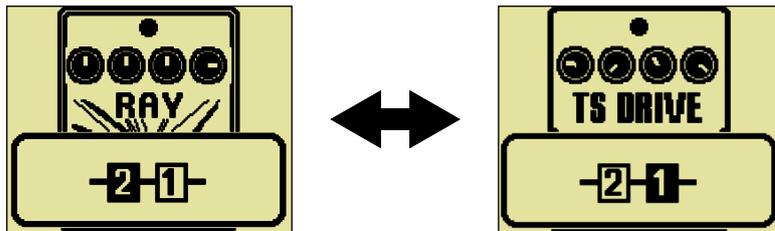


3. Press .

This opens the DELETE EFFECT Screen.



4. Turn  to select "EXECUTE" and press .

This will delete the selected effect from the patch memory. The effect that was to the left of that effect will be shown.

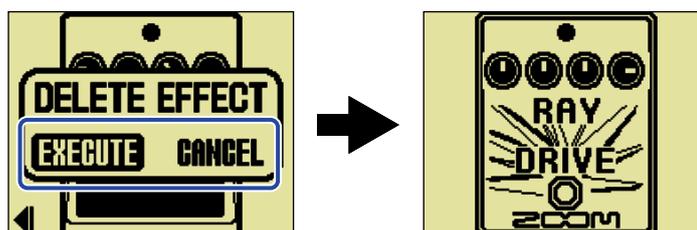


To cancel effect deletion, turn  to select "CANCEL" and press .

---


## HINT

If the only effect in the patch memory is deleted, the SELECT EFFECT Screen will open. Press  and select an effect. (→ [Replacing effects](#))

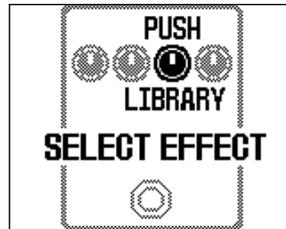


# Changing the order of effects

Effects in a patch memory can be reordered as desired.

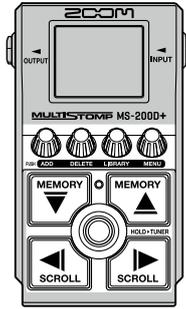


1. Use  and  on the [Home Screen](#) to select a patch memory with effects that you want to reorder (→ [Switching patch memories](#)).

2. Press  and  to select an effect to reorder.

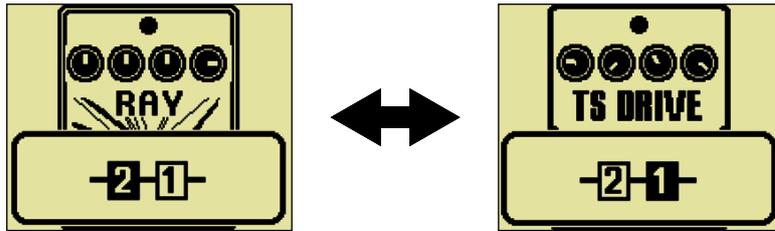


3. Press  to open the [MENU Screen](#).

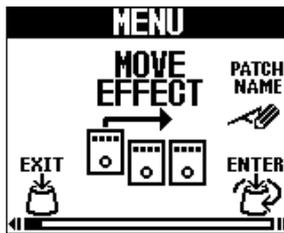


4. Turn  to select "MOVE EFFECT" and press .

This opens the MOVE EFFECT Screen.

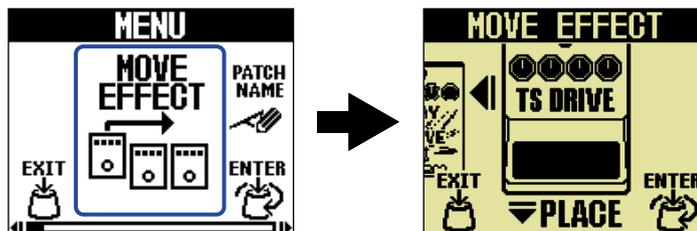

5. Turn  to move the effect to the desired position.

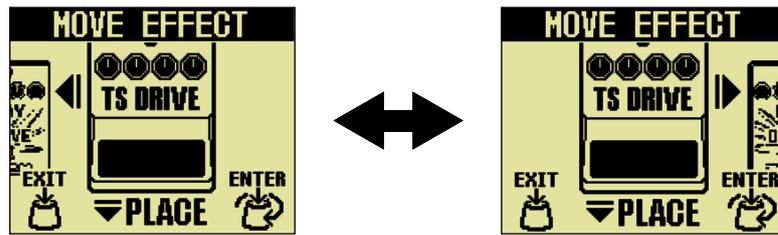

6. Press .

This confirms reordering and reopens the [Home Screen](#).


# Changing effect routing

The effect routing can be set for each patch memory.




1. Use  and  on the [Home Screen](#) to select a patch memory for which you want to change the effect routing (→ [Switching patch memories](#)).

2. Press  to open the [MENU Screen](#).

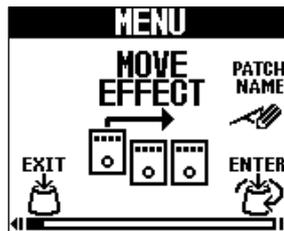

3. Turn  to select "EFFECT ROUTING" and press .

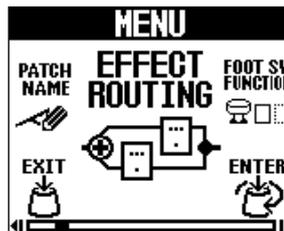

4. Turn  to switch the setting.




Setting	Explanation
SERIES	This connects the effects in series.
PARALLEL	This connects the effects in parallel.
ALTERNATE	The effect that is not shown is turned off. This can be used like being connected to a switcher.

5. Press  .

The [Home Screen](#) will reopen.


# Setting the footswitch function on the Home Screen

The function of the footswitch on the [Home Screen](#) can be set for each patch memory.

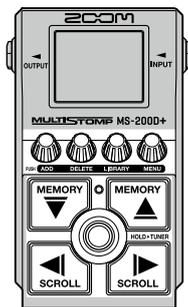


1. Use  and  on the [Home Screen](#) to select the patch memory for which you want to set the [Home Screen](#) footswitch function (→ [Switching patch memories](#)).


2. Press  to open the [MENU Screen](#).

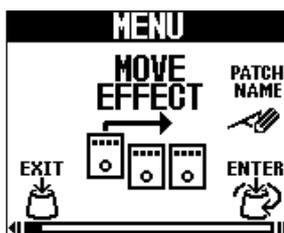

3. Turn  to select "FOOT SW FUNCTION" and press .

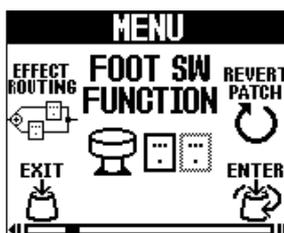

4. Turn  to switch the setting.

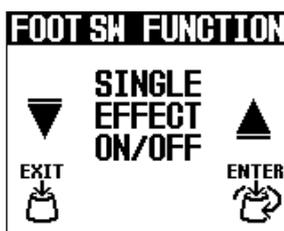

Setting	Explanation
SINGLE EFFECT ON/OFF	Pressing the footswitch turns one effect on/off.
ALL EFFECT ON/OFF	Pressing the footswitch turns all effects on/off.


5. Press  .

This reopens the [Home Screen](#).

# Switching patch memories


---

The MS-200D+ manages effects in patch memories. A patch memory can have up to 2 effects and save their on/off states and parameter settings.

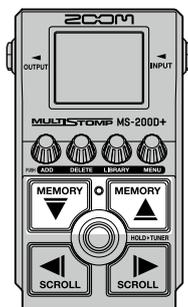

1. Use  and  on the [Home Screen](#) to select a patch memory.

When a patch memory is selected, information about it will be shown briefly.

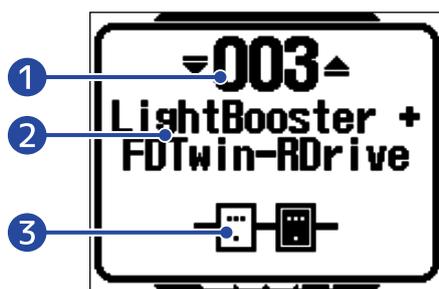

- 1 Patch memory number

This shows the number of the selected patch memory.

- 2 Patch memory name

This shows the name of the selected patch memory.

- 3 Number of effects in the patch memory

This shows the number of effects in the selected patch memory.

---

## HINT

- Up to 250 patch memories can be created.
  - The MS-200D+ has a preselect function. This allows the next patch memory to be selected in advance and then switched to with one press. This is useful when you want to switch patch memories that are not near the current one when performing live, for example. (→ [Using the preselect function](#))
-


# Using the preselect function

The MS-200D+ has a preselect function.


If PRESELECT is ON, when  and  are used to switch patch memories, the change will not occur immediately. Pressing  afterward will finalize the patch memory change.

This makes it possible to switch directly to a patch memory that is not near the current one during live performance.

## Turning the PRESELECT function ON/OFF

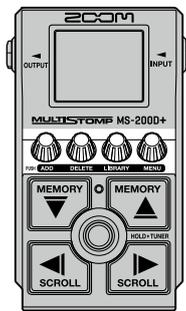


1. Press  to open the MENU Screen.

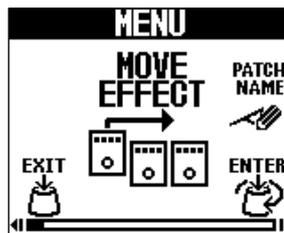


2. Turn  to select "PRESELECT" and press .

This opens the PRESELECT Screen.

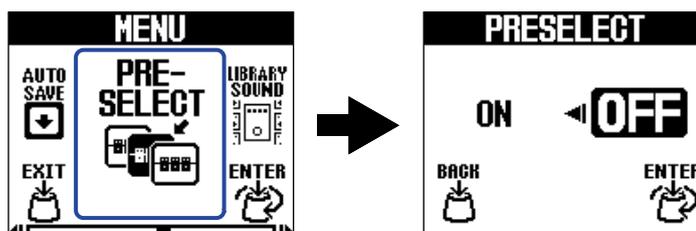

3. Turn  to switch it ON/OFF.

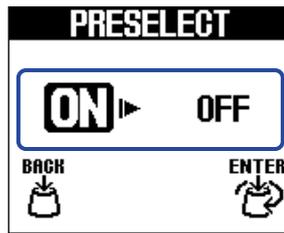

Setting	Explanation
ON	This turns on the PRESELECT function.
OFF	This turns off the PRESELECT function.


4. Press .

This confirms the setting.

5. Press .


The [Home Screen](#) will reopen.

# Selecting patch memories when PRESELECT is ON

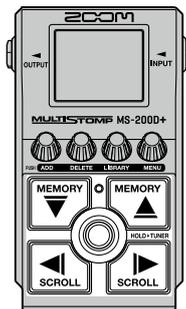


1. Use  and  on the [Home Screen](#) to show the next patch memory to select.

Example: Selecting patch memory 008 while performing with 001

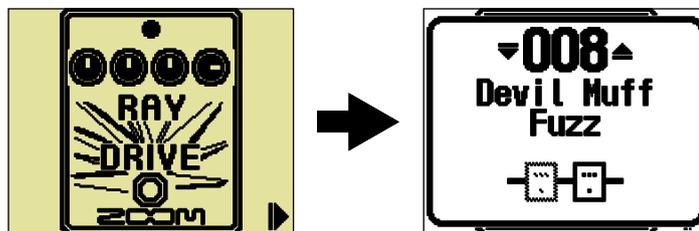

The On/Off indicator will blink.

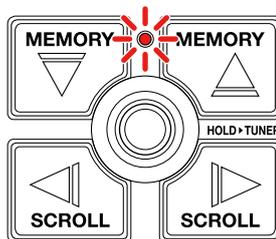


2. Press  to confirm the selection.

An effect in the selected patch memory will be shown.




# Managing patch memories

## Changing patch memory names

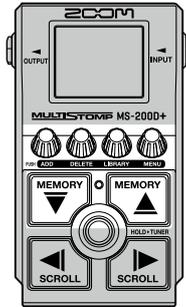


1. Use  and  on the [Home Screen](#) to select the patch memory with the name that you want to change (→ [Switching patch memories](#)).

2. Press  to open the [MENU Screen](#).

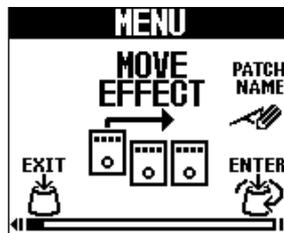


3. Turn  to select "PATCH NAME" and press .

This opens the PATCH NAME Screen.

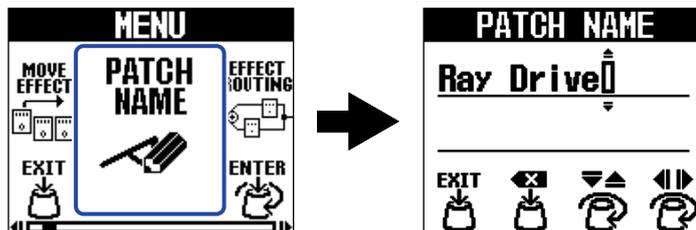

4. Turn  to move the cursor.

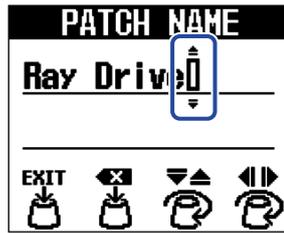

5. Turn  to insert a character.



- Press  to delete the character before the cursor.
- Press and hold  to delete all the characters.

6. Press  .

This confirms the name and reopens the [Home Screen](#).

---

#### HINT

The characters and symbols that can be used are as follows.


! % & ' + , - . = \_ (space) A-Z, a-z, 0-9

---

# Copying and saving patch memories

The AUTO SAVE function is ON by default. When it is OFF, changes, including adjustments to effects, as well as volume settings, will not be saved automatically. Save changes manually in this case.

Patch memories can also be saved (copied) to other locations.

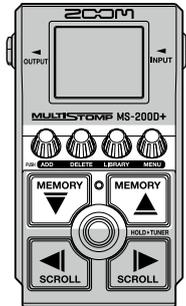


## HINT

See "[Setting the AUTO SAVE function](#)" for details about this function.


1. Use  and  on the [Home Screen](#) to select the patch memory that you want to copy or save (→ [Switching patch memories](#)).

2. Press  to open the [MENU Screen](#).

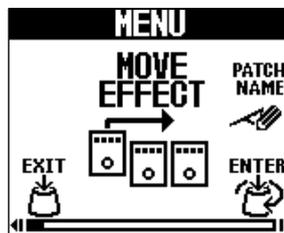


3. Turn  to select "COPY PATCH" and press .


This opens the COPY PATCH Screen.

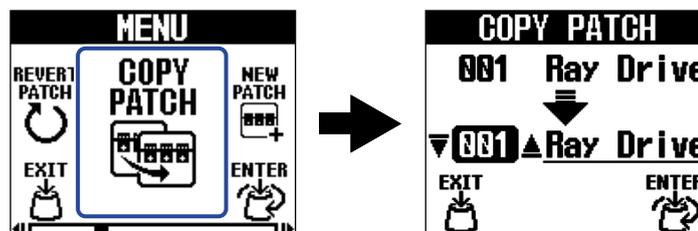

If AUTO SAVE is OFF, (→ [Setting the AUTO SAVE function](#)), "SAVE PATCH" will appear instead of "COPY PATCH". In this case, select "SAVE PATCH".

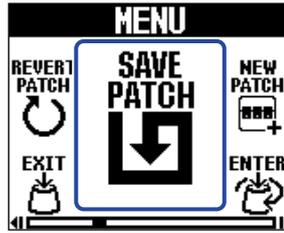


4. Turn  to select the patch memory where it will be copied or saved, and press  .  
Patch memories labeled "Empty" contain no effects.

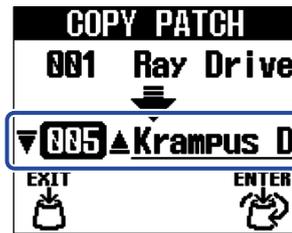

5. Press  .

This copies or saves the patch memory and reopens the [Home Screen](#).

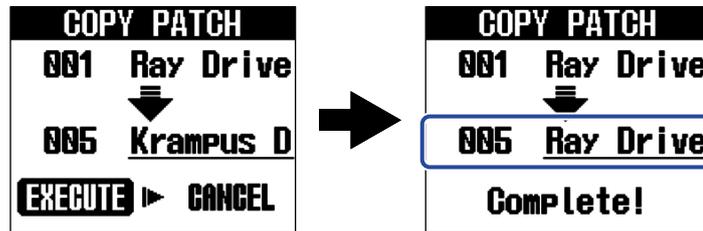


To cancel copying or saving, turn  to select "CANCEL" and press  .

#### HINT

If the AUTO SAVE function is off, patch memories will not be saved automatically. (→ [Setting the AUTO SAVE function](#))


# Erasing patch memories

Unnecessary patch memories can be erased.

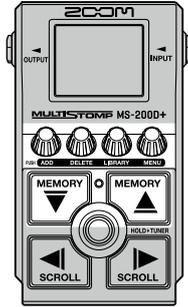


1. Use  and  on the Home Screen to select the patch memory that you want to erase (→ [Switching patch memories](#)).


2. Press  to open the [MENU Screen](#).

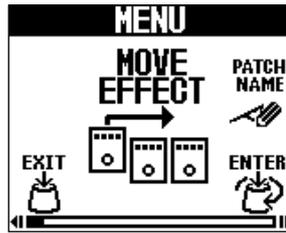

3. Turn  to select "ERASE PATCH" and press . This opens the ERASE PATCH Screen.

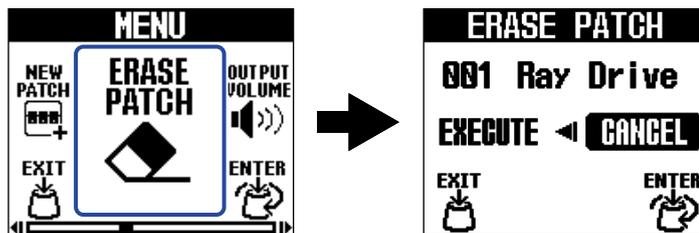

4. Turn  to select "EXECUTE" and press .

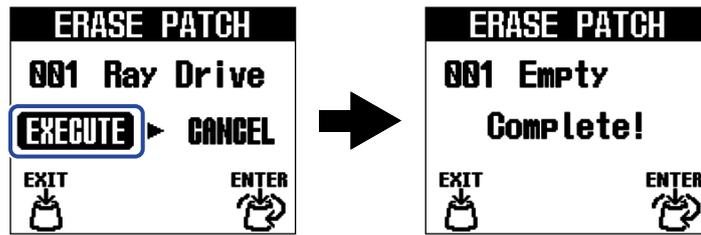


Erased patch memories will have their contents cleared and be shown as "Empty".

To cancel erasure, turn  to select "CANCEL" and press .


# Creating patch memories

Create a new patch memory.

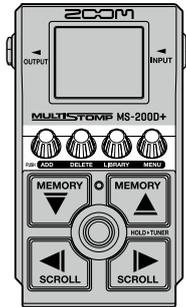


1. Press  to open the [MENU Screen](#).

2. Turn  to select "NEW PATCH" and press  .  
This opens the NEW PATCH Screen.

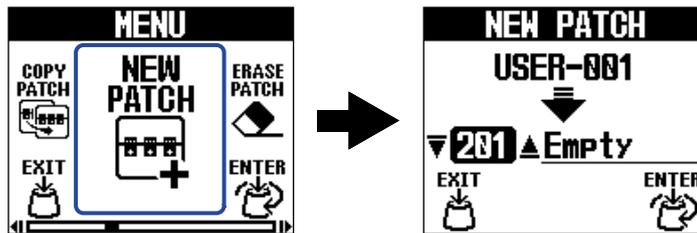


3. Turn  to select where to create the patch, and press  .  
Patch memories labeled "Empty" contain no effects.

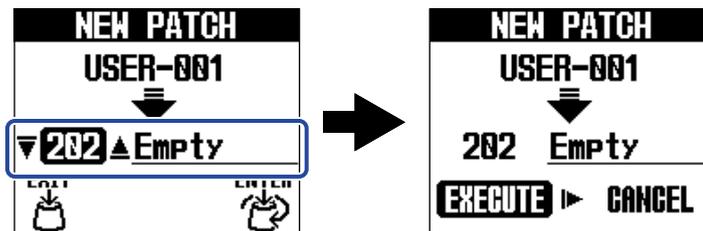

4. Press .

This creates a new patch memory and opens the SELECT EFFECT Screen.

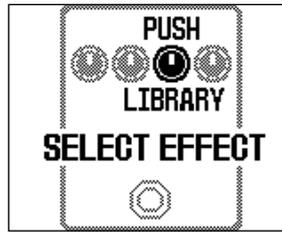

Follow the instructions in [“Replacing effects”](#) to assign effects and edit the patch memory.


To cancel creation, turn  to select “CANCEL” and press .

**NOTE**

Up to 250 patch memories can be saved. The NEW PATCH Screen will not be shown if there are no empty patch memories. Erase unnecessary patch memories to enable use. (→ [Erasing patch memories](#))

# Restoring patch memories to original settings


After a patch memory is changed, it can be restored to the state it was in immediately after selection or the factory default state.

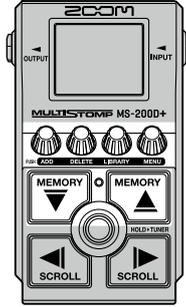


1. Press  to open the MENU Screen.

2. Turn  to select "REVERT PATCH" and press .

This opens the REVERT PATCH Screen.

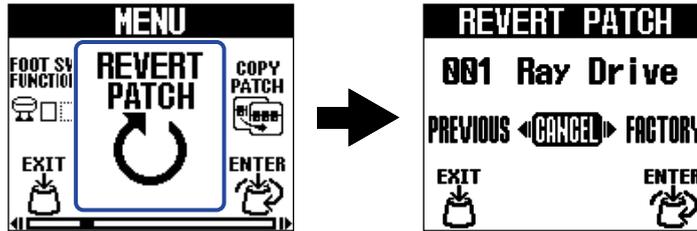

3. Turn  to select the desired state.

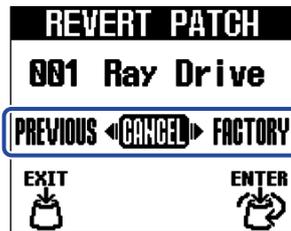

Setting	Explanation
PREVIOUS	This restores the patch memory to the state it was in immediately after selection.
FACTORY	This restores the patch memory to its factory default state.

4. Press  .




This restores the patch memory to the state selected in step 4, and reopens the [Home Screen](#).

To cancel this operation, turn  to select "CANCEL" and press  .

# Using the tuner

## Activating the tuner

Enable the tuner to use the MS-200D+ to tune a guitar.

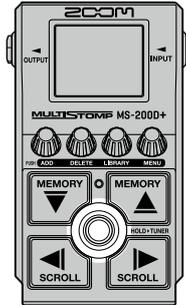


### NOTE

The tuner cannot be used when the selected effect has a special function assigned, for example, effects that are on only while the footswitch is being pressed.

1. Press and hold .

This activates the tuner and opens the Tuner Screen.

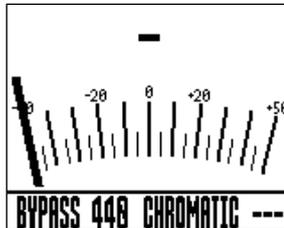

2. Play the open string that you want to tune and adjust its pitch.



- The nearest note name and pitch detuning will be shown.
- When the pitch is correct, the left and right indicators will both be shown and the display backlight will become green.

## Closing the tuner


Press  when the tuner is in use to close it and reopen the previous screen.

## Changing tuner settings

The standard pitch used by the tuner and the tuner type can be changed. Flat tuning is also possible.

### Setting the output method

Turn  to set the output method.

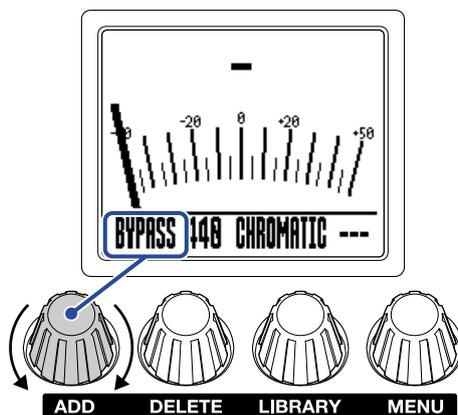


Setting	Explanation
BYPASS	The guitar sound is output with effects bypassed.
MUTE	The guitar sound is not output.

#### HINT

Adjusting the EQ and volume of a guitar amp, for example, is easier if the MS-200D+ effects are bypassed.

# Changing the standard pitch of the tuner

Turn  to change the standard pitch.

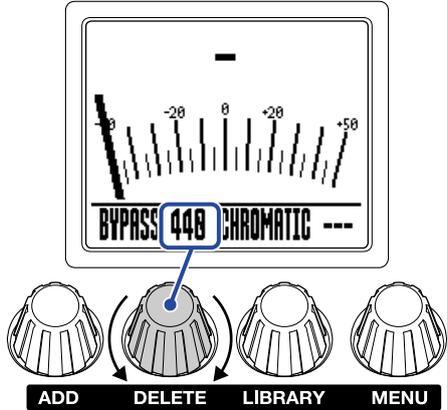


### HINT

The setting range is 430–450 Hz for middle A.

# Setting the tuner type

Turn  to select the tuner type.

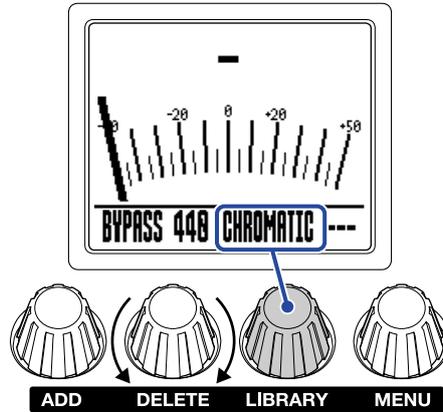


Setting	Explanation
CHROMATIC	The pitch detuning is shown according to the nearest note (in semitones).
Other tuner types	The nearest string number is shown according to the selected type, and the amount of detuning from its pitch is shown. The following tuner types can be selected.

Display	Explanation	String number/note						
		7	6	5	4	3	2	1
GUITAR	Standard guitar tuning with a 7th string	B	E	A	D	G	B	E
OPEN A	Open A tuning (open strings play A chord)	-	E	A	E	A	C#	E
OPEN D	Open D tuning (open strings play D chord)	-	D	A	D	F#	A	D
OPEN E	Open E tuning (open strings play E chord)	-	E	B	E	G#	B	E
OPEN G	Open G tuning (open strings play G chord)	-	D	G	D	G	B	D
DADGAD	Alternate tuning often used for tapping and other techniques	-	D	A	D	G	A	D

## Using flat tunings

All strings can be tuned flat from ordinary tuning by 1 (b1), 2 (b2) or 3 (b3) semitones.

Turn  to change the flat tuning.

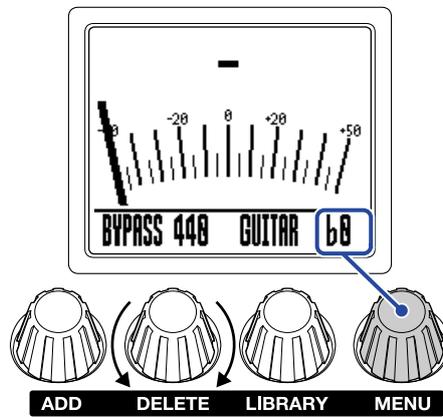

### NOTE

Flat tuning cannot be used when the tuner type is CHROMATIC.


# Operating the MS-200D+ from an iPhone/iPad

The MS-200D+ can be controlled from an iPhone/iPad using the iOS/iPadOS Handy Guitar Lab for MS-200D+ app.

## NOTE

The Handy Guitar Lab for MS-200D+ app must be installed on the iPhone/iPad beforehand. The Handy Guitar Lab for MS-200D+ app can be downloaded from the App Store. See the operation manual for the Handy Guitar Lab for MS-200D+ app for details about making settings and conducting operations.

1. Start the MS-200D+.
  - If using batteries, connect a cable to the INPUT jack.
  - If using an AC adapter, connecting to the iPhone/iPad with a USB cable will start it.
2. Use a USB cable to connect the MS-200D+ and the iPhone or iPad.

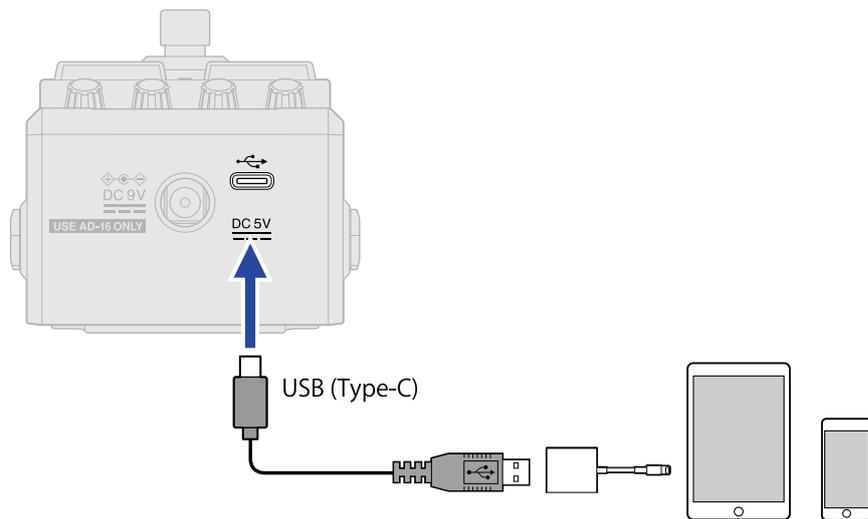

## NOTE


- Use a USB (Type-C) cable that supports data transfer. The following screen will appear when the MS-200D+ is connected.



The following screen will appear if a cable that does not support data transfer has been used. Replace the cable with one that supports data transfer.



- Use a Lightning to USB 3 Camera Adapter to connect to an iOS/iPadOS device with a lightning connector.
- The USB CONNECT Screen will appear if batteries are being used. Turn  to select "MOBILE DEVICE" as the connected device, and press .

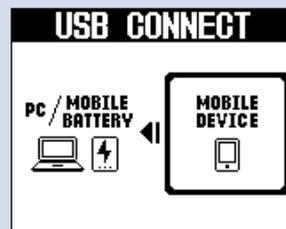


## 3. Launch Handy Guitar Lab for MS-200D+ on the iPhone/iPad.

# Making unit settings

## Adjusting the overall output level


The volume of the MS-200D+ output sound can be adjusted. Reduce the volume if the output sound becomes distorted.

1. Select "OUTPUT VOLUME" on the [MENU Screen](#).

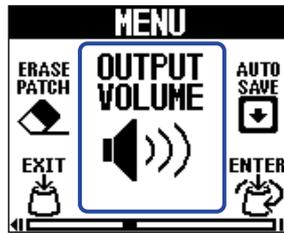

2. Turn  to adjust the volume.

The setting value is shown on the display.

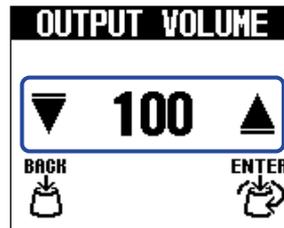

3. Press  .

This confirms the setting.


4. Press  .

The [Home Screen](#) will reopen.


# Setting the AUTO SAVE function

When the AUTO SAVE function is ON, patch memories will be saved automatically when their contents are changed.

1. Select "AUTO SAVE" on the [MENU Screen](#).

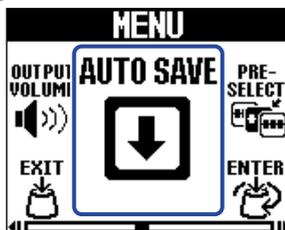

2. Turn  to switch it ON/OFF.

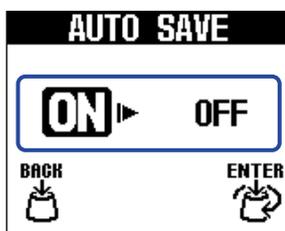

Setting	Explanation
ON	This turns on the AUTO SAVE function.
OFF	This turns off the AUTO SAVE function.

3. Press .  
This confirms the setting.

4. Press .  
The [Home Screen](#) will reopen.

---

## HINT


If the AUTO SAVE function is off, patch memories will not be saved automatically. Save them as necessary. (→ [Copying and saving patch memories](#))

---

# Setting the sound on the LIBRARY Screen

The sound that can be checked on the [LIBRARY Screen](#) can be changed.

1. Select "LIBRARY SOUND" on the [MENU Screen](#).

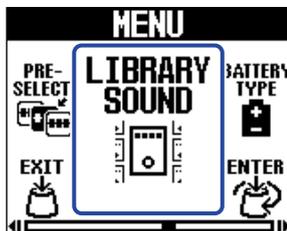

2. Turn  to switch the setting.



Setting	Explanation
SINGLE EFFECT SOUND	This enables checking the sound of just the selected effect.
PATCH MEMORY SOUND	This enables checking the sound of the entire patch memory.


3. Press  .  
This confirms the setting.

4. Press  .  
The [Home Screen](#) will reopen.


# Setting the type of batteries used

Set the type of battery used correctly so that the amount of remaining battery charge can be shown accurately.

1. Select "BATTERY TYPE" on the [MENU Screen](#).

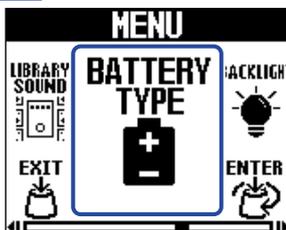

2. Turn  to set the type of battery used.

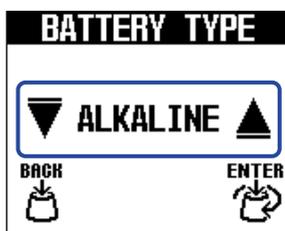

Setting	Explanation
ALKALINE	Alkaline batteries
Ni-MH	Nickel-metal hydride batteries
LITHIUM	Lithium batteries

3. Press  .

This confirms the setting.


4. Press  .

The [Home Screen](#) will reopen.

# Adjusting the backlight brightness

The brightness of the backlight can be adjusted. Select "NORMAL" to extend battery life.

1. Select "BACK LIGHT" on the [MENU Screen](#).

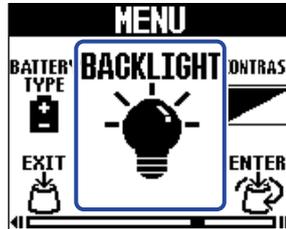

2. Turn  to adjust the backlight brightness.



Setting	Explanation
NORMAL	This is regular brightness.
BRIGHT	This makes the backlight brighter.

3. Press  .

This confirms the setting.


4. Press  .

The [Home Screen](#) will reopen.

# Adjusting the display contrast


Adjust the display contrast.

1. Select "CONTRAST" on the [MENU Screen](#).

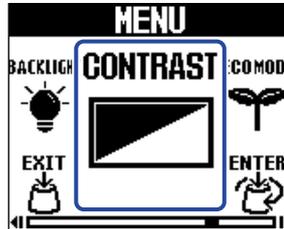

2. Turn  to adjust the display contrast.

The setting value is shown on the display.

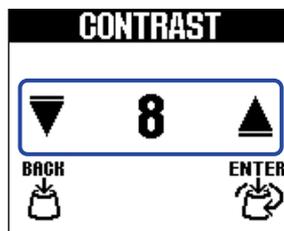

3. Press  .

This confirms the setting.


4. Press  .

The [Home Screen](#) will reopen.


# Setting the ECO MODE

This function can be used to turn the power off automatically if unused for 10 hours.

1. Select "ECO MODE" on the [MENU Screen](#).

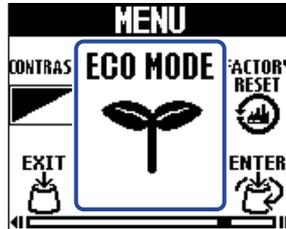

2. Turn  to switch it ON/OFF.

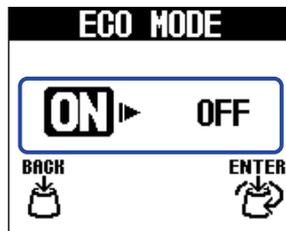

Setting	Explanation
ON	The power will automatically turn off if unused for 10 hours.
OFF	This disables ECO MODE.

3. Press .

This confirms the setting.

4. Press .


The [Home Screen](#) will reopen.

# Managing the firmware


## Checking the firmware version

The version of the firmware used by the MS-200D+ can be checked.

1. Select "VERSION" on the [MENU Screen](#).

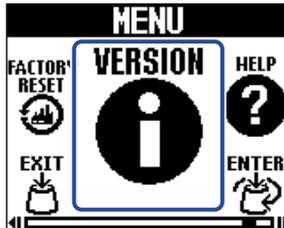

2. Check the version on the VERSION Screen.  
This shows the firmware and preset versions.

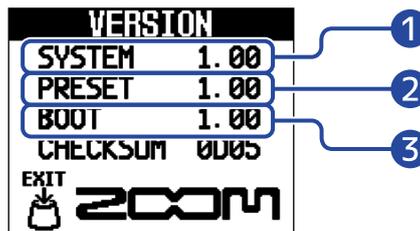

- 1 MS-200D+ firmware version
- 2 Preset version
- 3 BOOT version

3. Press  .

This reopens the [Home Screen](#).

## Updating

The MS-200D+ firmware can be updated to the latest version.


The latest firmware can be downloaded from the ZOOM website ([zoomcorp.com](http://zoomcorp.com)).

# Restoring factory default settings

---

The factory default settings can be restored.

1. Select "FACTORY RESET" on the [MENU Screen](#).

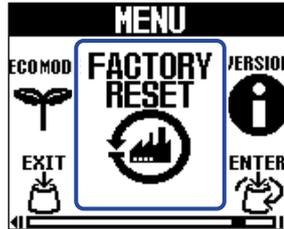

2. Turn  to select "YES".



3. Press .

Resetting will be executed, restoring default settings.



## NOTE

Resetting will overwrite all settings, including patch memories, with their factory defaults. Be certain before using this function.

## HINT


To cancel resetting, select "NO" in step 2.

# Checking the latest information for the MS-200D+

---

A 2D code for help related to the MS-200D+ can be shown on its display.

1. Select "HELP" on the [MENU Screen](#).

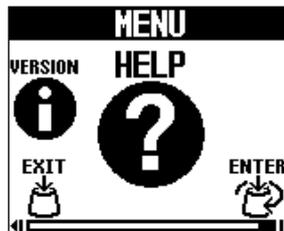

2. Use a smartphone or tablet, for example, to read the 2D code shown on the HELP Screen.



[zoomcorp.com/help/ms-200dplus](https://zoomcorp.com/help/ms-200dplus)

3. Press  .

This reopens the [Home Screen](#).

# Appendix

---

## Troubleshooting

### The unit will not power on

- If using batteries, connect a cable to the INPUT jack. (→ [Turning the power on/off](#))
- Check the connections. (→ [Making connections](#))

### There is no sound or output is very quiet

- Check the connections. (→ [Making connections](#))
- Adjust the levels of the effects. (→ [Adjusting effect parameters](#))
- Adjust the output volume. (→ [Adjusting the overall output level](#))
- Confirm that the tuner output is not set to "MUTE". (→ [Setting the output method](#))

### There is a lot of noise

- Confirm that an instrument cable is not the cause.
- Use a genuine ZOOM AC adapter. (→ [Making connections](#))

### Batteries lose their charge quickly

Making the following settings could increase the battery operation time.

- Set the type of battery used correctly. (→ [Setting the type of batteries used](#))
- Set the display backlight to "NORMAL". (→ [Adjusting the backlight brightness](#))
- Due to their characteristics, using nickel metal hydride batteries (especially high-capacity ones) or lithium batteries should enable longer use than alkaline batteries when power consumption is high.

# Specifications

Maximum number of simultaneous effects		2 effects
User patch memories		250
Sampling frequency		44.1 kHz
A/D conversion		24-bit 128× oversampling
D/A conversion		24-bit 128× oversampling
Signal processing		32-bit
Frequency response		20 Hz – 20 kHz (+0.5 dB/–0.5 dB) (when 10kΩ load)
Display		160×128 dot-matrix LCD
Input	INPUT	Standard mono phone jack Rated input level: –20 dBu Input impedance (line): 470 kΩ
Output	OUTPUT	Standard mono phone jack Maximum output level: +7.2 dBu (when output impedance 10 kΩ or higher)
Input S/N		122 dB
Noise floor (residual noise)	OUTPUT	–100 dBu
Power		AC adapter: 9V DC 500mA center negative (ZOOM AD-16) 2 AA batteries (alkaline, lithium or rechargeable NiMH batteries)
Estimated operation times using batteries	<ul style="list-style-type: none"> <li>• These values are approximate.</li> <li>• Battery operation times were determined using in-house testing methods. They will vary greatly according to use conditions.</li> </ul>	Alkaline batteries: about 7 hours NiMH batteries (1900 mAh): about 6.5 hours Lithium batteries: about 14 hours
USB		Port: USB 2.0 Type-C/Supported cable type: Type-C Handy Guitar Lab: USB 1.1 Full Speed <ul style="list-style-type: none"> <li>• Use a USB cable that supports data transfer. USB bus power is supported.</li> </ul>
Dimensions		133 mm (D) × 79 mm (W) × 61 mm (H)
Weight		346 g (excluding batteries) 393 g (including batteries)

Note: 0 dBu = 0.775 V



ZOOM CORPORATION

4-4-3 Kanda-surugadai, Chiyoda-ku, Tokyo 101-0062 Japan

[zoomcorp.com](https://zoomcorp.com)