




# Godox

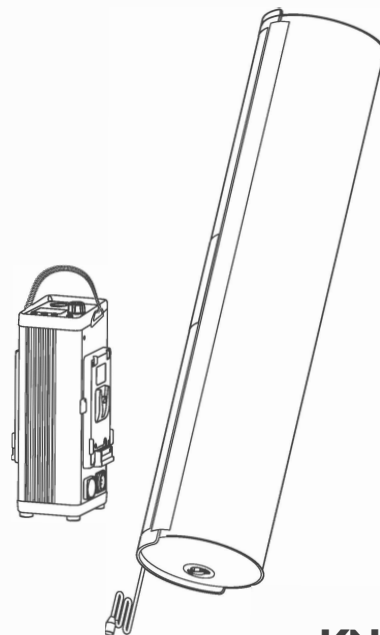

## KNOWLED AT200 Bi

KNOWLED Air Tube Light



Wechat  
Official Account

### GODOX Photo Equipment Co.,Ltd

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District,  
Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423

E-mail: [godox@godox.com](mailto:godox@godox.com) | [Aderama.com](http://Aderama.com)

[godox.com](http://godox.com)

Made in China | 705-AT20BY-00



Instruction Manual

## Important Safety Instructions and Precautions

**First of all, as the most basic principle: This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:**

1. Before use, please read and understand these instructions and attentions.
2. Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
3. This lighting product is not ordinary lighting product and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
4. When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If eye discomfort, please turn off the lamp in time, suspend use, and see a doctor immediately.
6. If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
7. This product is only suitable for use in -20°C to 40°C operating environment and normal humidity environment.
8. Do not use damaged equipment or accessories, and wait for professional maintenance personnel to check and repair to confirm being normal before use.
9. During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.
11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be repaired by our factory.
12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet.
13. Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.

14. Before storing, make sure that the equipment has cooled down completely. For storage, unplug the power cord from the equipment. The equipment should be placed in the carrying case or in a ventilated dry place.
15. Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
16. Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
17. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
18. Please take off the protective cover before using.
19. This product complies with ROHS, CE and FCC certification, please refer to the relevant national standards for use and operation.
20. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.
21. Some products have built-in lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
22. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.
23. One-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
24. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
25. Machine failures caused by non-standard operation are not covered by the warranty.

**keep these instructions!**

# Foreword

Thank you for purchasing a Godox product!

Introducing the brand new AT200Bi from Godox! Our latest innovation combines portability and practicality, featuring a large area soft lighting, wide CCT range, high brightness, and exceptional mobility. It is the ultimate lighting solution for any situation. Plus, with features such as stepless dimming, IP65 waterproof rating, and various wireless control options, you can take your lighting game to the next level. This versatile lighting solution is perfect for short video shoots, advertising, e-commerce livestreaming, commercial photography, and film and TV production.

## Main Features

- Wide CCT range adjustable from 2700K to 8500K.
- Four dimming curves: linear, s-curve, exponential, logarithmic.
- Stepless brightness adjustment from 0% to 100%.
- Various Controlling methods: DMX 512 controller/ APP control via Bluetooth/2.4GHz remote control.
- Protection grade of IP65 keeps the light head and controller from dust and water.
- 11 FX modes: flash, lightning, cloudy, broken bulb, TV, candle, fire, firework, explosion, welding, SOS.

## Warning


- ▲ Do not look directly at the LED light or illuminate at others' eyes.
- ▲ Do not plug or unplug the power cable or connecting cable when the power is turned on, otherwise personal injuries may occur.
- ▲ Do not cover the heat dissipation vent in working status.
- ▲ Keep out of reach of children.
- ▲ Please make sure to follow the instruction manual and correctly use this professional lighting device.

▲ During light body storage, do not fold or roll it up. Please detach the airbag and fold it along the center line for storage.

▲ The controller is not waterproof, please keep it dry in using.



## Name of Parts

### Light Body

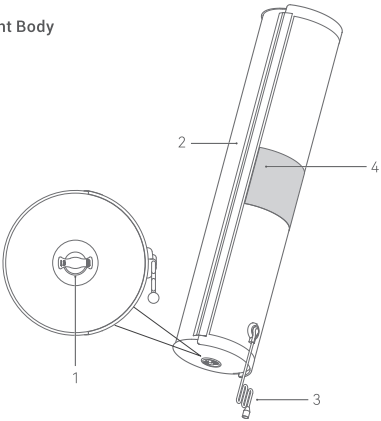


1. Air Intake Valve/Bleeder Valve
2. Airbag
3. Connection Cable
4. Velcro

### Controller

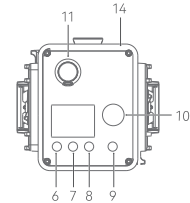
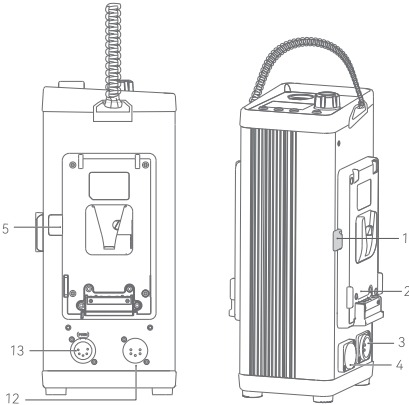


1. Black Battery Remove Button
2. V-mount Battery Holder
3. AC INPUT Port
4. DC 48V INPUT Port
5. Yellow Battery Remove Button
6. MODE Button
7. PRESET Button
8. MENU Button
9. Power Switch Button
10. SET Select Dial
11. DC OUTPUT Port
12. DMX IN XLR Port
13. DMX OUT XLR Port
14. Type-A Port

## Inflator

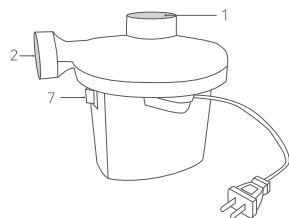


- |                     |                 |
|---------------------|-----------------|
| 1. Bleeder Valve    | 5. Nozzle3      |
| 2. Air Intake Valve | 6. Adapter      |
| 3. Nozzle1          | 7. Power Switch |
| 4. Nozzle2          |                 |

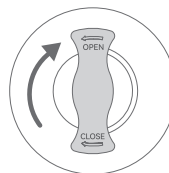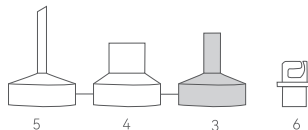


4. After inflation, pull out the adapter and inflator; turn the air intake valve clockwise to ensure air tightness; after tightening the air intake valve, turn the inflator power switch button to 'o' to end the inflation process.


## AT200Bi Inflation Guide

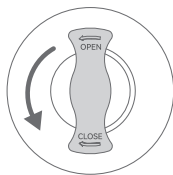


1. Rotate counterclockwise and open the air intake valve on the light body.

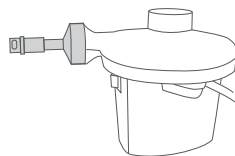

3. Insert the adapter into nozzle1.

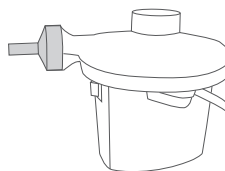


2. Insert the adapter into the air intake valve.

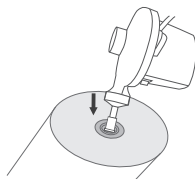


4. Insert the adapter into the air intake valve, turn on the inflator and press the "+" button to start inflating.


## AT200Bi Deflation Guide

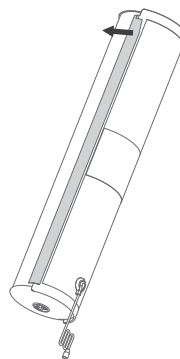


1. Detach the airbag along the velcro

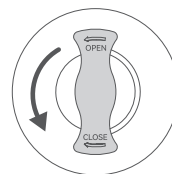


2. Rotate counterclockwise and open the air intake valve on the light body.

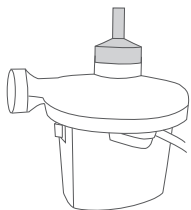


3. Insert nozzle1 into the bleeder valve of the inflator.

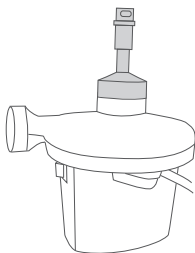

4. Insert the adapter into nozzle1 of the inflator.

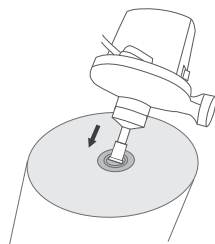


5. Insert the adapter into the bleeder valve of the light body, turn on the inflator and press the "+" button to start deflating.

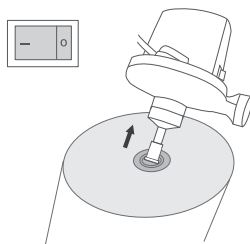


6. Once deflation is complete, turn the inflator off by pressing the "o" button, remove the adapter and the inflator.


## Mount the Light Body on the Light Stand

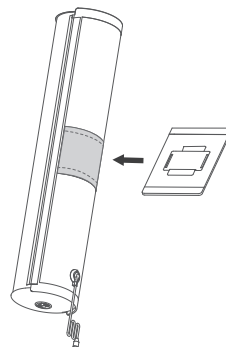

1. Stick the velcro hook fastener to the velcro loop on the light body.

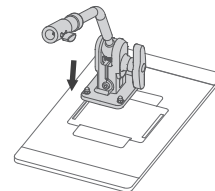


2. Align the connecting holder with the hook fastener slot and insert it, lifting it up afterwards. Align the bolt with the 1/4" screw hole and while pushing down, turn the bolt clockwise to tighten it.

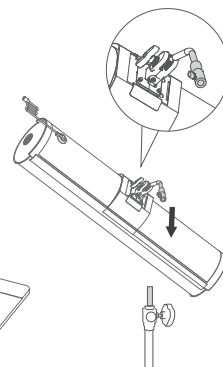


3. Insert the sleeve of the connecting holder into the tripod and turn the locking knob to complete the installation.

## Mount the Handle

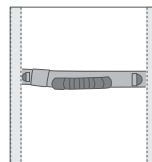

1. Attach the fabric handle vertically or horizontally to the velcro on the light body to use it for handheld light diffusion.


## Lift the Light Body

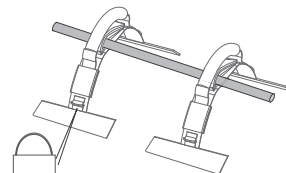


1. Attach the fabric handle vertically or horizontally to the velcro on the light body. The handle's hang loop can be used to lift the light body for various uses; alternatively, you can lift the lamp body onto the crossbar using the Velcro handle.

## Connect to DMX Controller


The connection operation diagram of DMX controller is as follows:

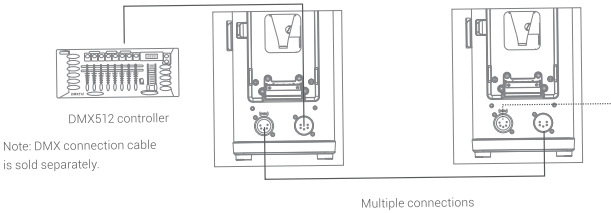

## What's Inside

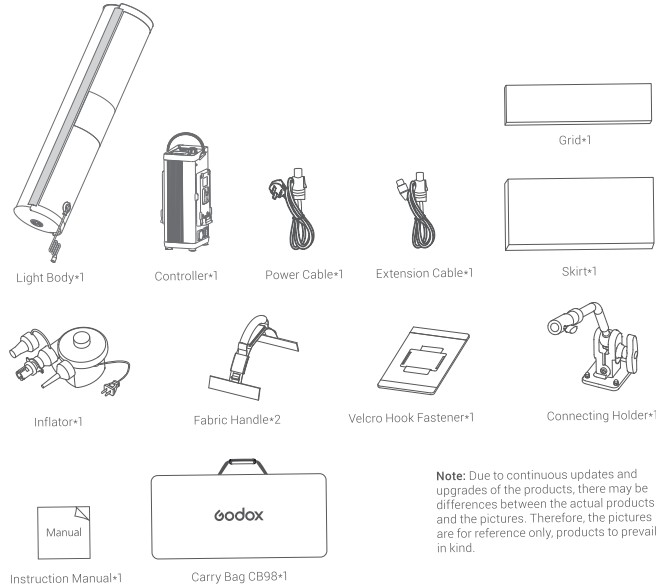


## Separately Sold Accessories

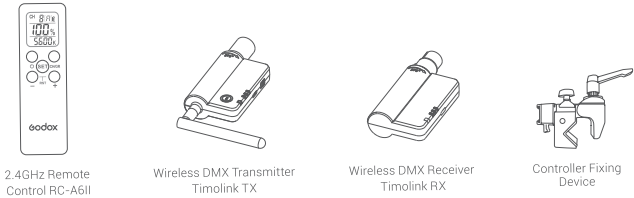


## Power Supply

### 1.AC Power Supply

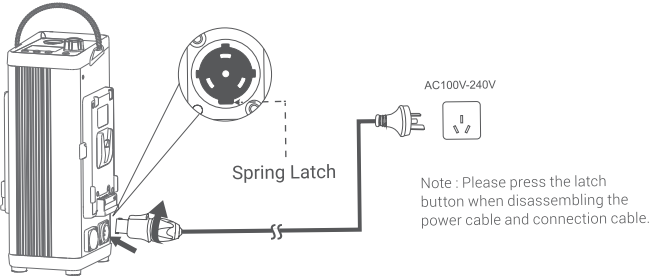

### 2.V-mount battery power supply


Note: The light can be supplied by 14.8V or 26V V-mount battery. Only the side with yellow battery removal button supports one-sided charging. When it is powered by two batteries and one battery is running low on power, the device still can't work normally even if the other one is fully charged. The corresponding battery icon will blink in low battery mode. It is recommended to check whether both batteries have sufficient power when using two batteries.

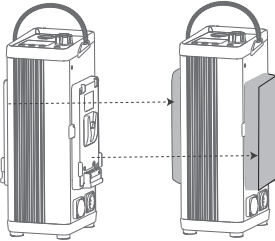

## Power Switch

Long press the power switch button on the controller after connecting to power source to turn the unit on or off.


Short pressing the power switch button in the power on state can reduce the brightness to 0%, short press again to restore the previous brightness.

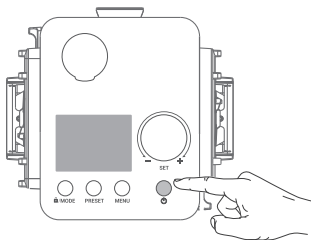

## CCT Mode

Short press the >/MODE button to switch to CCT mode, short press the select dial to toggle between brightness setting and CCT setting.

1. In the brightness setting interface, turn the select dial to adjust the brightness ratio from 0% to 100%. Turning the select dial clockwise once will increase the value by 1 unit, while turning it counterclockwise will decrease the value by 1 unit. Quick adjustment is also available by turning the select dial quickly.

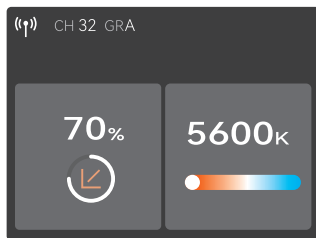


2. In the color temperature setting interface, turn the select dial to adjust the color temperature from 2700K to 8500K. Turning the select dial clockwise once will increase the value by 100 units, while turning it counterclockwise once will decrease the value by 100 units.

## FX Mode

Short press the >/MODE button to switch to FX mode, turn the select dial to select among the following 11 effects: flash, lightning, cloudy, broken bulb, TV, candle, fire, fireworks, explosion, welding, SOS.

Select the desired effect and short press the select dial to enter the effect setting interface, then short press the >/MODE button to return to previous interface.

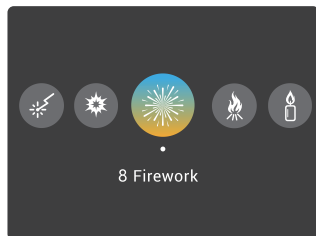


## 1. Flash Effect

In the flash effect setting interface, turn the select dial to select options among switch, dim, auto, manual, CCT, speed, mode, etc. Short press the select dial to select the desired option then rotate to adjust settings (except for the auto and manual options).

DIM: 0%-100%  
CCT: 2700K-8500K  
Speed: 1-100  
Mode: Camera Flash/Flash Bulb

Note: Select manual, then the flash effect can be triggered once by short pressing the select dial once.

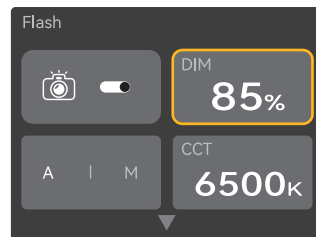


## 2. Lightning Effect

In the lightning effect setting interface, turn the select dial to select options among switch, dim, auto, manual, CCT, times, frequency, etc. Short press the select dial to select the desired option then rotate to adjust settings (except for the auto and manual options).

DIM: 0%-100%  
CCT: 2700K-8500K  
Times: Random/1-10  
Frequency: Random/2-20


Note: Select manual, then the lightning effect can be triggered once by short pressing the select dial once.

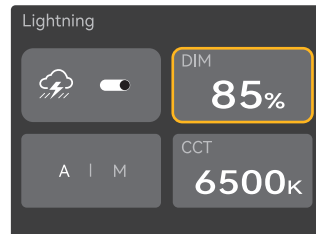

## 3. Cloudy Effect

In the cloudy effect setting interface, turn the select dial to select options among switch, dim, ratio, speed, etc. Short press the select dial to select the desired option then rotate to adjust settings.

DIM: 0%-100%  
Ratio: 30%-90%  
Speed: Random/1-100

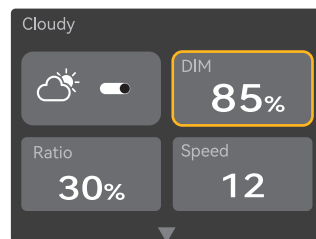


#### 4. Broken Bulb Effect

In the broken bulb effect setting interface, turn the select dial to select options among switch, dim, speed, CCT, etc. Short press the select dial to select the desired option then rotate to adjust settings.

DIM: 0%-100%

Speed: 1-100

CCT: 2700K-8500K

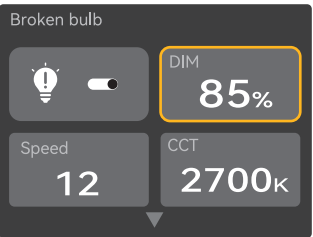


#### 5. TV Effect

In the TV effect setting interface, turn the select dial to select options among switch, dim, speed, etc. Short press the select dial to select the desired option then rotate to adjust settings.

DIM: 0%-100%

Speed: 1-100

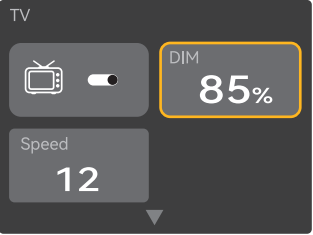


#### 6. Candle Effect

In the candle effect setting interface, turn the select dial to select options among switch, dim, speed, etc. Short press the select dial to select the desired option then rotate to adjust settings.

DIM: 0%-100%

Speed: 1-100

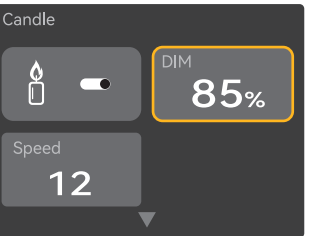


#### 7. Fire Effect

In the fire effect setting interface, turn the select dial to select options among switch, dim, speed, etc. Short press the select dial to select the desired option then rotate to adjust settings.

DIM: 0%-100%

Speed: 1-100

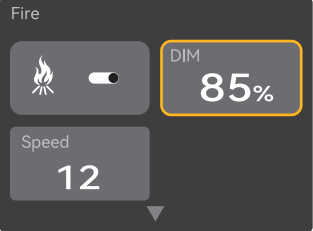


#### 8. Firework Effect

In the firework effect setting interface, turn the select dial to select options among switch, dim, speed, embers, etc. Short press the select dial to select the desired option then rotate to adjust settings.

DIM: 0%-100%

Speed: 1-100

Embers: 1-100

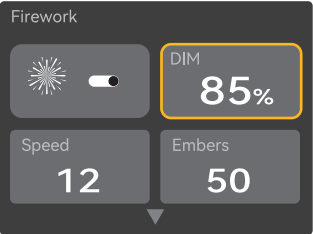

#### 9. Explosion Effect


In the explosion effect setting interface, turn the select dial to select options among switch, dim, auto, manual, CCT, speed, embers, etc. Short press the select dial to select the desired option then rotate to adjust settings (except for the auto and manual options).

DIM: 0%-100%

CCT: 2700K-8500K

Speed: 1-100

Embers: 1-100

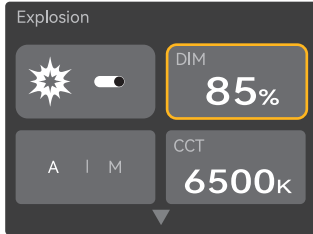


Note: Select manual, then the explosion effect can be triggered once by short pressing the select dial once.

### 10. Welding Effect

In the welding effect setting interface, turn the select dial to select options among switch, dim, speed, CCT, etc. Short press the select dial to select the desired option then rotate to adjust settings.


DIM: 0%-100%  
Speed: 1-100  
CCT: 2700K-8500K

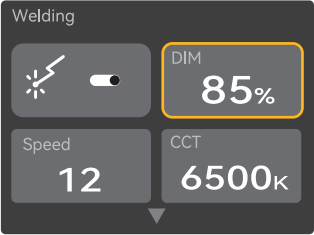

### 11. SOS Effect


In the SOS effect seting interface, turn the select dial to select options among switch, dim, CCT, etc. Short press the select dial to select the desired option then rotate to adjust settings.

DIM: 0%-100%  
CCT: 2700K-8500K  
Note: The dimming curve is linear by default in FX mode.

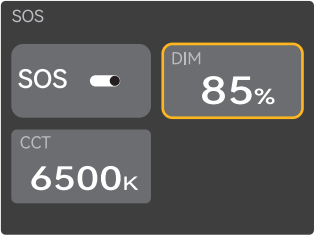


### Menu Settings

Short press the MENU button to enter menu settings, turn the select dial to select among the following options: DMX, Bluetooth, wireless, dimming curves, quick boot, display, language, upgrade, factory default, fixture info.

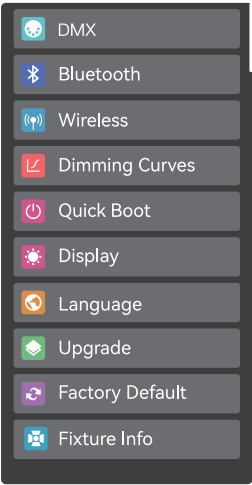

#### 1. DMX

Short press the select dial to enter DMX setting interface. Turn the select dial to select options among address, DMX mode, extend DMX, DMX lost, RDM state. Short press the select dial to select the desired option then rotate to adjust settings. Finally, short press the MENU button to return to the previous menu.

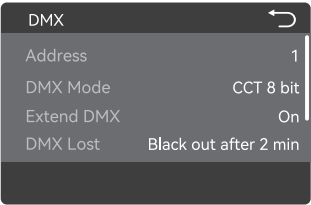

Level 1 Option	Level 2 Option	Description
Address	1-512	Initial address
DMX Mode	CCT 8 bit	CCT 8 bit
	FX 8 bit	FX 8 bit
	ULTIMATE 8 bit	ULTIMATE 8 bit
Extend DMX	On	Turn on extend DMX channels
	Off	Turn off extend DMX channels
DMX Lost	Hold Last Command	After the DMX control signal is lost, continue to use the last received DMX control signal until power down or a valid DMX control signal is received again.
	Black Out	The light is off immediately.
	Black Out After 2 Min	After the DMX control signal is lost, continue to use the last received DMX control signal for 2 minutes then black out. Note: If a valid DMX control signal is received within 2 minutes, then use the new DMX control signal.
RDM Status	On	Turn on RDM
	Off	Turn off RDM

DMX Practical Table

CCT 8Bit Mode						
DMX Channel	Function	Parameters	DMX Value 8 Bit		Practical Parameters Values 8Bit	
			Initial Value	Ending Value	Initial Value	Ending Value
1	CCT	DIM	0	255	0.0%	100.0%
2		CCT	0	255	2700K	8500K

FX 8Bit Mode						
DMX Channel	Function	Parameters	DMX Value 8 Bit		Practical Parameters Values 8Bit	
1	FX Type	DIM	0	255	0.0%	100.0%
			0	9	Off	
			10	19	Flash	
			20	29	Lightning	
			30	39	Cloudy	
			40	49	Broken Bulb	
			50	59	TV	
			60	69	Candle	
			70	79	Fire	
			80	89	Firework	
			90	99	Explosion	
			100	109	Welding	
			110	119	SOS	
			120	255	Preset	
3	Flash	CCT	0	255	2700K	8500K
4		Speed	0	255	1	100
5		Mode	0	255	0 Camera Flash	1 Flash Bulb
3	Lightning	CCT	0	255	2700K	8500K
4		Times	0	255	0(random)	10
5		Frequency	0	255	0(random)	20
3	Cloudy	DIM Ratio	0	255	30%	90%
4		Speed	0	255	0(random)	100
3	Broken Bulb	CCT	0	255	2700K	8500K
4		Speed	0	255	1	100
3	TV	Speed	0	255	1	100
3		Speed	0	255	1	100
3	Candle	Speed	0	255	1	100
3		Speed	0	255	1	100
3	Firework	Speed	0	255	1	100
4		Embers	0	255	1	100
3		CCT	0	255	2700K	8500K
4	Explosion	Speed	0	255	1	100
5		Embers	0	255	1	100
3		CCT	0	255	2700K	8500K
4	Welding	Speed	0	255	1	100
3		CCT	0	255	2700K	8500K

ULTIMATE 8Bit Mode						
DMX Channel	Function	Parameters	DMX Value 8 Bit		Practical Parameters Values 8Bit	
1		DIM	0	255	0.0%	100.0%
2		Mode Selection	0	9	CCT Mode	
			10	19	FX Mode	
			20	255	Preset	
3		Color Parameter 1				

CCT Parameter in ULTIMATE 8Bit Mode						
DMX Channel	Function	Parameters	DMX Value 8 Bit		Practical Parameters Values 8Bit	
3	CCT	CCT	0	255	2700K	8500K

FX Parameter in ULTIMATE 8Bit Mode						
DMX Channel	Function	Parameters	DMX Value 8 Bit		Practical Parameters Values 8Bit	
3	FX	FX Type	0	9	Off	
			10	19	Flash	
			20	29	Lightning	
			30	39	Cloudy	
			40	49	Broken Bulb	
			50	59	TV	
			60	69	Candle	
			70	79	Fire	
			80	89	Firework	
			90	99	Explosion	
			100	109	Welding	
			110	119	SOS	
			120	255	Preset	
4	Flash	CCT	0	255	2700K	8500K
5		Speed	0	255	1	100
6		Mode	0	255	0 Camera Flash	1 Flash Bulb
4	Lightning	CCT	0	255	2700K	8500K
5		Times	0	255	0(random)	10
6		Frequency	0	255	0(random)	20
4	Cloudy	DIM Ratio	0	255	30%	90%
5		Speed	0	255	0(random)	100
4	Broken Bulb	CCT	0	255	2700K	8500K
5		Speed	0	255	1	100
4	TV	Speed	0	255	1	100
4	Candle	Speed	0	255	1	100
5	Firework	Speed	0	255	1	100
5		Embers	0	255	1	100
4		CCT	0	255	2700K	8500K
5	Explosion	Speed	0	255	1	100
6		Embers	0	255	1	100
4		CCT	0	255	2700K	8500K
5	Welding	Speed	0	255	1	100
4		CCT	0	255	2700K	8500K

## 2. Bluetooth


Short press the select dial to enter Bluetooth setting interface. Turn the select dial to select options between switch and reset. Short press the select dial to select the desired option then rotate to adjust settings. Finally, short press the MENU button to return to the previous menu.

Bluetooth MAC Code is on the left bottom of the display for searching the fixture via Bluetooth.

Scan the QR code to download the "Godox Light" smartphone APP (Available for both Android and iOS systems).

### Note:

1. The APP can be used directly on the firstly installed device (smartphone or iPad). When change to other mobile device (smartphone or iPad), the light shall be reset before the normal connection of APP.
2. The APP should be upgraded to version 3.0 or above.

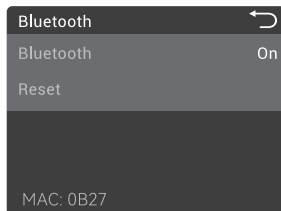

## 3. Wireless


Short press the select dial to enter wireless setting interface. Turn the select dial to select options among switch, GR, CH, ID. Short press the select dial to select the desired option then rotate to adjust settings. Finally, short press the MENU button to return to the previous menu.

Wireless: Turn on/off 2.4G wireless

GR: 0-9/A-F

CH: 01-32


ID: 0FF/01-99

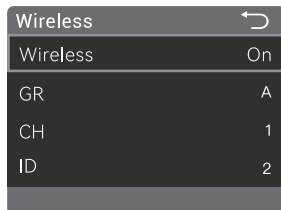

Note: When using the remote control RC-A6II (sold separately) or remote control RC-R9II (sold separately), the group, channel and ID of the remote control and AT200Bi should be the same.

## 4. Dimming Curves


Short press the select dial to enter dimming curves setting interface. Turn the select dial to choose among linear, s-curve, exponential and logarithmic. Finally, short press the select dial/MENU button to return to the previous menu.

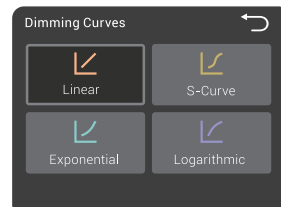

## 5. Quick Boot


Short press the select dial to enter quick boot setting interface. Turn the select dial to turn on or off the quick boot function. Finally, short press the select dial/MENU button to return to the previous menu.

Note: The controller will turn on automatically after connecting to power source and the quick boot function is turned on.

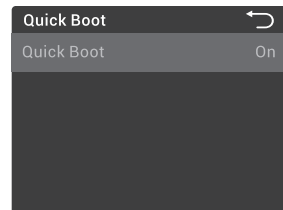

## 6. Display

Short press the select dial to enter display setting interface. Turn the select dial to adjust display brightness from 20% to 100%. Finally, short press the MENU button to return to the previous menu.

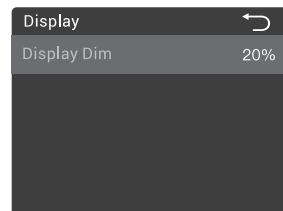

## 7. Language

Short press the select dial to enter language setting interface. Turn the select dial to select between Chinese and English. Finally, short press the MENU button to return to the previous menu.



## 8. Upgrade

Short press the select dial to enter upgrade setting interface to check the firmware version and upgrade instruction. Then, short press the MENU button to return to the previous menu.



Firmware Upgrade


- 1. Download the new firmware to the U disk from official website <https://www.godox.com/firmware-continuous-light>.
- 2. Turn off the device. Insert the U disk with new firmware into the Type-A USB port.
- 3. Turn on the device, and it will automatically enter the upgrading interface.
- 4. It will return to main interface after completion.

Notes:

- 1. New firmware must be downloaded from the official website, and keep only one BIN file in the root directory of the USB disk.
- 2. The Type-A USB port can only support output voltage and current of 5V/1A. Do not connect to over-rated USB device.


9. Factory Default

Short press the select dial to enter factory default setting interface. Turn the select dial to select apply or cancel. It will return to language setting interface after reset.

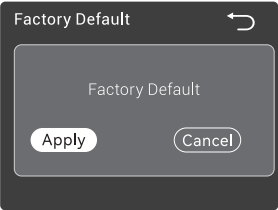



10. Fixture Info

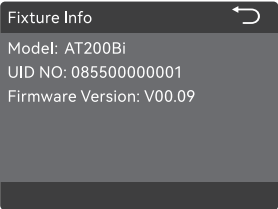
Short press the select dial to enter fixture info setting interface to check model, UID NO. and firmware version. Then, short press the MENU button to return to the previous menu.



Lock Setting

Short press the  /MODE button, the panel is locked when  is displayed on the panel, short press again to unlock.


Note: The locking function only works on the controller panel, other operations are still available.

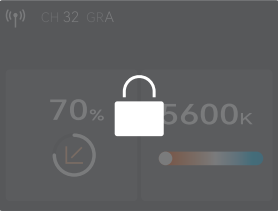

Preset Setting

Short press the PRESET button to enter preset effects interface. Turn the select dial to choose and enter preset effects 1-10, then short press to choose save or cancel. Then, short press the select dial to return to the previous menu and short press the PRESET button to exit.

Note: It will not display any option for certain group that have not been preset any effect.

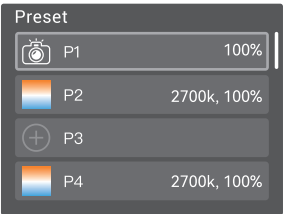

Maintenance

This product, except consumables, is supported with a one-year warranty. Unauthorized service will void the warranty. Maintenance of the light must be performed by our authorized maintenance department which can provide original accessories. Changes made to the specifications or designs may not be reflected in this manual.

Illuminance Data

CCT	Unit	1m	2m	3m
2800K	lux	≈1720	≈549	≈267
	fc	≈160	≈51	≈24.8
3200K	lux	≈1860	≈599	≈290
	fc	≈173	≈55.6	≈27
4300K	lux	≈2160	≈692	≈343
	fc	≈200	≈64.3	≈31.9
5600K	lux	≈2230	≈712	≈353
	fc	≈207	≈66.2	≈32.8
6500K	lux	≈2210	≈704	≈349
	fc	≈205	≈65.4	≈32.4
7500K	lux	≈2150	≈685	≈339
	fc	≈200	≈63.6	≈31.5
8500K	lux	≈2050	≈654	≈325
	fc	≈191	≈60.7	≈30.2

The data above are averages, not absolutes. All the above tests are based on the condition of 100% brightness.

## Technical Data

<b>Model</b>	AT200Bi
<b>Power Supply</b>	100V-240V-50/60Hz 2.1A
<b>Max. Power</b>	≈210W
<b>CCT</b>	2700-8500K
<b>Brightness Range</b>	0%-100%
<b>Dimming Curves</b>	linear, s-curve, exponential, logarithmic
<b>FX Modes</b>	11
<b>CRI</b>	Average ≥96
<b>TLCI</b>	Average ≥96
<b>Waterproof Grade of Light Body</b>	IP65
<b>Controlling Methods</b>	DMX 512 Control (support RDM protocol) /2.4GHz Wireless Control/ Bluetooth APP Control
<b>Bluetooth Controlling Distance</b>	Max.30m
<b>2.4G Remote Control Distance</b>	Max.60m
<b>Type-A USB Port</b>	Firmware Upgrade/5V=1A Power Supply
<b>Dimension</b>	Light Body: 280mm*267mm*1226mm/11"*11"*48"(With air bag and in the inflated state, does not include the connection cable.) Controller: 124mm*132mm*270mm/4.8"*5"*10.6"
<b>Netweight</b> ※	Light Body: 2.15kg(Including airbag) Controller: 2.8kg

Specifications and data may subject to changes without notice.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

## Warning

Operating frequency:2412.99MHz – 2464.49MHz(2.4G only receive)/2402MHz – 2480MHz (BT)  
Maximum EIRP Power: 5dBm

## Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:

**<https://www.godox.com/eu-declaration-of-conformity/>**

The device complies with RF specifications when the device used at 0mm from your body.

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① **The product or accessory has expired its warranty period;** ② **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③ **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④ **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤ **No valid warranty card;** ⑥ **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦ **Breakage or damage caused by force majeure or accident;** ⑧ **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Lamp body,lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)