

料 号	705-LDP18B-00
项 目	LDP18D/LDP18Bi说明书
成品尺寸	100*140mm
公 差	±1mm
材 质	105g哑粉纸, 骑马钉装订

工 艺

颜色要求	单色印刷
------	------

其 他

设计师	张云龙	文案	吴水宁
-----	-----	----	-----

重要: PDF 文件仅供预览, 实际印刷请使用 AI 转曲文档
(或 Cdr 转曲文档)


	刀模线	>	标示线刀模线 请勿印刷!
	标示线		

印刷要求:

色相正确, 印迹牢固、套印准确、各色套印不露杂色,
套印误差≤1mm, 模切走位≤±1mm

合格证
QC PASS

Godox

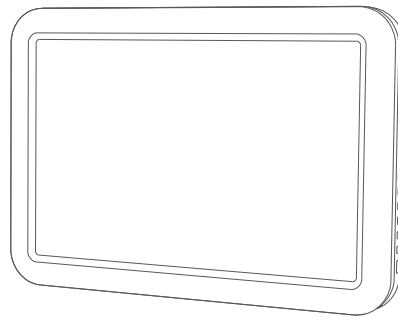

Wechat
Official Account
神牛微信公众号

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋 电话: 0755-29609320(8062)

传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co.,Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District,
Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423

E-mail: godox@godox.com

godox.com

Made in China I 705-LDP18B-00



LDP18 D
LDP18 B

LED摄影灯
LED Video Light

使用手册
Instruction Manual

重要的安全说明及注意事项

首先作为最基本原则：本产品为专业灯光布景设备，应由专业灯光师使用或在专业人士指导下使用。使用时必须始终遵循基本的安全预防措施，具体安全预防措施如下：

1. 使用前必须阅读并理解产品说明书。
2. 专业灯具，禁止儿童使用。当儿童靠近时，家长或监护人必须密切监督，以免儿童因碰撞灯具或私用灯具造成人身伤害。
3. 本灯具并非普通照明灯具，不可用于普通照明，任何有过眼部损伤或眼部敏感的人群均应避免使用本灯具。
4. 灯具点亮时，必须小心使用，禁止接触高温部件，如LED灯珠，以免造成灼伤。
5. 灯具点亮时，任何情况下均禁止直视灯珠。应该在专业灯光师指导下使用强光，任何情况下避免长时间处于强光环境，如引起眼睛不适，请及时关闭灯具，暂停使用，请及时就医。
6. 倘灯珠损坏或因热变形，应停止使用，并及时联系制造商、服务代理商或合格的维修人员更换灯珠，以免发生意外。
7. 本产品仅适用于-10℃～40℃工作环境温度及正常湿度环境下使用。
8. 请勿使用损坏的设备或设备配件，待专业维修人员检查维修，确认设备正常方可使用。
9. 在使用过程中，如果本产品由于跌落、受到挤压或遭受强烈冲击而造成外壳破裂的，请勿继续使用，以免因接触到内部电子元件而受到电击伤害。
10. 如需要延长线，请使用额定电流≥该设备额定电流的延长线。如延长线额定电流小于该设备，可能导致过热。
11. 部分产品电源线较长，请合理放置电源线，使其处于安全位置。避免电源线接触过热物体表面、避免放置不当导致拉扯损坏或绊倒现场人员。请使用本厂原装电源线，如使用非本厂电源线导致产品损坏，概不在本厂维修范围内。
12. 在清洁和维修之前，请务必从电源插座上拔下该设备插头。不使用时，禁止拉扯电源线以将设备插头从电源插座中拔出。正常断电，应是用手抓住该设备插头两端，将插头从电源插座中拔出。此设备需连接到接地插座中。
13. 本设备没有防水性能，请让设备保持干燥，请勿将本设备浸入水中或其他液体中。设备需安装在干燥且通风处，避免在雨天、潮湿、多尘或过热环境下使用。请勿将任何物体置于灯具上或使液体流入灯具内部，以免发生意外。
14. 请勿私自拆卸产品，如产品出现故障，须由本公司或授权的维修人员进行检查维修。
15. 存放本设备之前，请确保设备已完全冷却。存放时，将电源线从设备上拔出。设备应放置于设备便携包内或通风干燥处。
16. 请勿将设备放置在酒精、汽油等易燃易爆挥发的溶剂附近。
17. 本厂不推荐的产品附件，请勿使用，以免导致火灾、触电或人身伤害。
18. 清洁本设备时，请勿用湿布擦拭，请用干布，软布擦拭设备污垢。
19. 设备使用前，请注意将保护罩取下。
20. 本产品已通过ROHS, CE和FCC认证，请参考相关国家标准使用和操作。
21. 安全说明依据本厂严格测试制定，设备设计和规格如有变更，恕不另行通知。客户可以上神牛官网查看最新的电子版说明，了解产品最新资讯。

22. 部分产品内置锂电池。此类产品请使用专用的充电器进行充电，并且按正确的操作说明，在规定的电压、温度范围内使用。
23. 部分产品使用电池供电。此类产品请勿使用说明书中未指定的任何电池、电源或附件。请将电池和其他附件置于儿童及婴幼儿无法触及之处。如果儿童或婴幼儿吞下电池或附件，请立刻就医。如果电池漏液、变色、变形、冒烟或发出异味，请立刻将其取出。在取出过程中请小心，以免烫伤。如果继续使用，可能会引起火灾、触电或皮肤烫伤。请勿使用任何变形或改造过的电池。请勿拆卸或改造本产品或电池。请勿加热电池或焊接电池。请勿让电池与火或水接触。请勿让电池受到强烈的外力撞击。请勿将电池的正负端错误插入，或将新旧电池或不同类型的电池混合使用。
24. 一年保修期，消耗品电池、适配器、电源线等配件不在此保修范围内。
25. 经发现，擅自检修设备，将取消一年保修期，维修需要收取相关费用。
26. 对于不规范操作引起的机器故障不在保修范围内。

保存这些说明

前言

感谢您购买神牛产品。

LED 摄影灯 LDP18D/LDP18Bi 可装相机顶部，为视频拍摄提供柔和光线，拥有 FX 场景光效、亮度可调等诸多特性；适用于微距拍摄、婚庆拍摄、静物拍摄、采访补光以及视频拍摄等拍摄场景。

主要特点


- 支持 DC 供电 /NP-F 型电池供电
- 输出光源稳定,可在 0%-100% 间精确调节
- LDP18Bi 色温可调, 调节范围：2800K~6500K
- LDP18D 配备 22 种 FX 光效,LDP18Bi 配备 31 种 FX 光效

警告

- ▲ 请勿直视光源。
- ▲ 本灯具仅供专业使用。
- ▲ 请勿让儿童接触本产品。
- ▲ 请勿放置在超过 40℃ 的高温环境中。
- ▲ 请勿将光源对准人的眼睛，以免造成伤害。
- ▲ 请使用本厂原装电源线，因使用非本厂电源线导致产品损坏，概不在本厂维修范围内。
- ▲ 本产品不能防水，请保持干燥，请勿用湿手接触产品，亦不可将产品浸入水中或暴露于雨中。
- ▲ 请勿在化学品、可燃性气体或其他特殊物质附近使用 LED 灯。
- ▲ 本灯具光源仅可由制造商、其服务代理商或相关合格人员更换。

部件名称

灯体

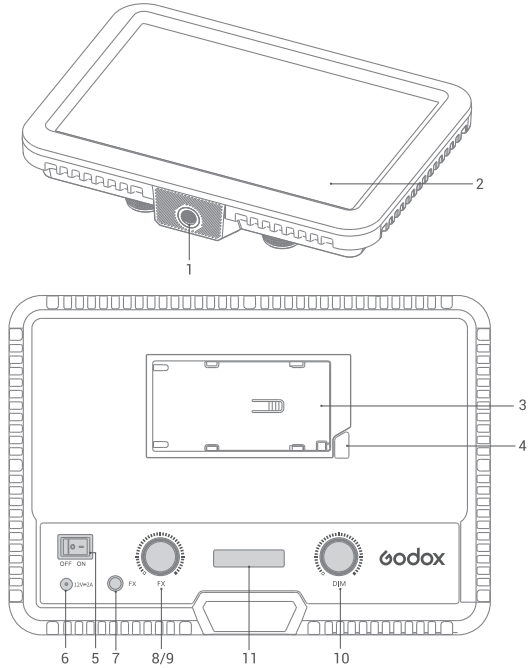

显示屏

LDP18D



色温模式界面



FX 光效模式界面

LDP18Bi



色温模式界面



FX 光效模式界面

物料清单 (LDP18D/LDP18Bi)



灯体*1



固定冷靴支架*1




适配器*1



说明书*1

温馨提示：说明书线图均为示意图，仅供参考。由于产品不断更新与升级，产品实物与线图可能存在差异，请以实物为准。

供电

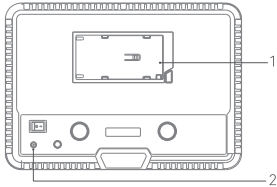

1. NPF型电池供电
可插入一节NPF型电池



2. DC供电
适配器输入12V±2A

1. 1/4 "螺丝孔
2. 不可拆卸柔光板
3. NPF型电池槽
4. 拆卸装置
5. 开关按钮
6. DC输入接口
7. FX按钮
8. CCT/FX旋钮 (LDP18Bi)
9. FX按钮(LDP18D)
10. DIM旋钮
11. 显示屏


操作说明

开机/关机

通过DC适配器连接交流电源，拨动开关按键，实现开机或关机。

亮度调节(LDP18D/LDP18Bi)

旋转DIM旋钮即可调节亮度百分比，正常左旋1次减少1个单元值，正常右旋1次增加1个单元值，调节范围为0%-100%；支持快调。

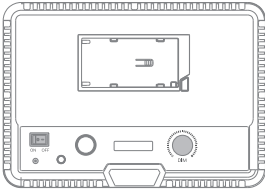

色温模式 (LDP18D)

短按FX按键切换至色温模式，色温值不可调节，显示为5600K。



色温模式 (LDP18Bi)

短按FX按键切换至色温模式，旋转CCT/FX旋钮进行色温调节，正常左旋1次减少100个单元值，正常右旋1次增加100个单元值，调节范围为2800K-6500K；支持快调。



FX场景光效模式 (LDP18D)

短按FX按键切换至FX场景光效模式，旋转FX旋钮可切换光效类型，共有8类22种光效；长按FX按键可切换光效档位，支持循环切换。

序号	显示	场景	档位I	档位II	档位III
1		闪光灯	闪光	发布会	狗仔队
2		雷闪电	间歇	频繁	持续
3		多云	晴天缓慢转阴天	晴天快速转阴天	晴天迅速转阴天
4		坏灯泡	间歇	频繁	持续
5		电视机	慢速	中速	快速
6		爆炸	间歇	频繁	持续
7		焊接	慢闪	快闪	频闪
8		SOS			

FX场景光效模式 (LDP18Bi)

短按FX按键切换至FX场景光效模式，旋转CCT/FX旋钮可切换光效类型，共有11类31种光效；长按FX按键可切换光效档位，支持循环切换。

序号	显示	场景	档位I	档位II	档位III
1		闪光灯	闪光	发布会	狗仔队
2		雷闪电	间歇	频繁	持续
3		多云	晴天缓慢转阴天	晴天快速转阴天	晴天迅速转阴天
4		坏灯泡	间歇	频繁	持续
5		电视机	慢速	中速	快速
6		蜡烛	间歇	频繁	持续
7		火	柴火	篝火	火灾
8		烟花	短暂	连续	演出
9		爆炸	间歇	频繁	持续
10		焊接	慢闪	快闪	频闪
11		SOS			

照度数据

LDP18D

色温	照度单位	0.5m
5600K	lux	1700
	fc	163

LDP18Bi

色温	照度单位	0.5m
3200K	lux	1900
	fc	176
5600K	lux	2100
	fc	196
6500K	lux	2000
	fc	193

上述数据为平均值，非绝对值，以上测试旨在灯体100%亮度下进行。

规格参数

型号	LDP18D	LDP18Bi
DC供电	12V=2A	
供电方式	DC供电/NPF型电池供电 (NPF型电池需另购)	
亮度	0%-100%	
CRI	平均≥95	平均≥96
TLCI	平均≥95	平均≥97
色温	5600K	2800~6500K
工作环境温度	-10℃~40℃	
灯体尺寸	210mm*149mm*31mm	
净重≈	363g	

规格和参数如有变更，恕不另行通知。

Safety Instructions and Attentions

First of all, as the most basic principle: This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:

1. Before use, please read and understand these instructions and attentions.
2. Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
3. This lighting product is not ordinary lighting product and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
4. When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If eye discomfort, please turn off the lamp in time, suspend use, and see a doctor immediately.
6. If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
7. This product is only suitable for use in -10℃ to 40℃ operating environment and normal humidity environment.
8. Do not use damaged equipment or accessories, and wait for professional maintenance personnel to check and repair to confirm being normal before use.
9. During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.
11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be repaired by our factory.
12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet.
13. This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the lamp or let liquid flow into the lamp to avoid accidents.
14. Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.
15. Before storing, make sure that the equipment has cooled down completely. For storage,

unplug the power cord from the equipment. The equipment should be placed in the carrying case or in a ventilated dry place.

16. Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
17. Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
18. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
19. Please take off the protective cover before using.
20. This product complies with ROHS, CE, KC, PSE and FCC certification, please refer to the relevant national standards for use and operation.
21. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.
22. Some products have built-in lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
23. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.
24. One-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
25. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
26. Machine failures caused by non-standard operation are not covered by the warranty.

keep these instructions!

Foreword

Thank you for purchasing!

LED Video Light LDP18D/LDP18Bi is mountable on the top of a camera to provide soft lighting for photography. With features such as various FX modes and adjustable brightness, they are quite suitable for macro photography, wedding photography, still life photography, interview fill lighting, etc.

Main Features


- Support DC power supply/NP-F battery power supply.
- Stable output with 0% to 100% brightness range.
- The CCT of LDP18Bi is adjustable from 2800K to 6500K.
- LDP18D is incorporated with 22 FX modes, while LDP18Bi is incorporated with 31 FX modes.

Warning

- ▲ Do not look directly at the lighting source.
- ▲ This device is for professional use only.
- ▲ Do not leave or store the product if the ambient temperature reads over 40°C.
- ▲ Do not aim the light at anyone's eyes. Otherwise, visual impairment may occur.
- ▲ Please use our original power cable, product damages result from using of other power cables are not covered in the warranty.
- ▲ This appliance is not waterproof device. Keep it dry, do not immerse this appliance in water or other liquids. Do not use this appliance in rainy, humid, dusty in overheated environments.
- ▲ Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials.
- ▲ The lighting source of this device may only be replaced by the manufacturer, its service agent or relevant qualified personnel.

Name of Parts

Light Body

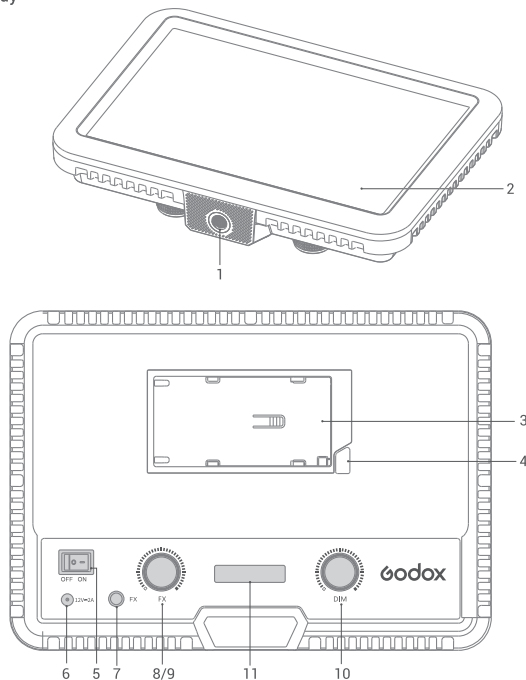

1. 1/4" Screw Hole
2. Non-detachable Diffuser
3. NPF Battery Slot
4. Detaching Device
5. Power Switch Button
6. DC Input Port
7. FX Button
8. CCT/FX Button (LDP18Bi)
9. FX Button (LDP18D)
10. DIM Dial
11. Display

Display

LDP18D



CCT Mode



FX Mode

LDP18Bi



CCT Mode



FX Mode

What's Inside (LDP18D/LDP18Bi)



Light Body*1



Coldshoe Mount*1




Adapter*1



Instruction Manual*1

Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

Power Supply

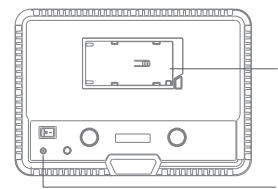

1. NPF Battery Power Supply
One NPF Battery Installable



2. DC Power Supply
Adapter Input: 12V=2A


Operation Instruction

Power Switch

Connect the device to AC power supply with DC adapter, toggle the power switch to turn on or off the device.

Brightness Adjustment (LDP18D/LDP18Bi)

Rotate the DIM dial to adjust the brightness from 0% to 100%. Rotate it leftward once to decrease the brightness value by 1 unit, while rotate rightward once to increase the brightness value by 1 unit, and fast adjustment is also available by rotating quickly.

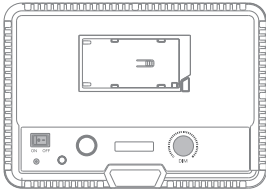

CCT Mode (LDP18D)

Short press the FX button to CCT mode, the color temperature value is unadjustable and remained as 5600K.



CCT Mode (LDP18Bi)

Short press the FX button to CCT mode, the color temperature value is adjustable from 2800K to 6500K by rotating the CCT/FX dial. Rotate the CCT/FX dial leftward once to decrease the color temperature value by 100 units, while rotate rightward once to increase by 100 units, and fast adjustment is also available by rotating quickly.



FX Mode (LDP18D)

Short press the FX button to FX mode, rotate the FX dial to switch effects among 22 kinds within 8 types, long press the FX button to switch FX levels in recycle.

No.	Icon	Scene	Level I	Level II	Level III
1		Flash	Flash	Press conference	Paparazzi
2		Lightning	Discontinuous	Frequent	Sustainable
3		Cloudy	Sunny to cloudy slowly	Sunny to cloudy quickly	Sunny to cloudy promptly
4		Broken bulb	Discontinuous	Frequent	Sustainable
5		TV	Slow speed	Medium speed	Quick speed
6		Explosion	Discontinuous	Frequent	Sustainable
7		Welding	Slow flash	Quick flash	Strobe flash
8		SOS			

FX Mode (LDP18Bi)

Short press the FX button to FX mode, rotate the FX dial to switch effects among 31 kinds within 11 types, long press the FX button to switch FX levels in recycle.

No.	Icon	Scene	Level I	Level II	Level III
1		Flash	Flash	Press conference	Paparazzi
2		Lightning	Discontinuous	Frequent	Sustainable
3		Cloudy	Sunny to cloudy slowly	Sunny to cloudy quickly	Sunny to cloudy promptly
4		Broken bulb	Discontinuous	Frequent	Sustainable
5		TV	Slow speed	Medium speed	Quick speed
6		Candle	Discontinuous	Frequent	Sustainable
7		Fire	Firewood	Campfire	Fire hazard
8		Firework	Brief	Continuous	Show
9		Explosion	Discontinuous	Frequent	Sustainable
10		Welding	Slow flash	Quick flash	Strobe flash
11		SOS			

Illuminance data

LDP18D

CCT	Unit	0.5m
5600K	lux	1700
	fc	163

LDP18Bi

CCT	Unit	0.5m
3200K	lux	1900
	fc	176
5600K	lux	2100
	fc	196
6500K	lux	2000
	fc	193

The above data are average values instead of absolute values. All the above tests are based on the condition of 100% brightness.

Technical Data

Model	LDP18D	LDP18Bi
DC Inputs	12V≈2A	
Power Supply	DC power supply/NPF battery power supply (NPF battery is sold separately)	
Brightness	0%~100%	
CRI	average ≥95	average ≥96
TLCI	average ≥95	average ≥97
Temperature CCT	5600K	2800-6500K
Working Environment	-10℃~40℃	
Dimension	210mm*149mm*31mm	
Net Weight≈	363g	

Specifications and data may subject to changes without notice.

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive2014/35/EU,2014/30/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link:

https://www.godox.com/DOC/Godox_LDP18D_LDP18Bi_DOC.pdf.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品, 其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您应提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况, 本文件项下的保证和服务将不适用: ①产品或部件超过相应保修期; ②错误或不适当使用、维护或 保管导致的故障或损坏, 如: 不当搬运; 非按产品合理预期用途使用; 不当插拔外接设备; 跌落或外力挤压; 接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境; ③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ④产品或部件原有识别信息被修改变更或删除; ⑤无有效保修卡; ⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏; ⑦因不可抗力或意外事件造成的故障或损坏; ⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况, 您应向相关责任方寻求解决, 神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的, 不是保修范围内的故障。产品使用过程中正常的脱色, 磨损和消耗, 不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选件名称	保修期(月)	保修服务类型
部件	主机	12	客户送修
	电池	3	客户送修
	充电器等带电性能的部件。	12	客户送修
其他	如电源线、同步线闪光灯、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ❶ **The product or accessory has expired its warranty period;** ❷ **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ❸ **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ❹ **The original identifying information of product or accessory is modified, alternated, or removed;** ❺ **No valid warranty card;** ❻ **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ❼ **Breakage or damage caused by force majeure or accident;** ❽ **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, power cord, sync cable,modeling lamp,lamp body, lamp cover,lockingdevice, package, etc.	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)