



AD3

Plug-On Transmitter

User guide for the AD3 Axient Digital plug-on transmitter.
Version: 2.1 (2020-H)

Table of Contents

AD3 Plug-On Transmitter	3	IR Sync	11
WARNING	3	Setting the Frequency Manually	12
AD3 Axient Digital Plug-On Transmitter	3	Updating Firmware	12
Features	4	Firmware Versioning	12
Included Components	4	Updating the Transmitter	12
Optional Accessories	4	RF Mute	13
AD3 Transmitter Overview	4	Safe Start	13
Setup	6	Input Overload	13
Setting the AA Battery Type	7	Tone Generator	14
Shure Rechargeable Battery	7	Matching Audio Levels with Offset	14
Power Over USB	8	Menu Item Descriptions	15
Important Tips for Care and Storage of Shure Rechargeable Batteries	8	Radio Menu	15
AA Batteries and Transmitter Runtime	8	Audio Menu	15
Transmitter Controls	9	Utilities Menu	16
Menu Overview	10	Specifications	17
Menu Map	10	Frequency Bands and Transmitter RF Power	19
Tips for Editing Menu Parameters	10	LICENSING INFORMATION	21
Home Screen Display	10	Australia Warning for Wireless	21
Locking the Interface	11	Certifications	21
		Information to the user	22
		Contact Customer Support	23

AD3 Plug-On Transmitter

WARNING

- Battery packs may explode or release toxic materials. Risk of fire or burns. Do not open, crush, modify, disassemble, heat above 140°F (60°C), or incinerate.
- Follow instructions from manufacturer
- Only use Shure charger to recharge Shure rechargeable batteries
- **WARNING:** Danger of explosion if battery incorrectly replaced. Replace only with same or equivalent type.
- Never put batteries in mouth. If swallowed, contact your physician or local poison control center
- Do not short circuit; may cause burns or catch fire
- Do not charge or use battery packs other than Shure rechargeable batteries
- Dispose of battery packs properly. Check with local vendor for proper disposal of used battery packs.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like
- Do not immerse the battery in liquid such as water, beverages, or other fluids.
- Do not attach or insert battery with polarity reversed.
- Keep away from small children.
- Do not use abnormal batteries.
- Pack the battery securely for transport.

	<p>WARNING</p> <p>If water or other foreign objects enter the inside of the device, fire or electric shock may result. Do not attempt to modify this product. Doing so could result in personal injury and/or product failure.</p>
	<p>CAUTION</p> <p>Never disassemble or modify the device, as failures may result. Do not subject to extreme force and do not pull on the cable or failures may result. Keep the microphone dry and avoid exposure to extreme temperatures and humidity.</p>

Note: Use only with the included power supply or a Shure-approved equivalent.

AD3 Axient Digital Plug-On Transmitter

The Shure AD3 plug-on transmitter transforms any microphone into an advanced, portable Axient Digital AD Series wireless microphone, delivering impeccable audio quality and RF performance, wide-tuning, and encryption features. Compatible with Axient Digital AD4D and AD4Q receivers in Standard or High Density modes, AD3 features a custom, fast, and secure XLR connector design, support for both conventional AA and Shure SB900-series rechargeable battery options, and simple, user-friendly controls and menus. The AD3 is housed in a lightweight, rugged, metal chassis and is designed to resist sweat, moisture, and debris.

Features

Performance

- 20 Hz to 20 kHz range with flat frequency response
- Automatic input staging optimizes gain setting
- AES 256-bit encryption-enabled for secure transmission
- >120 dB dynamic range
- 100 meter (300 feet) line-of-sight operating range
- Selectable modulation modes optimize performance for spectral efficiency
 - Standard – optimal coverage, low latency
 - High density – dramatic increase in max system channel count
- Built-in tone generator and RF markers to facilitate walk-testing
- Switchable Power Levels = 2/10/35 mW (region dependent)

Design

- Locking XLR connector
- OLED display with easy-to-navigate menu and controls
- Rugged metal construction
- Menu and power lockout

Power

- Over 8 hours continuous use with Shure rechargeable battery
- Shure lithium-ion rechargeable battery provides extended battery life, precision metering, and zero memory effect
- External power and charging over USB-C

Included Components

AA alkaline batteries (2)	80B8201
USB-A to USB-C cable	95A39299
Zipper bag	95D2313
Pouch with belt clip	95A44910

Optional Accessories

SB900B rechargeable lithium-ion battery	SB900B
--	--------

AD3 Transmitter Overview

① Display

View menu screens and settings. Press any control button to activate the backlight.

② Infrared (IR) port

Align with the receiver IR port during an IR Sync for automated transmitter tuning and setup.

③ Control buttons

Use to navigate through parameter menus and to change settings.

④ Power switch

Hold the X button to power the unit on or off.

⑤ Enter button

Press to enter menu screens and confirm menu changes.

⑥ Power LED

- Green = Unit is powered on
- Red = Low battery, or battery error

⑦ Audio LED

Red, yellow, and green LEDs indicate average and peak audio levels.

The LED will turn red when the limiter is engaged.

⑧ USB-C port

Supplies power or charges Shure rechargeable battery. LED indicates charging status when connected to a power supply.

- Red = Charging
- Green = Full charge
- Yellow = Not charging

⑨ Battery compartment

Requires two AA batteries or Shure rechargeable battery.

⑩ AA battery adapter

Use to secure AA batteries. Remove when using a Shure rechargeable battery.

⑪ XLR connector

Connection point for wired microphones, cables, and boom poles, among other things.

⑫ Locking ring


To release the XLR connector, turn the ring counterclockwise and push in.

⑬ Pouch

Provides additional grip and protection for the transmitter.


⑭ Belt clip

Holds transmitter and microphone securely for hands-free carrying.

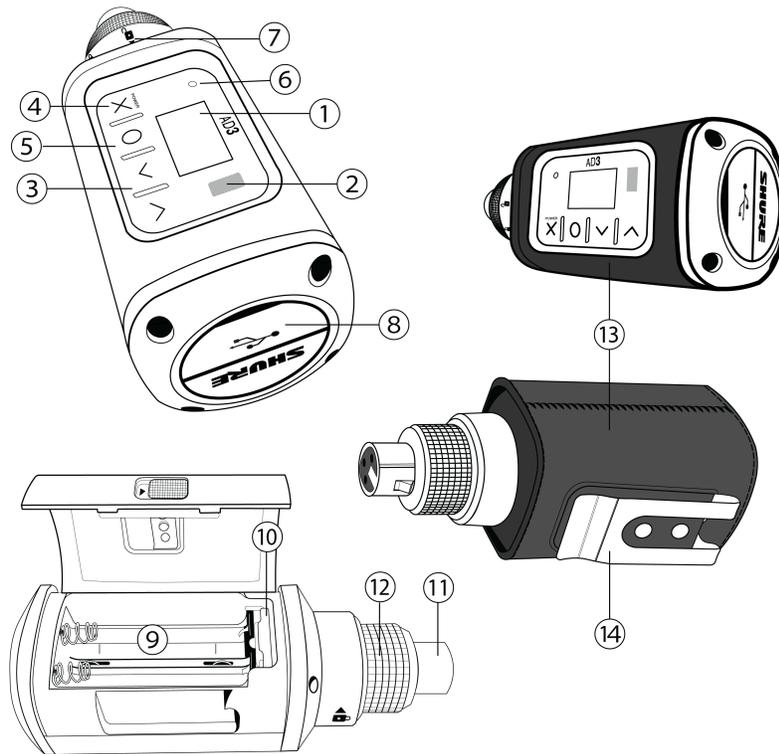

Setup

1. Slide the tab on the side of the transmitter to open the battery door.
2. Install the batteries.
 - **AA batteries:** Place batteries (note polarity markings) and AA adapter as shown below and close the door.
 - **Shure rechargeable battery:** Place battery as shown below (note polarity markings). Remove the AA adapter and close the door to secure the battery.

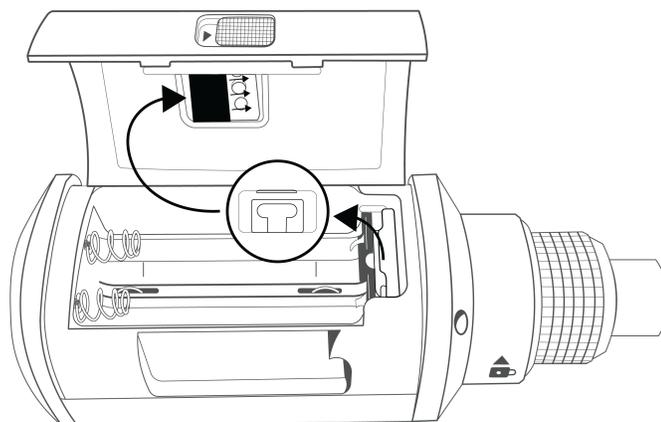

Note: If using AA batteries, set the battery type to ensure the transmitter's battery status indicator is accurate.

3. Press and hold X to turn on the transmitter.
4. Select the appropriate input pad or boost to avoid overloading the audio input or add boost to low-output sources: Audio > Pad
 - -12 dB: Use with high output sources, such as line levels and point-to-point applications.
 - Off (default): Use with typical microphones.
 - +12 dB: Use with low output sources.
5. Plug the transmitter into an XLR microphone or the output of an audio device.


Note: If you remove or replace the batteries without turning the transmitter off, the device will turn on again when the batteries are replaced.

Setting the AA Battery Type

To ensure accurate display of transmitter runtime, set the battery type to match the battery you have installed.

Note: If a Shure rechargeable battery is installed, selecting a battery type is not necessary and the battery type will display Shure.

1. Navigate to Utilities and select Battery.
2. Use the ▼ ▲ buttons to select the installed battery type:
 - Alkaline = Alkaline
 - NiMH = Nickel Metal Hydride
 - Lithium = Lithium Primary
3. Press O to save.

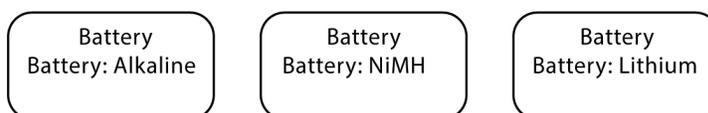

Shure Rechargeable Battery

Shure SB900-series lithium-ion batteries offer a rechargeable option for powering the transmitters. Batteries charge to 50% capacity in 1 hour and reach full charge within 3 hours.

Single chargers and multiple bay chargers are available to recharge the Shure batteries.

Caution: Only charge Shure rechargeable batteries with a Shure battery charger.

Shure SB900B Runtime

2 mW	10 mW	35 mW
8+ hours	8+ hours	5+ hours

Note: Phantom power, RF output and the impedance of the connecting device can impact battery life.


Checking Battery Info

When using a Shure rechargeable battery, the receiver and transmitter home screens display the number of hours and minutes remaining.

Detailed information for the battery is displayed Battery menu of the transmitter: Utilities > Battery

- Battery: The chemistry type of for the installed battery (Shure, Alkaline, Lithium, NiMH)

- Battery Time to Full (only appears when Shure rechargeable battery is being externally charged): Time remaining until battery is fully charged
- Battery Life: Indicates remaining battery runtime
- Charge: Percentage of charge capacity
- Health: Percentage of current battery health
- Cycle Count: Total of the number of charging cycles for the installed battery
- Temperature: Battery temperature reported in Celsius and Fahrenheit

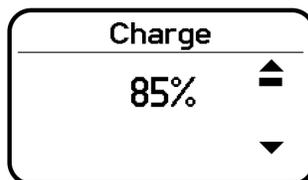

Power Over USB

When operated with AA batteries, or without batteries, the AD3 transmitter can be powered by connecting the USB-C port on the bottom of the transmitter to a suitable power source.

When a Shure rechargeable battery is inserted, the USB connection can power the transmitter while simultaneously charging the battery.

Important Tips for Care and Storage of Shure Rechargeable Batteries

Proper care and storage of Shure batteries results in reliable performance and ensures a long lifetime.

- Always store batteries and transmitters at room temperature
- Ideally, batteries should be charged to approximately 40% of capacity for long-term storage
- Periodically clean the battery contacts with alcohol to maintain ideal contact
- During storage, check batteries every 6 months and recharge to 40% of capacity as needed

For additional rechargeable battery information, visit www.shure.com.

AA Batteries and Transmitter Runtime

Transmitters are compatible with the following AA battery types:

- Alkaline
- Nickel Metal Hydride (NiMH)
- Lithium Primary


A 5-segment battery indicator representing the charge level of the transmitter battery is displayed on the screens of the transmitter and receiver. The following table contains the approximate remaining transmitter runtime in hours:minutes.

Alkaline Batteries

Battery Indicator	Battery Runtime (hours:minutes)			
	UHF		1.x	
	2 mW/10 mW	35 mW	2 mW /10 mW	30 mW
	8:00 to 6:00	3:30 to 3:00	5:30 to 4:15	3:45 to 3:00
	6:00 to 4:00	3:00 to 2:00	4:15 to 3:00	3:00 to 2:15
	4:00 to 1:45	2:00 to 1:30	3:00 to 1:45	2:15 to 2:00
	<1:45	<1:30	<1:45	<2:00
	<0:45	<0:45	<0:45	<0:45
	<0:15	<0:15	<0:15	<0:15

Transmitter Controls

Use the controls to navigate menus and update settings.

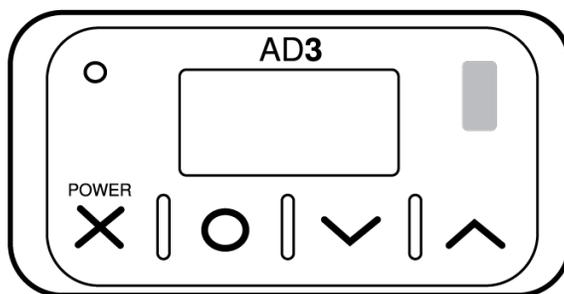


X	Hold button to turn transmitter power on and off. Acts as a 'back' button to return to previous menus or parameters without confirming a value change.
O	Enters menu screens and confirms parameter changes
∨∧	Use to scroll through menu screens and to change parameter values

Tip: Hold the ^ button while powering on to enter safe start mode.

Menu Overview

Menu Map

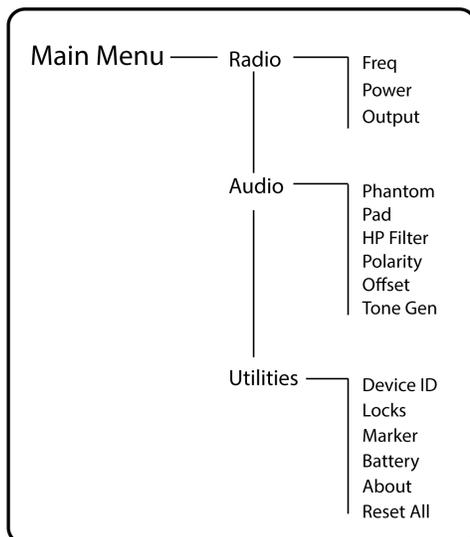

Tips for Editing Menu Parameters

- To access the menu options from the home screen, press O. Use the arrow buttons to see additional menus and parameters.
- A menu parameter will blink when editing is enabled
- To increase, decrease, or change a parameter, use the arrow buttons
- To save a menu change, press O
- To exit a menu without saving a change, press X

Home Screen Display

The home screen shows transmitter information and status.

There are four pieces of information that you can choose to see on the home screen. Use the arrow buttons to select one of the following choices:

<p>Name Frequency Setting Group (G) and Channel (C) Device ID</p>	<p>The image shows a home screen display with a black border. At the top left is the brand name 'Shure'. To its right is a lock icon with a key symbol. Below this, the frequency '470.200MHz' is displayed in large, bold digits. At the bottom left, a digital clock shows '7:45'.</p>
--	--

The following icons indicate transmitter settings:

	Battery runtime in hours and minutes or bar display
	Key: Displayed when encryption is enabled
	Lock: Displayed when controls are locked. Icon flashes if you attempt to access a locked control (power or menu).
STD	STD: Standard Transmission Mode
HD	HD: High Density Transmission Mode

Locking the Interface

Lock transmitter interface controls to prevent accidental or unauthorized changes to parameters. The lock icon appears on the home screen when a lock is enabled.

- From the Utilities menu, navigate to Locks and select one of the following lock options:
 - None: The controls are unlocked
 - Power: The power switch is locked
 - Menu: The menu parameters are locked
 - All: The power switch and menu parameters are locked
- Press O to save.


Tip: To quickly unlock the transmitter menu, press O and select None.

IR Sync

Use IR Sync to form an audio channel between the transmitter and receiver.

Note: The receiver band must match the band of the transmitter.

- Select a receiver channel.
- Tune the channel to an available frequency using group scan or manually turn to an open frequency.
- Power on the transmitter.
- Press the SYNC button on the receiver.
- Align the IR windows between the transmitter and the receiver so that the IR LED illuminates red. When complete, Sync Success! appears. The transmitter and receiver are now tuned to the same frequency.

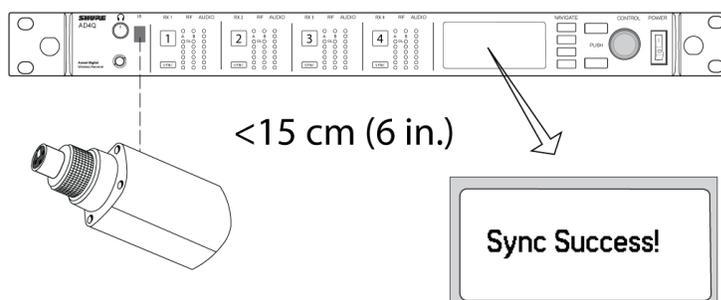


Note: Any change to the encryption status on the receiver (enabling/disabling encryption) requires a sync to send the settings to the transmitter. New encryption keys for the transmitter and receiver channel are generated on every IR sync, so to request a new key for a transmitter, perform an IR sync with the desired receiver channel.

Setting the Frequency Manually

The transmitter can be manually tuned to a specific group, channel, or frequency.

1. Navigate to the Radio menu and select Freq.
2. Scroll to select G: and C: to edit the group and channel, or select the frequency parameter (MHz). When editing the frequency, press O once to edit the first 3 digits, or twice to edit the last 3 digits.
3. Use the \wedge \vee buttons to adjust the group, channel, or frequency.
4. Press O to save, and then press X when finished.

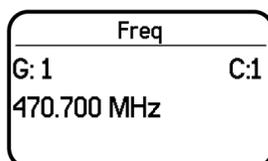

Updating Firmware

Firmware is embedded software in each component that controls functionality. Periodically, new versions of firmware are developed to incorporate additional features and enhancements. To take advantage of design improvements, you can upload and install new versions of the firmware by using the Shure Update Utility. The Shure Update Utility is available for download from <http://www.shure.com/>.

Firmware Versioning

When performing an update, first download firmware to the receiver, and then update transmitters to the same firmware version to ensure consistent operation.

The firmware numbering for Shure devices uses the following format: MAJOR.MINOR.PATCH.BUILD (e.g., 1.2.21.1). At a minimum, all devices on the network (including transmitters), must have the same MAJOR and MINOR firmware version numbers (e.g., 1.2.x).

Updating the Transmitter


1. Download the firmware to the receiver.
2. Access the following menu from the receiver: Device Settings > Tx Firmware Update.
3. Align the IR ports between the transmitter and the receiver. IR ports must be aligned for the entire download, which can take 50 seconds or longer.

Tip: The red alignment LED will turn on when the alignment is correct.

4. Press ENTER on the receiver to begin the download to the transmitter. The receiver will display the progress of the update as a percentage.

RF Mute

RF mute prevents transmission of the audio by suppressing the RF signal while the transmitter remains powered-on. The home screen displays RF Muted in this mode.

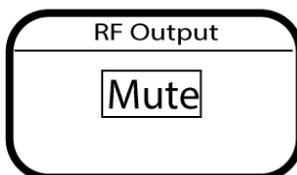

1. From the Radio menu, navigate to Output.
2. Choose one of the following options:
 - On: RF signal is active
 - Mute: RF signal is disabled
3. Press O to save.

Note: Turning the transmitter off and on or replacing the battery will restore Output to On.

Safe Start

Power on in safe start mode to prevent interference with other devices. Hold the ^ button while powering on your device until the Safe Start menu appears.



Safe Start menu options:

- RF: Mute or On
- Locks: None, Pwr, Menu, All
- Phantom: Off, +12V, +48V

Use the navigation buttons to make changes.


Tip: To exit the Safe Start menu, push X.

Note: Previous settings for locks, RF, and phantom power will be retained when the transmitter is powered on in safe start mode.

Input Overload

The Tx Overload message appears when the audio input experiences a high-level signal. The audio LED turns red as an additional indicator of an overload. Reduce the input signal or enable the input pad to remove the overload condition.

Tip: To enable the input pad, navigate to **Audio > Pad** and select **-12 dB**.

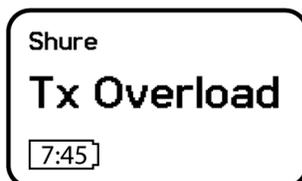


Tone Generator

The transmitter contains an internal tone generator that produces a continuous audio signal. The tone is helpful when conducting a sound check or for troubleshooting the audio signal chain. The level of the tone is adjustable from **-60 dB** to **0 dB** and the frequency can be set to **400 Hz** or **1000 Hz**.

Tip: Always start with the level set to **-60 dB** to avoid overloading speakers or headphones.

1. From the **Audio** menu select **Tone Gen**.
2. Set the frequency to **400 Hz** or **1000 Hz**.
3. Select **Level** and use the arrow buttons adjust the value between **-60 dB** and **0 dB**.

Turn off the tone by selecting **Off** from the menu or by cycling the transmitter power.

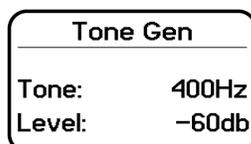

Matching Audio Levels with Offset

When linking two or more transmitters to a receiver, there may be a difference in volume levels between microphones or instruments. If this occurs, use the **Offset** function to match the audio levels and eliminate audible volume differences between transmitters. If using a single transmitter, set **Offset** to **0 dB**.

1. Turn on the first transmitter and perform a sound check to test the audio level. Turn off the transmitter when finished.
2. Turn on the second transmitter and perform a sound check to test the audio level. Repeat for any additional transmitters.
3. If there is an audible difference in the sound level between the transmitters, navigate to the **Offset** menu (**Audio > Offset**) in the transmitter to increase or decrease the **Offset** in realtime to match the audio levels.

Audio
Offset: +1dB

Menu Item Descriptions

Radio Menu

Freq

Press the O button to enable editing of a group (G:) channel (C:) or frequency (MHz). Use the arrow buttons to adjust the values. To edit the frequency, press the O button once to edit the first 3 digits, or twice to edit the second 3 digits.

Power

Higher RF power settings can extend the range of the transmitter.

Note: Higher RF power settings decrease battery runtime.

Output

Sets the RF output to On or Mute.

- On: RF signal is active
- Mute: RF signal is inactive

Audio Menu

Phantom

Adds phantom power for condenser microphones. Select +12V or +48V as required by the microphone.

Input Pad/Boost

Adjust the pad to avoid overloading the audio input or add a boost to low-output sources. Choose between -12 dB, Off (default), and +12dB.

- -12 dB: Use with high output sources, such as line levels and point-to-point applications.
- Off (default): Use with typical microphones.
- +12 dB: Use with low output sources.

HP Filter

High-pass filter. Scroll up to turn on the filter and set the low-frequency rolloff in Hz; scroll all the way down to turn off. Range: 40 Hz to 240 Hz.

Polarity

Selectable polarity assignment for the audio input connector:

- Pos: Positive pressure on microphone diaphragm produces positive voltage on pin 2 (with respect to pin 3 of XLR output) and the tip of the TRS output on the receiver.
- Neg: Positive pressure on microphone diaphragm produces negative voltage on pin 2 (with respect to pin 3 of XLR output) and the tip of the TRS output on the receiver.

Offset

Adjust Offset level to balance mic levels when using two transmitters or when assigning multiple transmitters to receiver slots. Adjustment range: -12 dB to +21 dB.

Tone Gen

Tone generator. Transmitter will generate a continuous test tone:

- Freq: The tone can be set to 400 Hz or 1000 Hz.
- Level: Adjusts the output level of the test tone.

Utilities Menu

Device ID

Assign a device ID of up to 8 characters.

Locks

Locks the transmitter controls and power switch.

- None: The controls are unlocked
- Power: The power switch is locked
- Menu: The menu parameters are locked
- All: The power switch and menu parameters are locked

Marker

When enabled, press O to drop a marker in Wireless Workbench.

Battery

Displays battery information:

- Battery Life: Runtime reported in bar display and time (hours:minutes)
- Battery Time to Full (only appears when Shure rechargeable battery is being externally charged): Time remaining until battery is fully charged
- Charge: Percentage of charge capacity
- Health: Percentage of current battery health
- Cycle Count: Total of the number of charging cycles for the installed battery
- Temperature: Battery temperature reported in Celsius and Fahrenheit

About

Displays the following transmitter information:

- Model: Displays the model number
- Band: Displays the tuning band of the transmitter
- FW Version: Installed firmware
- HW Version: Hardware version

- Serial Num: Serial number

Reset All

Restores all transmitter parameters to factory settings.

Specifications

Mic Offset Range

-12 to 21 dB (in 1 dB steps)

Battery Type

Shure SB900 series Rechargeable Li-Ion or LR6 AA batteries 1.5 V

Battery Runtime

@ 10 mW

Shure SB900B	> 8 hours
alkaline	> 7 hours

Dimensions

126 mm x 44.5 mm x 44.5 mm (5.0in. x 1.8in. x 1.8 in.) H x W x D

Weight

Without Battery	240 g (8.0 oz.),
with AA batteries	263 g
with Shure rechargeable battery	280 g

Housing

Cast Metal

Operating Temperature Range

-10°C (-14°F) to 50°C (122°F)

Storage Temperature Range

-40°C (-40°F) to 74°C (165°F)

Audio Input

Connector

3-pin female XLR

Configuration

balanced

Impedance

Pad -12 dB	26.64 k Ω
0 dB	6.64 k Ω
Boost 12 dB	6.64 k Ω

Maximum Input Level

1 kHz at 1% THD

Pad -12 dB	21 dBV
0 dB	9 dBV
Boost 12 dB	-3 dBV

Preamplifier Equivalent Input Noise (EIN)

System Gain Setting $\geq +20$

-115 dBV, A-weighted, typical

Phantom Power

+48 V(7 mA maximum), +12 V(15 mA maximum)

High Pass Filter

Two-pole (12 dB per octave), cut off frequency selectable from 40 to 240 in 20 Hz increments

RF Output

Antenna Type

Dipole

Impedance

50 Ω

Occupied Bandwidth

<200 kHz

Channel-to-Channel Spacing

Standard Mode	350 kHz
High Density Mode	125 kHz

Modulation Type

Shure Axient Digital Proprietary

Power

2 mW, 10 mW, 35 mW

Specific Absorption Rate (SAR)

< 0.12 W/kg

Frequency Bands and Transmitter RF Power

Band	Frequency Range (MHz)	RF Power (mW) ^{***}
G53	470 to 510	2/10/35
G54	479 to 565	2/10/20
G55†	470 to 636*	2/10/35
G56††	470 to 636	2/10/35
G57	470 to 616*	2/10/35
G62	510 to 530	2/10/35
G63	487 to 636	2/10
H54	520 to 636	2/10/35
K53	606 to 698*	2/10/35
K54 Δ	606 to 663**	2/10/35
K55	606 to 694	2/10/35
K56◇	606 to 714	2/10/35
K57 Δ	606 to 790	2/10/35
K58	622 to 698	2/10/35
L54	630 to 698	2/10/35
P55	694 to 703, 748 to 758, 803 to 806	2/10/35
R52	794 to 806	2/10
JB	806 to 810	2/10
X51	925 to 937.5	2/10
X55	941 to 960	2/10/35
X56†††	960 to 1000	2/10/35

*with a gap between 608 to 614 MHz.

**with a gap between 608 to 614 MHz and a gap between 616 to 653 MHz.

***power delivered to the antenna port.

†operation mode varies according to region. In Brazil, High Density mode is used. The maximum power level for Peru is 10mW.

††Limited to 10mW for Vietnam.

†††Only in UK; F-variant only

Δ Output power limited to 10 mW above 608 MHz.

◇Korea defines power as conducted (ERP) which is 1dB less than declared in table.

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

K55 606-694 MHz

Country Code	Frequency Range
Code de Pays	Gamme de frequences
Codice di paese	Gamme di frequenza
Código de país	Gama de frecuencias
Länder-Kürzel	Frequenzbereich
A, B, BG, CH, CY, CZ, D, DK, EST, F	*
FIN, GB, GR, H, HR, I, IRL, IS, L, LT	*
M, N, NL, P, PL, RO, S, SK, SLO, TR	*
all other countries	*

* This equipment may be capable of operating on some frequencies not authorized in your region. See [Licensing Information](#).

G56 470-636 MHz

Country Code	Frequency Range
Code de Pays	Gamme de frequences
Codice di paese	Gamme di frequenza
Código de país	Gama de frecuencias
Länder-Kürzel	Frequenzbereich
A, B, BG, CH, CY, CZ, D, DK, EST, F	*
FIN, GB, GR, H, HR, I, IRL, IS, L, LT	*
M, N, NL, P, PL, RO, S, SK, SLO, TR	*
all other countries	*

* This equipment may be capable of operating on some frequencies not authorized in your region. See [Licensing Information](#).

K57 606-790 MHz

Country Code	Frequency Range
Code de Pays	Gamme de frequences
Codice di paese	Gamme di frequenza
Código de país	Gama de frecuencias
Länder-Kürzel	Frequenzbereich
A, B, BG, CH, CY, CZ, D, DK, EST, F	*
FIN, GB, GR, H, HR, I, IRL, IS, L, LT	*
M, N, NL, P, PL, RO, S, SK, SLO, TR	*
all other countries	*

* This equipment may be capable of operating on some frequencies not authorized in your region. See [Licensing Information](#).

LICENSING INFORMATION

Licensing: A ministerial license to operate this equipment may be required in certain areas. Consult your national authority for possible requirements. Changes or modifications not expressly approved by Shure Incorporated could void your authority to operate the equipment. Licensing of Shure wireless microphone equipment is the user's responsibility, and licensability depends on the user's classification and application, and on the selected frequency. Shure strongly urges the user to contact the appropriate telecommunications authority concerning proper licensing, and before choosing and ordering frequencies.

Australia Warning for Wireless

This device operates under an ACMA class licence and must comply with all the conditions of that licence including operating frequencies. Before 31 December 2014, this device will comply if it is operated in the 520-820 MHz frequency band.

WARNING: After 31 December 2014, in order to comply, this device must not be operated in the 694-820 MHz band.

No user-operated control of power, frequency, or other parameters are available beyond those specified in this operating manual.

Please follow your regional recycling scheme for batteries, packaging, and electronic waste.

Certifications

Certified under FCC Part 15 and FCC Part 74.

Certified by ISED in Canada under RSS-210.

FCC ID: DD4AD3G57, DD4AD3K54, DD4AD3X55. **IC:** 616A-AD3G57, 616A-AD3K54.

Meets essential requirements of the following European Directives:

- WEEE Directive 2012/19/EU, as amended by 2008/34/EC
- RoHS Directive EU 2015/863

Note: Please follow your regional recycling scheme for batteries and electronic waste

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.

Hereby, Shure Incorporated declares that the radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.shure.com/europe/compliance>

Authorized European representative:

Shure Europe GmbH

Headquarters Europe, Middle East & Africa

Department: EMEA Approval

Jakob-Dieffenbacher-Str. 12

75031 Eppingen, Germany

Phone: +49-7262-92 49 0

Fax: +49-7262-92 49 11 4

Email: EMEAsupport@shure.de

Information to the user

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canada Warning for Wireless

This device operates on a no-protection, no-interference basis. Should the user seek to obtain protection from other radio services operating in the same TV bands, a radio licence is required. For further details, consult Innovation, Science and Economic Development Canada's document Client Procedures Circular CPC-2-1-28, Voluntary Licensing of Licence-Exempt Low-Power Radio Apparatus in the TV Bands.

Ce dispositif fonctionne selon un régime de non-brouillage et de non-protection. Si l'utilisateur devait chercher à obtenir une certaine protection contre d'autres services radio fonctionnant dans les mêmes bandes de télévision, une licence radio serait requise. Pour en savoir plus, veuillez consulter la Circulaire des procédures concernant les clients CPC.2.1.28, Délivrance de licences sur une base volontaire pour les appareils radio de faible puissance exempts de licence et exploités dans les bandes de télévision d'Innovation, Sciences et Développement économique Canada.

This device operates on frequencies shared with other devices. Consult the Federal Communications Commission White Space Database Administration website to determine available channels in your area prior to operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Contact Customer Support

Didn't find what you need? [Contact our customer support](#) to get help.