

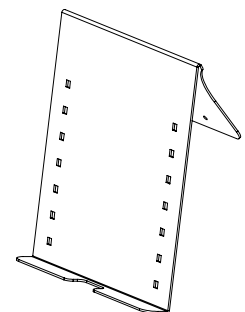
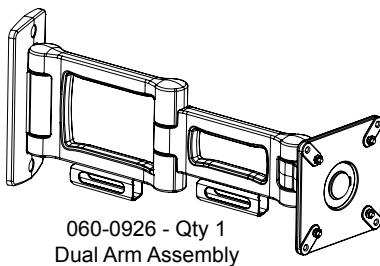
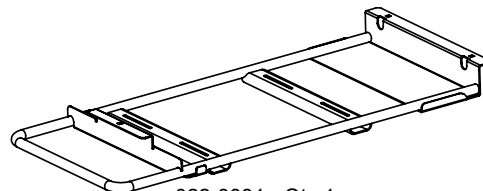
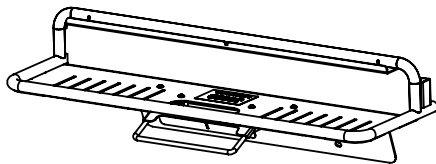
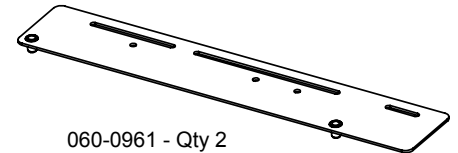

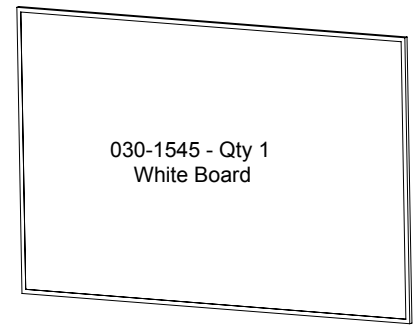
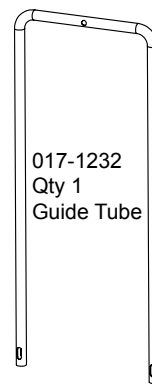
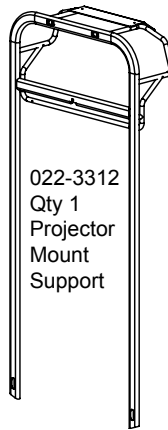
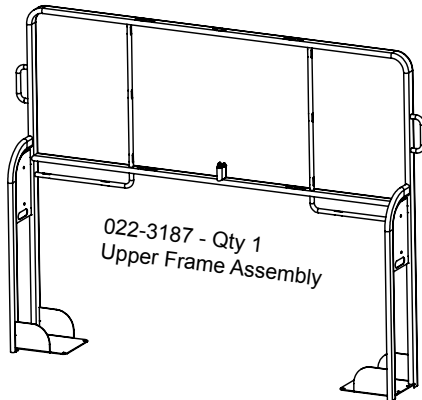
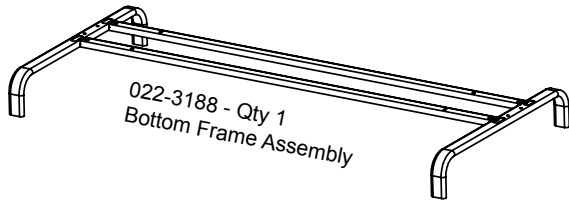





EDUIWB & DIWB


Mobile Interactive White Board

Assembly Instructions

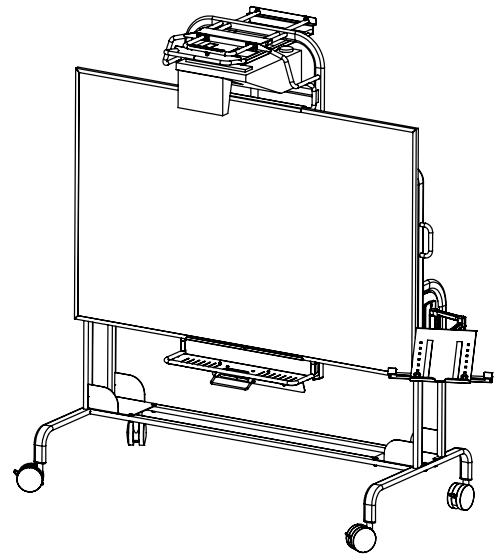


031-9454 - Qty 1
Owners Guide

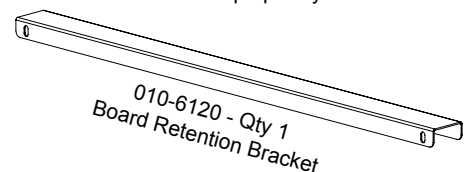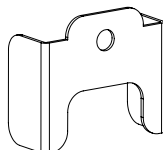


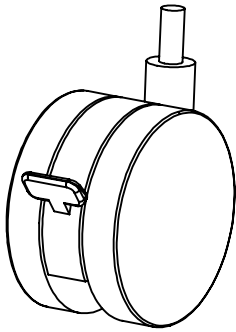


015-0176 - Qty 4
4" Stem Caster w/Brake

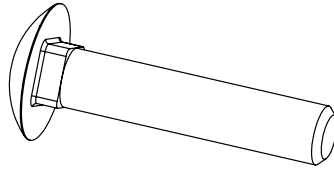


030-0538 - Qty 13
1/4-20 x 1 1/4" Carriage Bolt

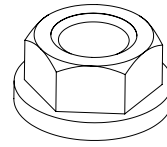


030-0207 - Qty 15
1/4-20 Hex Nut

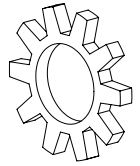


030-0240 - Qty 2
1/4" Lockwasher

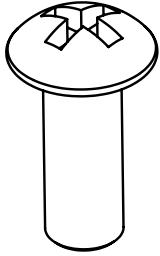


030-0291 - Qty 4
#10-32 x 1 1/2" Truss Head Screw

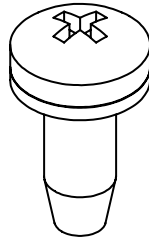


030-0962 - Qty 2
10-32 x 1/2" Pan Hd Screw

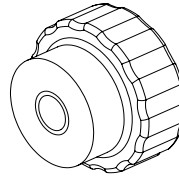


012-0696 - Qty 2
1" Knurled Knob

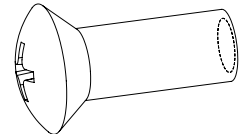


030-1026 - Qty 2
1/4-20 x 3/4" Phillips Screw

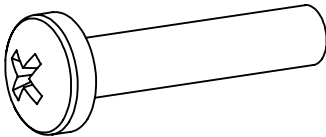


030-0845 - Qty 8
M4 x 0.7 20mm Pan Hd Screw

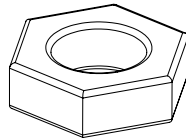


030-1267 - Qty 4
M4 Nut

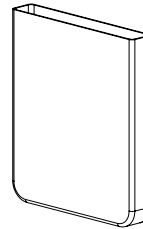


012-0692 - Qty 2
Black Vinyl Cap

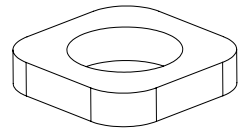


030-1571 - Qty 4
1" Square Black Foam

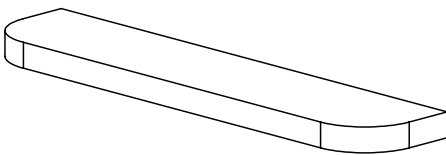


030-1569 - Qty 2
Foam Pad

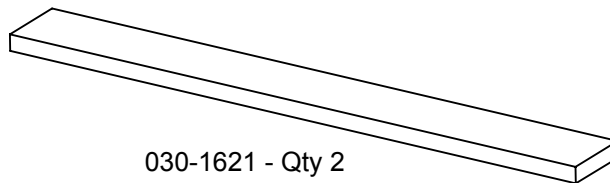


030-1621 - Qty 2
Foam Pad

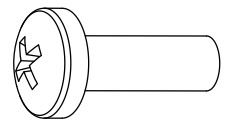


030-1234 - Qty 8
M4 x 0.7, 12mm Phillips Screw

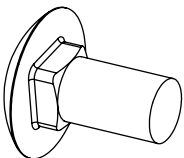


030-0272 - Qty 2
1/4-20 x 1/2" Carriage Bolt

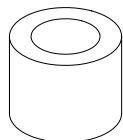


030-1398 - Qty 4
#10 Nylon Spacer




030-1397 - Qty 12
3/16, #10 Nylon Washer

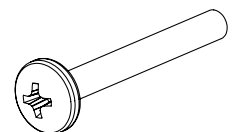

030-1657 - Qty 4
10-32 x 1.25" Button Hd Screw

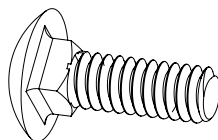


030-1695 - Qty 4
10-24 x 5/8" Carriage Bolt

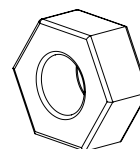





030-0159 - Qty 4
10-24 Hex Nut

1




SAFETY WARNING!!
TWO PERSON
ASSEMBLY REQUIRED

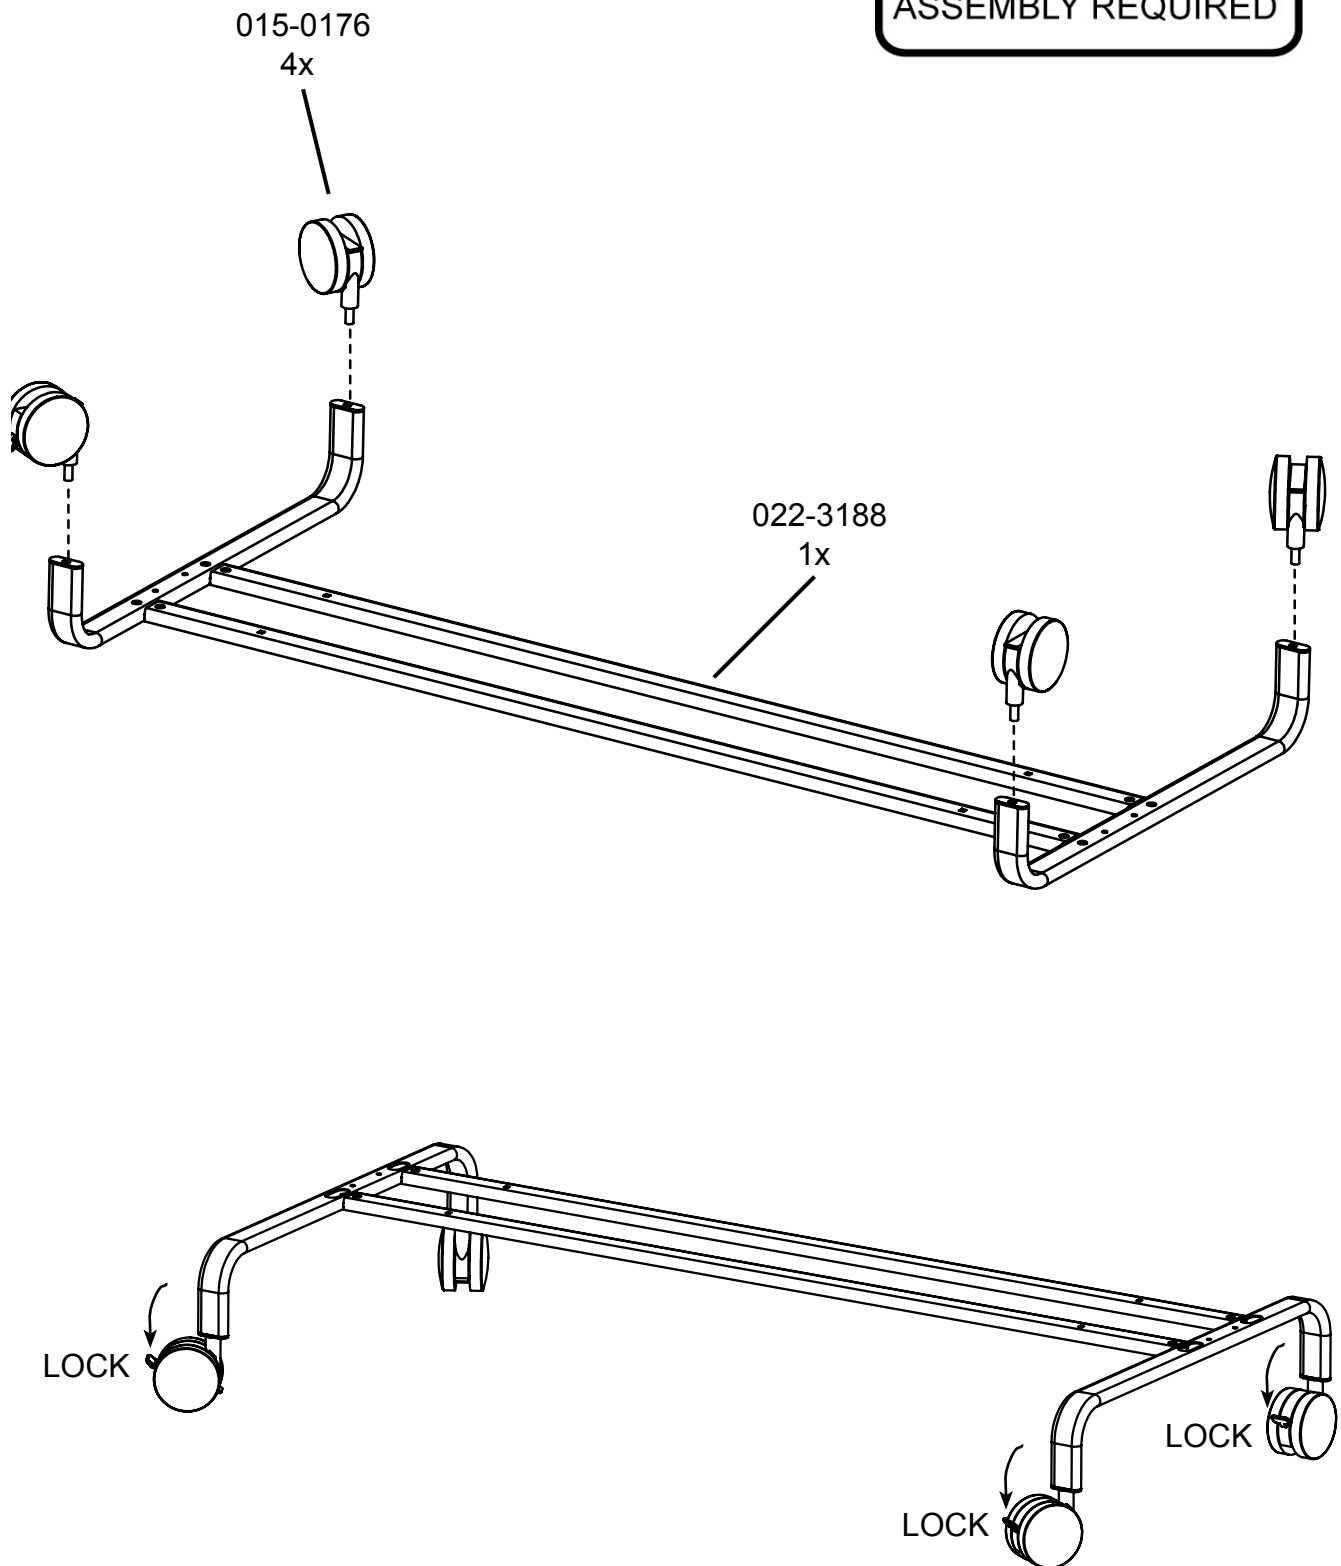

2

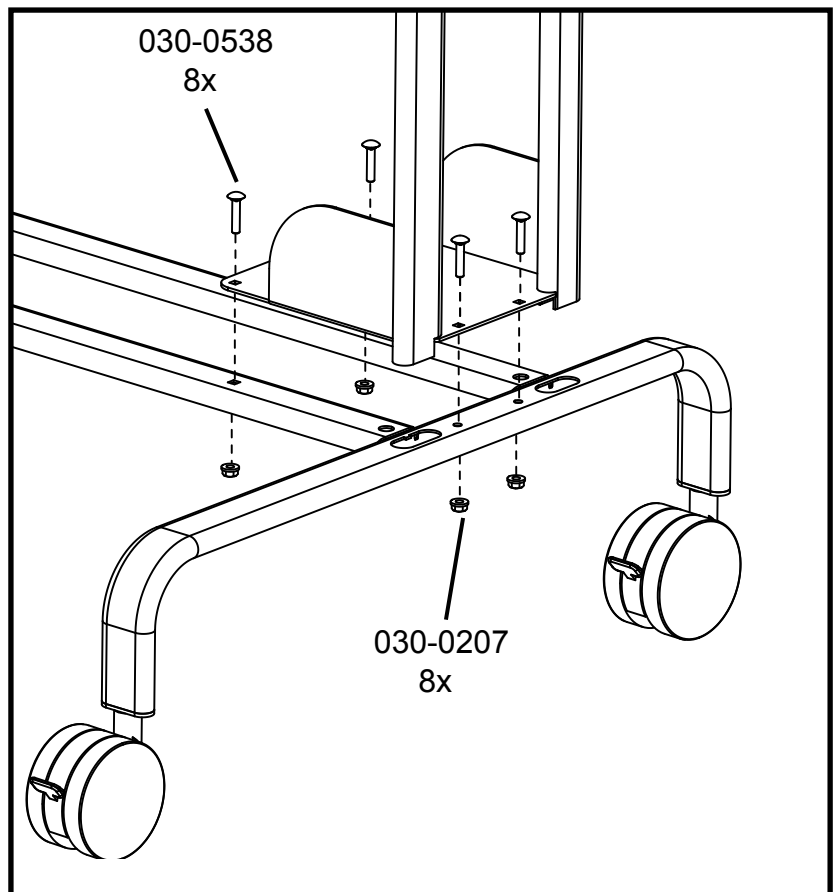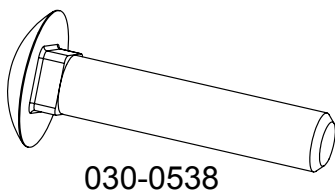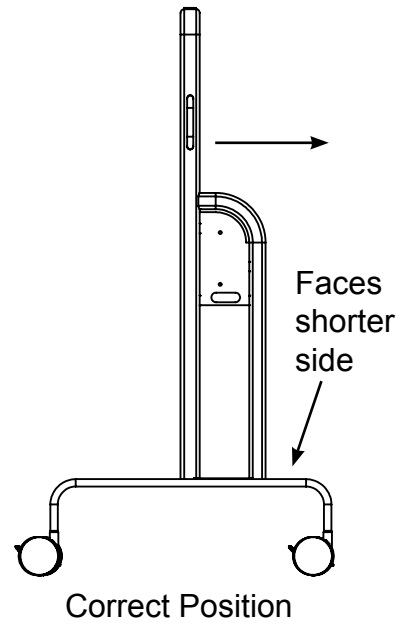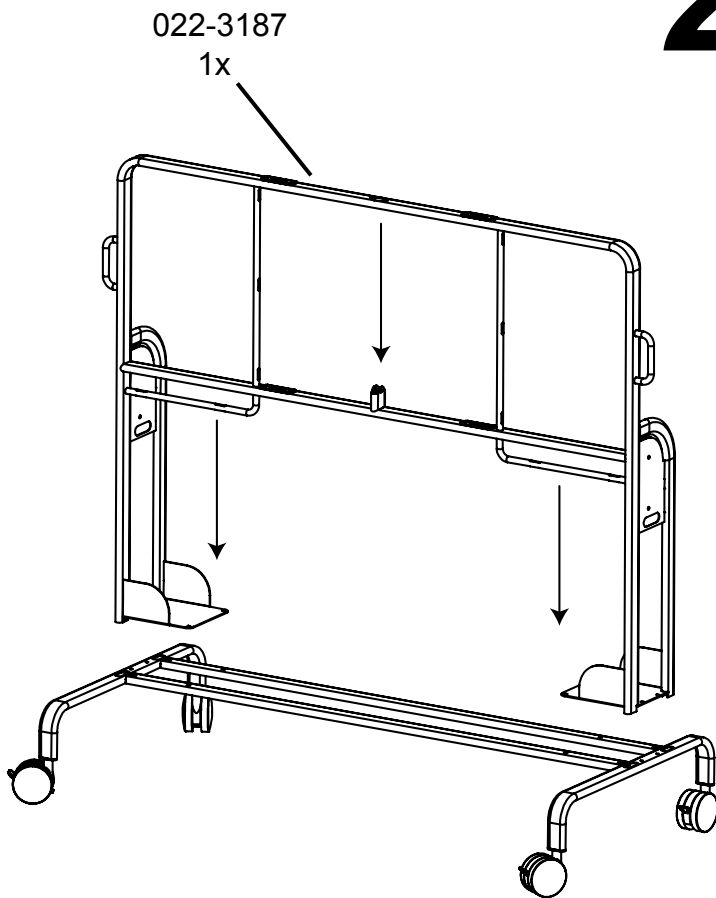



3

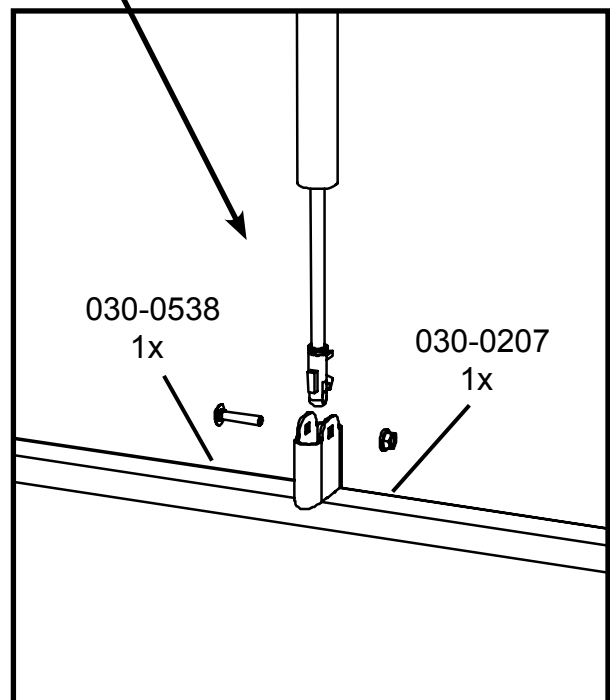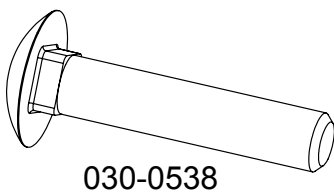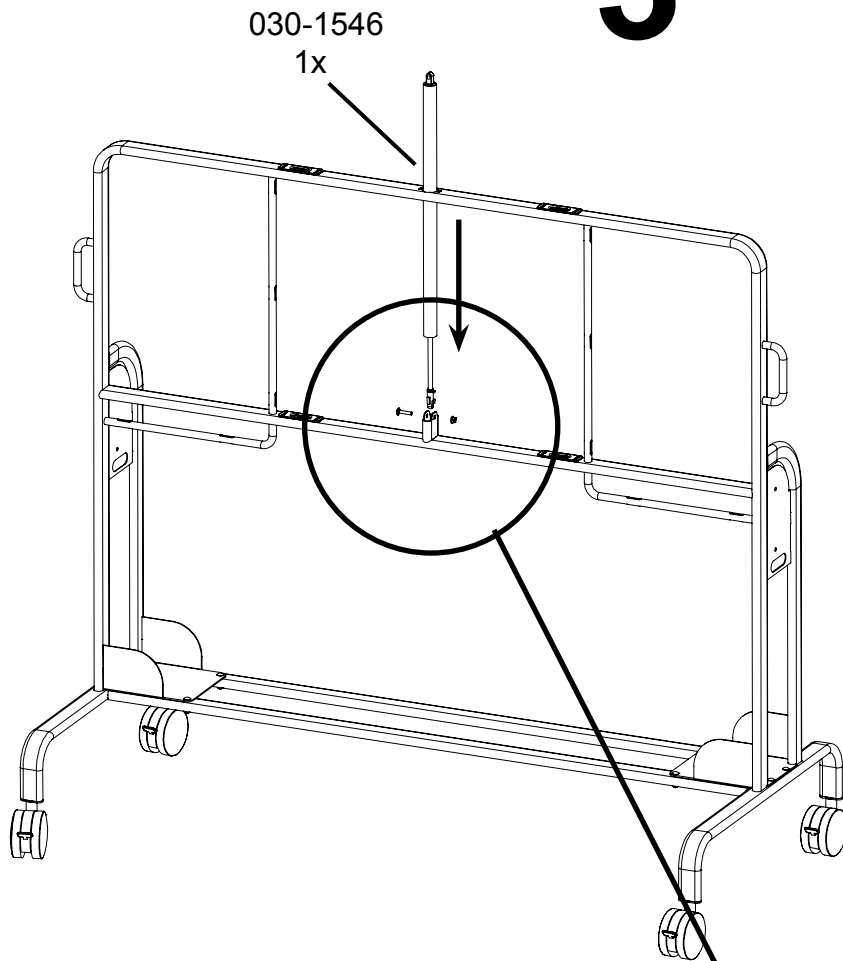


4


022-3312

1x

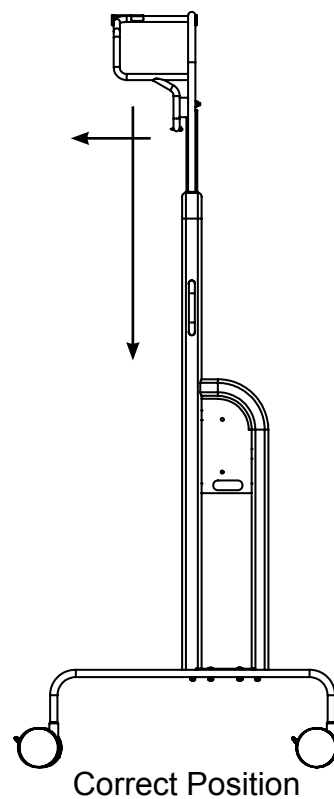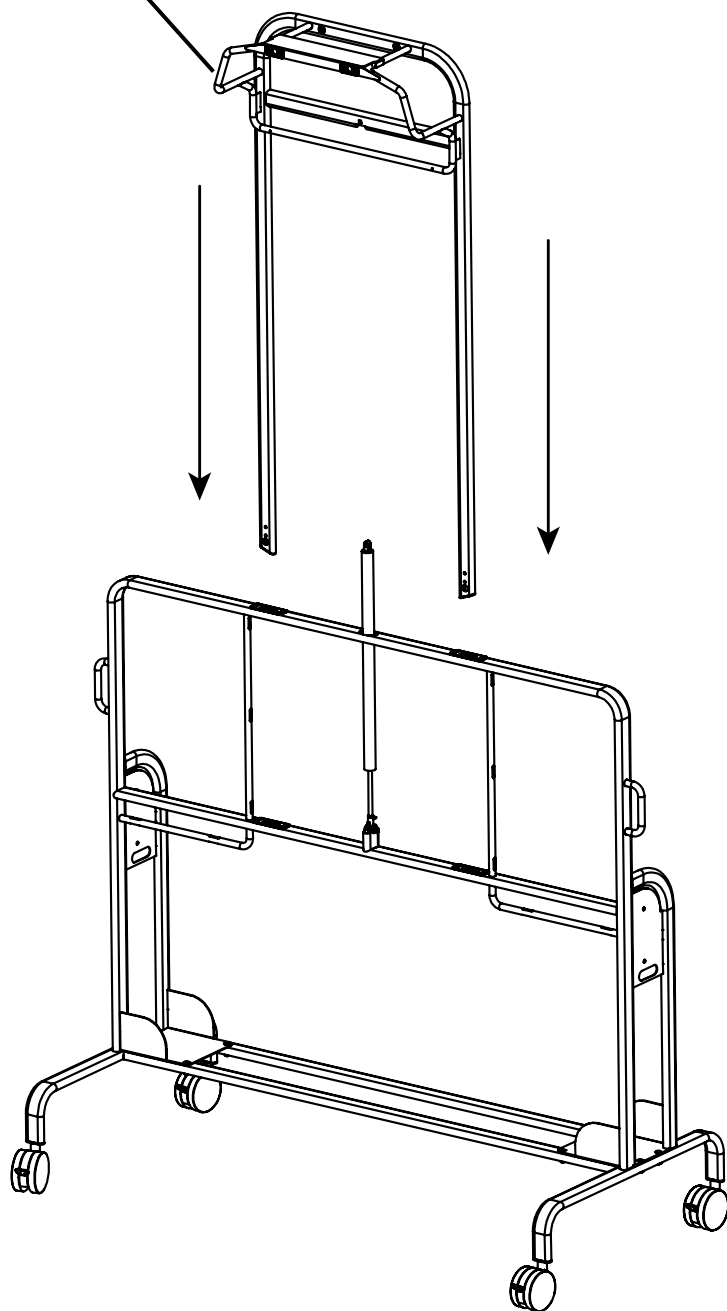


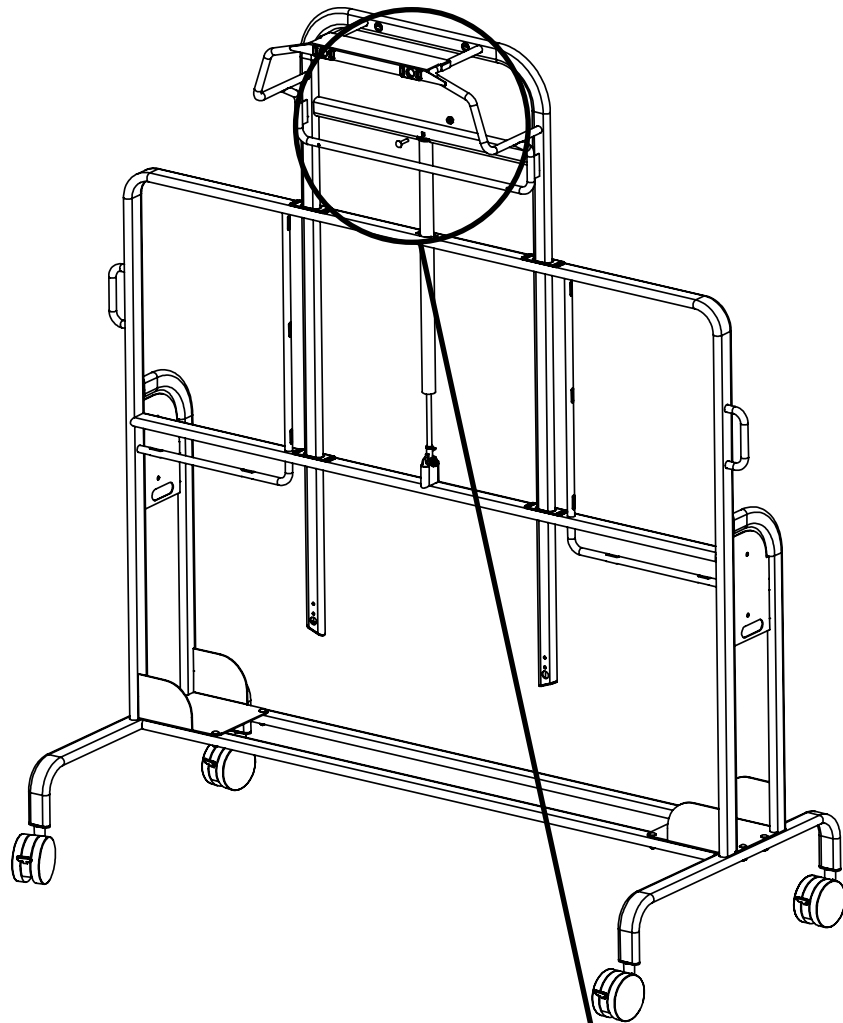

030-0538

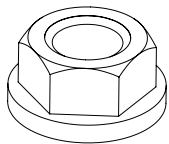


030-0207

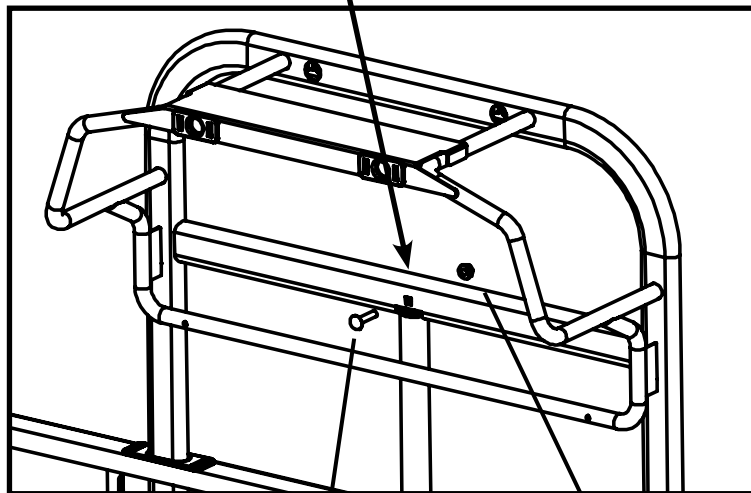



030-0538
1x

030-0207
1x


5

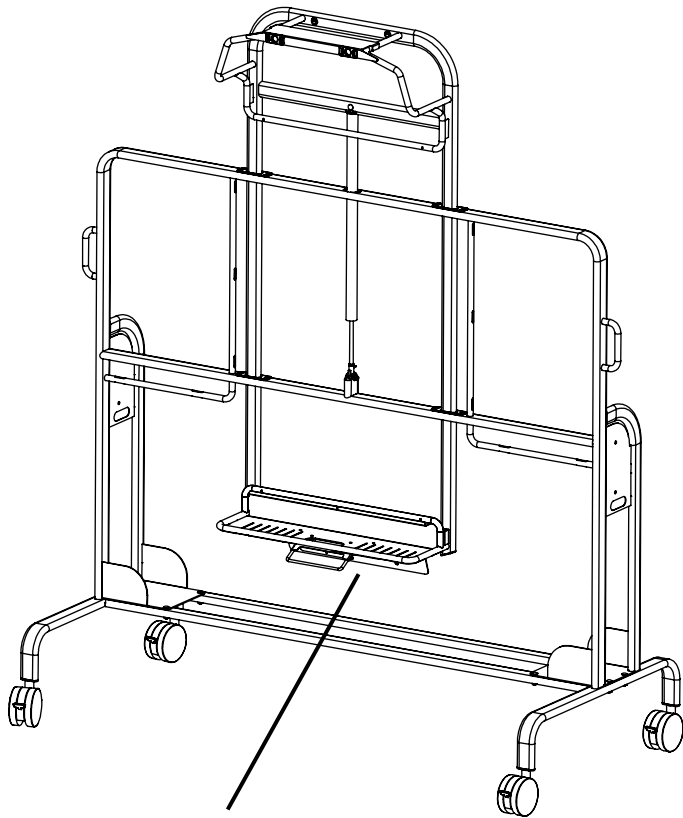

022-3182
1x

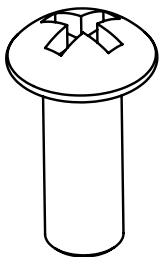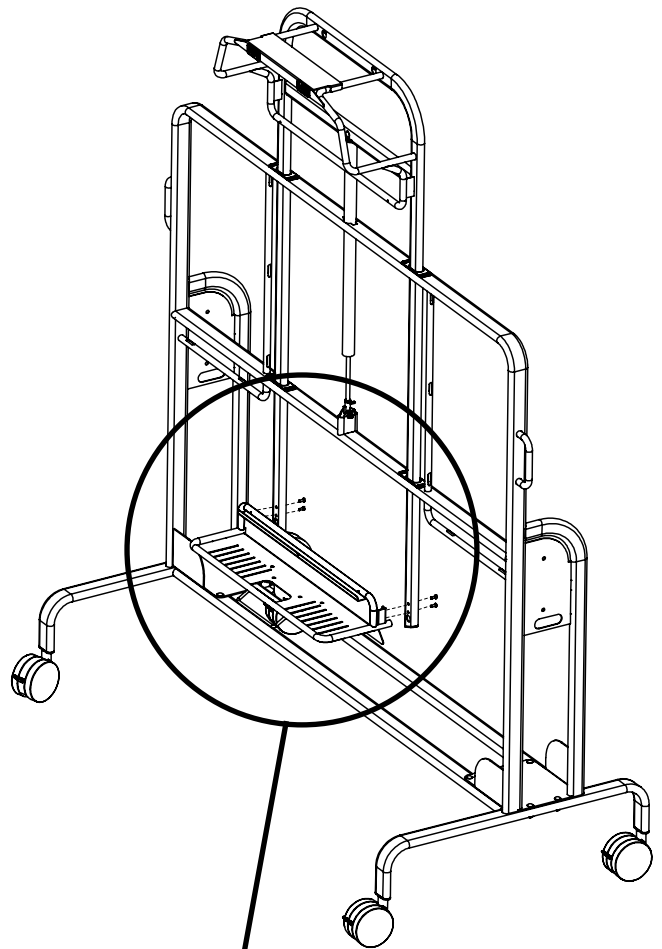

030-0291

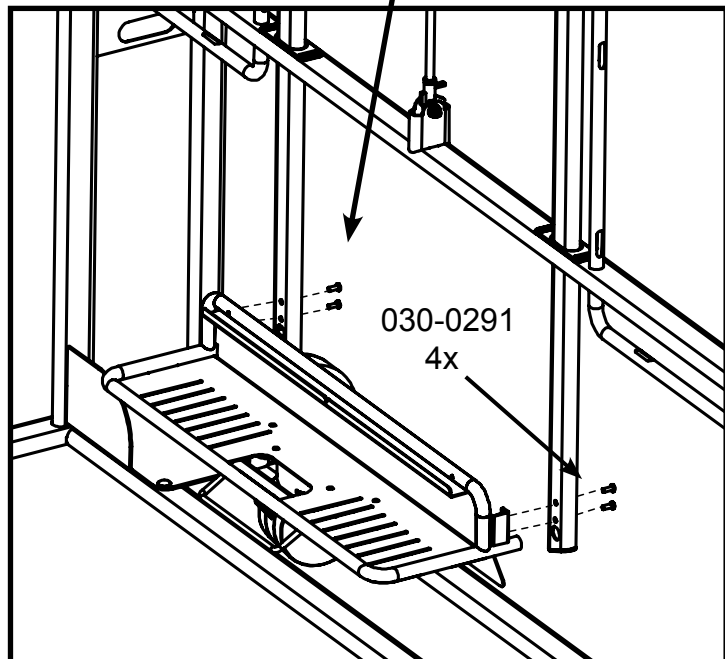

030-0291
4x

6

Follow this step ONLY if you are using an Espon Ultra Short Throw projector. If you are not, SKIP this step.




You need to attach this bracket (#010-6662) to your projector.

NOTE: This bracket may not fit on some older versions of the Espon projector. If this bracket does not fit on your projector, do not use it.



Attach the bracket to the monitor as shown. You will use the following hardware:
Bolt 030-1695, Washer 030-1397 & Nut 030-0159.


The bolt and washer will go on top of the bracket and the nut goes underneath.

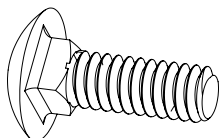

030-1695




030-1397

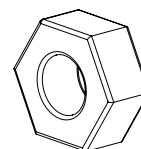


030-0159

7

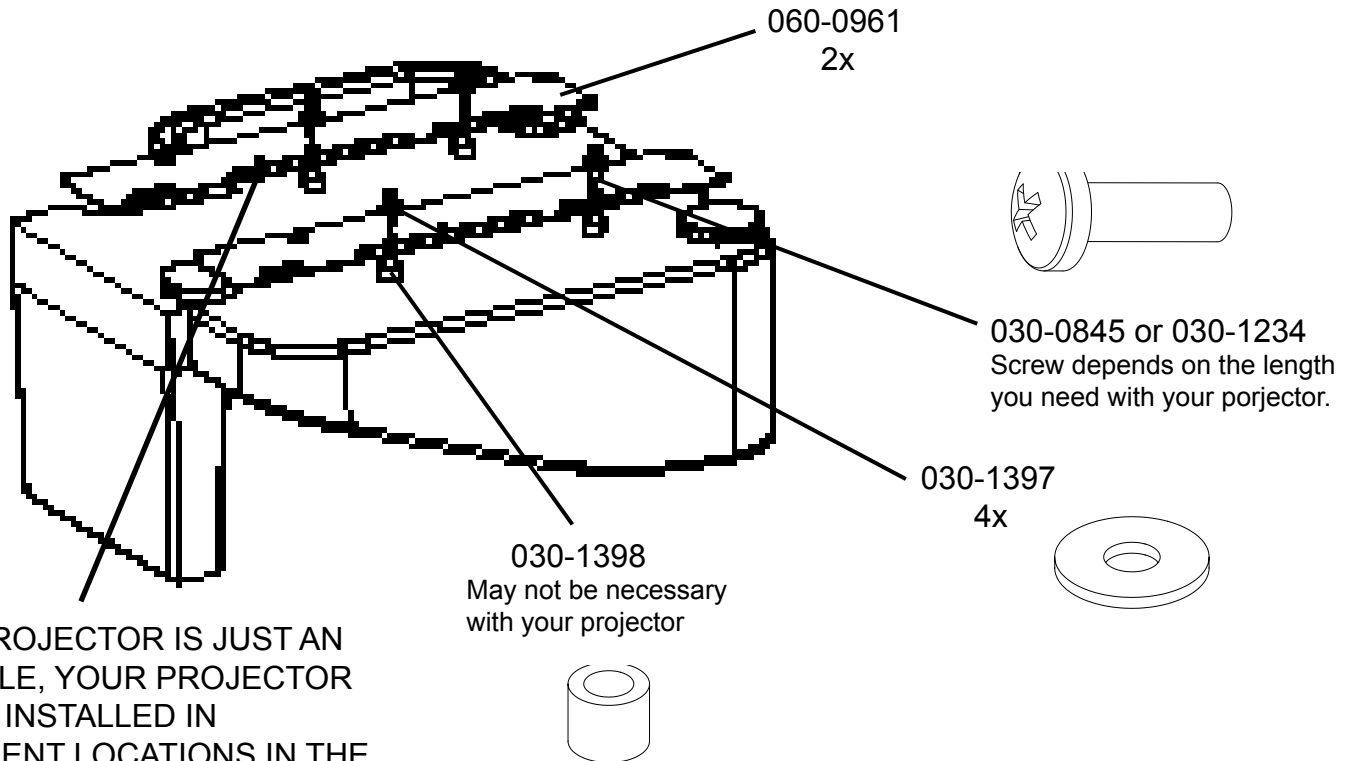

THIS PROJECTOR IS JUST AN
EXAMPLE, YOUR PROJECTOR
MAYBE INSTALLED IN
DIFFERENT LOCATIONS IN THE
SLOTS DUE TO THE MOUNTING
HOLE LOCATIONS.

Install mounting bar assembly to your projector. **NOTE:**
Nylon spacers are included in the hardware pack if you need
them. Keep ALL screws loose for adjustment after projector
is mounted onto the cart.

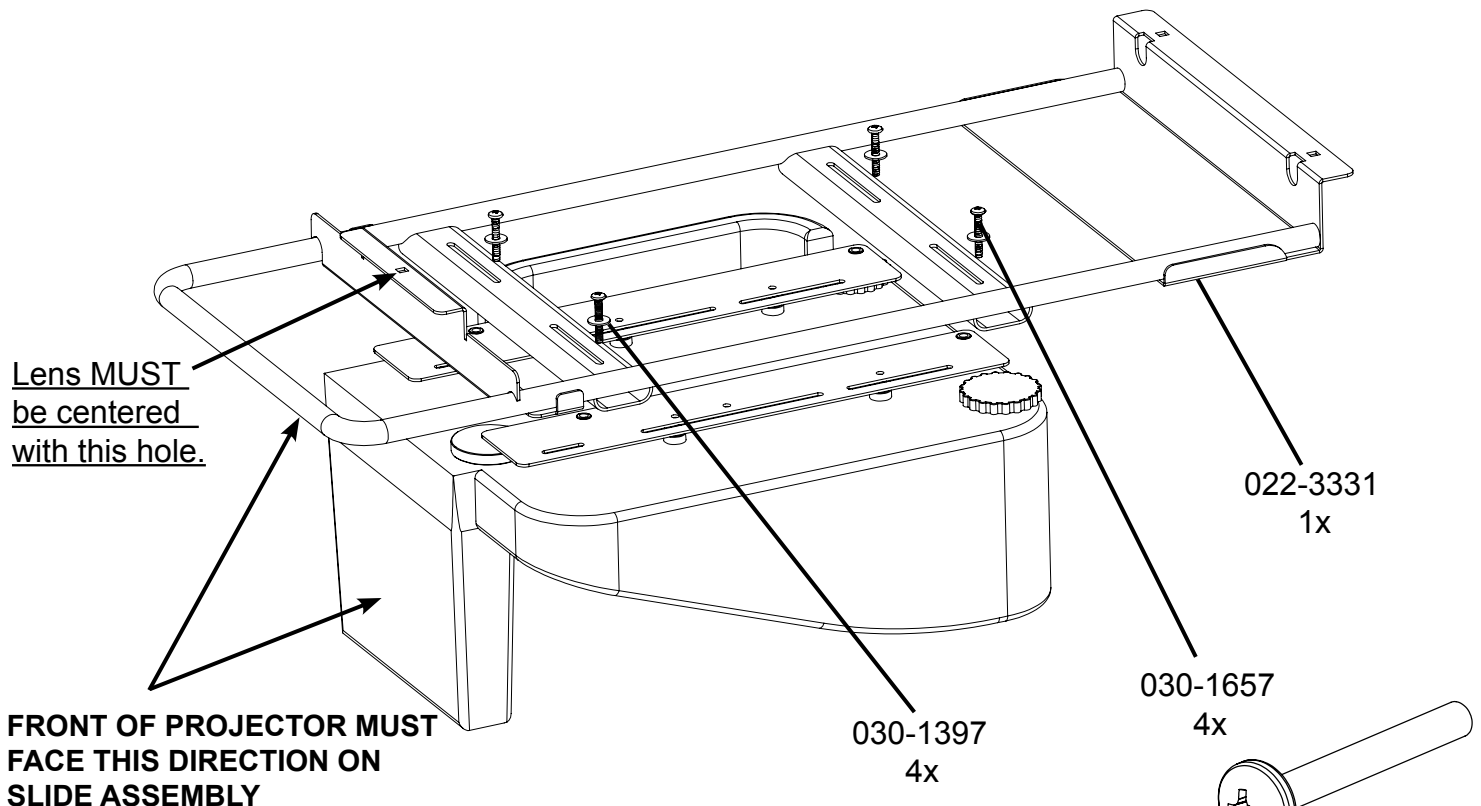

Attach projector to slide assembly.

Keep ALL screws loose for adjustment after projector is mounted onto the cart.

8

017-1232

1x

022-3331


1x

Projector removed for clarity

**INSTALLING THIS ASSEMBLY
REQUIRES 2 PEOPLE!!**

SAFETY WARNING!!
TWO PERSON
ASSEMBLY REQUIRED




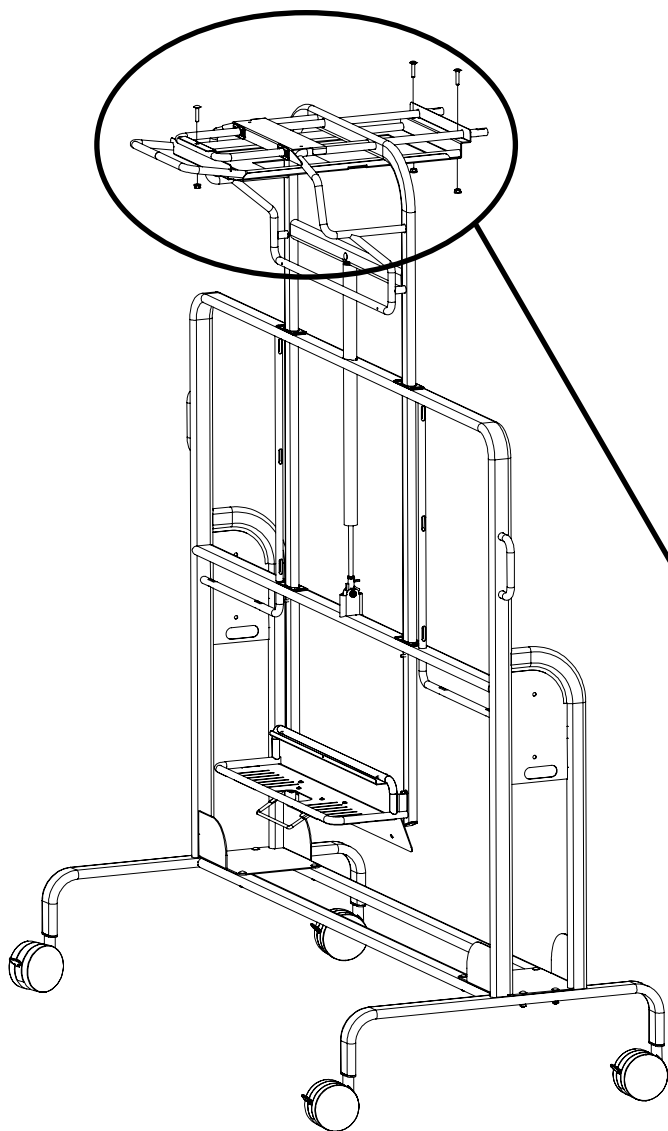


Projector removed for clarity



030-0538

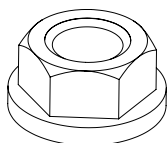

030-0207

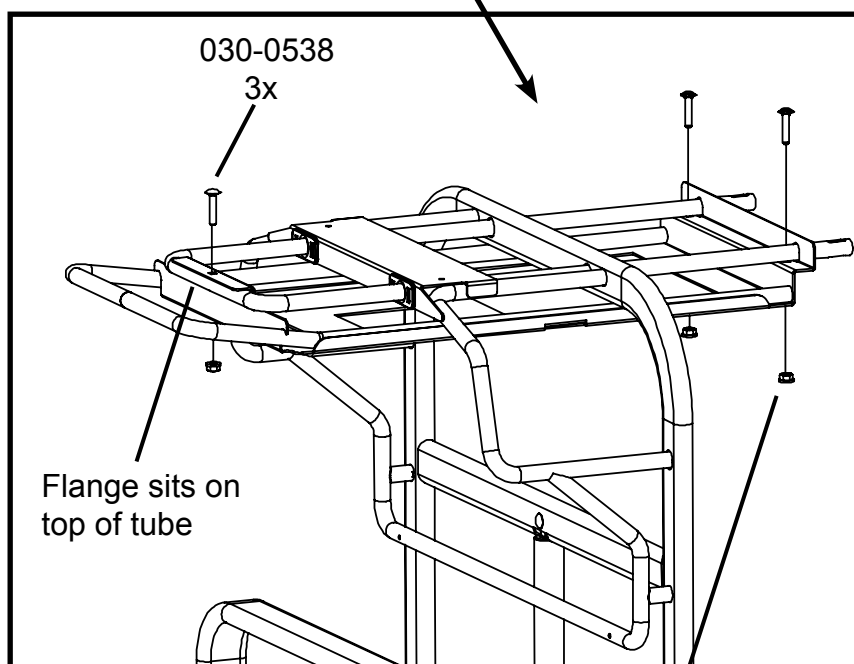

030-0538

3x



Flange sits on
top of tube


030-0207

3x





9

Board
030-1545
1x

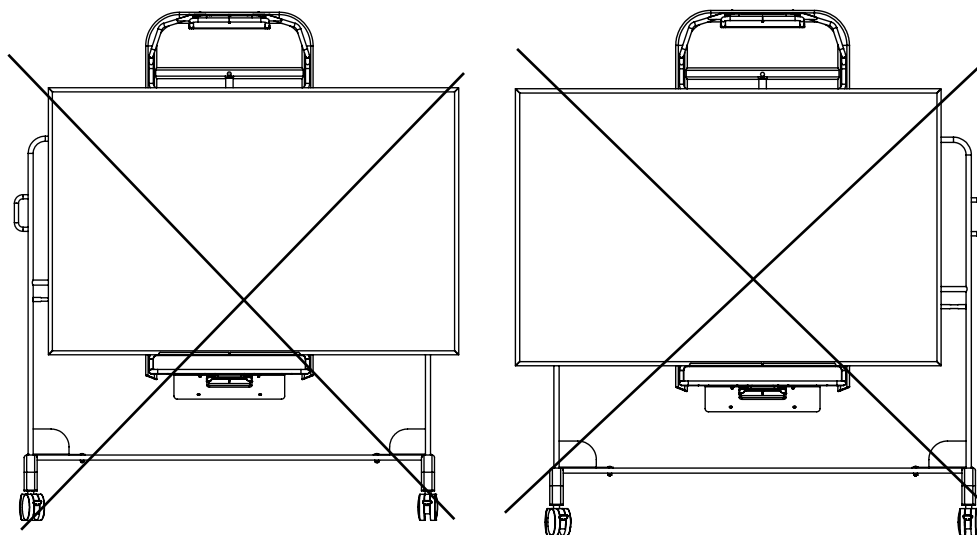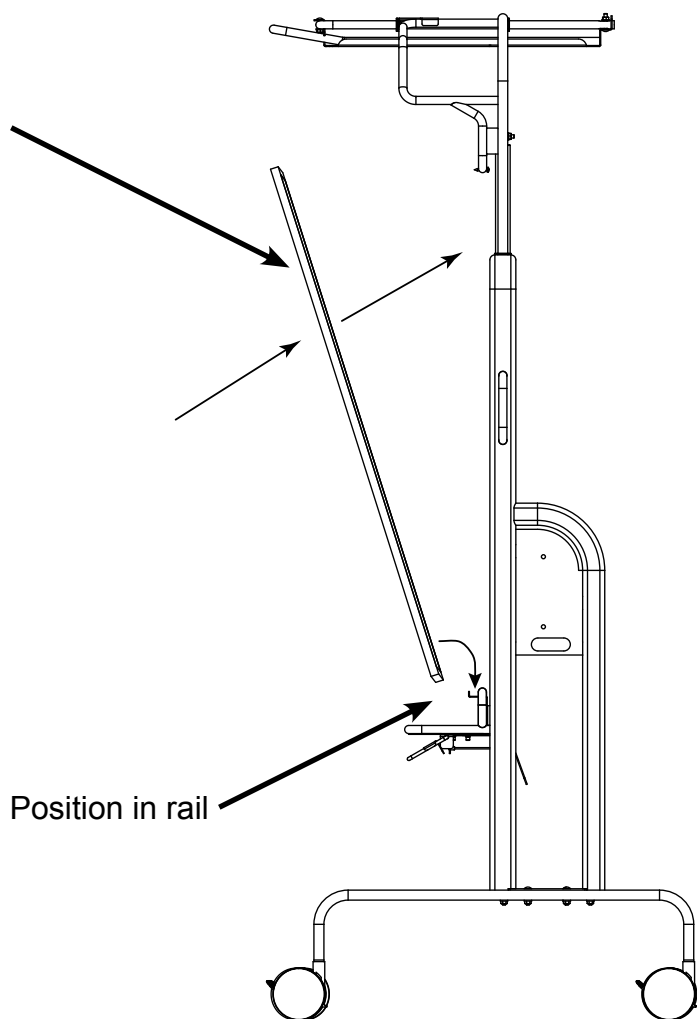

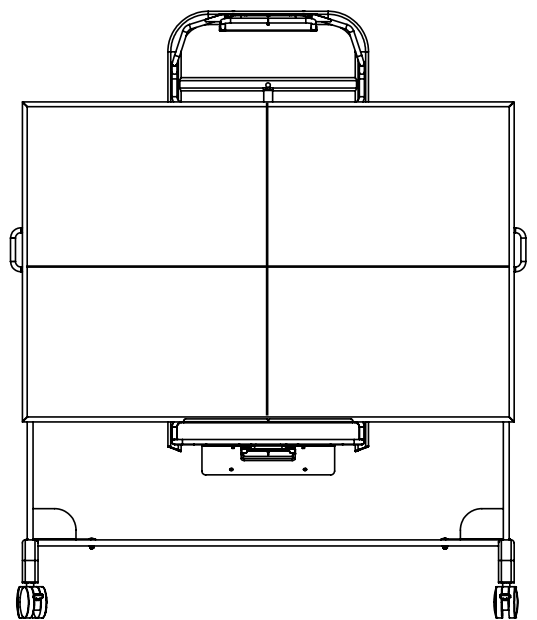


BOARD MUST BE CENTERED

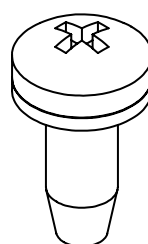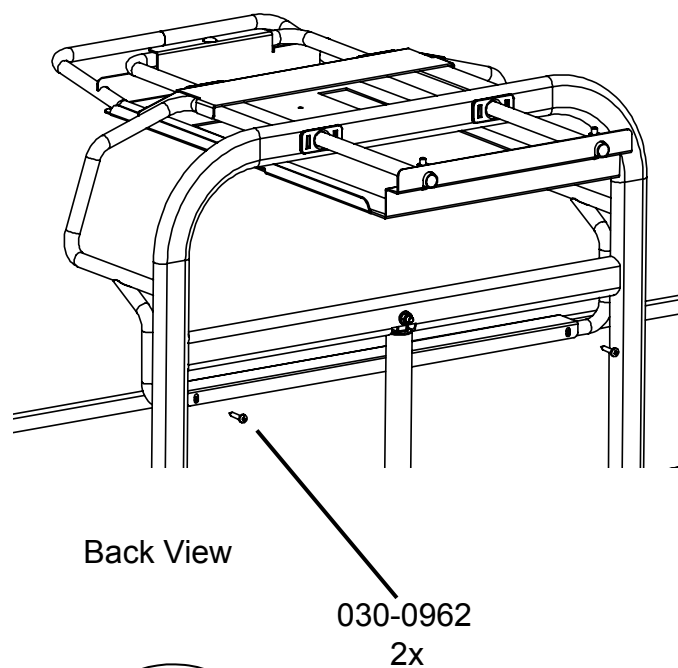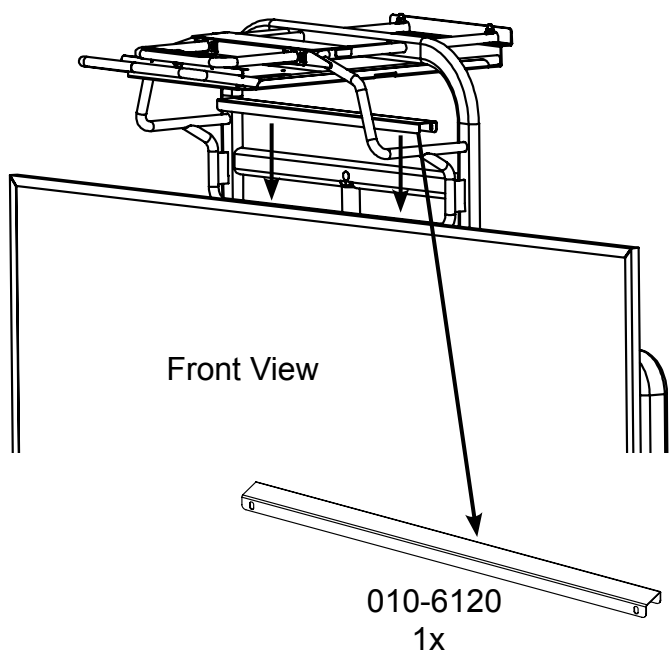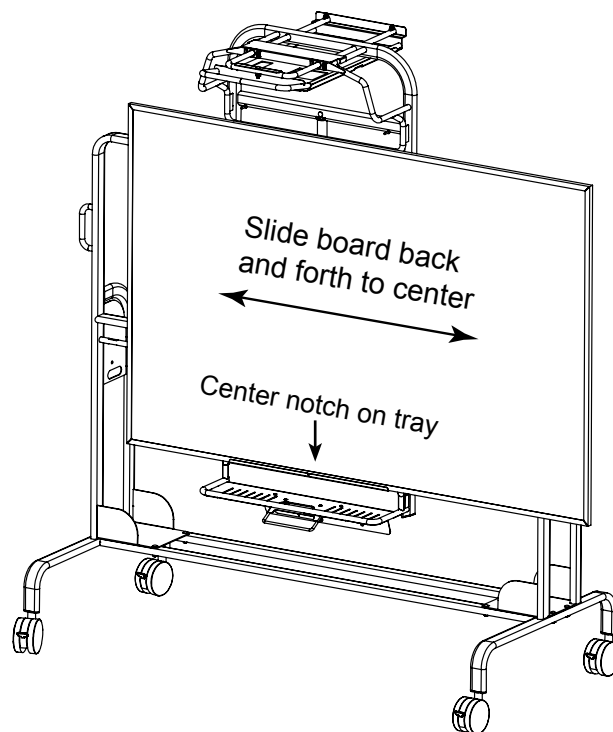

030-0962


10

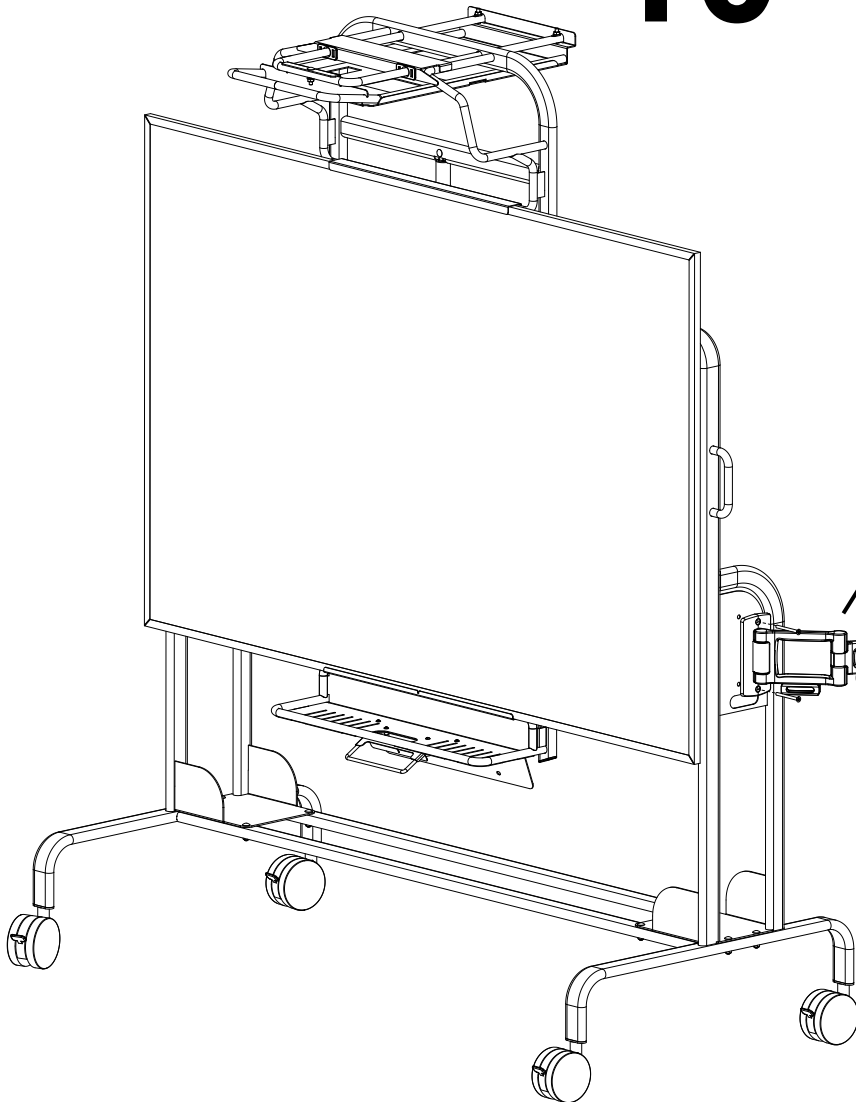


Note: Can be mounted to either side of cart. Best to mount on the same side cables plug into your projector.

060-0926



1x

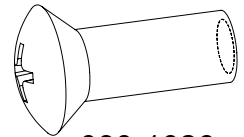


030-1026

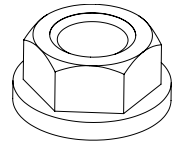

030-0207

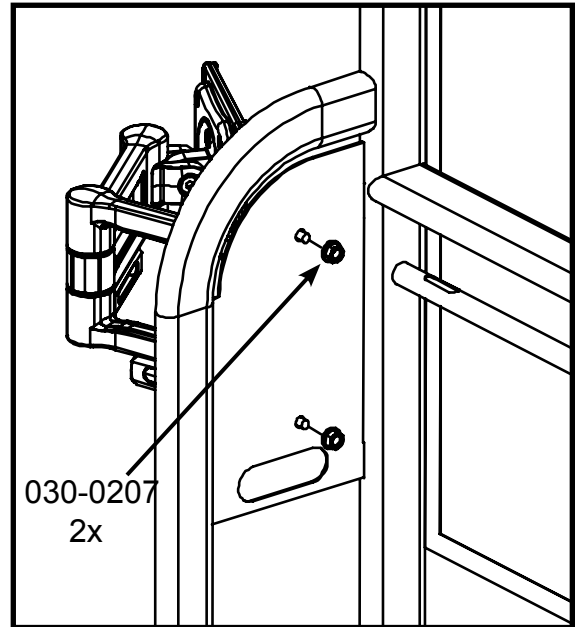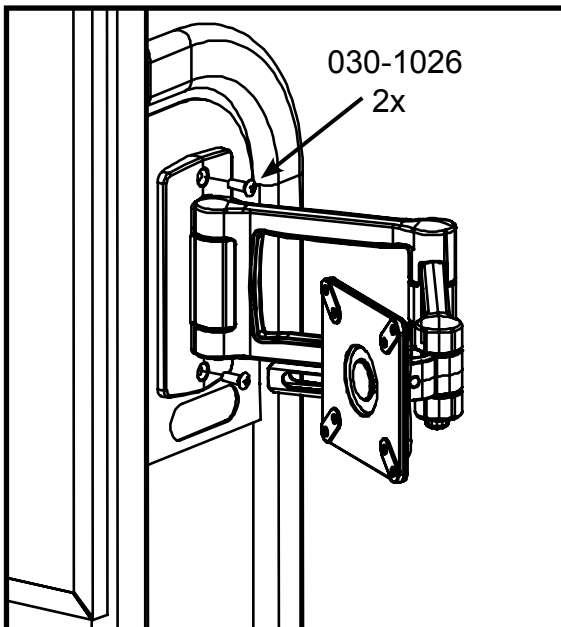


11

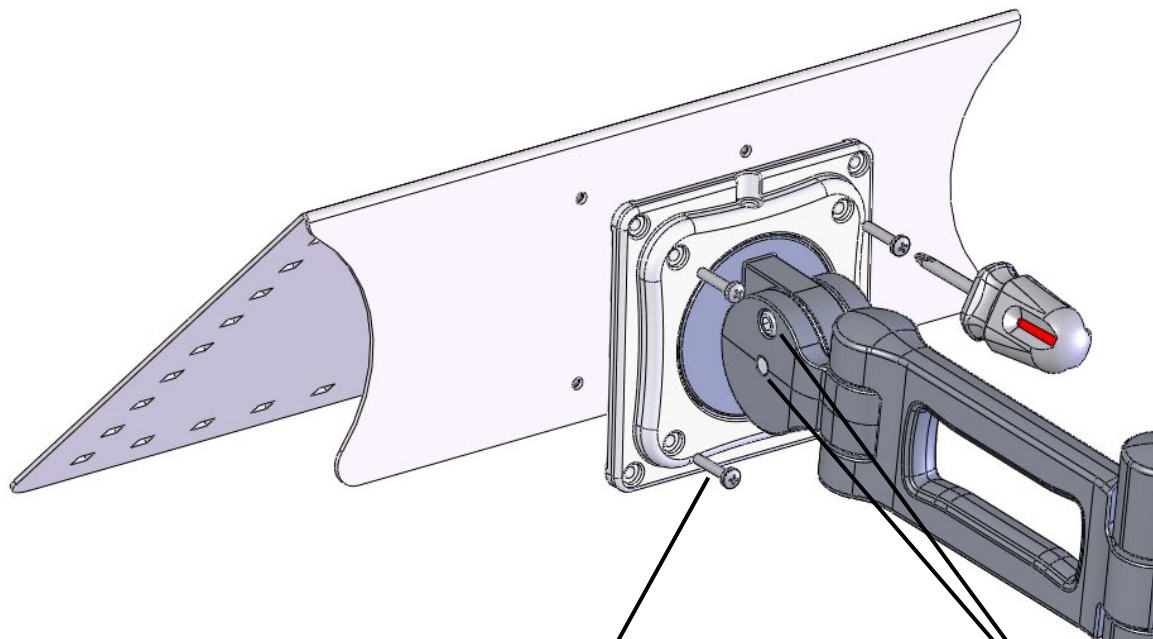


030-0845
4x

These are the main tension screws. They control the pitch movement of the vesa joint. Adjust carefully.

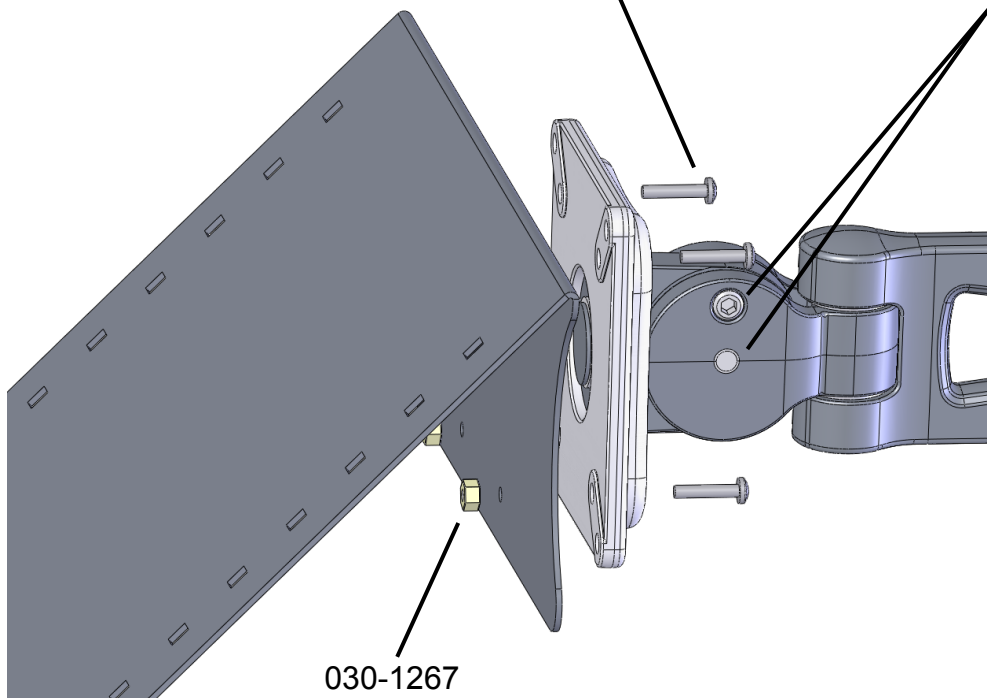


030-1267
4x


12

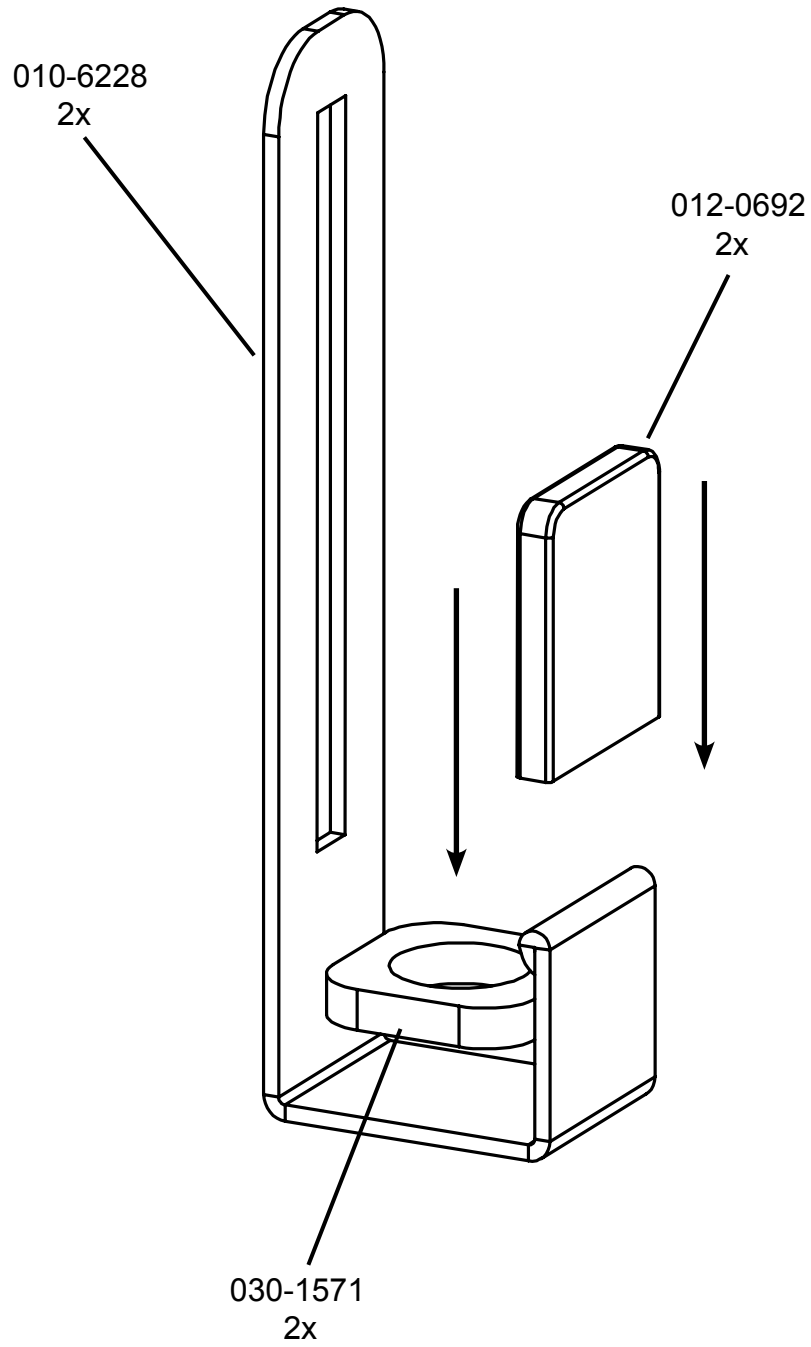


13

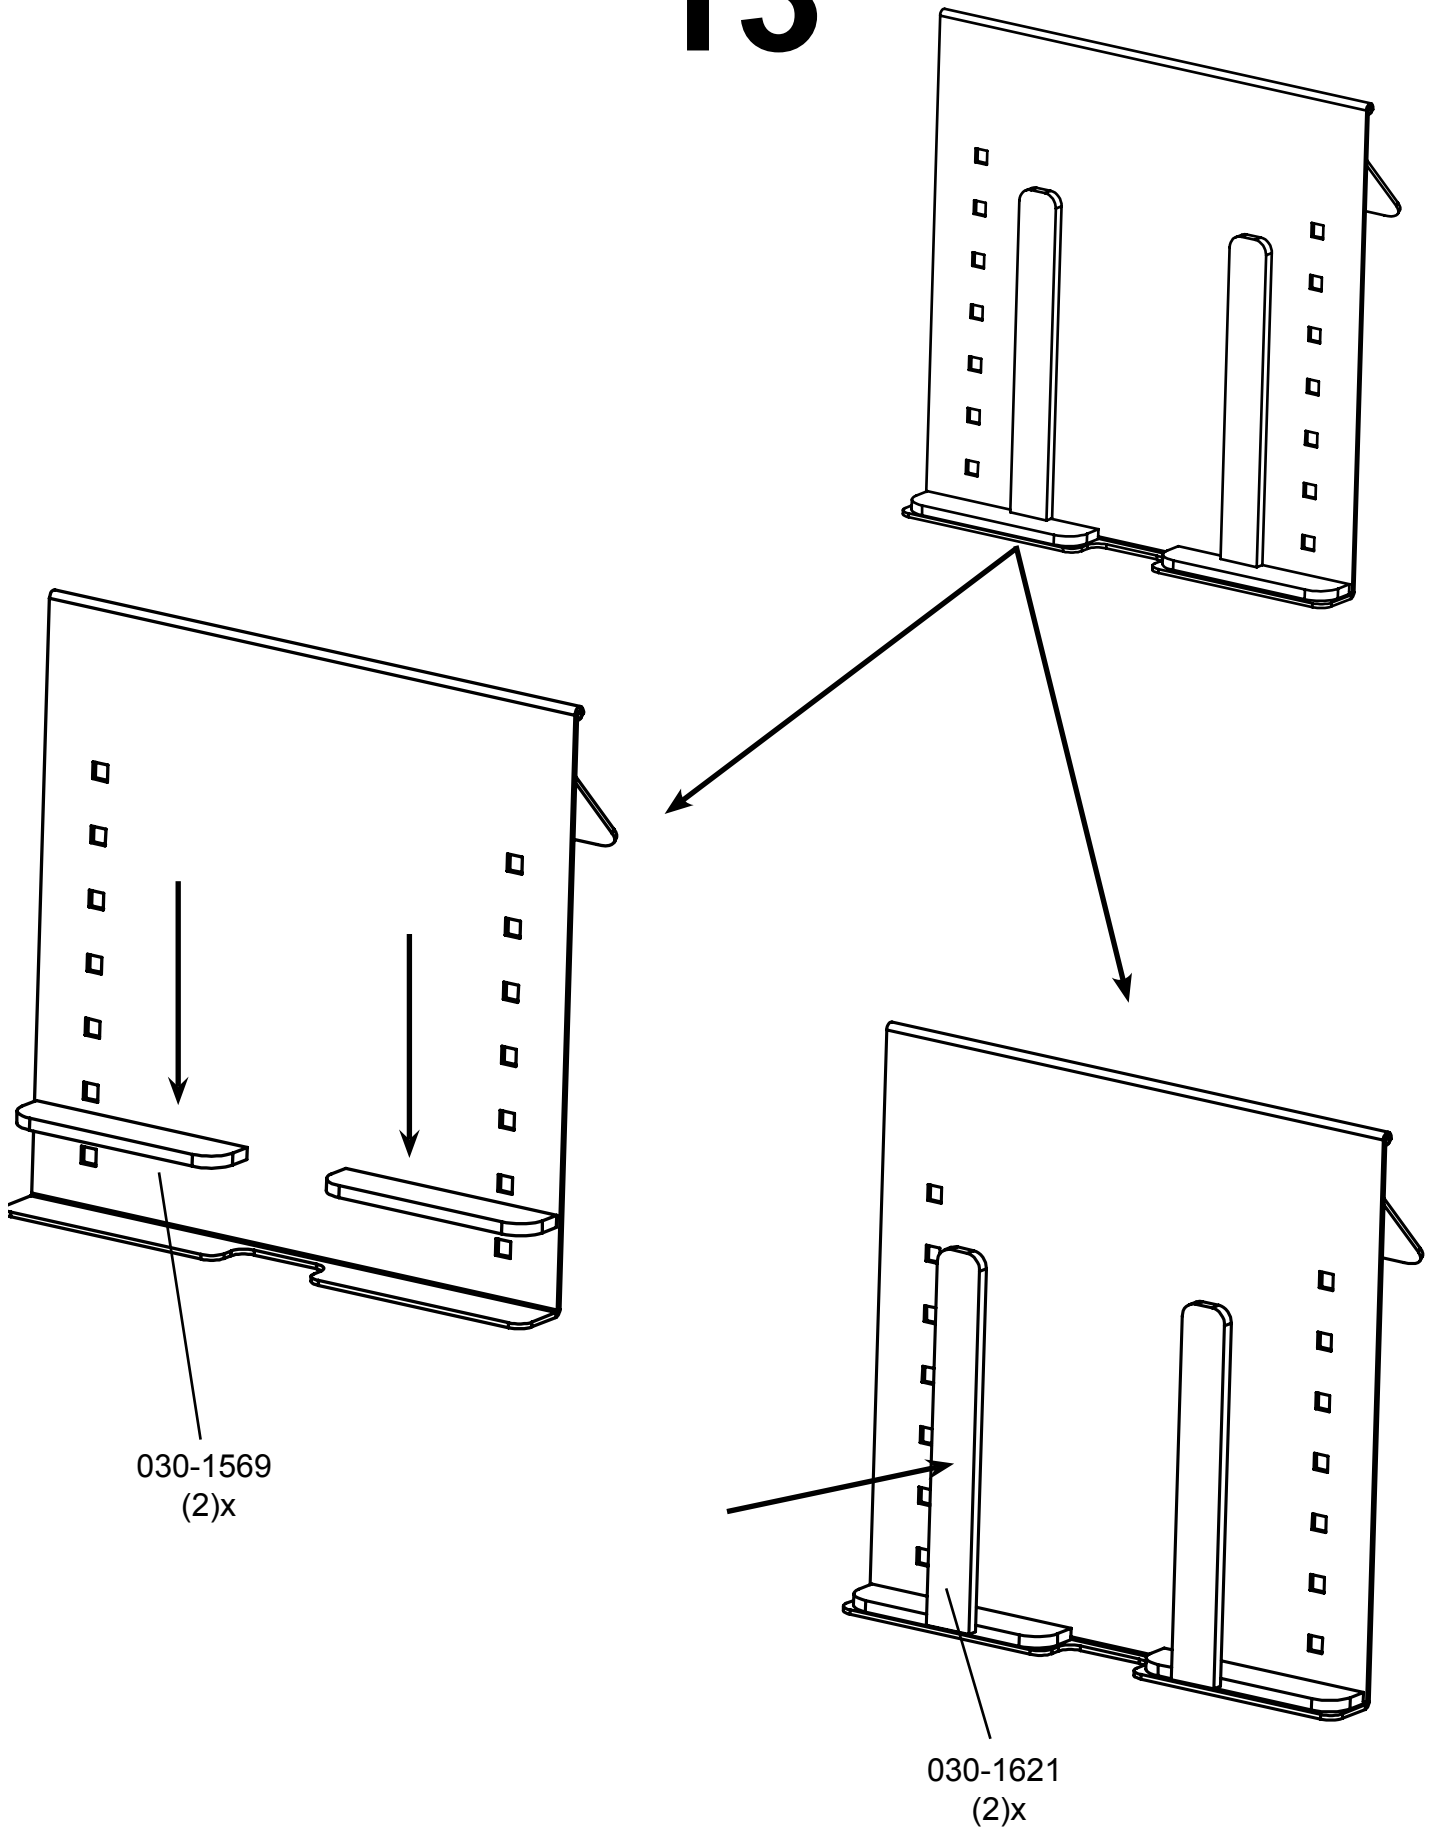

14

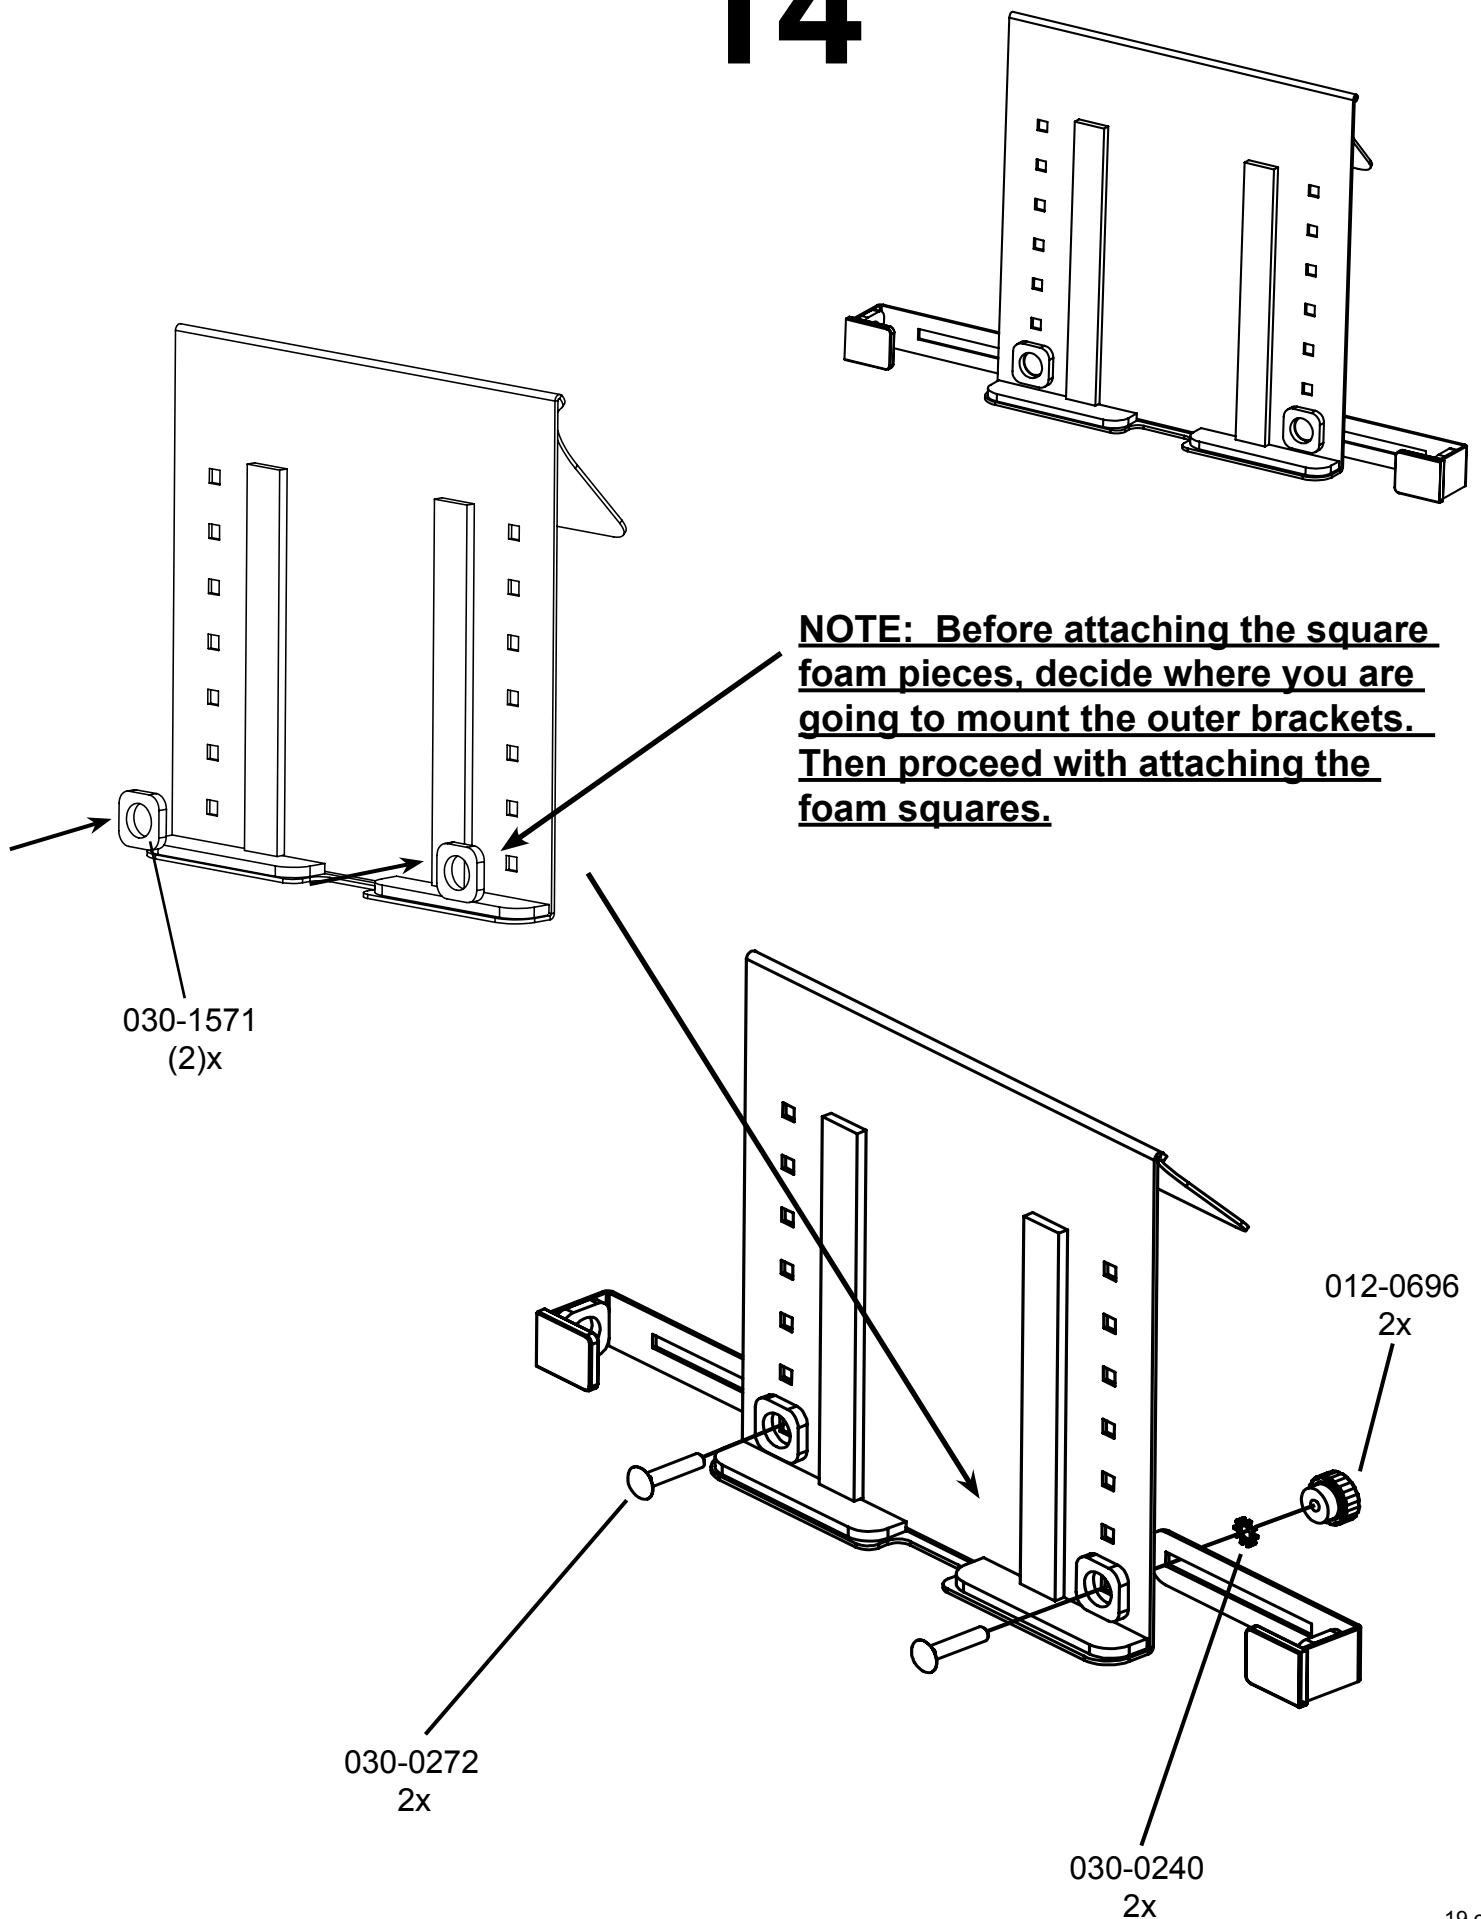


15

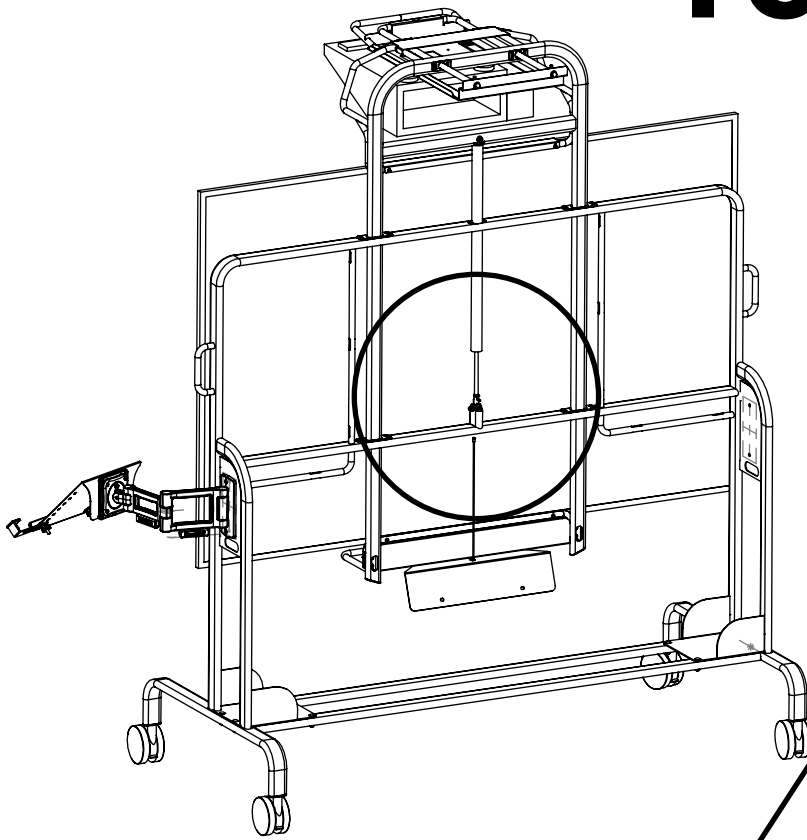


When attaching the cable to the cylinder, be very careful not to pull up on the lever. By doing this it may cause the cylinder to spring up.

030-1611 - Cable
QTY 1


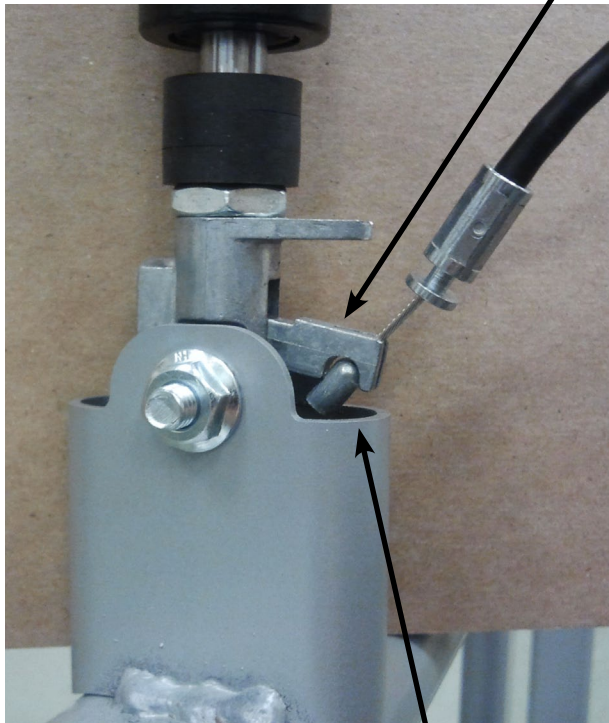


Hook end of cable onto cylinder

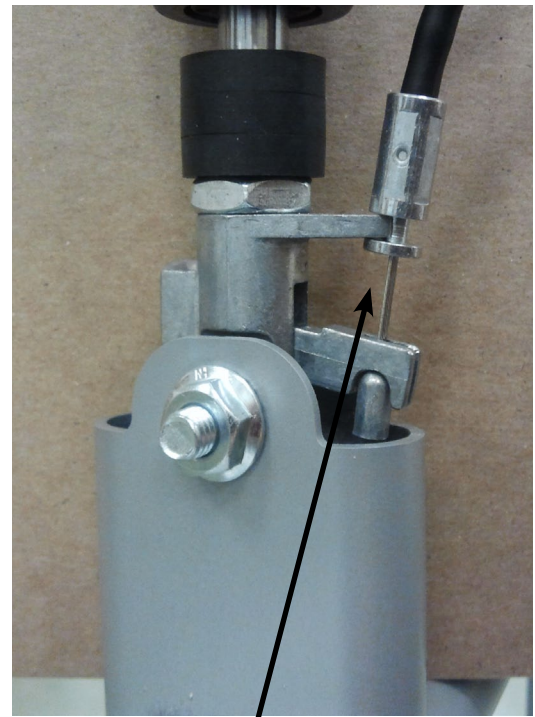


Slide in place.


16

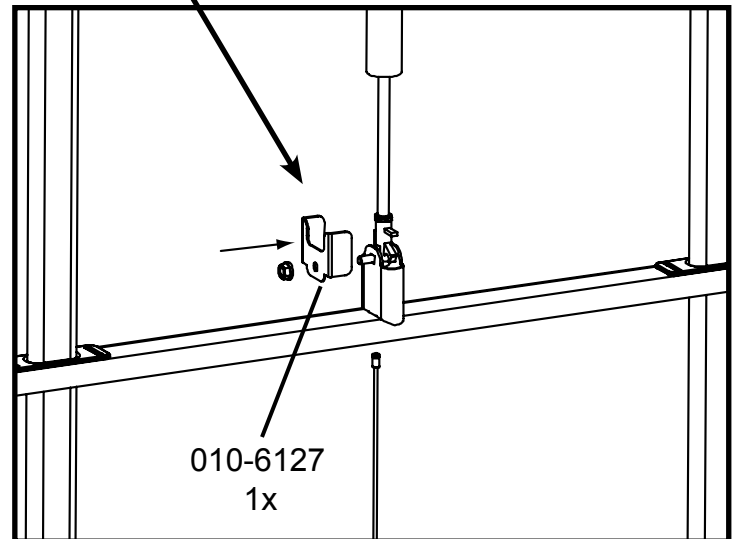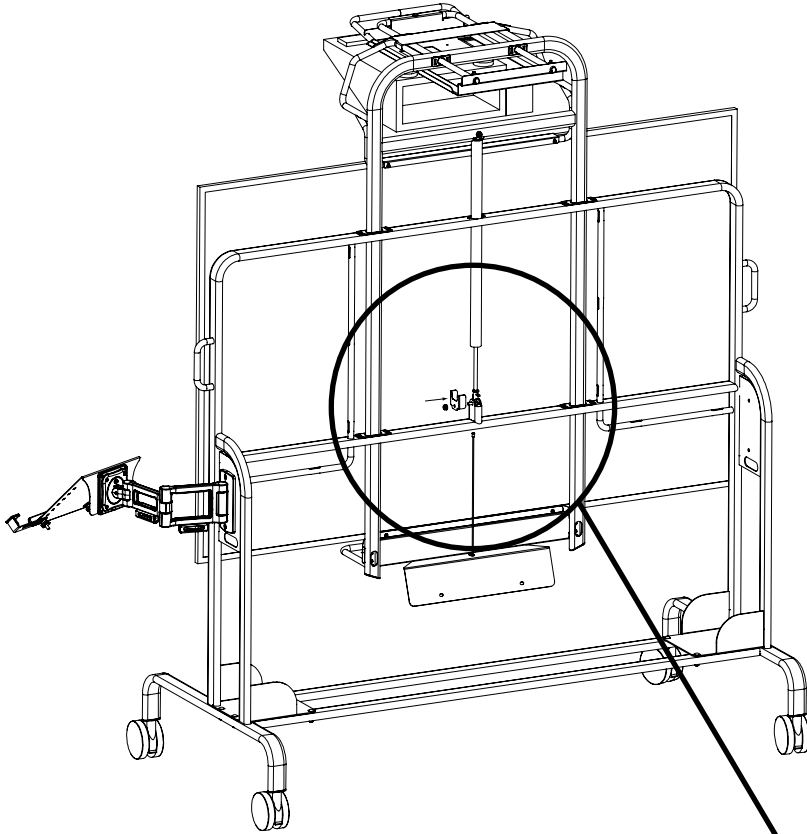



17

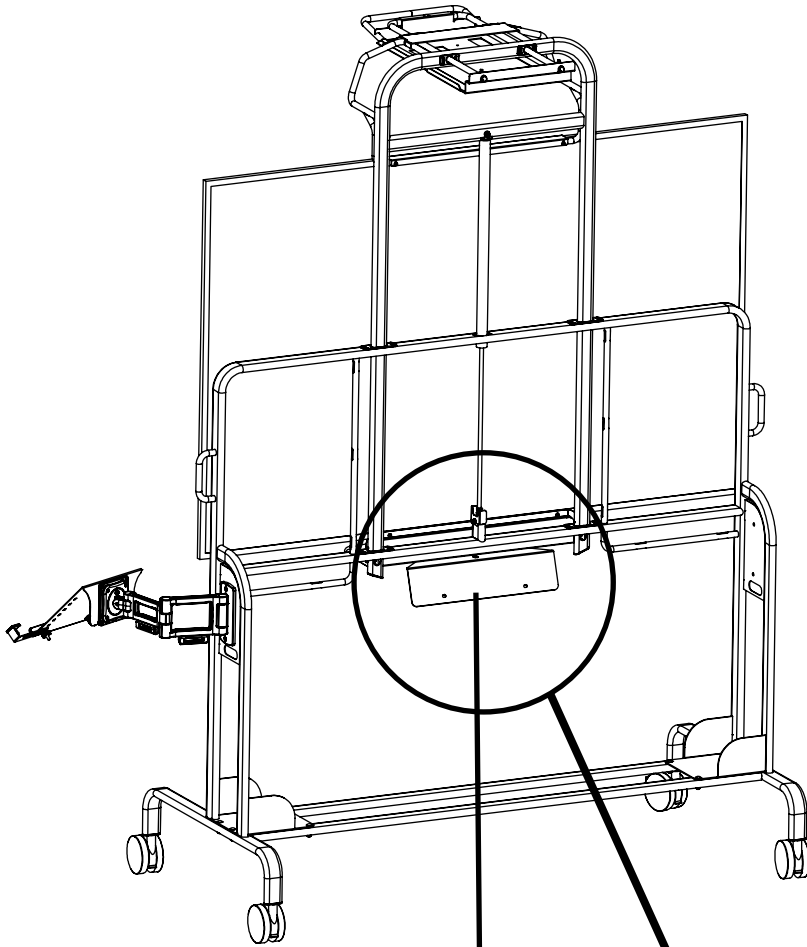


Slide cable through hole in handle assembly.

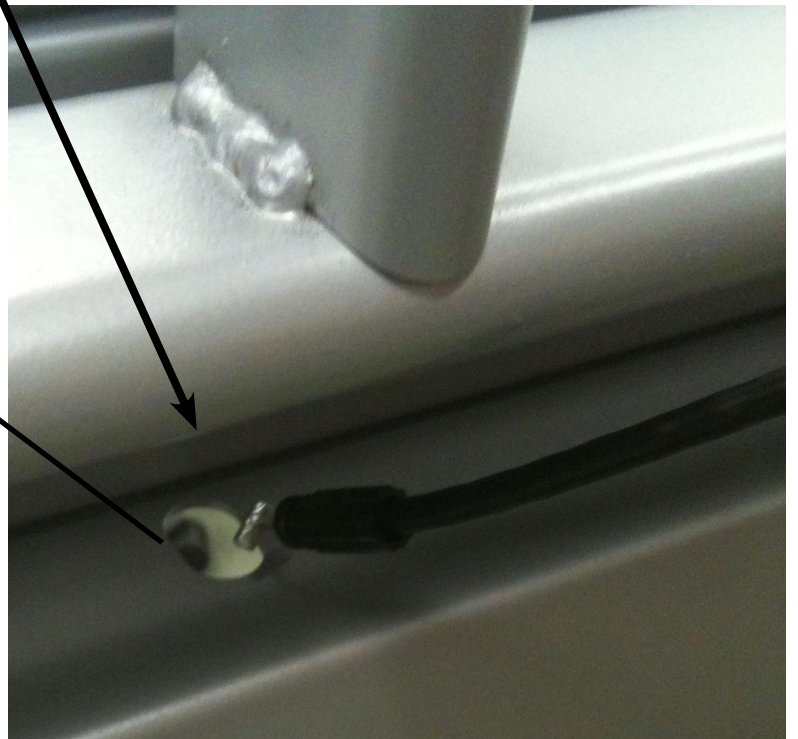




18

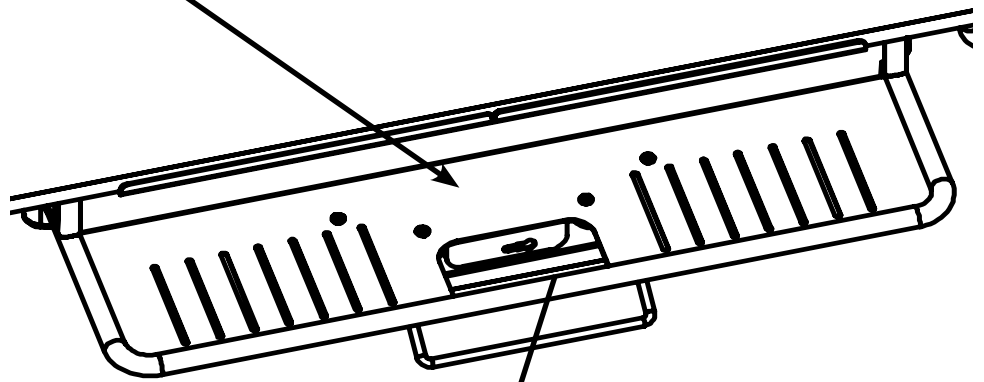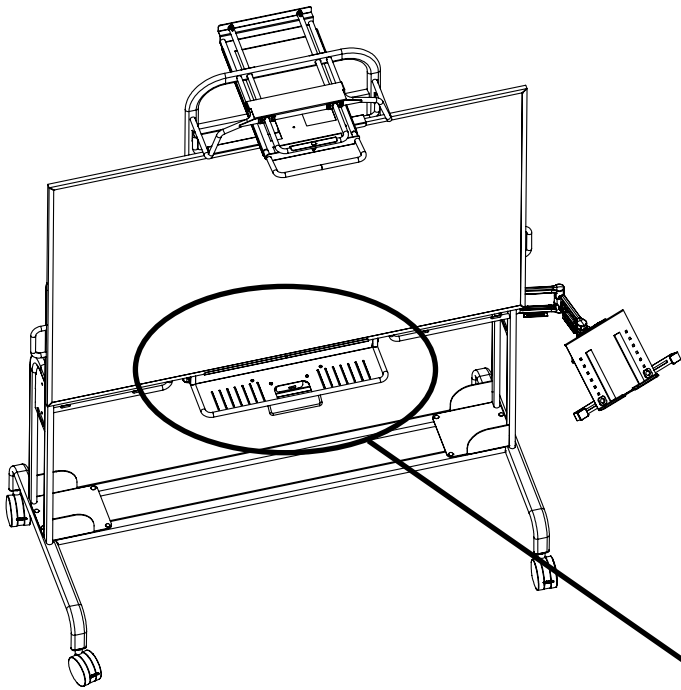



Slide cable through eye lit hole and slide it to the left.

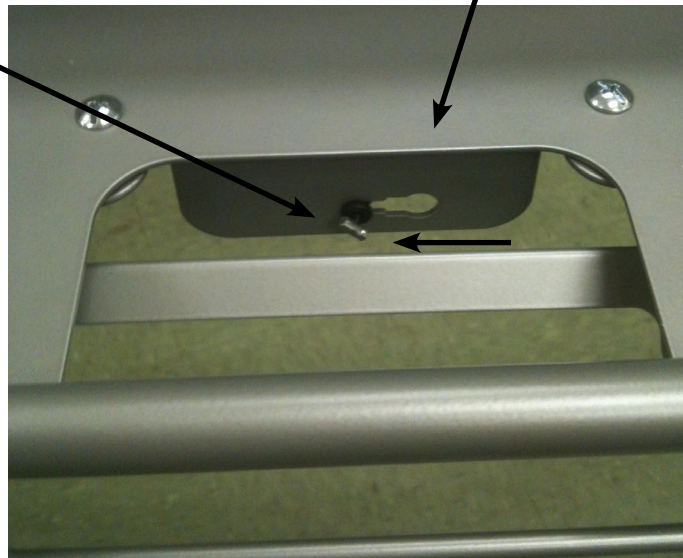

19

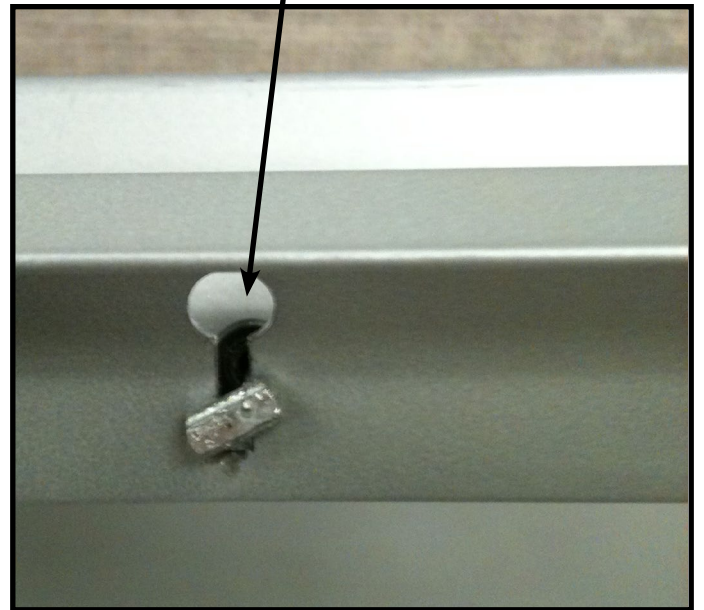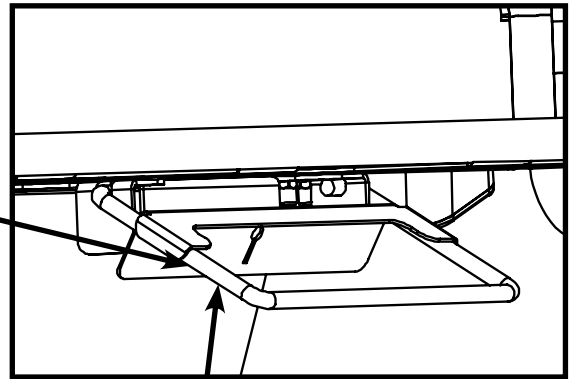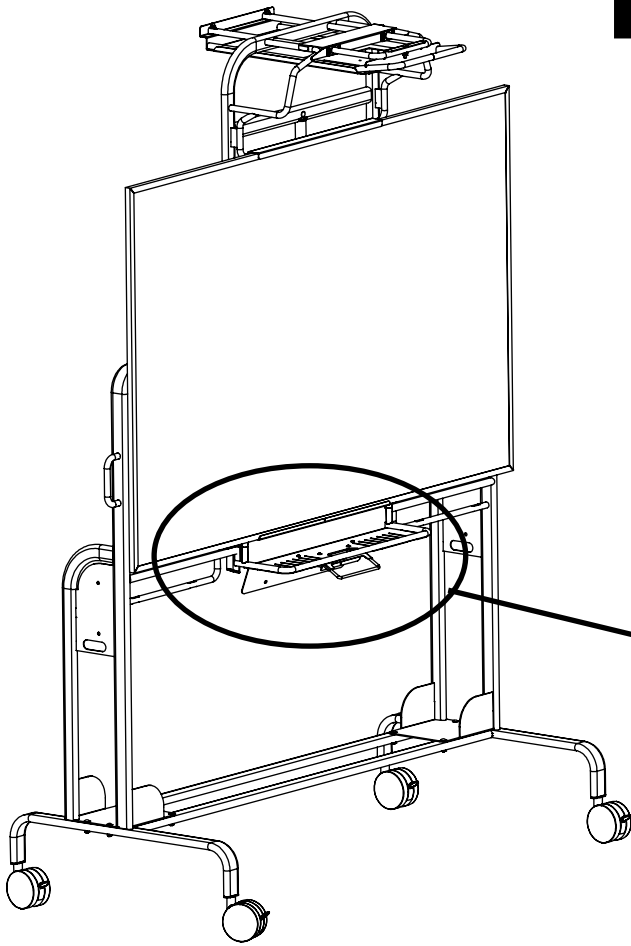

With pliers, pull the cable through the next handle piece so that it sits in the narrow part of the eyelit hole.

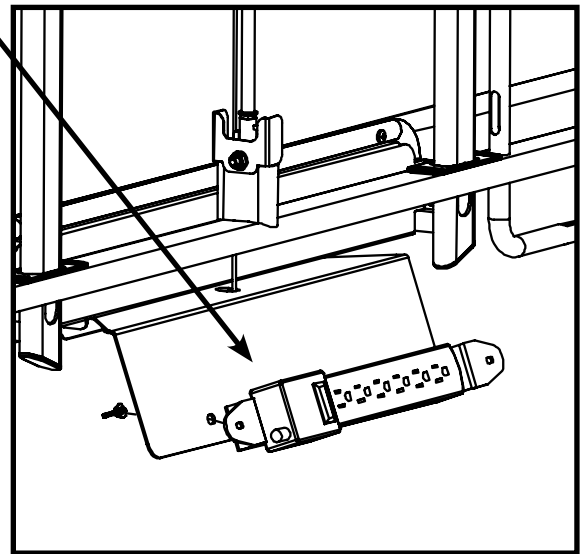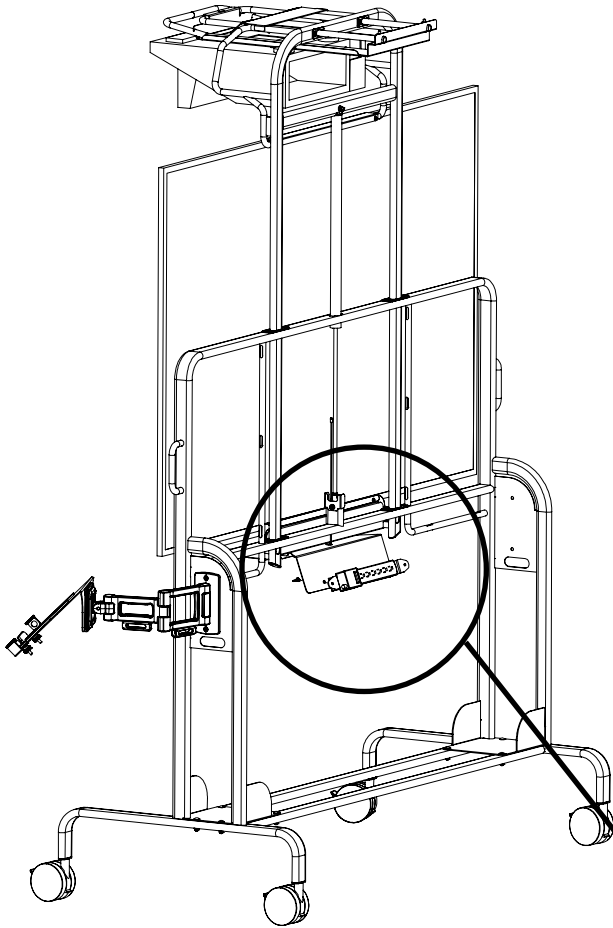

Bretford®
 11000 Seymour Avenue
 Franklin Park, IL 60131
 TEL: 847.678.2545
 800.521.9614
 FAX: 847.678.0852
 800.343.1779

Bretford Ltd.
 2 Etongate
 110 Windsor Road, Slough
 Berkshire SL1 2JA England
 TEL: 011 44 17 5353 9955
 FAX: 011 44 17 5353 9478