



XFOLD TRAVEL X8

QUICK START GUIDE




WHATS IN THE BOX

- 1 TRAVEL X8**
- 1 TRANMITER**
- 2 8000 6S LIPO**
- 2 GROUND ANTEANAS**
- 1 AIR ANTENA**
- 1 sd MONITOR**
- 1 TX CHARGER**
- 1 MONITOR CHARGER**



AFTER YOU REMOVE THE AIRFRAME YOU CAN SEE THE LANDING GEAR AT THE VERY BOTTEM ON THE CASE.

REMOVE THE REMAINING ITEMS IN THE CASE. YOU CAN LEAVE THE 2 CHARGERS

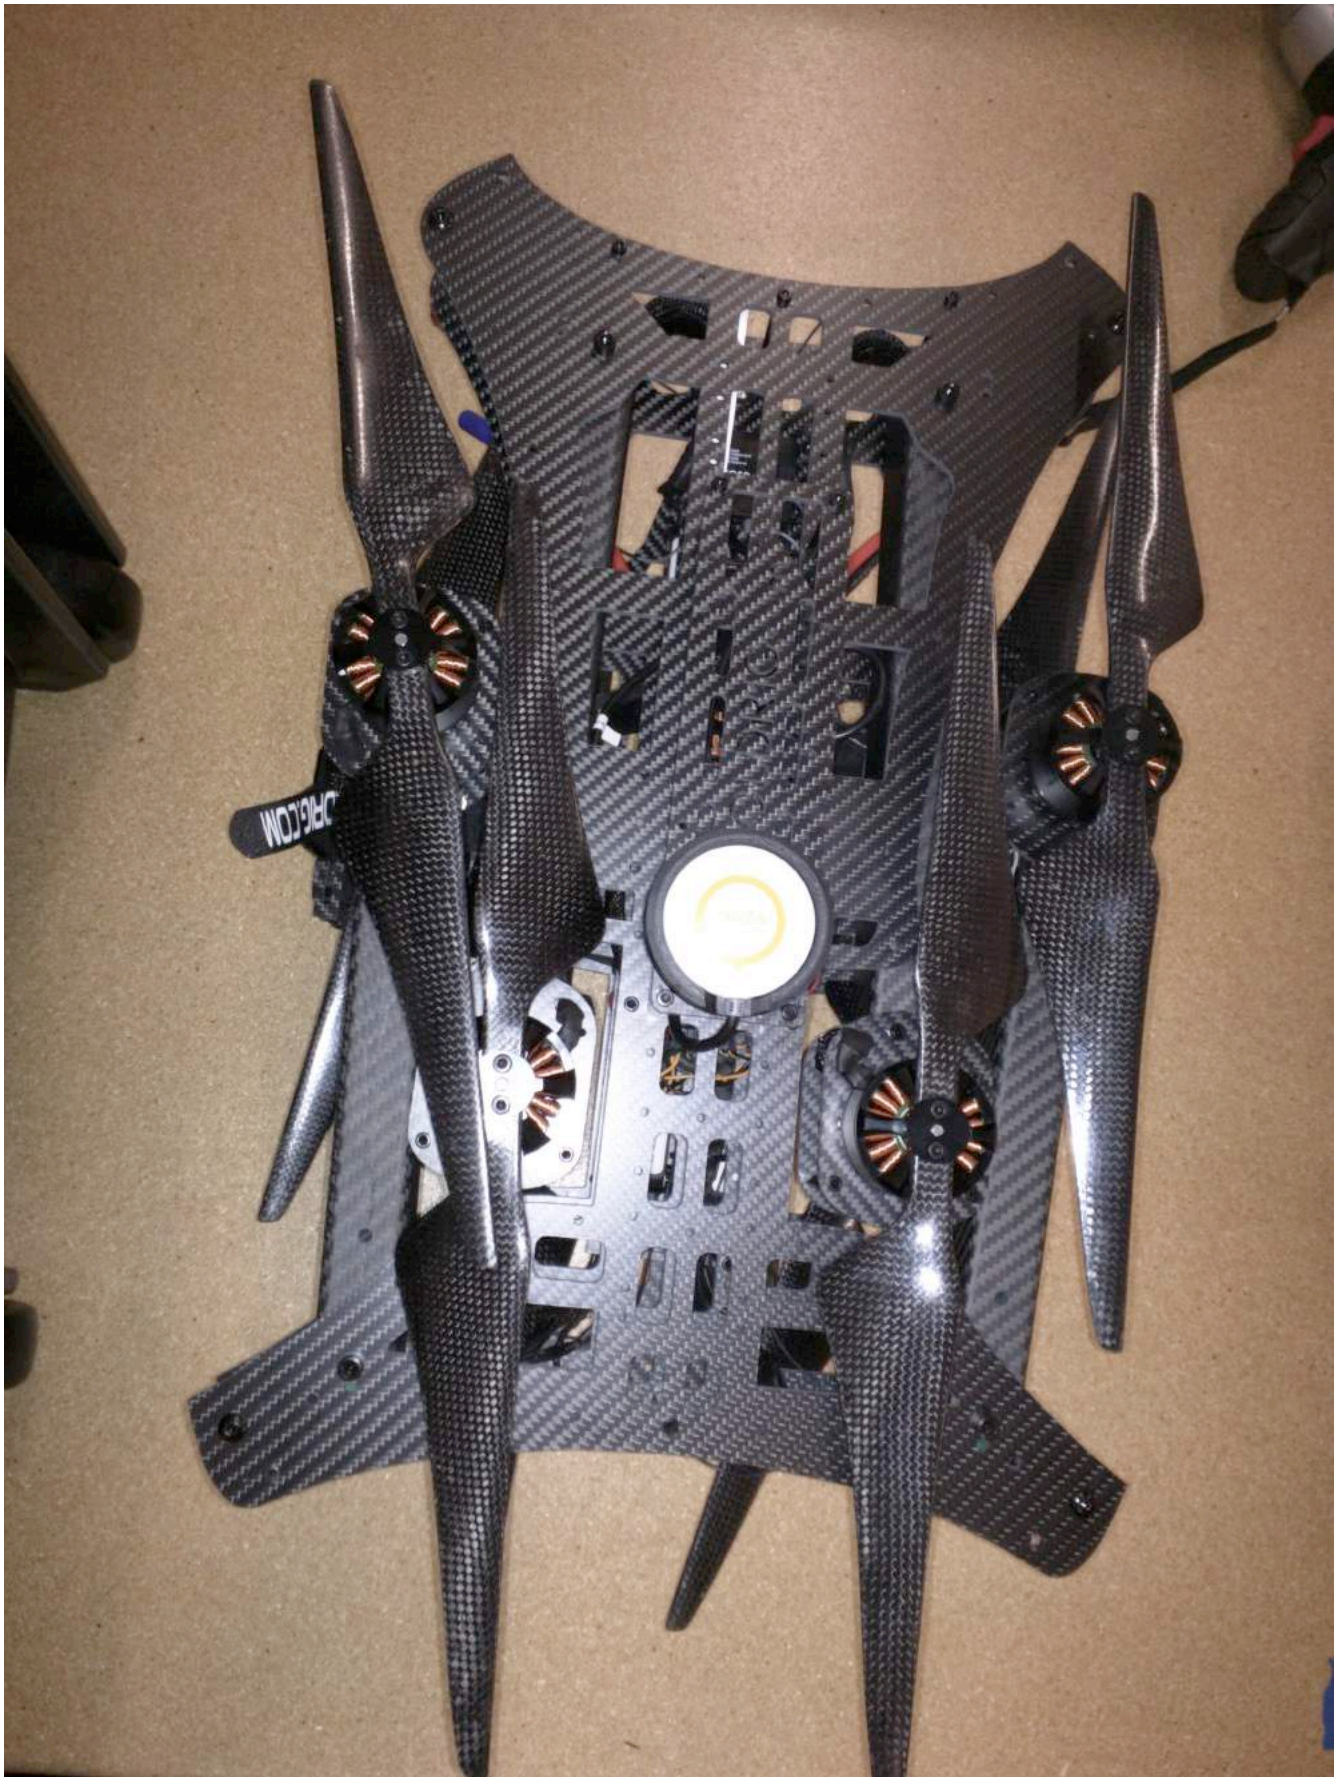










PUT THE LANDING SKIDS IN THE MOTOR ON THE COPTER HAVING THE RED RUBBER TOWARDS THE BACK.

LINE UP THE HOLE AND SLIDE THE BOLT THROUGH THE HOLE FROM THE OUT SIDE IN WITH THE RED KNOB NUT ON THE INSIDE OF THE GEAR.

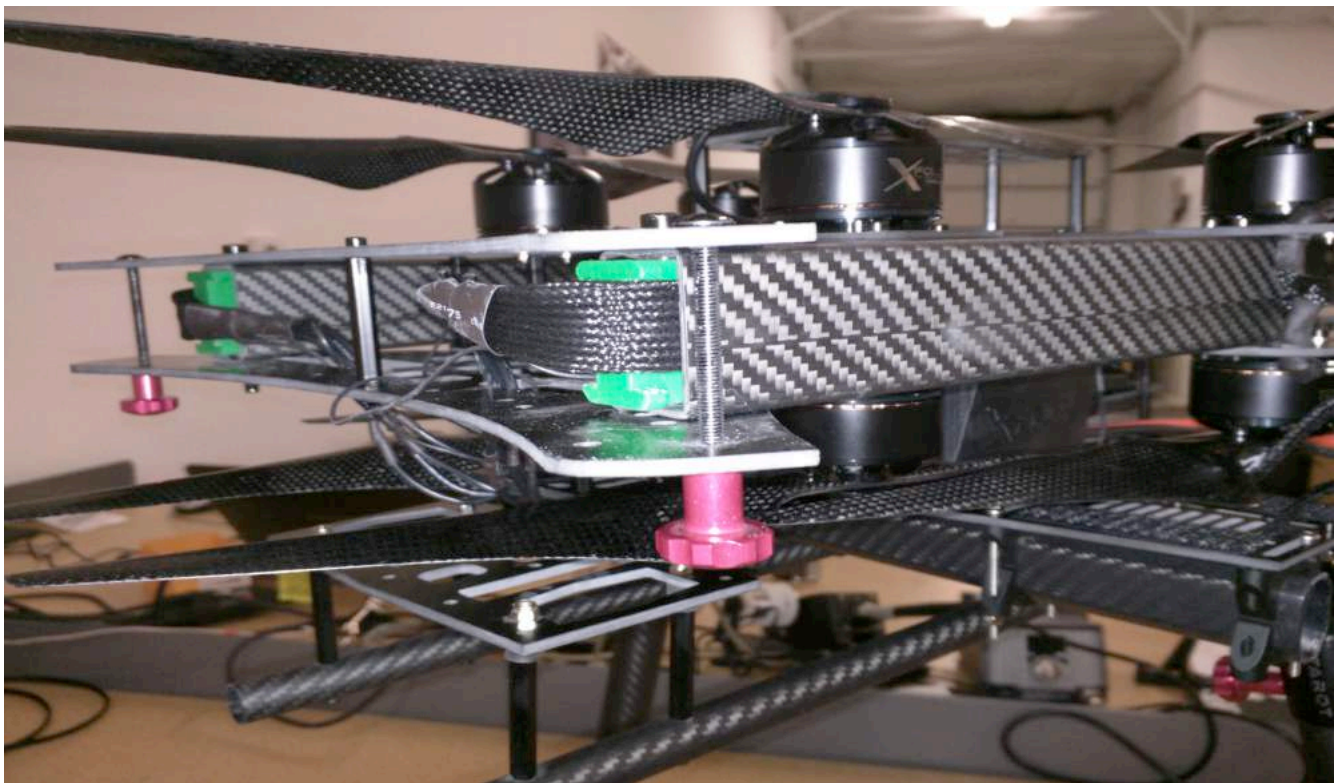





REMOVE THE 4 SCREWS AND KNOBS ALLOWING THE ARMS TO SWING OUT




SLIDE THE BOLT IN THE HOLE TOWARDS THE CENTER OF THE FRAME FOR x8




SECURE IT WITH THE RED KNOB ON THE BOTTOM MAKE SURE IT IS TIGHT

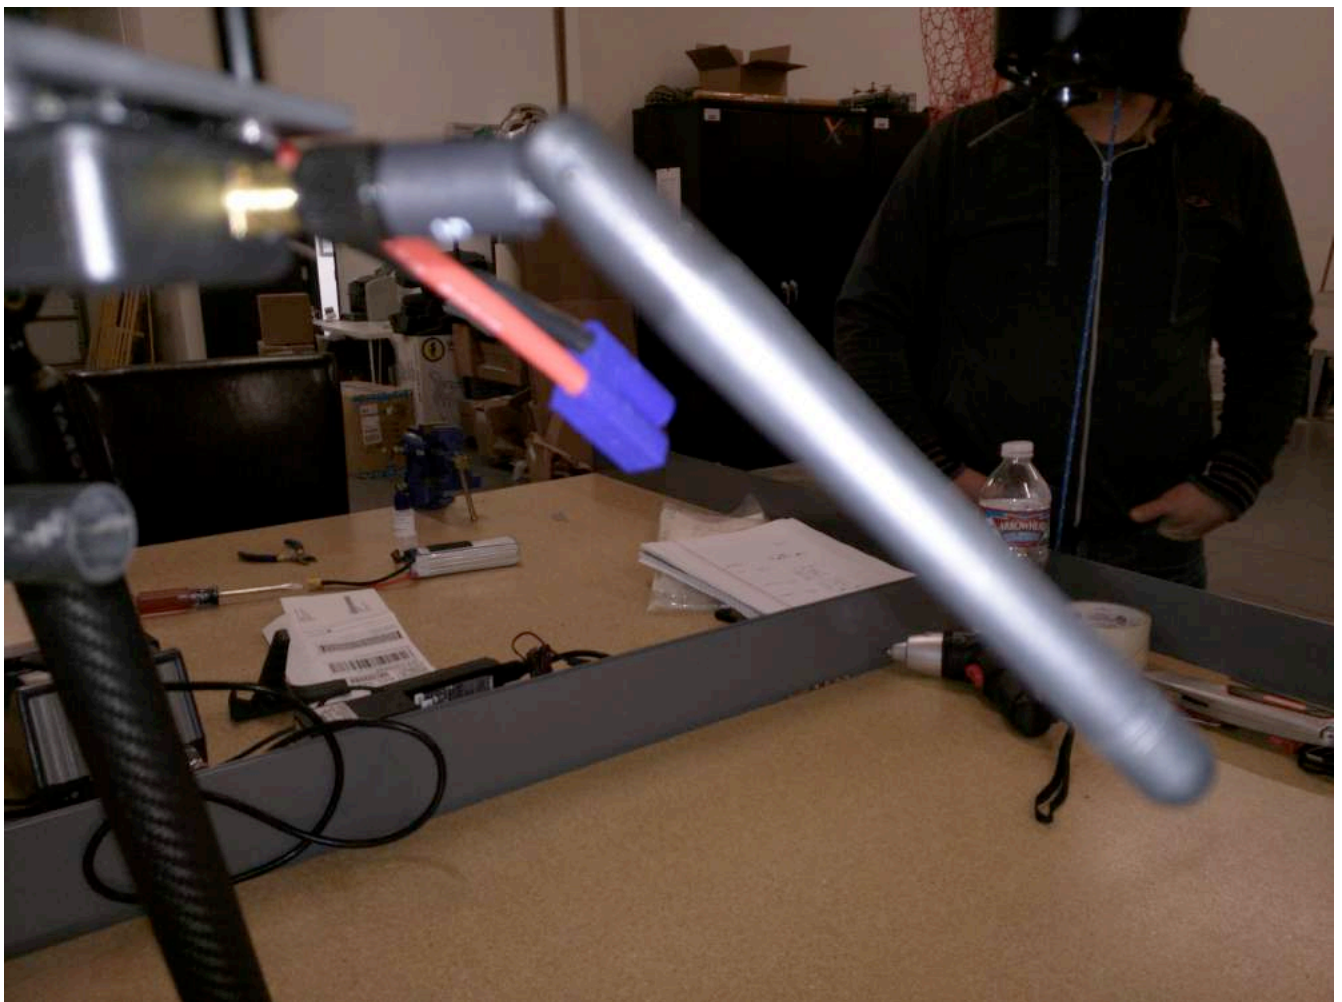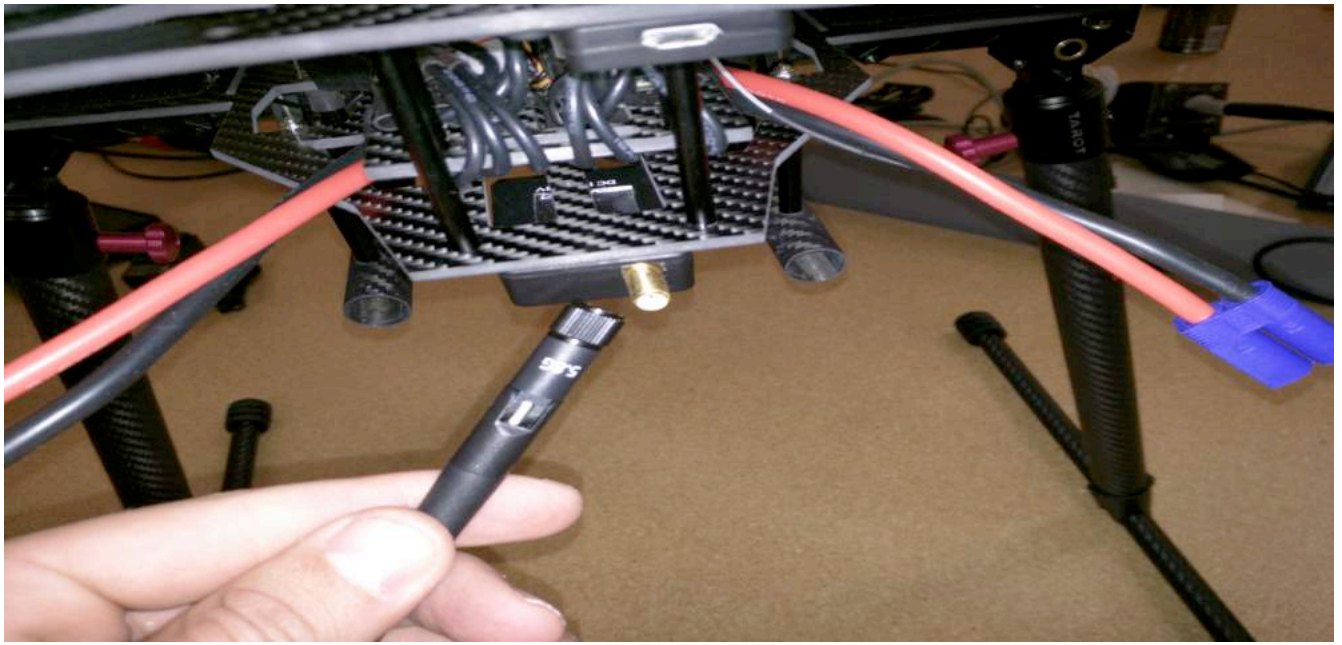



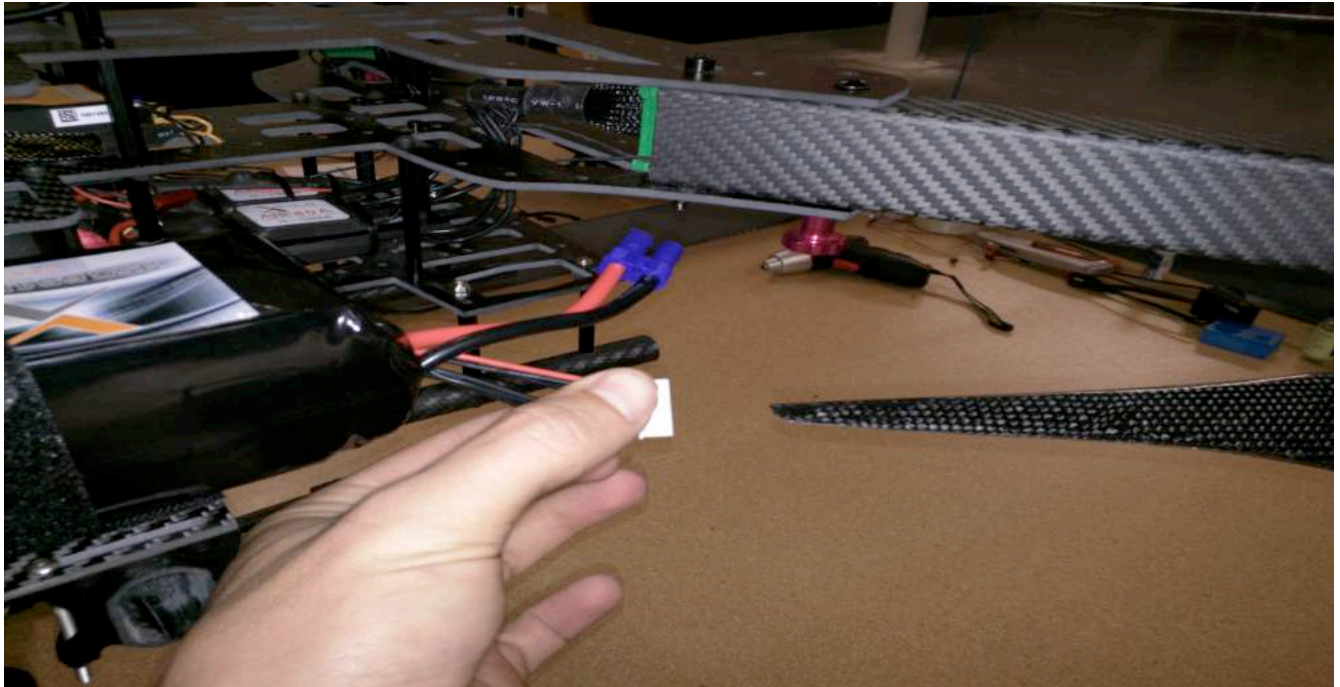

ALWAYS CHECK WIRES TO ENSURE CLEARANCE FROM ALL MOVING PARTS.

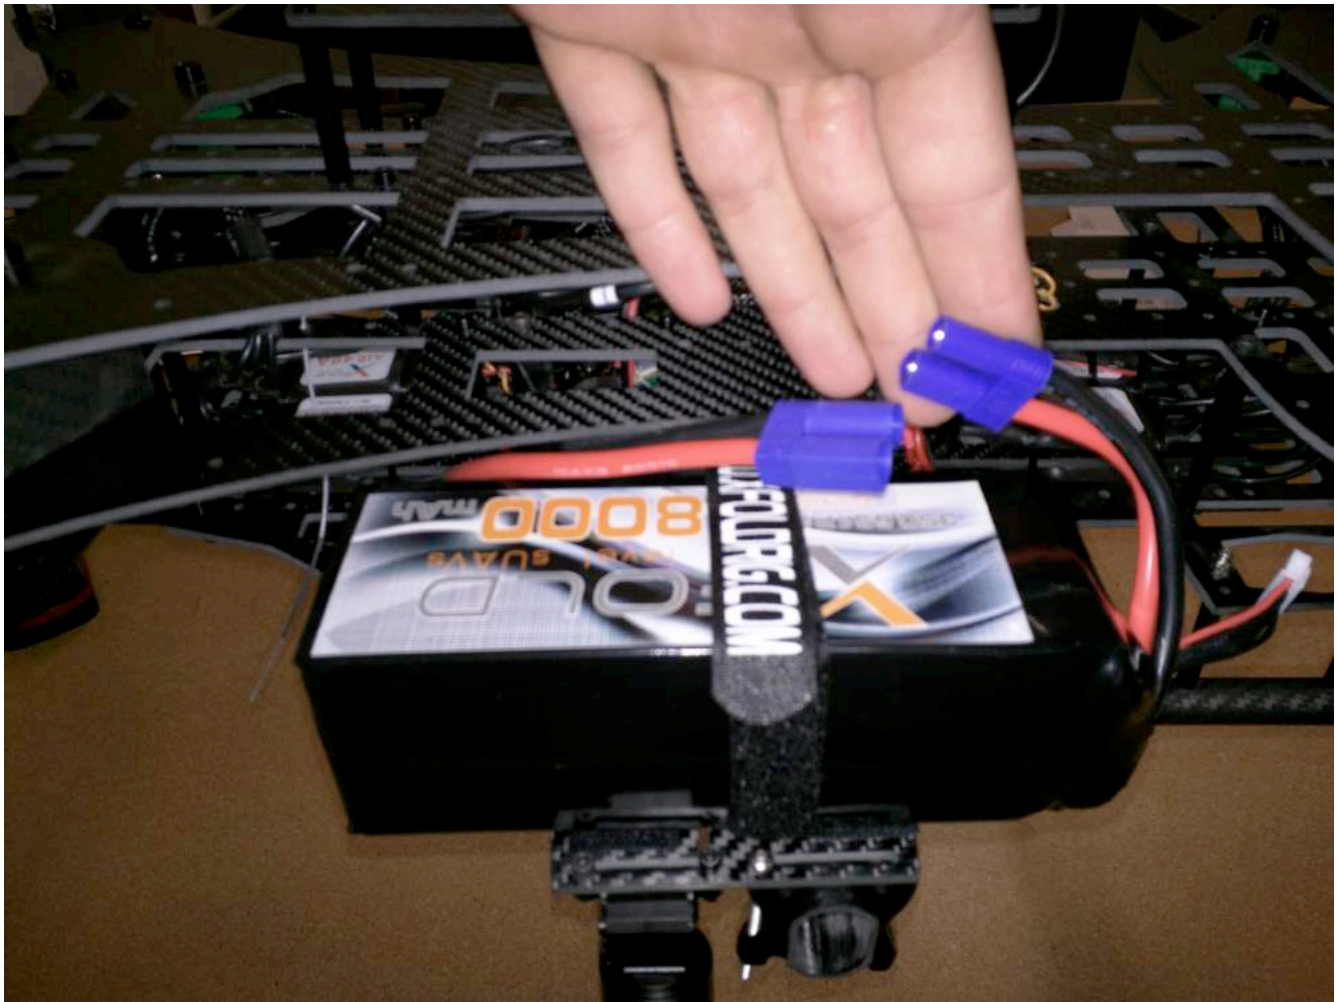

CHECK THE xFOLD TRANSMITTER SET UP GUIDE AND THE H3 GUIDE

SUPPLEMENT

All instruction manuals, quick start guides, warning notices, and more are available at <http://www.xfoldrig.com>

