




VANGUARD VEO HD IV 1042 10×42 ED Glass Binoculars User Manual

[Home](#) » [Vanguard](#) » VANGUARD VEO HD IV 1042 10×42 ED Glass Binoculars User Manual 

VANGUARD VEO HD IV 1042 10×42 ED Glass Binoculars

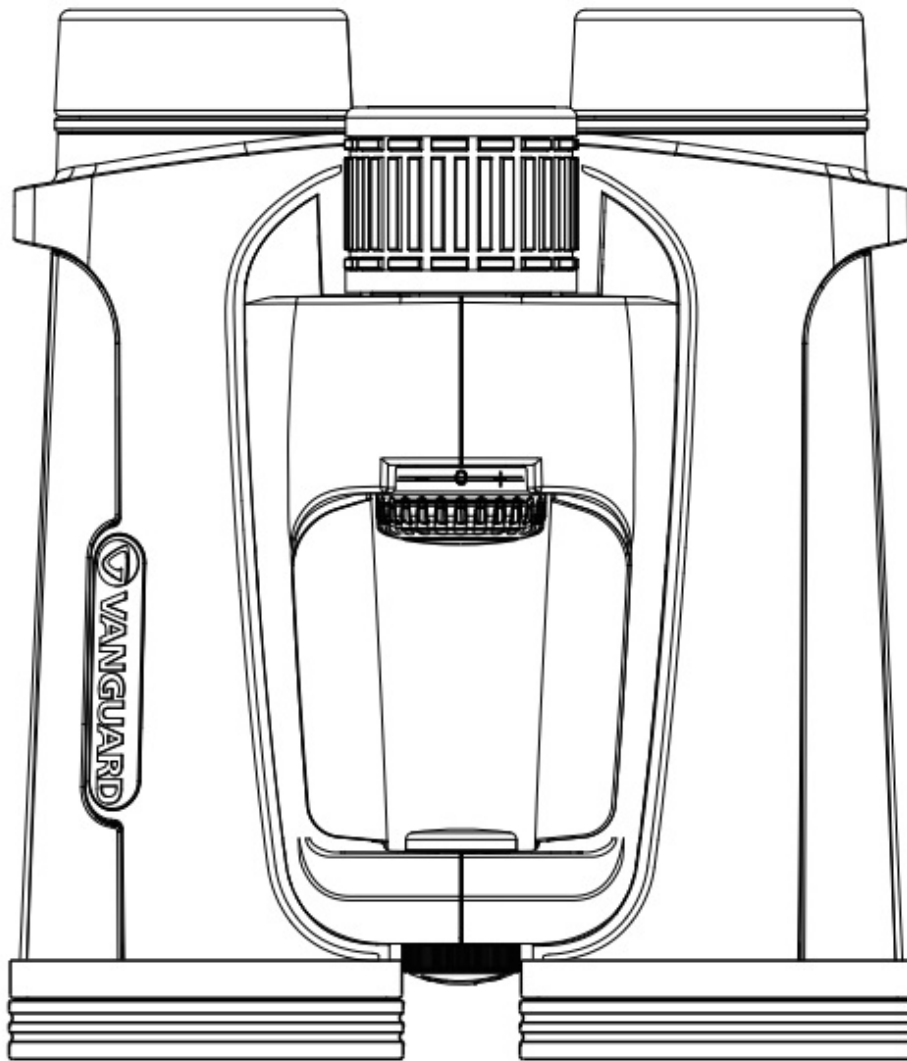

Contents

- [1 Introduction](#)
- [2 Description](#)
- [3 Eyecup Setting](#)
- [4 Focusing](#)
- [5 Accessories](#)
- [6 How to Attach The Neck Strap To Your Binoculars](#)
- [7 Removable Eyecup](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)


Introduction

Thank you for purchasing this VANGUARD product. In order to use the equipment properly and avoid potentially dangerous accidents, read the instructions before using your product.

Warning Never look at the sun directly through your optical equipment. Doing so may seriously damage your eyes.

Description

- A: Removable eyecup
- B: Locking diopter adjustment wheel
- C: Body armor
- D: Tripod adaptor
- E: Focusing wheel
- F: Ocular lens
- G: Open bridge design
- H: Objective lens
- I: Objective lens cover

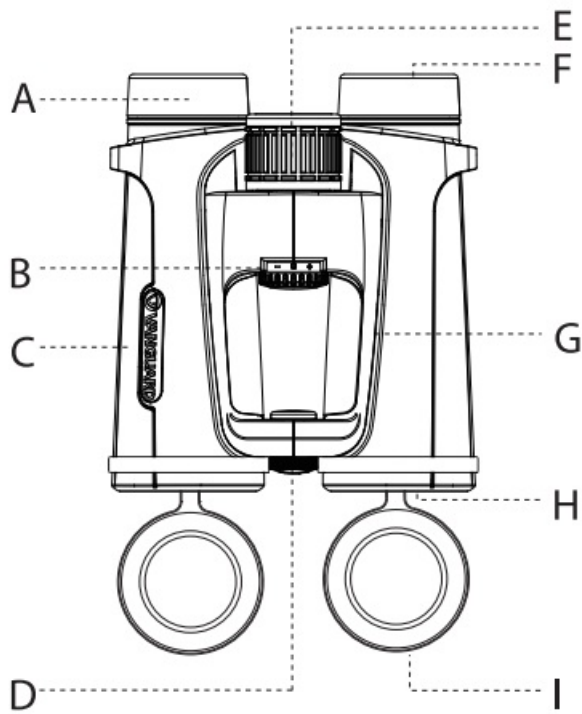


Eyecup Setting

If you wear glasses, you will need to twist down the eyecups to the lowest position. If you do not wear glasses you will want the eyecups in their highest possible positions. Having the eyecup adjusted to the proper height ensures that you will see the entire field of view. If you see shading around the edges, adjust the height of the eyecup until it disappears.



Focusing

First, please close your right eye and use your left eye to look. Turn the focusing wheel “E” as shown in figure 2-1 until the view with your left eye is seen clearly. Next, close your left eye and use your right eye to look. Pull the diopter adjustment wheel “s” down and adjust the diopter wheel as shown in figure 2-2 (Left:+ Plus; Right:- Negative) until the image appears in sharp focus, then push the diopter wheel back to lock it in place. Now both eyepieces should be in sharp focus. Use the center focusing wheel “E” to re-focus both eyepieces when observing a new object at a different distance.

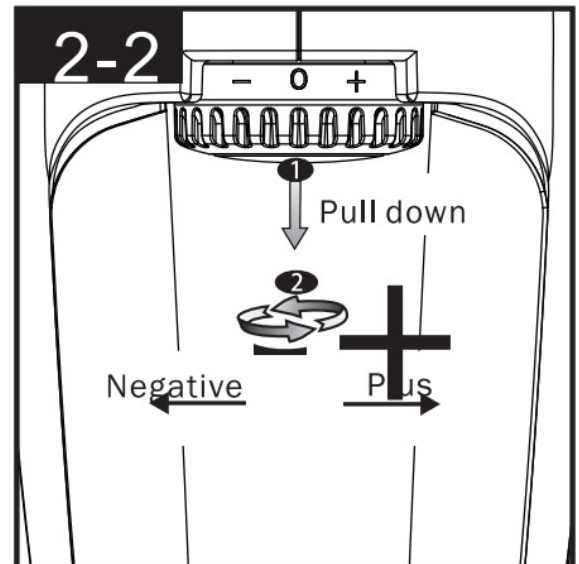


Accessories

3



Bag

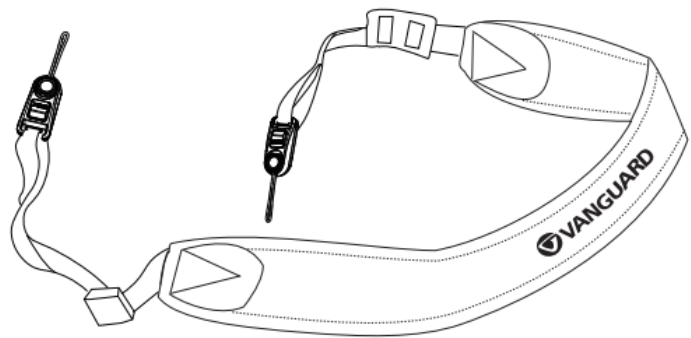


Carrying Strap

How to Attach The Neck Strap To Your Binoculars


- Step 1
- Step2
- Step3
- Step4

4


Step 1

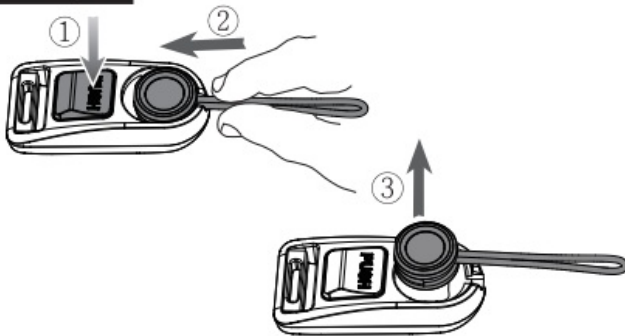


Step 2

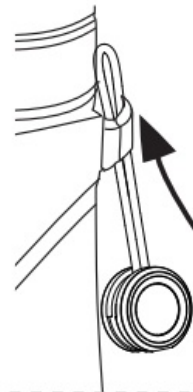

Step 3

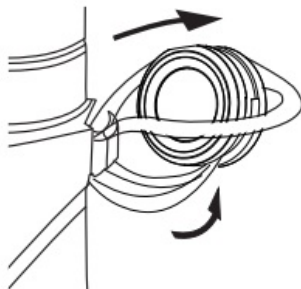

Step 4

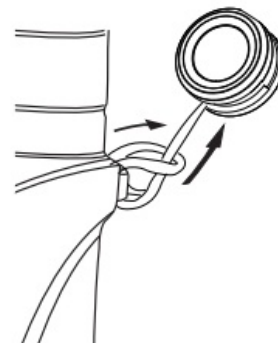


Removable Eyecup

Turn clockwise to remove and detach.

Turn counterclockwise to replace or tighten if loose.

Caution: Do not attempt to over tighten as you may damage the eyecup in process.

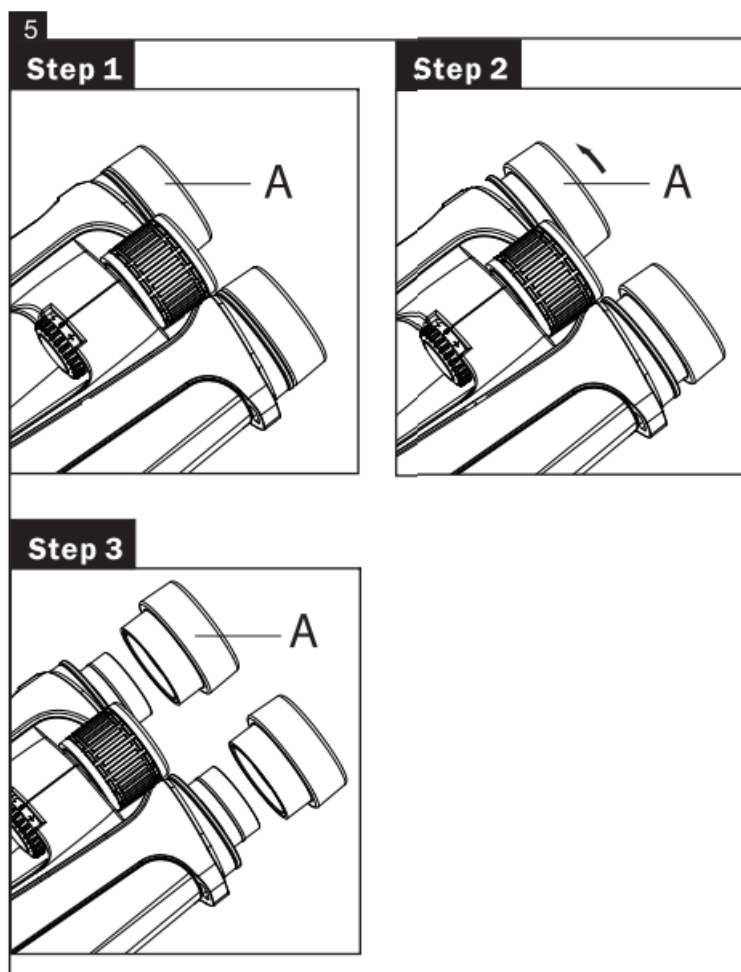

Documents / Resources



[VANGUARD VEO HD IV 1042 10x42 ED Glass Binoculars](#) [pdf] User Manual
VEO HD IV, 1042 10x42 ED Glass Binoculars, VEO HD IV 1042 10x42 ED Glass Binoculars, 1
0x42 ED Glass Binoculars, ED Glass Binoculars, Glass Binoculars, Binoculars