



Share Your Vision

Studio Pro

Live Streaming and Video Conferencing Camera



User Manual
Model No. PT-STUDIOPRO
V1.0
(English)

Please check ptzoptics.com for the most up to date version of this document.



www.ptzoptics.com || 1 800 486-5276



Table of Contents

Preface	3
Precautions	3
Warning	3
Warranty	4
Supplied Accessories	4
FCC Statement	4
NDI® HX Connection	5
Connection Guide	6
Dimensional Drawings	7
Features	8
IR Remote Controller Guide	11
On Screen Display	13
On Screen Display	23
Network Connection	29
Discovering your Network Info	30
Web UI	32
Maintenance and Troubleshooting	53
Camera Maintenance	53
Unqualified Applications	53
Troubleshooting	53
Control	54

Preface

Congratulations on receiving your new PTZOptics Studio Pro live streaming and video conferencing camera. This manual introduces the function, installation, and operation of the HD camera. Prior to installation and usage, please read the manual thoroughly. Please contact our [Support team](#) if you have any questions or issues with this process.

Precautions

This product can only be used in the specified conditions in order to avoid any damage to the unit itself.

- Don't subject the camera to rain or moisture.
- Don't remove the cover. Removal of the cover may result in an electric shock. In addition to voiding the warranty. In case of abnormal operation, contact support@ptzoptics.com.
- Never operate outside of the specified operating temperature range, humidity, or with any other power supply than the one originally provided with the unit.
- Please use a soft dry cloth to clean the unit. If the unit is very dirty, clean it with diluted neutral detergent; do not use any type of solvents, which may damage the surface.

Warning

- Electrical Safety
Installation and operation must be in accordance with national and local electric safety standards. Do not use any power supply other than the one originally supplied with this camera.
- Polarity of Power Supply
The power supply output for this product is 12V DC with a maximum current supply of 2A. Polarity of the power supply plug is critical and is as follows:



- Handling
 - Avoid any stress, vibration, or moisture during transportation, storage, installation, and operation.
 - Do not expose the camera to any corrosive solid, liquid, or gas to avoid damage to the cover which is made of a plastic material.
 - Never power the camera on before installation is complete.
- Do not dismantle the camera – PTZOptics is not responsible for any unauthorized modification or dismantling.

Warranty

PTZOptics includes a limited parts & labor warranty for all PTZOptics manufactured cameras. The warranty is valid only if PTZOptics receives proper notice of such defects during the warranty period. PTZOptics, at its option, will repair or replace products that prove to be defective. PTZOptics manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.

Supplied Accessories

When you unpack your camera, make sure that all the supplied accessories are included:

- | | |
|--------------------------------------|---|
| • Camera | 1 |
| • AC Power Supply | 1 |
| • IR Remote | 1 |
| • Quick Start Guide | 1 |
| • AAA Batteries | 2 |
| • USB-A to USB-C Screw Locking Cable | 1 |
| • LED Panel Light | 1 |



FCC Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. FCC Caution: Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. Operation is subject to the following two conditions: This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- **Warning** - This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.
- **Remote Control Battery Safety Information** - Store batteries in a cool and dry place. Do not throw away used batteries in the trash. Properly dispose of used batteries through specially approved disposal methods. Remove the batteries if they are not in use for long periods of time. Battery leakage and corrosion can damage the remote control. Do not use old batteries with new batteries. Do not mix and use different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium). Do not dispose of batteries in a fire. Do not attempt to short-circuit the battery terminals.

Copyright Notice

The entire contents of this manual / guide, whose copyright belongs to PTZOptics, may not be cloned, copied, or translated in any way without the explicit permission of the company. The product specifications referred to in this document are for reference only and as such are subject to updating at any time without prior notice.



NDI®|HX Connection


The NDI®|HX connection allows you to connect and control your camera through any NDI compatible hardware or software on your Local Area Network. Once your camera is setup on a LAN, you can utilize the NDI®|HX connection.

NDI® Setup:

1. Download and install the latest NDI®|HX Tools from <https://www.ndi.tv/tools>.
2. Configure your camera settings from the NDI Config tab in the camera's web interface.
3. Select your camera within the NDI®|HX compatible device.
4. Select your camera. The NDI feed will utilize the camera's device friendly name.



NewTek® NDI®, NDI® 4 & NDI®|HX are all registered trademarks by NewTek®.
Please note that your NDI License key is non-transferrable.

Connection Guide

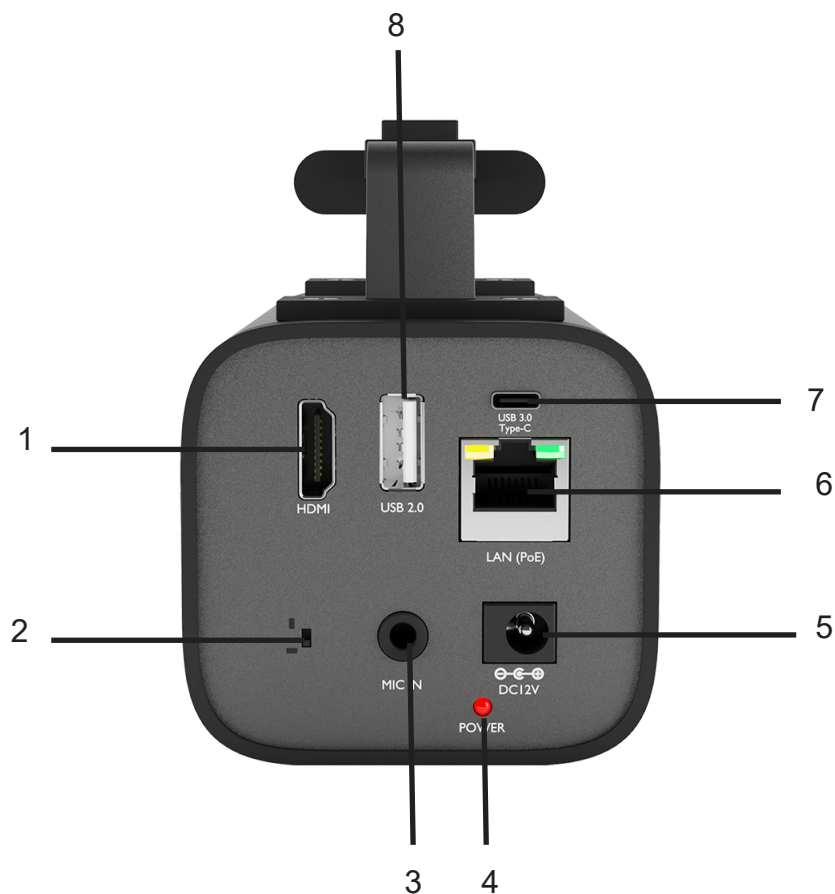

Item	Name
1	HDMI Interface
2	Horizontal and Vertical Screen Switch
3	MIC IN Interface
4	Power Indicator
5	DC 12V Power Interface
6	LAN (PoE) Interface
7	USB 3.0 Interface (Type C)
8	USB 2.0 Interface (Does not supply Video)

Dimensional Drawings

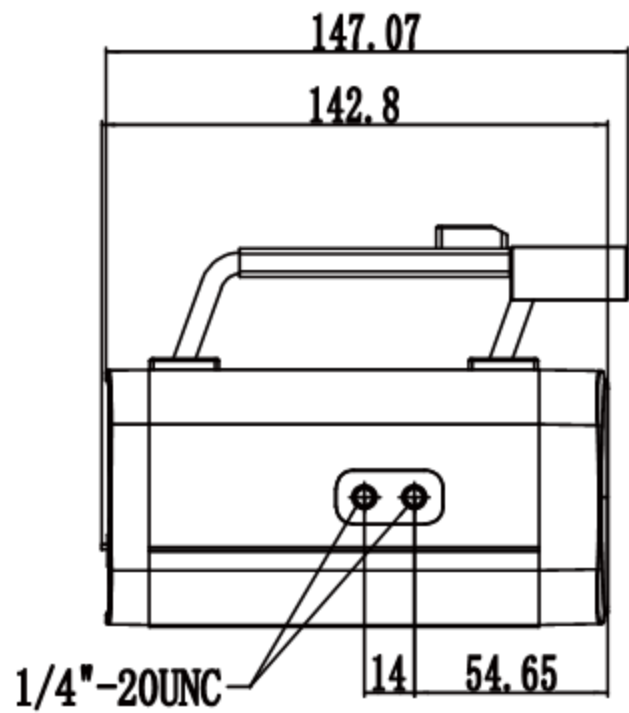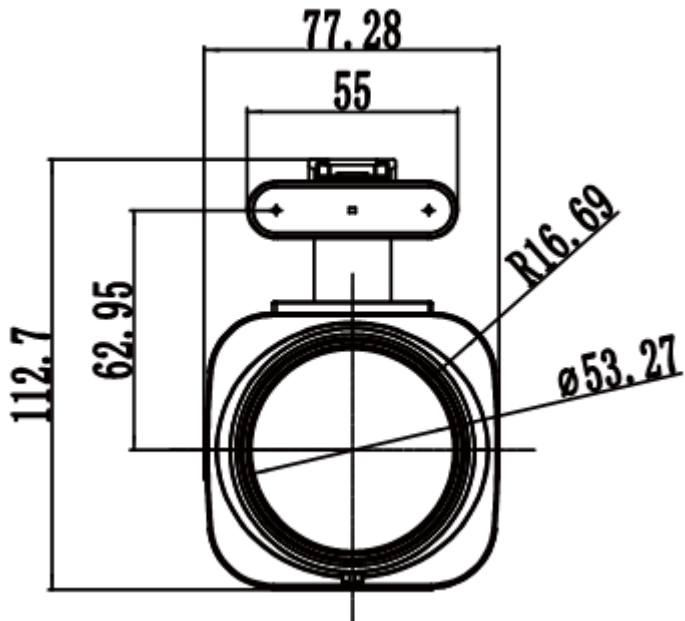

Features

- **Full-featured USB Interface**
Full-featured USB Type-C interface, compatible with USB 3.0 and USB 2.0, supports audio, encoding output, and UVC 1.5.
- **Precise Focus**
Equipped with TOF close-range assisted focusing, combined with advanced focusing algorithms, it can quickly and stably focus regardless of distance.
- **1080P HD Image**
Adopts a new generation of Panasonic 1/2.8-inch, 2.07 million effective pixel high-quality HD CMOS sensor, which can achieve high-quality images with a maximum resolution of 1920x1080.
- **Easy to Use**
Supports Portrait and Landscape screen switching. Suitable for horizontal and vertical screen display screens. USB plug-and-play, simple and fast. The cold shoe mount allows the panel light or an external microphone to be integrated to enrich the scene.
- **HDMI 1.4b**
Supports HDMI 1.4b, can directly output uncompressed 1080P60 original video.
- **72.5° Wide Lens + 12x Optical Zoom**
Adopts 72.5° high quality ultra wide-angle lens, optical zoom up to 12x, and supports 16x digital zoom.
- **LED Panel Light**
Color adjustment with warm/natural light and dimming range. Can be charged by Studio Pro USB 2.0 port.
- **Supports PoE**
Supports PoE power control, video and audio only needs one network cable to complete.
- **Network Encoding Output**
Supports dual network video stream output (first stream, second stream).
- **Multiple Interfaces**
Supports HDMI, USB 3.0 and network interface, can output 1080P60 video at the same time.
- **Three Power Supply Methods**
Supports USB 5V, DC 12V power adapter and PoE power supply.

Model	PT-STUDIOPRO
Type	PTZOptics Studio Pro
Camera	
Video System	1080P@60 / 50 / 30, 1080I@60 / 50, 720P@60 / 50
Sensor	1/2.8", CMOS, Effective Pixels 2.07M
Scanning Mode	Progressive
Lens	f=3.5mm ~ 42.3mm, F1.8 ~ F2.8
Zoom	16X Digital Zoom, 12X Optical Zoom
Minimal Illumination	0.5 Lux @ (F1.8, AGC ON)
Shutter	1/30s ~ 1/190s
White Balance	Auto, Indoor, Outdoor, One Push, Manual, VAR
Digital Noise Reduction	2D & 3D Digital Noise Reduction
Video S/N	≥55dB
Horizontal Angle of View	6.9° ~ 72.5°
Vertical Angle of View	3.9° ~ 44.8°
Horizontal & Vertical Flip	Supported
Image Freeze	Supported
LED	Color Adjustment with warm.Natural Light and Dimming range
Number of Presets	255
Network Features	
Operating System	Windows 7 / 8.1 / 10 / 11, Mac OS, Linux, Android,
Color System / Compression	YUY2 / H.264 / MJPEG
Video Format	YUY2 (ISOC), H.264 AVC, H.264 SVC, MJPEG
USB Audio	Supported
USB Video Protocol	UVC 1.1 ~ 1.5
UVC PTZ	Support
Video Compression	H.264 / H.265 / MJPEG
Video Stream	Capable of up to two simultaneous video streams.
First Stream Resolution	1920x1080, 1280x720, 640x480, 640x360
Second Stream Resolution	1280x720, 1024x576, 720x576(50Hz support), 720x480(60Hz support), 720x408, 640x360, 480x270, 320x240, 320x180
Video Bit Rate	32Kbps ~ 102400Kbps
Bit Rate Control	CBR, VBR
Frame Rate	50Hz: 1fps ~ 50fps, 60Hz: 1fps ~ 60fps
Audio Compression	AAC
Audio Bit Rate	96Kbps, 128Kbps, 256Kbps
Support Protocols	TCP/IP, HTTP, RTSP, RTMP, ONVIF, DHCP, and Multicast.

Interface	
USB Interface	USB 3.0: Type C, Supplies Video
	USB 2.0: Type A, Only supplies power to 3rd Party Devices
HD Output	HDMI 1.4b
Audio Interface	MIC IN: 3.5mm
Network Interface	1 x RJ45: 10M/100M, Adaptive Ethernet Port, support PoE
Power Jack	JEITA type (DC IN 12V)
H & V Screen Switch	Vertical Screen, Horizontal Screen
Physical Parameter	
Input Voltage	DC 12V / USB 5V / PoE(802.3af)
Current Consumption	12V 1.0A (Max.) / 5V 1.5A (Max.)
Operating Temperature	14F ~ 104F (-10°C ~ 40°C)
Storage Temperature	-40F~ 140F (-40°C ~ 60°C)
Power Consumption	6W
Dimensions	5.8 x 4.4 x 3.0 (inches) / 147 x 113 x 77 (mm)
Weight	1.54 lbs / 0.7Kg

IR Remote Controller Guide

calling shortcuts.

4 & 13. Set / Clear Preset Buttons

Set Preset: Store a preset position
[PRESET] + Numeric button (0-9):

Setting a corresponding numeric key preset position.

Clear Preset: Erase a preset position.

[RESET] + Numeric button (0-9) or;

[*] + [#] + [RESET]: Erase all presets

5 & 14. Pan / Tilt Control Buttons

Press the arrow buttons to pan and tilt. Press the [HOME] button to face the camera back to the front.
(PTZ Cameras Only)

6. Return Button

Press the [RETURN] button to go back a previous menu within the OSD menu.

7. Zoom Buttons

Zoom+: Zoom In (Slow and fast speed).

Zoom-: Zoom Out (Slow and fast speed).

8. L / R Set Buttons

Set the Left & Right direction of the remote control.

[L/R SET] + [1]: Normal direction

[L/R SET] + [2]: Left and right directions will be reversed.

Press buttons simultaneously.

9. Focus Buttons


Used for focus adjustment.

[AUTO]: Automatically focus image on the center object.

[MANUAL]: Allow for manual control of focus. Make adjustments using [FAR] (focus on far object) and [NEAR] (focus on near object).

10. Camera Address Select Buttons

Press the camera select button corresponding to the camera in which you want to operate.

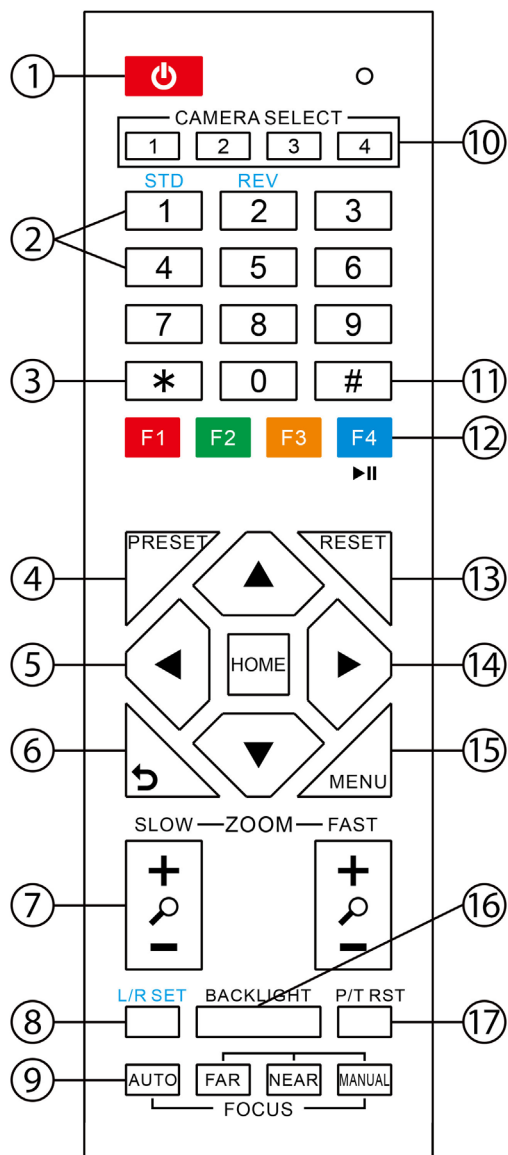

1. Standby Button

Press this button to enter standby mode.

Press it again to enter normal mode.

Note: Power consumption in standby mode is approximately half of the normal mode.

2. Position Buttons

To set or call preset position.

3. * Button

For multiple functions. Typically used when

11. # Button

For multiple functions. Typically used when calling shortcuts

12. Multiple Function Buttons

Function 1. For setting camera IR address.

Press 3 keys in sequence to set the camera IR address as follows:

[*] > [#] > [F1]: Address 1

[*] > [#] > [F2]: Address 2

[*] > [#] > [F3]: Address 3

[*] > [#] > [F4]: Address 4

Function 2. Image Freeze function

Press [F4] to enable Image Freeze. After enabled, "Freeze" will be displayed in the upper left corner for 5 seconds.

To disable Image Freeze, press [F4] again.

15. Menu Settings

Used for adjusting the camera On Screen Display (OSD) settings

[MENU]: Open or close the On Screen Display menu

16. Backlight Button

Use to enable or disable backlight compensation.

Note: Only effective in auto exposure mode.

Note: If there is light behind the subject, the subject may appear darker. In this case, use Backlight Compensation to enhance image.

17. P / T RST Button

Perform camera self-calibrate pan and tilt movement. (PTZ Cameras Only)

18. Shortcut Functions:

[*] > [#] > [1]: Display OSD menu in English

[*] > [#] > [3]: Display OSD menu in Chinese

[*] > [#] > [4]: Show IP address

[*] > [#] > [6]: Quickly restore the

default settings

[*] > [#] > [8]: Show the camera version

[*] > [#] > [9]: Quickly set mount mode (flip / normal)

[*] > [#] > [MANUAL]: Resets IP information to default

[#] > [*] > [7]: OnePush White Balance Trigger (Camera must be in OnePush White Balance)

[*] > [*] > [AUTO] Performs the "Startup Dance" on repeat

[#] > [*] > [4]: Enable Dynamic IP address

[#] > [*] > [#] > [1]: Sets IP address to 192.168.100.81

[#] > [*] > [#] > [2]: Sets IP address to 192.168.100.82

[#] > [*] > [#] > [3]: Sets IP address to 192.168.100.83

[#] > [*] > [#] > [4]: Sets IP address to 192.168.100.84

[#] > [*] > [#] > [5]: Sets IP address to 192.168.100.85

[#] > [*] > [#] > [6]: Sets IP address to 192.168.100.86

[#] > [*] > [#] > [7]: Sets IP address to 192.168.100.87

[#] > [*] > [#] > [8]: Sets IP address to 192.168.100.88

[#] > [*] > [#] > [9]: Sets IP address to 192.168.100.89

[#] > [*] > [#] > [0]: Sets IP address to 192.168.100.80

[#] > [*] > [7]: OnePush White Balance Trigger (Camera must be in OnePush White Balance)

On Screen Display

Main Menu

There are many ways to adjust the camera's On-Screen Display (OSD) Menu. The following instructions will go over the OSD Menu while using the included IR remote.

Press the [Menu] button to display the OSD Menu. Use the arrow buttons to navigate the OSD menu, the [Enter] button to make selections, and the [Return] button to go back a sub menu.

Menu	
Exposure	
Color	
Image	
Focus	
Noise Reduction	
Setting	
Information	
Restore Default	

(Exposure) Mode: Full Auto, Manual, SAE, AAE, Bright

ExpCompMode: On, Off (Effective only in Full Auto mode).

Exp-Comp: -7 ~ 7 (Effective only in ExpCompMode item to On).

Backlight: Toggle Backlight Compensation. Options include: On, Off (Only available in Full Auto mode).

Bright: 0 ~ 17 (Effective only in Bright mode).

Gain Limit: 0 ~ 15 (Effective only in Full Auto, SAE, AAE, Bright mode).

Anti-Flicker: Off, 50Hz, 60Hz (Effective only in Full Auto, AAE, Bright mode).

Iris: F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11.0, Close (Effective only in Manual, AAE mode).

Meter: Average, Center, Bottom, Top. (Effectiveonly in Full Auto, SAE,AAE, Bright mode).

Shutter: 1/30, 1/40, 1/50, 1/60, 1/70, 1/80, 1/90, 1/100, 1/110, 1/120, 1/130, 1/140, 1/150, 1/160, 1/170, 1/180, 1/190 (Effective only in Manual, SAE mode).

Gain: 0 ~ 7 (Effective only in Manual mode).
DRC Strength: 0 ~ 8.

Exposure

Move the cursor to the "Exposure" option and press the [Enter] button to enter the Exposure page, as shown in the figure below.

Exposure	
Mode	Full Auto
ExpCompMode	Off
GainLimit	1
Meter	Average
Backlight	Off
DRC Strength	3
Anti Flicker	60Hz
Return	

PTZOptics Serial VISCA & VISCA over IP Command List

Part 1: Camera Issued Commands

ACK / Completion Messages			
Command	Function	Command Packet	Comments
ACK / Completion Messages	ACK	z0 4y FF (y: Socket No.)	Returned when the command is accepted.
	Completion	z0 5y FF (y: Socket No.)	Returned when the command has been executed.

Error Messages			
Command	Function	Command Packet	Comments
Error Messages	Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
	Command Buffer Full	z0 60 03 FF	Indicates that two sockets are already being used (executing two commands) and the command could not be accepted when received
	Command Canceled	z0 6y 04 FF (y: Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
	No Socket	z0 6y 05 FF (y: Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid Socket No. is specified
	Command Not Executable	z0 6y 41 FF (y: Execution command Socket No. Inquiry command: 0)	Returned when a command cannot be executed due to current conditions. For example: when commands controlling the focus manually are received during auto focus mode.

VISCA over IP control: z = 9

Serial VISCA control: z = Camera Address + 8

Part 2: PTZOptics Command List

Command	Function	Command Packet	Comments
IF Clear	Broadcast	8x 01 00 01 FF	I/F Clear
CAM_Power	On	8x 01 04 00 02 FF	Power On/Off
	Off	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele (Standard)	8x 01 04 07 02 FF	
	Wide (Standard)	8x 01 04 07 03 FF	
	Tele (Variable)	8x 01 04 07 2p FF	p = 0 (low) – 7 (high)
	Wide (Variable)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 p q r s FF	

CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far (Standard)	8x 01 04 08 02 FF	
	Near (Standard)	8x 01 04 08 03 FF	
	Far (Variable)	8x 01 04 08 2p FF	p = 0 (low) – 7 (high)
	Near (Variable)	8x 01 04 08 3p FF	
	Direct	8x 01 04 48 0p 0q 0r 0s FF	pqrs: Zoom Position (0x04 0x00 0x00 0x00 = Full Zoom in. 0x00 0x00 0x00 0x00 = Full Zoom out.)
	Auto Focus	8x 01 04 38 02 FF	Auto Focus On / Off
	Manual Focus	8x 01 04 38 03 FF	
	Auto / Manual	8x 01 04 38 10 FF	
	Snap Focus	8x 01 04 38 04 FF	Focus image while maintaining manual focus mode.
	Focus Lock	8x 0a 04 68 02 FF	Prevents any other operation or command from adjusting the current focus state.
	Focus Unlock	8x 0a 04 68 03 FF	
CAM_AFSensitivity	High	8x 01 04 58 01 FF	AF Sensitivity High / Normal / Low
	Normal	8x 01 04 58 02 FF	
	Low	8x 01 04 58 03 FF	
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto mode
	Indoor	8x 01 04 35 01 FF	Indoor mode
	Outdoor	8x 01 04 35 02 FF	Outdoor mode
	OnePush	8x 01 04 35 03 FF	One Push White Balance mode
	Manual	8x 01 04 35 05 FF	Manual control mode
	ColorTemperature (VAR)	8x 01 04 35 20 FF	Color Temperature mode
	OnePush Trigger	8x 01 04 10 05 FF	One Push White Balance Trigger
CAM_RGain	Reset	8x 01 04 03 00 FF	Default Bright position
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: Red Gain
CAM_BGain	Reset	8x 01 04 04 00 FF	Manual control of blue gain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: Blue Gain
CAM_ColorTemp	Reset	8x 01 04 20 00 FF	Default ColorTemperature settings
	Up	8x 01 04 20 02 FF	
	Down	8x 01 04 20 03 FF	
	Direct	8x 01 04 20 0p 0q FF	pq: ColorTemperature position: 0x00: 2500K ~ 0x37: 8000K
CAM_RTuning	Direct	8x 0A 01 12 pq FF	pq: Red / Blue Tuning position 0x00 (-10) ~ 0x14 (+10)
CAM_BTuning	Direct	8x 0A 01 13 pq FF	
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode
	Manual	8x 01 04 39 03 FF	Manual exposure mode
	Shutter Priority	8x 01 04 39 0A FF	Shutter priority auto exposure mode
	Iris Priority	8x 01 04 39 0B FF	Iris priority auto exposure mode
	Bright	8x 01 04 39 0D FF	Bright manual exposure mode



Share Your Vision

CAM_Iris	Reset	8x 01 04 0B 00 FF	Default Iris position
	Up	8x 01 04 0B 02 FF	Iris setting
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq: Iris position
CAM_DRC	Direct	8x 01 06 01 0E 0E 03 02 FF	p: 0(low) - 8(high)
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Default shutter position
	Up	8x 01 04 0A 02 FF	Shutter setting
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq: Shutter position
CAM_Gain	Reset	8x 01 04 0C 00 FF	Gain Setting
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Direct	8x 01 04 0C 00 00 0p 0q FF	pq: Gain Position
	Gain Limit	8x 01 04 2C 0p FF	p: Gain Position
CAM_Bright	Reset	8x 01 04 0D 00 FF	Default Bright position
	Up	8x 01 04 0D 02 FF	Bright setting
	Down	8x 01 04 0D 03 FF	
	Direct	8x 01 04 0D 00 00 0p 0q FF	pq: Bright position
CAM_ExpComp	On	8x 01 04 3E 02 FF	Exposure Compensation On / Off
	Off	8x 01 04 3E 03 FF	
	Reset	8x 01 04 0E 00 FF	Default ExpComp position
	Up	8x 01 04 0E 02 FF	ExpComp setting
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq: ExpComp position
CAM_NR(2D)Mode	Auto	8x 01 04 50 02 FF	ND2D Auto/Manual
	Manual	8x 01 04 50 03 FF	
CAM_NR(2D)Level	Direct	8x 01 04 53 0p FF	p: NR Setting (0: Off, level 1 to 5)
CAM_NR(3D)Level	Direct	8x 01 04 54 0p FF	p: NR Setting (0: Off, level 1 to 8)
CAM_WDRStrength	Reset	8x 01 04 21 00 FF	
	Up	8x 01 04 21 02 FF	
	Down	8x 01 04 21 03 FF	
	Direct	8x 01 04 51 00 00 0p 0q FF	pq: WDR Level Positon
CAM_Backlight	On	8x 01 04 33 02 FF	Backlight Compensation On / Off
	Off	8x 01 04 33 03 FF	
CAM_Flicker	-	8x 01 04 23 0p FF	p: Flicker settings - (0: Off, 1: 50Hz, 2: 60Hz)
CAM_ApertureMode (Sharpness)	Auto	8x 01 04 05 02 FF	
	Manual	8x 01 04 05 03 FF	
CAM_Aperture (sharpness)	Reset	8x 01 04 02 00 FF	Aperture Control
	Up	8x 01 04 02 02 FF	
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	pq: Aperture Gain

x = Camera Address + 8

CAM_Picture Effect	Off	8x 01 04 63 00 FF	Picture Effect setting
	B&W	8x 01 04 63 04 FF	
CAM_Memory	Reset	8x 01 04 3F 00 pp FF	pp: Memory number (=0 to 127)
	Set	8x 01 04 3F 01 pp FF	
	Recall	8x 01 04 3F 02 pp FF	
Preset_Recall_Speed	Preset Speed	8x 01 06 01 p FF	P: Speed grade (0x01 ~ 0x18)
CAM_ImageFreeze	Freeze Image	8x 01 04 62 0p FF	p: 2 ON; p: 3 OFF
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Image Flip Horizontal On / Off
	Off	8x 01 04 61 03 FF	
CAM_PictureFlip	On	8x 01 04 66 02 FF	Image Flip Vertical On / Off
	Off	8x 01 04 66 03 FF	
CAM_ColorGain	Direct	8x 01 04 49 00 00 00 0p FF	P: Color Gain setting 0h (60%) to Eh(200%)
Pan_TiltDrive	Up	8x 01 06 01 VV WW 03 01 FF	VV: Pan Speed 0x01 (low) to 0x18 (high) WW: Tilt Speed 0x01 (low) to 0x14 (high)
	Down	8x 01 06 01 VV WW 03 02 FF	
	Left	8x 01 06 01 VV WW 01 03 FF	
	Right	8x 01 06 01 VV WW 02 03 FF	
	UpLeft	8x 01 06 01 VV WW 01 01 FF	
	UpRight	8x 01 06 01 VV WW 02 01 FF	
	DownLeft	8x 01 06 01 VV WW 01 02 FF	
	DownRight	8x 01 06 01 VV WW 02 02 FF	
	Stop	8x 01 06 01 VV WW 03 03 FF	
	AbsolutePosition	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	YYYY: Pan position, ZZZZ: Tilt position
	RelativePosition	8x 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Home	8x 01 06 04 FF	
	Reset	8x 01 06 05 FF	
Pan_TiltLimitSet	LimitSet	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1 (UpRight), 0: DownLeft YYYY: Pan position, ZZZZ: Tilt position
	LimitClear	8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF	
CAM_Brightness	Direct	8x 01 04 A1 00 00 0p 0q FF	pq: Brightness position
CAM_Contrast	Direct	8x 01 04 A2 00 00 0p 0q FF	pq: Contrast position
CAM_Flip	Off	8x 01 04 A4 00 FF	Single Command for video flip
	Flip-H	8x 01 04 A4 01 FF	
	Flip-V	8x 01 04 A4 02 FF	
	Flip-HV	8x 01 04 A4 03 FF	
CAM_SettingSave	Save	8x 01 04 A5 10 FF	Save Current Setting
CAM_AWB Sensitivity	High	8x 01 04 A9 00 FF	
	Normal	8x 01 04 A9 01 FF	
	Low	8x 01 04 A9 02 FF	
CAM_AFZone	Top	8x 01 04 AA 00 FF	AF Zone weight select
	Center	8x 01 04 AA 01 FF	
	Bottom	8x 01 04 AA 02 FF	



Share Your Vision

CAM_AFZone	Top	8x 01 04 AA 00 FF	AF Zone weight select
	Center	8x 01 04 AA 01 FF	
	Bottom	8x 01 04 AA 02 FF	
CAM_ColorHue	Direct	8x 01 04 4F 00 00 00 0p FF	P: Color Hue setting 0h (-14°) to Eh (+14°)
OSD_Control	Open / Close	8x 01 04 3F 02 5F FF	
	Close	8x 01 06 06 03 FF	
	Navigate Up	8x 01 06 01 0E 0E 03 01 FF	
	Navigate Down	8x 01 06 01 0E 0E 03 02 FF	
	Navigate Left	8x 01 06 01 0E 0E 01 03 FF	
	Navigate Right	8x 01 06 01 0E 0E 02 03 FF	
	Enter	8x 01 06 06 05 FF	
	Return	8x 01 06 06 04 FF	
CAM_LensType	Type1	8x 0A 01 04 1B 00 FF	
	Type 2	8x 0A 01 04 1B 01 FF	
CAM_AFCalibration	Re-Calibrates Focus	8x 0A 01 03 12 FF	Corrects camera focus capabilities
CAM_TallyLight	Tally Light Control	8x 0A 02 02 0p FF	p=1: Flashing, p=2: Light always on, p=3: normal
CAM_NDIMode	High	8x 0B 01 01 FF	
	Medium	8x 0B 01 02 FF	
	Low	8x 0B 01 03 FF	
	Off	8x 0B 01 04 FF	
CAM_Multicast Mode	Multicast Mode	8x 0B 01 23 0p FF	p=1: On, p=2: Off
CAM_PTZMotion Sync	PTZ Motion Sync On	8x 0A 11 13 02 FF	
	PTZ Motion Sync Off	8x 0A 11 13 03 FF	
	PTZ MS Upper Speed Limit	8x 0A 11 14 pq FF	pq: Speed stage
	PTZ MS Lower Speed Limit	8x 0A 11 14 pq FF	
CAM_UACStatus	Toggle USB Audio	8x 2a 02 a0 04 0p FF	p=2: On, p=3: Off
CAM_RTMPSet	Toggle RTMP	8x 0A 11 A8 pq FF	p: 1 Stream 1; p: 2 stream 2; q: 2 ON, q: 3 OFF
CAM_FocusRange	Focus Range	8x 0A 11 42 0p rs tv FF	p=0: Off p=1: On, rs: furthest position(0x00 ~ 0x0B), tv: nearest position(0x00 ~ 0x0B)
CAM_SettingSave	Save	8x 01 04 A5 10 FF	Save Current Setting
CAM_SettingReset	Reset	8x 01 04 A0 10 FF	Reset to Factory Settings
CAM_NetworkReset	Reset Network Parameters	8x 0A 01 AA FF	

VISCA over IP control: x = 1

Serial VISCA control: x = Camera Address + 8

Part 3: PTZOptics Query Command List

CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off (Standby)
		y0 50 04 FF	Internal Power Circuit Error
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom position
CAM_FocusAFModelInq	8x 09 04 48 FF	y0 50 02 FF	AutoFocus
		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 35 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_WBModelInq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	Indoor
		y0 50 02 FF	Outdoor
		y0 50 03 FF	OnePush
		y0 50 05 FF	Manual
			ColorTemperature
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: Red Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: Blue Gain
CAM_ColorTempInq		y0 50 pq FF	pq: ColorTemperature position
CAM_RTuningInq	8x 09 04 12 FF	90 50 00 00 0p 0q FF	pq: 0x00 ~ 0x14
CAM_BTuningInq	8x 09 04 13 FF	90 50 00 00 0p 0q FF	pq: 0x00 ~ 0x14
CAM_AEModelInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter Priority (SAE)
		y0 50 0B FF	Iris Priority (AAE)
		y0 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris position
CAM_BrightPosInq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright position
CAM_ExpCompModelInq	8x 09 04 3E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp position
CAM_BacklightModelInq	8x 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_Noise2DModelInq	8x 09 04 50 FF	y0 50 02 FF	Auto Noise 2D
		y0 50 03 FF	Manual Noise 2D
CAM_Noise2DLevel	8x 09 04 53 FF	y0 50 0p FF	Noise Reduction (2D) p: 0 to 5
CAM_Noise3DLevel	8x 09 04 54 FF	y0 50 0p FF	Noise Reduction (3D) p: 0 to 5
CAM_FlickerModelInq	8x 09 04 55 FF	y0 50 0p FF	p=0: Off, 1: 50Hz, 2: 60Hz
CAM_ApertureModelInq (Sharpness)	8x 09 04 05 FF	y0 50 02 FF	Auto Sharpness
		y0 50 03 FF	Manual Sharpness
SYS_MenuModelInq	8x 09 06 06 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PictureEffectModelInq	8x 09 04 63 FF	y0 50 02 FF	Off
		y0 50 04 FF	B&W



Share Your Vision

CAM_MemoryInq	8x 09 04 3F FF	y0 50 0p FF	p: Memory number last operated
CAM_LR_ReverseInq	8x 09 04 61 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PictureFlipInq	8x 09 04 66 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ColorGainInq	8x 09 04 49 FF	y0 50 00 00 00 0p FF	P: Color gain 0h (60%) to Eh (200%)
CAM_PanTiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0z 0z 0z 0z FF	WWWW: Pan position, ZZZZ: Tilt position
CAM_GainLimitInq	8x 09 04 2C FF	y0 50 0q FF	p: Gain limit
CAM_AFSensitivityInq	8x 09 04 58 FF	y0 50 01 FF	High
		y0 50 02 FF	Normal
		y0 50 03 FF	Low
CAM_BrightnessInq	8x 09 04 A1 FF	y0 50 00 00 0p 0q FF	pq: Brightness position
CAM_ContrastInq	8x 09 04 A2 FF	y0 50 00 00 0p 0q FF	pq: Contrast position
CAM_FlipInq	8x 09 04 A4 FF	y0 50 00 FF	Off
		y0 50 01 FF	Flip-H
		y0 50 02 FF	Flip-V
		y0 50 03 FF	Flip-HV
CAM_AFZone	8x 09 04 AA FF	y0 50 00 FF	Top
		y0 50 01 FF	Center
		y0 50 02 FF	Bottom
CAM_ColorHueInq	8x 09 04 4F FF	y0 50 00 00 00 0p FF	P: Color Hue 0h (-14°) to Eh (+14°)
CAM_AWBSensitivityInq	8x 09 04 A9 FF	y0 50 00 FF	High
		y0 50 01 FF	Normal
		y0 50 02 FF	Low
CAM_UACInq	8x 2A 02 A0 04 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PTZMotionSyncInq	8x 09 11 13 FF	90 50 0p FF	p: MotionSync setting 0: Off, 1: On
	8x 09 11 14 FF	90 50 pq FF	pq: Max MotionSync speed 00 (185) ~ 09 (230)
CAM_RTMPInq	8x 09 11 53 FF	90 50 00 FF	Stream 1 OFF; Stream 2 OFF
		90 50 01 FF	Stream 1 ON; Stream 2 OFF
		90 50 02 FF	Stream 1 OFF; Stream 2 ON
		90 50 03 FF	Stream 1 ON; Stream 2 ON
VISCA over IP control: x = 1			
Serial VISCA control: x = Camera Address + 8			

Block Inquiry Command List

Command	Command Packet	Inquiry Packet	Comments
CAM_LensBlockInq	8x 09 7E 7E 00 FF	y0 50 0u 0u 0u 0u 00 00 0v 0v 0v 0v 00 0w 00 FF	UUUU: Zoom position VVVV: Focus position W.bit0: Focus mode 1: Auto, 0: manual

CAM_CameraBlocking	8x 09 7E 7E 01 FF	y0 50 0p 0p 0q 0q 0r 0s tt 0u vv ww 00 xx 0z FF	PP: Red Gain, QQ: Blue Gain R: WB Mode, S: Aperture TT: AE Mode, U.bit2: Backlight U.bit1: Exposure Comp, VV: Shutter position. WW: Iris position, XX Bright position, Z: Exposure Comp position
CAM_OtherBlocking	8x 09 7E 7E 02 FF	y0 50 0p 0q 00 0r 00 00 00 00 00 00 00 00 00 FF	P.bit0: Power 1: On, 0: Off, Q.bit2: LR Reverse: 1: On, 0: Off R.bit3~0: Picture Effect Mode
CAM_EnlargmentBlocking	8x 09 7E 7E 03 FF	y0 50 00 00 00 00 00 00 00 0p 0q rr 0s 0t 0u FF	P: AF sensitivity Q.bit0: Picture flip: 1: On, 0: Off RR.bit6~3: Color Gain (0h (60%) to Eh (200%)) S: Flip 0: Off, 1: Flip-H, 2: FlipV, 3: Flip-HV T.bit2~0: NR2D level U: Gain limit

VISCA over IP control: x = 1

Serial VISCA control: x = Camera Address + 8

VISCA over IP control: y = 9

Serial VISCA control: y = Camera Address + 8

Part 4: Pelco-D Protocol Command List

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
Up	0xFF	Address	0x00	0x08	Pan Speed	Tilt Speed	SUM
Down	0xFF	Address	0x00	0x10	Pan Speed	Tilt Speed	SUM
Left	0xFF	Address	0x00	0x04	Pan Speed	Tilt Speed	SUM
Right	0xFF	Address	0x00	0x02	Pan Speed	Tilt Speed	SUM
Zoom In	0xFF	Address	0x00	0x20	0x00	0x00	SUM
Zoom Out	0xFF	Address	0x00	0x40	0x00	0x00	SUM
Focus Far	0xFF	Address	0x00	0x80	0x00	0x00	SUM
Focus Near	0xFF	Address	0x00	0x00	0x00	0x00	SUM
Set Preset	0xFF	Address	0x00	0x03	0x00	Preset ID	SUM
Clear Preset	0xFF	Address	0x00	0x05	0x00	Preset ID	SUM
Call Preset	0xFF	Address	0x00	0x07	0x00	Preset ID	SUM
Auto Focus	0xFF	Address	0x00	0x2B	0x00	0x01	SUM
Manual Focus	0xFF	Address	0x00	0x2B	0x00	0x02	SUM
Query Pan Position	0xFF	Address	0x00	0x51	0x00	0x00	SUM
Query Pan Position Response	0xFF	Address	0x00	0x59	Value High Byte	Value Low Byte	SUM
Query Tilt Position	0xFF	Address	0x00	0x53	0x00	0x00	SUM
Query Tilt Position Response	0xFF	Address	0x00	0x5B	Value High Byte	Value Low Byte	SUM
Query Zoom Position	0xFF	Address	0x00	0x55	0x00	0x00	SUM
Query Zoom Position Response	0xFF	Address	0x00	0x5D	Value High Byte	Value Low Byte	SUM
Query Zoom Position Response	0xFF	Address	0x00	0x5D	Value High Byte	Value Low Byte	SUM

Part 5: Pelco-P Protocol Command List

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
Up	0xFF	Address	0x00	0x08	Pan Speed	Tilt Speed	SUM
Down	0xFF	Address	0x00	0x10	Pan Speed	Tilt Speed	SUM
Left	0xFF	Address	0x00	0x04	Pan Speed	Tilt Speed	SUM
Right	0xFF	Address	0x00	0x02	Pan Speed	Tilt Speed	SUM
Zoom In	0xFF	Address	0x00	0x20	0x00	0x00	SUM
Zoom Out	0xFF	Address	0x00	0x40	0x00	0x00	SUM
Focus Far	0xFF	Address	0x00	0x80	0x00	0x00	SUM
Focus Near	0xFF	Address	0x00	0x00	0x00	0x00	SUM
Set Preset	0xFF	Address	0x00	0x03	0x00	Preset ID	SUM
Clear Preset	0xFF	Address	0x00	0x05	0x00	Preset ID	SUM
Call Preset	0xFF	Address	0x00	0x07	0x00	Preset ID	SUM
Auto Focus	0xFF	Address	0x00	0x2B	0x00	0x01	SUM
Manual Focus	0xFF	Address	0x00	0x2B	0x00	0x02	SUM
Query Pan Position	0xFF	Address	0x00	0x51	0x00	0x00	SUM
Query Pan Position Response	0xFF	Address	0x00	0x59	Value High Byte	Value Low Byte	SUM
Query Tilt Position	0xFF	Address	0x00	0x53	0x00	0x00	SUM
Query Tilt Position Response	0xFF	Address	0x00	0x5B	Value High Byte	Value Low Byte	SUM
Query Zoom Position	0xFF	Address	0x00	0x55	0x00	0x00	SUM
Query Zoom Position Response	0xFF	Address	0x00	0x5D	Value High Byte	Value Low Byte	SUM

On Screen Display

Main Menu

There are many ways to adjust the camera's On-Screen Display (OSD) Menu. The following instructions will go over the OSD Menu while using the included IR remote.

Press the [Menu] button to display the OSD Menu. Use the arrow buttons to navigate the OSD menu, the [Enter] button to make selections, and the [Return] button to go back a sub menu.

Menu	
Exposure	
Color	
Image	
P / T / Z	
Noise Reduction	
Setup	
Communication Setup	
Restore Defaults	
Select [Enter]	
Menu[] Exit	

(Exposure) Mode: Full Auto, Manual, SAE, AAE, Bright

ExpCompMode: On, Off (Effective only in Full Auto mode).

Exp-Comp: -7 ~ 7 (Effective only in ExpCompMode item to On).

Backlight: Toggle Backlight Compensation. Options include: On, Off (Only available in Full Auto mode).

Bright: 0 ~ 17 (Effective only in AAE, Bright mode).

Gain Limit: 0 ~ 15 (Effective only in Full Auto, AAE, Bright mode).

Anti-Flicker: Off, 50Hz, 60Hz (Effective only in Full Auto, AAE, Bright mode).

Iris: F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11.0, Close (Effective only in Manual, AAE mode).

Meter: Average, Canter, Smart, Top. (Available only in Full Auto, SAE, AAE, & Bright mode)

Shutter: 1/30, 1/40, 1/50, 1/60, 1/70, 1/80, 1/90, 1/100, 1/110, 1/120, 1/130, 1/140, 1/150, 1/160, 1/170, 1/180, 1/190 (Effective only in Manual, SAE mode).

Gain: 0 ~ 15 (Effective only in Manual mode).

DRC Strength: 0 ~ 7

Exposure

Move the cursor to the "Exposure" option and press the [Enter] button to enter the Exposure page, as shown in the figure below.

Exposure	
Mode	Full Auto
Exp-CompMode	Off
Backlight	Off
Gain Limit	10
Anti-Flicker	60Hz
Meter	Average
DRC	1
[Menu] Back	

Color

Move the cursor to the “Color” option and press the [Enter] button to enter the Color page, as shown in the figure below.

Color	
WB Mode	Auto
Rg Tuning	0
BG Tuning	0
Saturation	100%
Hue	7
[Menu] Back	

WB Mode: Auto, Indoor, Outdoor, One Push, Manual, VAR

AWB Sens: Auto WHite Balance Sensitivity
Options include: Low, Middle, High
(Effective only on Auto, One Push mode)

R. Gain: Camera Red Gain value.
Options include: 0 ~ 255
(Effective only in Manual modes).

B. Gain: Camera Blue Gain value.
Options include: 0 ~ 255
(Effective only in Manual modes).

Color Temp: 2500K ~ 8000K (Effective only in VAR mode).

RG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR mode).

BG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR mode).

Saturation: Camera Saturation value.
Options include: 0 ~ 14

Hue: Camera Hue value.
Options include: 0 ~ 14

Image

Move the main menu cursor to [Image], and press [HOME] key enter the Image page, as shown in the following figure.

Image	
Luminance	7
Contrast	7
Sharpness	6
Flip-H	Off
Flip-V	Off
B&W-Mode	Off
Image Style	Default
[Menu] Back	

Luminance: Brightness value.
Options include: 0 ~ 14

Contrast: Contrast value.
Options include: 0 ~ 14

Sharpness: Sharpness value.
Options include: Auto, 0 ~ 14

Flip-H: Flip image horizontally.
Options include: On, Off

Flip-V: Flip image vertically.
Options include: On, Off

B&W Mode: Toggle Black & White mode.
Options include: On, Off

Gamma : Default, EXT, 0.56, 0.63

Image Style: Face, Jewelry, Default

Move the main menu cursor to [Focus], and press [HOME] key enter the Focus page as shown in the following figure:

Focus	
SpeedByZoom	On, Off
AF-Zone	Front
AF Sense	High
L/R Set	Std
Display Info	On
Digital Zoom	Off
Call Preset Speed	Off
Pre Zoom Speed	5
[Menu] Back	

SpeedByZoom: On, Off

AF Zone: Front, Top, Center, Bottom

AF Sense: High, Normal, Low

L/R Set: STD, REV

Display Info: On, Off

Digital Zoom: On, Off

Call Preset Speed: 1-24

Pre Zoom Speed: 0 - 7

Noise Reduction

Move the main menu cursor to [Noise Reduction], and press [HOME] key enter the Noise reduction page, as shown in the following figure.

Noise Reduction	
NR3D	6
[Menu] Back	

3D NR: Close, 1 ~ 8.

Setup

Move the main menu cursor to [Setup], and press [HOME] key enter the Setup page, as shown in the following figure.

Language	English
Auto Scan Shoot	Off
Auto Focus L	Off
OSD TimeOut	Off
Motion Sync	
Focus Limit	
Video Mode	
Other	
[Menu] Back	

Language: Options include: English, Chinese, Russian, French, Spanish, Italian and German,

Auto Scan Shoot: Call each of the camera's pre sets sequentially.

Options include: Off, On

Auto Focus L: Lock the focus in the current position.

Options include: Off, On

OSD TimeOut: Auto close OSD Menu.

Options include: Off, 2.5min

Motion Sync: Synchronize pan, tilt, and zoom to arrive at the preset simultaneously.

Options include: Off, On (Can be reached by entering the Setup > Motion Sync).

Max Speed: The maximum speed Motion Sync will use when calling presets.

Options include: 185 ~ 230 (increments of 5)

Focus Limit: Define a range the camera can focus within.

Options include: Off, On (Can be reached by entering Setup > Focus Limit).

- **Furthest Pos:** Define the farthest focus position. Options include: INF, 1m ~ 20m
- **Nearest Pos:** Define the nearest focus position. Options include: INF, 1m ~ 20m

Video Mode: Configure assorted video output settings.

- **SDI-3G Mode:** Set the SDI level.
Options include:
- **Video Output:** Set the video output to SDI or HDMI.
Options include: HDMI, SDI
- **DVI Mode:** define HDMI Data Transfer type.
Options include: HDMI, DVI

Other:

- **Auto Inversion:** Toggle auto inversion. Options include: Off, On
- **Tally Mode:** Toggle the tally light functionality. Options include: Off, On
- **USB Audio:** Toggle USB audio embedding. Options include: Off, On
- **USB2.0 Function:** Define how the USB port is used. Options include: UVC, Host

Communication Setup

Move the main menu cursor to [Communication Setup] and press [HOME] key enter Communication Setup page, as shown in the following figure.

Communication Setup	
Protocol	VISCA
V_Address	1
V-AddrFix	Off
Net Mode	Serial
Baudrate	9600
[Menu] Back	

Protocol: Control protocol

Options include: VISCA, PELCO-D, PELCO-P, Auto

V_Address: VISCA protocol camera address

Options include: 1 ~ 7

V-AddrFix: When enabled, the Visca address will not change. Options include: Off, On

Net Mode: Control type

Options include: Serial, Paral

Baudrate: Baudrate control speed

Options include: 2400, 4800, 9600, 38400

P_D_Address: Pelco-D protocol address

Options include: 0 ~ 254

P_P_Address: Pelco-P protocol address

Options include: 0 ~ 31

Restore Default

Move the cursor to the “Restore Default” option and press the [Enter] button to enter the Restore Default page, as shown in the figure below.

Restore Default	
Press [Enter]	Confirm
Press [Back]	Cancel
Select [Enter]	
[Menu] Back	

Note: Press the [Enter] button to confirm.

All camera parameters will return to default, including IR remote & VISCA Addresses.

Color

Move the cursor to the “Color” option and press the [Enter] button to enter the Color page, as shown in the figure below.

Color	
WB Mode	Auto
AWB Sens	High
RG tuning	0
BG tuning	1
Saturation	100%
Hue	7
Return	

WB Mode: Auto, Indoor, Outdoor, One Push, Manual, VAR

AWB Sens: Auto White Balance Sensitivity
Options include: Low, Middle, High
Effective only in Auto, One Push mode.

R. Gain: Camera Red Gain value.
Options include: 0 - 255
Effective only in Manual mode.

B. Gain: Camera Blue Gain value.
Options include: 0 - 255
(Only available in Manual modes).

Color Temp: 2500K ~ 8000K (Effective only in VAR mode).

RG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR mode).

BG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR mode).

Saturation: Camera Saturation value.
Options include: 0 ~ 14

Hue: Camera Hue value.
Options include: 0 ~ 14

Image

Move the main menu cursor to [Image], and press [HOME] key enter the Image page, as shown in the following figure.

Image	
Luminance	7
Contrast	7
Sharpness	5
B&W-Mode	Off
Flip-H	Off
Flip-V	Off
Gamma	EXT
Image Style	Default
Return	

Image Style: Face, Jewelry, Default.

Luminance: 0 - 14

Contrast: 0 - 14

Sharpness: 0 - 15, Auto

B&W-Mode: Off, On

Flip-H: Off, On

Flip-V: Off, On

Gamma: Default, EXT, 0.56, 0.63

Focus

Move the main menu cursor to [Focus], and press [HOME] key enter the Focus page as shown in the following figure:

Focus	
TOF Focus	On
AF Sense	High
Auto Focus	On
AF Zone	Front
Return	

TOF Focus: Toggle Time of Flight Focus
Options include: On, Off

AF Sense: Adjust how sensitive the auto focus is. High, Normal, Low

AF Zone: Select the zone that Auto Focus prioritizes. Options include: Front, Top, Middle, Bottom

Auto Focus: On or Off

Noise Reduction

Move the main menu cursor to [Noise Reduction], and press [HOME] key enter the Noise reduction page, as shown in the following figure.

Noise Reduction	
2D NR	Auto
3D NR	Auto
Return	

2D NR: Close, Auto, 1 ~ 5.

3D NR: Close, Auto, 1 ~ 8.

Setting

Move the main menu cursor to [Setting], and press [HOME] key enter the Setting page, as shown in the following figure.

Setting	
Language	English
Guard Position	Preset 0
Video Format	1080P60
Audio Enable	On
Audio PC Mono	On
Return	

Language: English, Chinese.

Guard Position: Preset 0 Priority, Zoom, Stop, Save

Video Format: 1080p60, 1080p50, 1080p30, 720p60, 720p50

Audio Enable: On, Off

Audio PC Mono: On, Off

Information

Move the main menu cursor to [Information], and press [HOME] key enter Information page, as shown in the following figure.

Information	
Version	9.0.05
Model	P7.TC
Date	2021-08-05
AF Version	7.3.09
IP	192.168.100.88
Gateway	192.168.100.1
Netmask	255.255.255.0
Return	

Restore Default

Move the cursor to the “Restore Default” option and press the [Enter] button to enter the Restore Default page, as shown in the figure below.

Restore Default	
Yes	
No	
Return	

Note: Press the [Enter] button to confirm. All camera parameters will return to default, including IR remote & VISCA Addresses.


Network Connection

Operating Environment

- Operating System: Windows 7 / 8.1 / 10 / 11 Mac OS, Linux, Android
- Network Protocol: TCP/IP
- Client PC: P4 / 128M RAM / 40G HDD / , Supports scaled graphics card, Supports DirectX 8.0 or more advanced version.

Equipment Installation

1. Connect the camera to your network via a CAT5 or CAT6 cable directly to your network switch.
2. Turn on power.
3. If successful, the orange network light will illuminate and the green light will start flashing.
- 4.

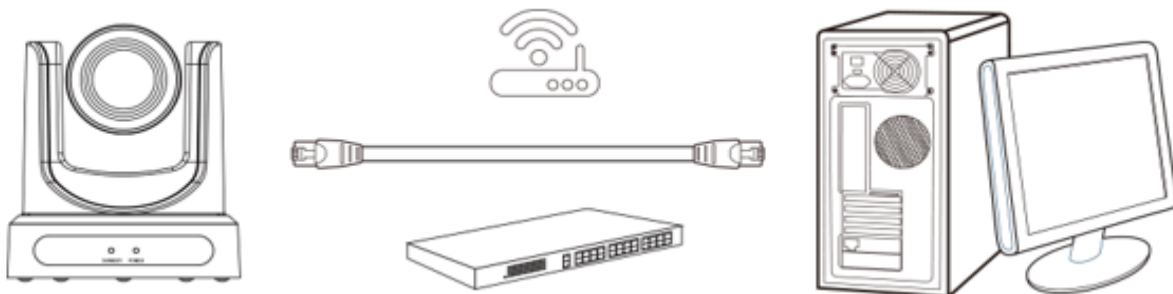

Picture 1.2 Connections to LAN via patch cable to LAN wall jack or LAN Switch

Finding the Camera's IP Address

The camera will automatically acquire an IP address when connected to the network. If the network cannot assign an IP address, the camera will default to "192.168.100.88". If you don't know the camera IP, please do one of the following:


- Method 1: Use a Internet browser and type in "http://ptzoptics.local/" to reach the camera's web interface. From there, the Network Settings page will allow you to view the camera's network settings.
- Method 2: Connect camera to PC with network cable, use Upgrade Tool to search for IP address.

Discovering your Network Info

To discover your IP address range/scheme, Subnet Mask, Gateway, & First DNS, follow the instructions below for Windows or Mac OS. You may need to talk with your IT department to obtain this information.

Windows

1. Open the Start menu and type “CMD” into the search bar.
2. Once the Command Prompt is open, type in “`ipconfig`” and press the Enter key.
3. Scroll down to the section titled “Ethernet adapter Ethernet” or “Ethernet adapter Wireless Network Connection”.
4. Locate the “IPv4 Address” in that section. This is your computers local IP address.
5. In the example above, the PC’s local address is “192.168.15.117”, making the network range “192.168.15”.

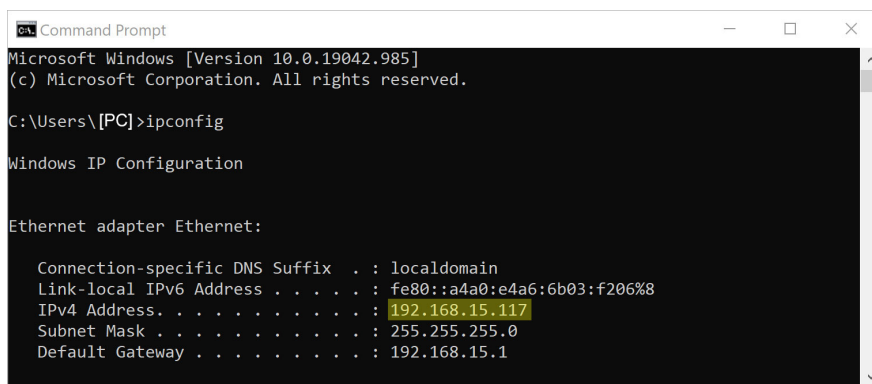

```
Command Prompt
Microsoft Windows [Version 10.0.19042.985]
(c) Microsoft Corporation. All rights reserved.

C:\Users\[PC]>ipconfig


Windows IP Configuration

Ethernet adapter Ethernet:

    Connection-specific DNS Suffix  . : localdomain
    Link-local IPv6 Address . . . . . : fe80::a4a0:e4a6:6b03:f206%8
    IPv4 Address. . . . . : 192.168.15.117
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.15.1
```

Mac


1. Open a new *Finder* window and go to the *Applications* folder.
2. Open the *Utilities* folder and select the *Terminal* program.
3. Once the *Terminal* program is open, type in “`ipconfig getifaddr en0`” and press the Enter key.

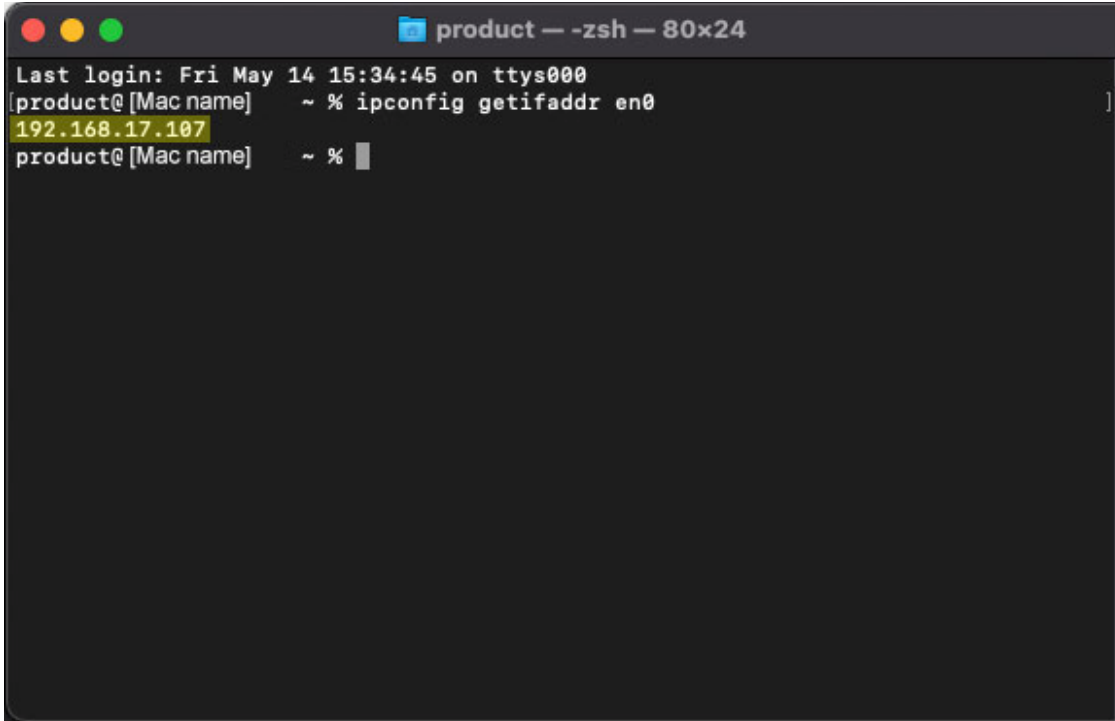

```
product — zsh — 80x24
Last login: Fri May 14 15:34:45 on ttys000
[product@[Mac name] ~ % ipconfig getifaddr en0
192.168.17.107
[product@[Mac name] ~ %
```


4. In the example above, the Mac’s local address is 192.168.17.107”, making the network range “192.168.17”.

Web UI

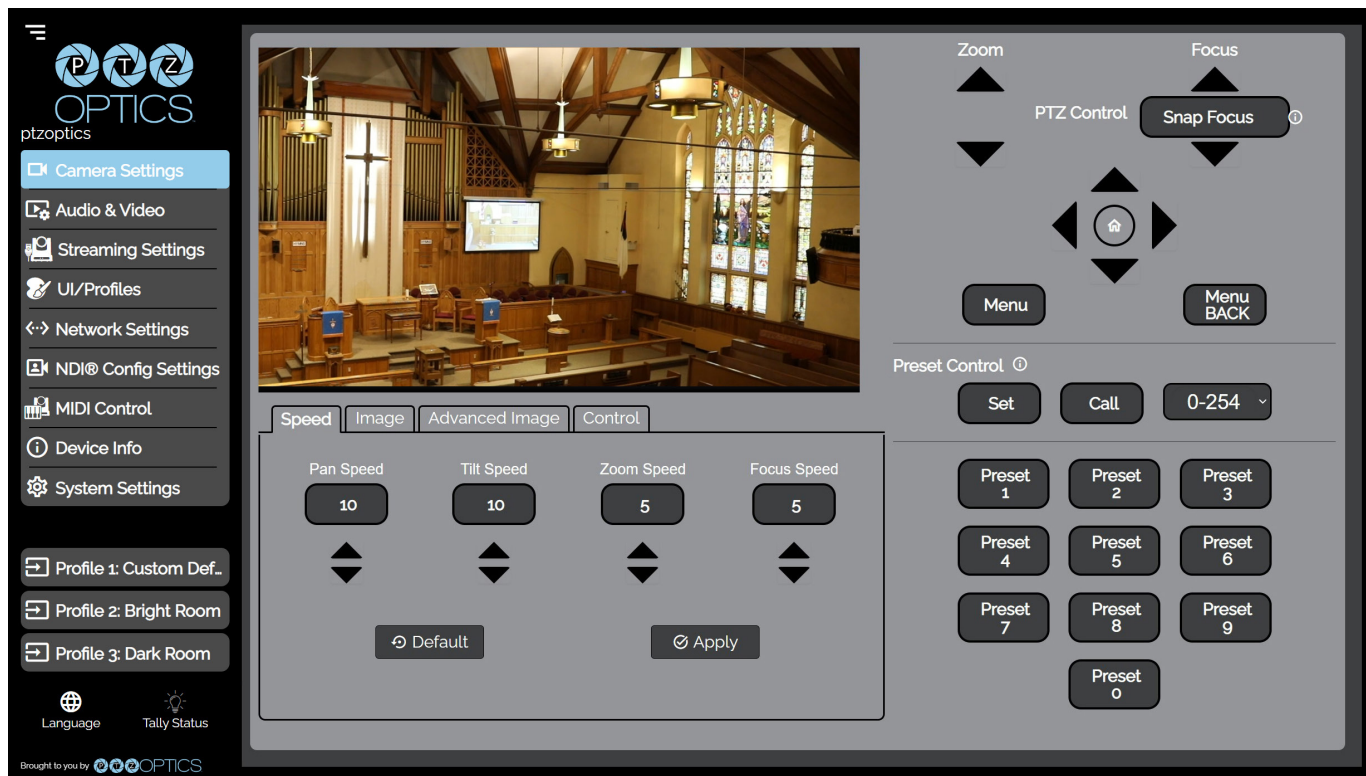

Access Camera

1. Enter “<http://ptzoptics.local/>” or the camera’s IP address into a web browser.
2. Enter the username and password into the login fields. Both the username and password are “admin” by default. You can change the login credentials on the [System Settings](#) page.

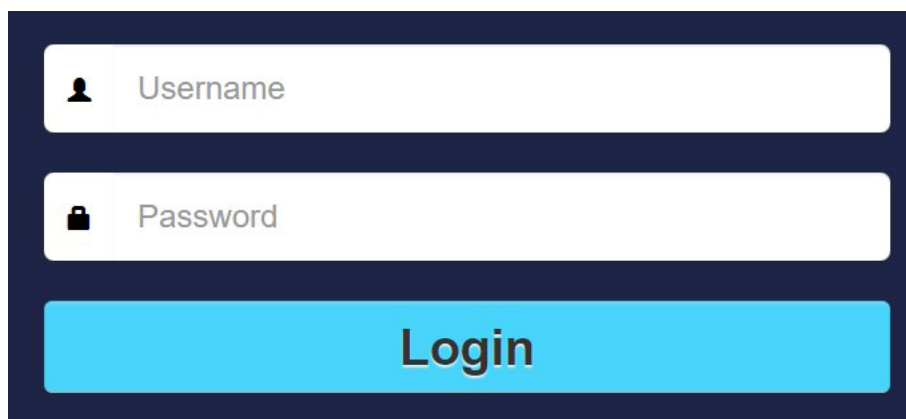


The login form consists of two input fields: a Username field with a person icon and a Password field with a lock icon. Below these fields is a large blue button labeled 'Login'.

Navigation Panel

The **Navigation Panel** allows you to quickly and easily select the various control options for the camera. It can be collapsed for more room on the user interface.


You can load preconfigured Profiles to the camera by selecting the desired Profile from the Navigation Panel.

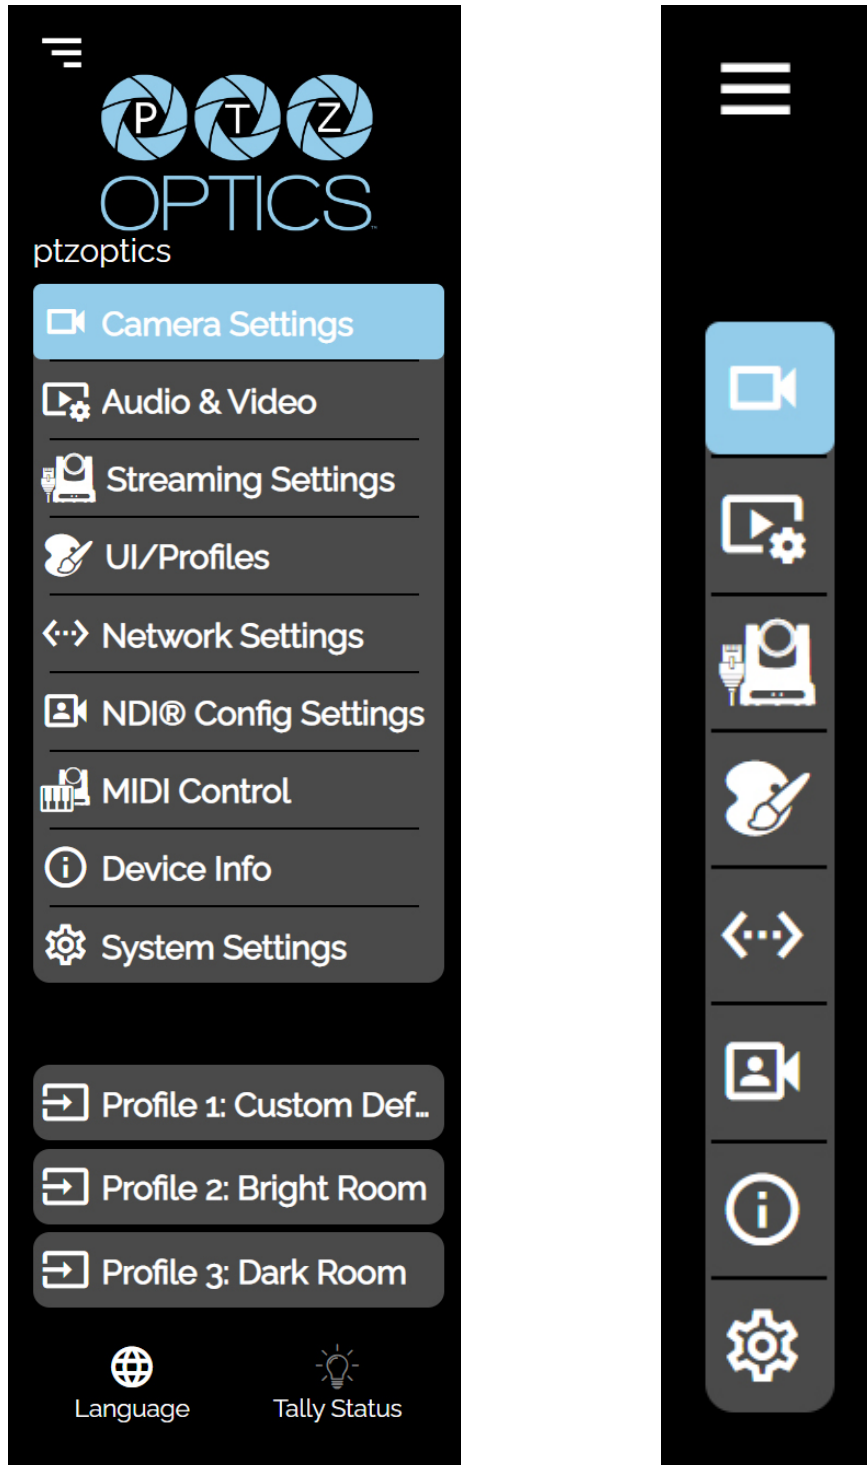

Camera Settings


The **Camera Settings** page accesses the **PTZ Control**, **OSD Menu**, **Preset Control**, **Speed** settings, **Image** settings, **Advanced Image** settings, and **Control** settings sections.

The settings available in the **Image & Advanced Image** sections are also available in the camera's Menu. The settings are offered in the Web UI so you don't have to open the Menu while the camera is in use.

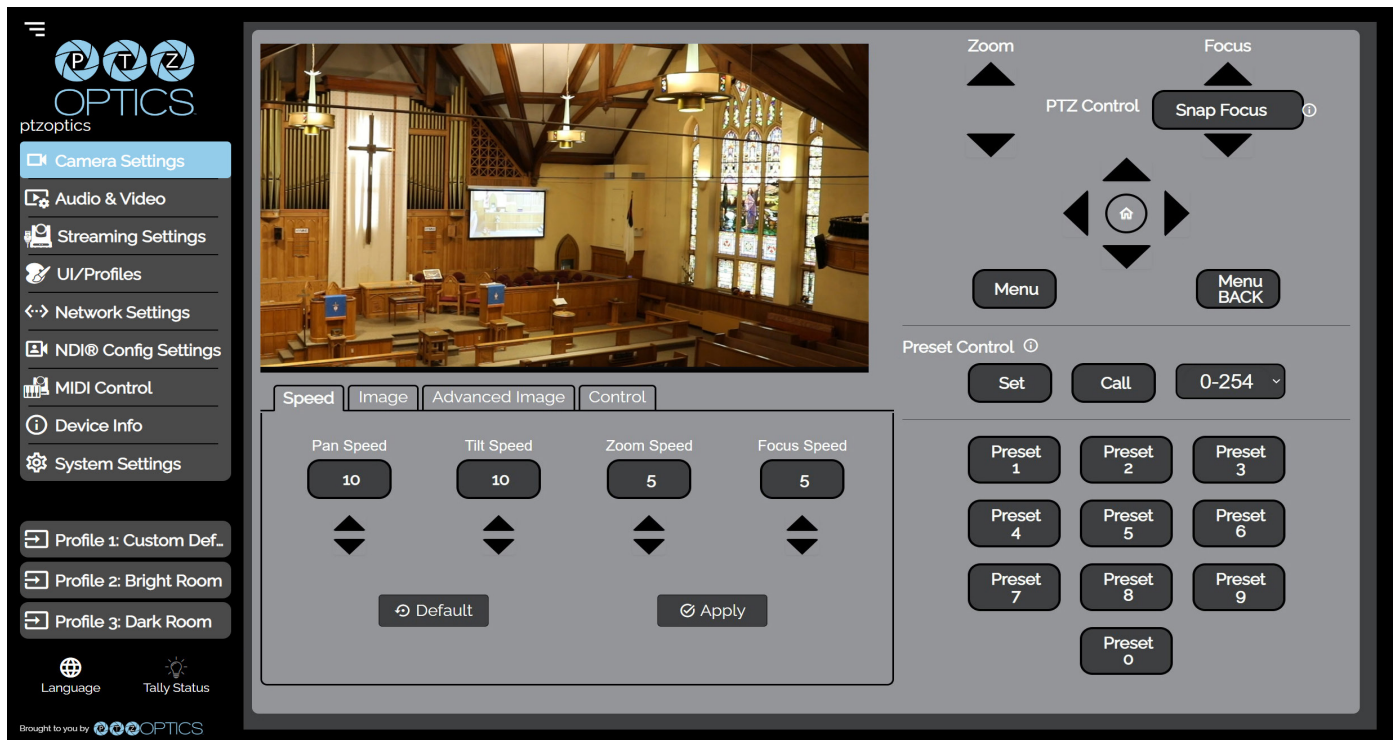

- The **PTZ Control** section allows you to Zoom & Focus the camera.
- The **Menu & Menu Back** buttons allow you to traverse the Menu when needed.
- The **Preset Control** section allow you to save and call up to 254 presets.
 - The **Preset 0 – 9** buttons allow you to quickly call the first 10 presets.
- The **Speed** tab allows you to adjust the speed at which the camera will Zoom and Focus within the Web UI.

Image

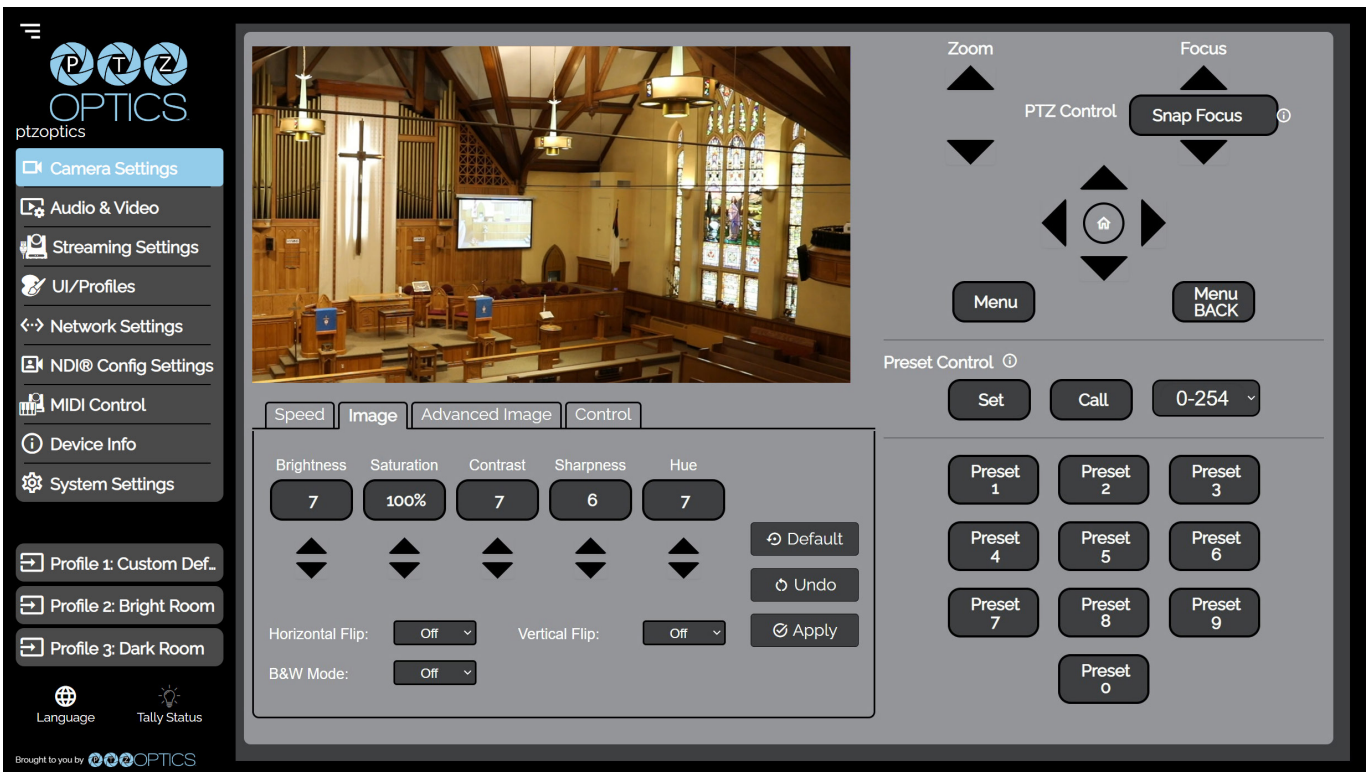

- The **Image** tab allows you to adjust the **Brightness, Saturation, Contrast, Sharpness and Hue** of the image. You can also turn on / off **Horizontal or Vertical Flip** and **Black and White Mode**.
 - You must hit the “Apply” button for these changes to take effect.
 - The “Default” button will revert the Image settings to factory default.
 - The “Undo” button will revert the Image settings to the last saved settings.

Advanced Image



- The **Advance Image > Focus** tab allows you to adjust the various focus settings, including **Auto Focus**, **AF Zone**, **Auto Focus Sensitivity**, **Focus Lock**, & **Focus Limit**.



- The **Advanced Image > Exposure** tab allows you to fine tune the camera's exposure settings to ensure image clarity as well as ensuring the images from multiple cameras match.



- The **Advanced Image > Color** tab allows you to fine tune the camera's white balance and color tint settings to adjust for lighting as well as ensuring images from multiple cameras match.



- The **Advanced Image > Noise Reduction** tab allows you to fine tune the **2D & 3D Noise Reduction** setting.





- The **Advanced Image > Setup** tab allows you to change the **Image Style** and **Toggle Tally Mode** on / off.



- The **Control** tab allows you to access the camera's **TCP, UDP, & Sony UDP** control ports.

Audio Video Settings

The Audio & Video Settings page accesses the **Video Encoding Settings**, **IP Video Stream 1 / Stream 2 Encoding Settings**, & **Audio Encoding Settings** sections of the network video feeds.

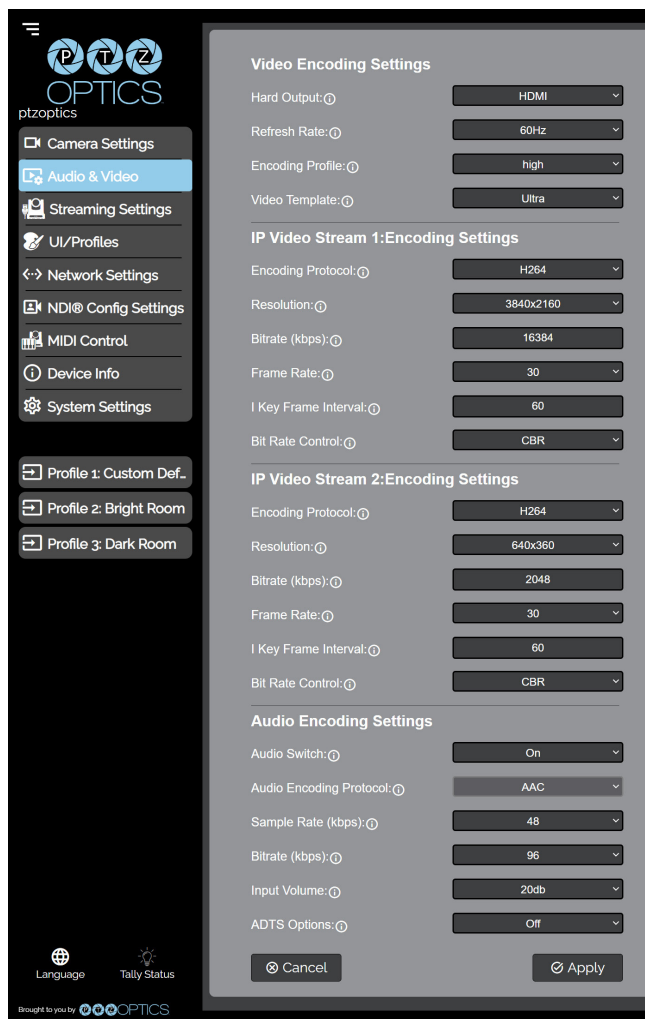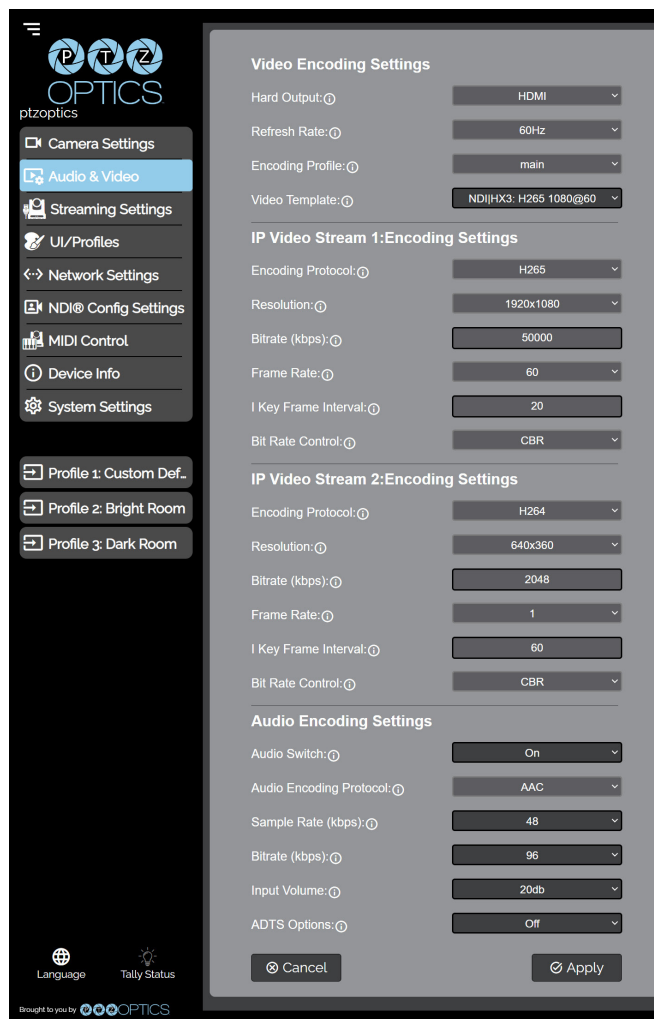
- **Video Encoding Settings**

- **Refresh Rate:** Frequency adjustment for displays. Select the refresh rate for your region.
 - Option includes: Dial Priority, 50Hz, 60Hz
- **Encoding Protocol:** The Encoding Profile defines the compression method and color reproduction of the IP Stream.
 - Options include: main, high.
- **Video Template:** Select from frequently used pre-configured settings. You can manually define these settings.
 - Option includes: Off, Ultra, High, Medium, Low, NDI|HX3 H264 1080@50, NDI|HX3 H264 1080@60, NDI|HX3 H265 1080@50, NDI|HX3 H265 1080@60 When the NDI|HX3 templates are selected, the Refresh Rate, Encoding Profile, Encoding Protocol, Resolution, Bitrate, Frame Rate, I Key Frame Interval, & Bit Rate Control settings are locked.

- **HDMI Output: Encoding Settings**
 - **Video Format:** Define the resolution and framerate of the HDMI output
 - Options include: 1080p60, 1080p50, 1080p30, 720p60, 720p50
- **IP Video Stream 1 & 2: Encoding Settings**
 - **Encoding Protocol:** Define the compression method for the stream.
 - Option includes: H264, H265, MJPEG
 - **Resolution:** Define the resolution of the stream.
 - Stream 1 option includes: 3840x2160, 1920x1080, 1280x720, 1024x576, 720x480, 720x408, 640x480, 640x360
 - Stream 2 option includes: 720x480, 720x408, 640x480, 640x360, 480x320, & 320x240
 - **Bitrate (kbps):** Define the bit rate of the stream in kilobits. The higher the value, the higher the video quality at the cost of higher bandwidth.
 - Stream 1 Range: 1 ~ 102400
 - Stream 2 Range: 1 ~ 20480
 - **QFactor:** Define the Quality Factor of the stream. The higher the value, the higher the video quality at the cost of higher bandwidth (Only available when MJPEG is selected as the Encoding Protocol).
 - Range: 1 ~ 99
 - **Frame Rate:** Define the Frame Rate of the stream.
 - Range: 1 ~ 60
 - **I Key Frame Interval:** Define the I-Key Frame Interval of the stream.
 - Range: 1 ~ 1200
 - **Bit Rate Control:** Select whether the Bit Rate fluctuates (VBR) or is static (CBR).
 - Options include: CBR, VBR
- **Audio Encoding Settings**
 - **Audio Switch:** Select whether Audio is included on the applicable video outputs.
 - Options include: On, Off
 - **Audio Encoding Protocol:** Define the audio compression method.
 - Options include :AAC
 - **Sample Rate (kbps):** Define the amount of samples per second the audio utilizes.
 - Options include: 44.1, 48
 - **Bitrate (kbps):** Define the amount of bits per second the audio utilizes in kilobits
 - Option includes: 96, 128
 - **Input Volume:** Define the Input Volume of the Audio Input.
 - Range: 0db ~ 59db
 - **ADTS Options:** Select whether Audio Data includes timestamps.
 - Options include: On, Off

Streaming Settings

The **Streaming Settings** page accesses the **RTMP(S) Settings**, **SRT Settings**, **RTSP Settings**, **Multicast Settings**, & **ONVIF Settings** sections.

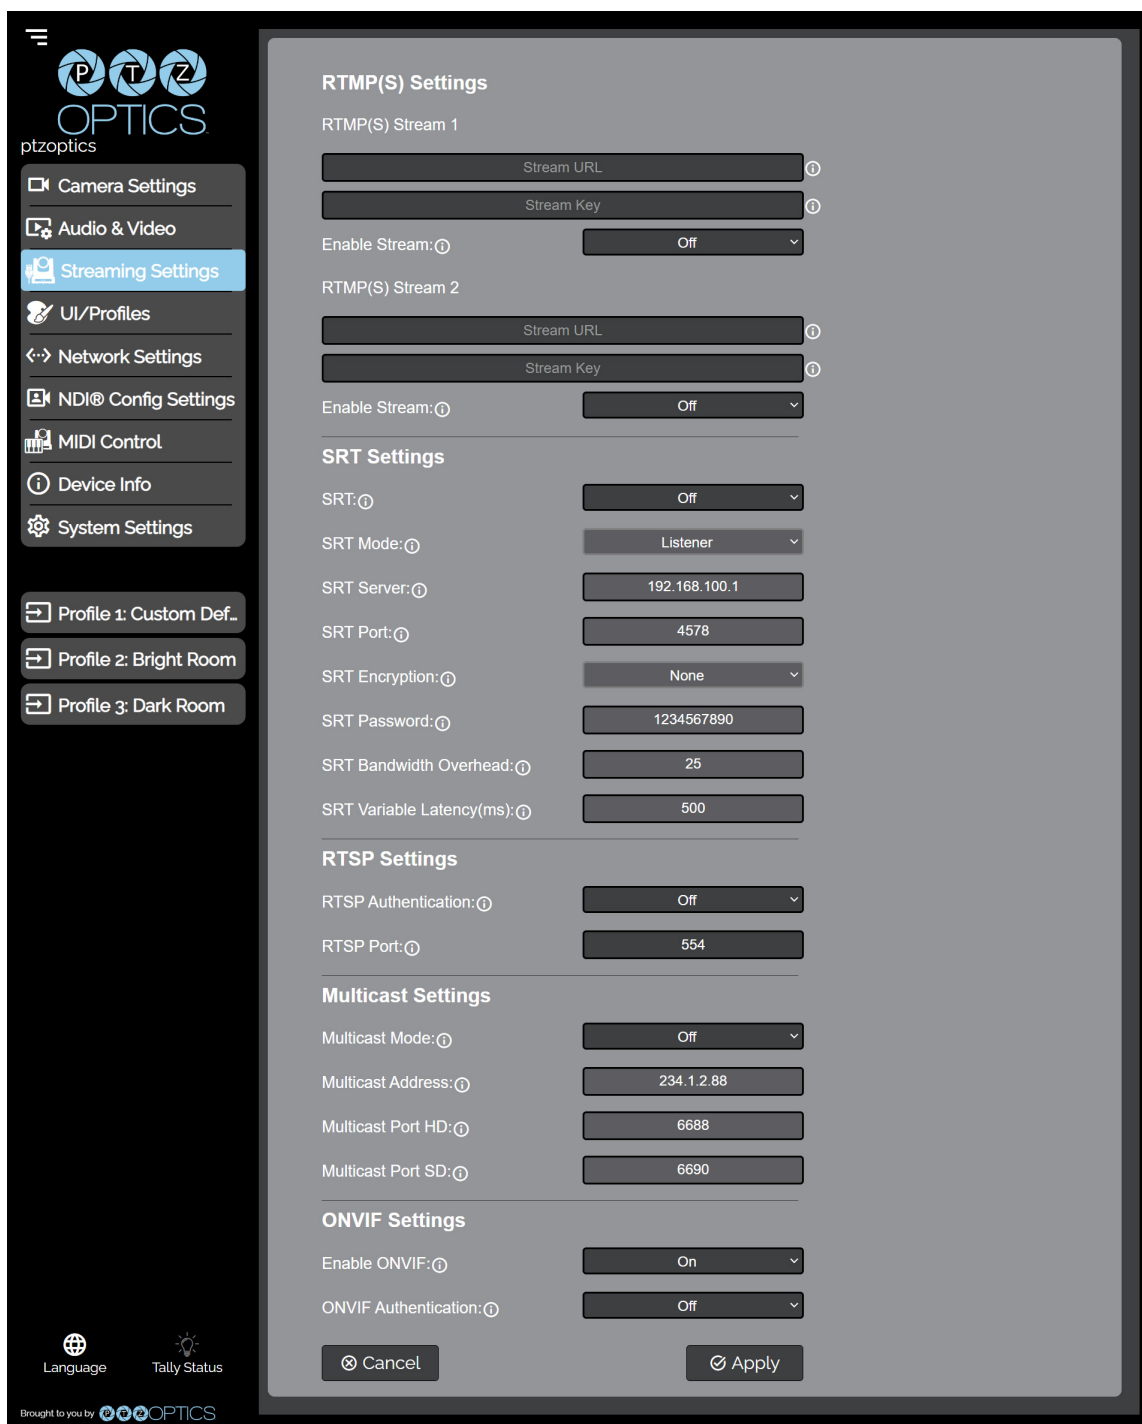

Streaming Settings

RTMP(S) Settings

RTMP(S) Stream 1

Stream URL ⓘ

Stream Key ⓘ

Enable Stream: ⓘ Off

RTMP(S) Stream 2

Stream URL ⓘ

Stream Key ⓘ

Enable Stream: ⓘ Off

SRT Settings

SRT: ⓘ Off

SRT Mode: ⓘ Listener

SRT Server: ⓘ 192.168.100.1

SRT Port: ⓘ 4578

SRT Encryption: ⓘ None

SRT Password: ⓘ 1234567890

SRT Bandwidth Overhead: ⓘ 25

SRT Variable Latency(ms): ⓘ 500

RTSP Settings

RTSP Authentication: ⓘ Off

RTSP Port: ⓘ 554

Multicast Settings

Multicast Mode: ⓘ Off

Multicast Address: ⓘ 234.1.2.88

Multicast Port HD: ⓘ 6688

Multicast Port SD: ⓘ 6690

ONVIF Settings

Enable ONVIF: ⓘ On

ONVIF Authentication: ⓘ Off

Cancel Apply


Language Tally Status

Brought to you by PTZOPTICS

- **RTMP(S) Stream 1 & 2 Settings**
 - **RTMP(S) Stream URL:** Define the RTMP Address of the CDN you wish to stream to.
 - **RTMP(S) Stream Key:** Define the stream key of the CDN you wish to stream to.
 - **Enable Stream:** Toggle the RTMP stream on or off.
- **SRT Settings**
 - **SRT:** Toggle the SRT stream on or off.
 - **SRT Mode:** Define whether the SRT stream is pulled (Listener) from the camera, or whether the stream must be pushed (Caller) to a server.
 - **SRT Server:** Define the Server IP address. This is only used in Caller mode.
 - **SRT Port:** The SRT Port is how you reach the SRT video feed of your camera.
 - **SRT Encryption:** Toggle SRT Encryption on or off.
 - **SRT Password:** Define the SRT password when utilizing SRT Encryption
 - **SRT Bandwidth Overhead:** SRT Bandwidth is a percentage that you assign that helps determine the total bandwidth that the SRT stream will use up. This percentage should not exceed 50%, and is set to 25% by default.
 - **SRT Variable Latency(ms):** Define the maximum buffer size for maintaining SRT packets from the camera to the destination.
- **RTSP Settings**
 - **RTSP Authentication:** Toggle RTSP Authorization on or off.
 - **RTSP Port:** The RTSP Port is how you reach the RTSP video feed(s) of your camera.
- **Multicast Settings**
 - **Multicast Mode:** Toggle Multicast on or off. WARNING! Only use this setting with a network configured for Multicast.
 - **Multicast Address:** Define the Multicast Address. Recommended format: 234.1.2.[camera IP address last octet]
 - **Multicast Port:** The Multicast Port is how you reach the stream through RTP Multicast.
- **ONVIF Settings**
 - **Enable ONVIF:** Toggle ONVIF control on or off
 - **ONVIF Authentication:** Toggle ONVIF Authentication on or off

UI / Profiles

The **UI / Profiles** page accesses the **Logo Upload**, **Profile Configuration**, **Quick Profiles**, **Custom CSS Configuration**, & **Tutorial Mode** sections.

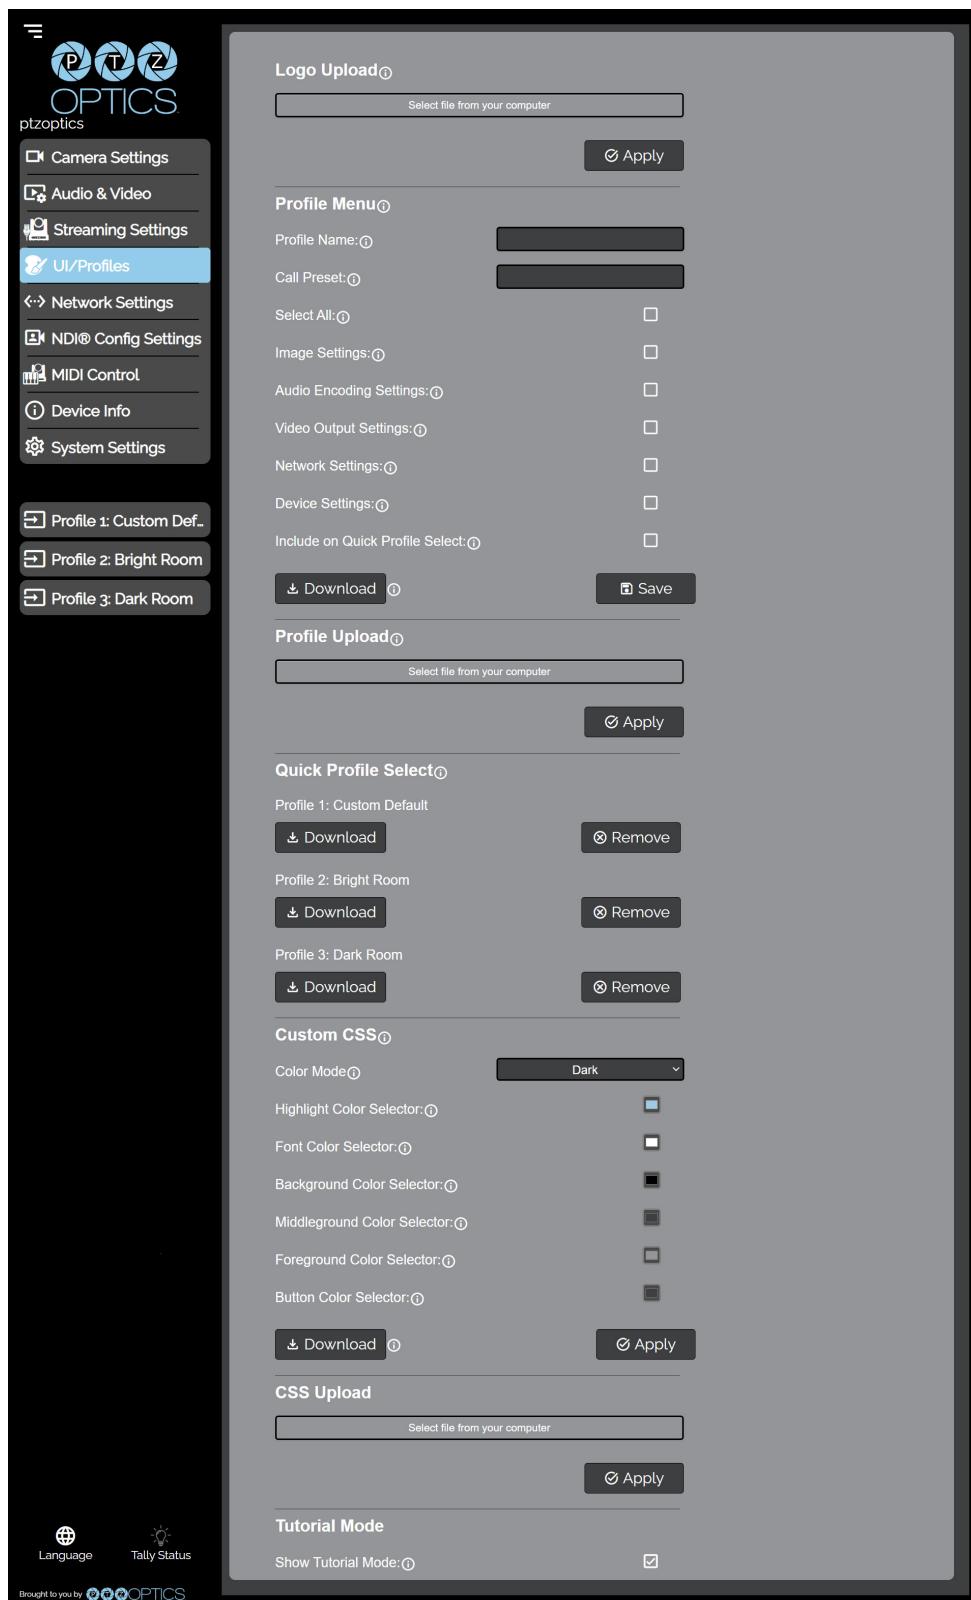

The screenshot displays the PTZ OPTICS web interface. On the left is a dark sidebar with a menu containing: Camera Settings, Audio & Video, Streaming Settings, **UI/Profiles** (highlighted), Network Settings, NDI® Config Settings, MIDI Control, Device Info, and System Settings. Below the menu are three profile buttons: Profile 1: Custom Def., Profile 2: Bright Room, and Profile 3: Dark Room. At the bottom of the sidebar are icons for Language and Tally Status, and a footer that reads 'Brought to you by PTZ OPTICS'.

The main content area is titled 'UI / Profiles' and contains several sections:

- Logo Upload**: A file selection box with the text 'Select file from your computer' and an 'Apply' button.
- Profile Menu**: A list of settings with checkboxes:
 - Profile Name: [text input]
 - Call Preset: [text input]
 - Select All: ☐
 - Image Settings: ☐
 - Audio Encoding Settings: ☐
 - Video Output Settings: ☐
 - Network Settings: ☐
 - Device Settings: ☐
 - Include on Quick Profile Select: ☐
 Below this list are 'Download' and 'Save' buttons.
- Profile Upload**: A file selection box with the text 'Select file from your computer' and an 'Apply' button.
- Quick Profile Select**: A list of three profiles with 'Download' and 'Remove' buttons for each:
 - Profile 1: Custom Default
 - Profile 2: Bright Room
 - Profile 3: Dark Room
- Custom CSS**: A section for customizing the interface appearance. It includes a 'Color Mode' dropdown set to 'Dark', and color selectors for Highlight, Font, Background, Middleground, Foreground, and Button. Each selector has a small color swatch. At the bottom are 'Download' and 'Apply' buttons.
- CSS Upload**: A file selection box with the text 'Select file from your computer' and an 'Apply' button.
- Tutorial Mode**: A section with a 'Show Tutorial Mode' checkbox, which is currently checked.

- **Logo Upload**
 - **Upload File:** Browse your PC for an image file you'd like to upload to the camera's web interface. The resolution of this logo should be 2500x1000 and PNG or JPG type file.
- **Profile Menu**
 - **Profile Name:** Give your Profile a unique name so you can easily remember.
 - **Call Preset:** Select a preset to be called when the Profile is loaded. This field is optional.
 - **Select All:** Select all of the below options in the Profile Menu section.
 - **Image Settings:** Select whether the Image Settings on the Camera Settings page are stored in the Profile.
 - **Audio Encoding Settings:** Select whether the Audio Settings on the Audio & Video Settings page are stored in the Profile. This will require a camera reboot when loaded.
 - **Video Output Settings:** Select whether the Video Settings on the Audio & Video Settings page are stored in the Profile. This will require a camera reboot when loaded.
 - **Network Settings:** **Select whether the settings on the Network Settings page are stored in the Profile.** This will require a camera reboot when loaded.
 - **Device Settings:** Select whether the settings on the Device Info page are stored in the Profile. This will require a camera reboot when loaded.
 - **Include on Quick Profile Select:** Select whether the Profile is displayed in the Quick Profile Select section on the Navigation Panel.
 - **Download:** Download the profile from the Profile Menu section.
 - **Save:** Save the configured Profile. The Include on Quick Profile Select checkbox needs to be checked in order to save the Profile to the camera.
- **Profile Upload**
 - **Upload File:** Upload a saved Profile from your computer to the camera.
- **Quick Profile Select**
 - **Download Button:** Download the selected Profile to your computer.
 - **Remove Button:** Remove the selected Profile from the camera.
 - Custom CSS
 - **Color Mode:** Select the color mode of the Web UI. Custom allows you to define your own colors.
 - **Highlight Color Selector:** Define the color that buttons glow while hovering over or pressing the buttons.
 - **Font Color Selector:** Define the font color.
 - **Background Color Selector:** Customize the background color of the Web UI.
 - **Middleground Color Selector:** Customize the middleground color of the Web UI.
 - **Foreground Color Selector:** Customize the foreground color of the Web UI.
 - **Button Color Selector:** Customize the button background and text field color of the Web UI.
 - The colors can be defined by using the eyedropper tool, decimal code, HSL code, or hex code.
- **CSS Upload**
 - **Upload File:** Upload a saved Custom CSS file from your computer to the camera.
- **Tutorial Mode**
 - **Show Tutorial Mode:** While checked, the Information Symbols and associated text will be available, giving a description of each available setting.

Network Settings

The **Network Settings** page accesses the **LAN Settings** & **NTP Settings** sections.





ptzoptics

- Camera Settings
- Audio & Video
- Streaming Settings
- UI/Profiles
- Network Settings**
- NDI® Config Settings
- MIDI Control
- Device Info
- System Settings

- Profile 1: Custom Def.
- Profile 2: Bright Room
- Profile 3: Dark Room

 Language
  Tally Status

Brought to you by 

LAN Settings

IP Configuration type: ⓘ DHCP

IP address: ⓘ 192.168.15.66

Subnet mask: ⓘ 255.255.255.0

Gateway: ⓘ 192.168.15.1

DNS address: ⓘ 192.168.15.1

MAC address: ⓘ D4:E0:8E:A3:C9:A6

DHCP timeout: 30

Static fallback address: 192.168.100.88

Static fallback mask: 255.255.255.0

Cancel Apply

NTP Settings

NTP Time Sync: ⓘ On

NTP time zone: ⓘ (GMT-05:00) Eastern Time (U

Server address: ⓘ time.windows.com

Time Interval: ⓘ 64

Cancel Apply

- **LAN Settings**

- **IP Configuration Type:** Select whether the camera automatically configured the network settings (DHCP) or whether you manually configure the network settings (Static).
- **IP Address:** The IP address is a unique address the network uses to connect and configure the camera.
- **Subnet Mask:** The Subnet Mask is a set of numbers that defines how large your network is.
- **Gateway:** The Gateway is the address associated with your router to connect to the internet.
- **DNS Address:** The DNS address is a unique IP address the camera will query when trying to reach a specific website.
- **MAC Address:** The MAC Address is a unique address the Ethernet port utilizes to communicate with the network. You can not change this address.
- **DHCP Timeout:** DHCP Timeout is the amount of time the camera will try to acquire an IP address through DHCP. After this time, the camera will revert to the Static Fallback Address & Static Fallback Mask. You can not change this timeout.
- **Static Fallback Address:** Static Fallback Address is the IP address the camera will revert to if one can't be acquired automatically. You can not change this address.
- **Static Fallback Mask:** Static Fallback Mask is the Subnet Mask the camera will revert to if one can't be acquired automatically. You can not change this subnet mask.

- **NTP Settings**

- **NTP Time Sync:** Toggle Network Time Protocol (NTP) on or off.
- **NTP Time Zone:** Select your time zone.
- **Server Address:** Define the NTP Server Address you wish to utilize.
- **Time Interval:** Define how frequently NTP queries the server (in seconds).

NDI® Config Settings

The **NDI Config Settings** page accesses the camera's NDI settings.



The screenshot shows the PTZ OPTICS web interface. On the left is a dark sidebar with a menu. The main content area is titled 'NDI® Config' and contains various settings for NDI (Network Device Interface) streaming. At the bottom of the sidebar are links for 'Language' and 'Tally Status', and a footer that says 'Brought to you by PTZ OPTICS'.

PTZ OPTICS
ptzoptics

- Camera Settings
- Audio & Video
- Streaming Settings
- UI/Profiles
- Network Settings
- NDI® Config Settings**
- MIDI Control
- Device Info
- System Settings

Profile 1: Custom Def...
Profile 2: Bright Room
Profile 3: Dark Room

Language Tally Status

Brought to you by **PTZ OPTICS**

NDI® Config

NDI® Local Device Name: ⓘ	ptzoptics
NDI® Local Device Channel: ⓘ	Chan1
NDI® Receive Group: ⓘ	public
NDI® Discovery Server: ⓘ	Off ▼
NDI® Discovery Server Address: ⓘ	192.168.1.2
NDI® Multicast Server: ⓘ	Off ▼
NDI® Multicast Address: ⓘ	239.255.0.10
NDI® Multicast Mask: ⓘ	255.255.0.0
NDI® Multicast TTL: ⓘ	1
NDI® Firmware Version: ⓘ	PT5.0.11
NDI® Port: ⓘ	5961

⊗ Cancel ✓ Apply



- **NDI Config**

- **NDI Local Device Name:** The Local Device Name is the name you assign to your NDI device.
- **NDI Local Device Channel:** The Local Device Channel is the video feed that you assign to your NDI Local Device Name.
- **NDI Receive Group:** The Receive Group defines which devices on a LAN can view the NDI sources. The camera and computer's Receive Group must match in order to view the NDI source. Your camera can be part of multiple groups.
- **NDI Discovery Server:** Toggle the NDI Discovery Server connection on or off. The Discovery Server handles discovering and distributing NDI sources more reliably across your LAN.
- **NDI Discovery Server Address:** Define the Discovery Server IP address.
- **NDI Multicast Server:** Toggle the NDI Multicast Server on or off. NDI Multicast allows for a single NDI source to be viewed across multiple PCs more reliably. **WARNING!** Only use this setting with a network configured for Multicast.
- **NDI Multicast Address:** Define the NDI Multicast Server Address.
- **NDI Multicast Mask:** Define the Multicast Subnet Mask.
- **NDI Multicast TTL:** Define how frequently Multicast Time to Live (TTL) queries (in minutes).
- **NDI Firmware Version:** The NDI Firmware version currently running on the camera.
- **NDI Port:** The NDI Port is how you reach the NDI feed of your camera.


For more information on how to utilize the NDI® Discovery Server, please see :

<https://help.ptzoptics.com/en/support/solutions/articles/13000086877-ndi-discovery-server>

NewTek®, NDI®, NDI® 4, & NDI®|HX are all registered trademarks by Vizrt Group®.

MIDI Control

The **MIDI Control** page accesses the **PTZOptics MIDI Control, Control Mapping, Mass Command Edit & Information** sections. The MIDI Control page can be reached by accessing the HTTPS version of the camera's web interface. ([https://\[Camera IP\]/](https://[Camera IP]/)). The page must remain open for MIDI Control to function.

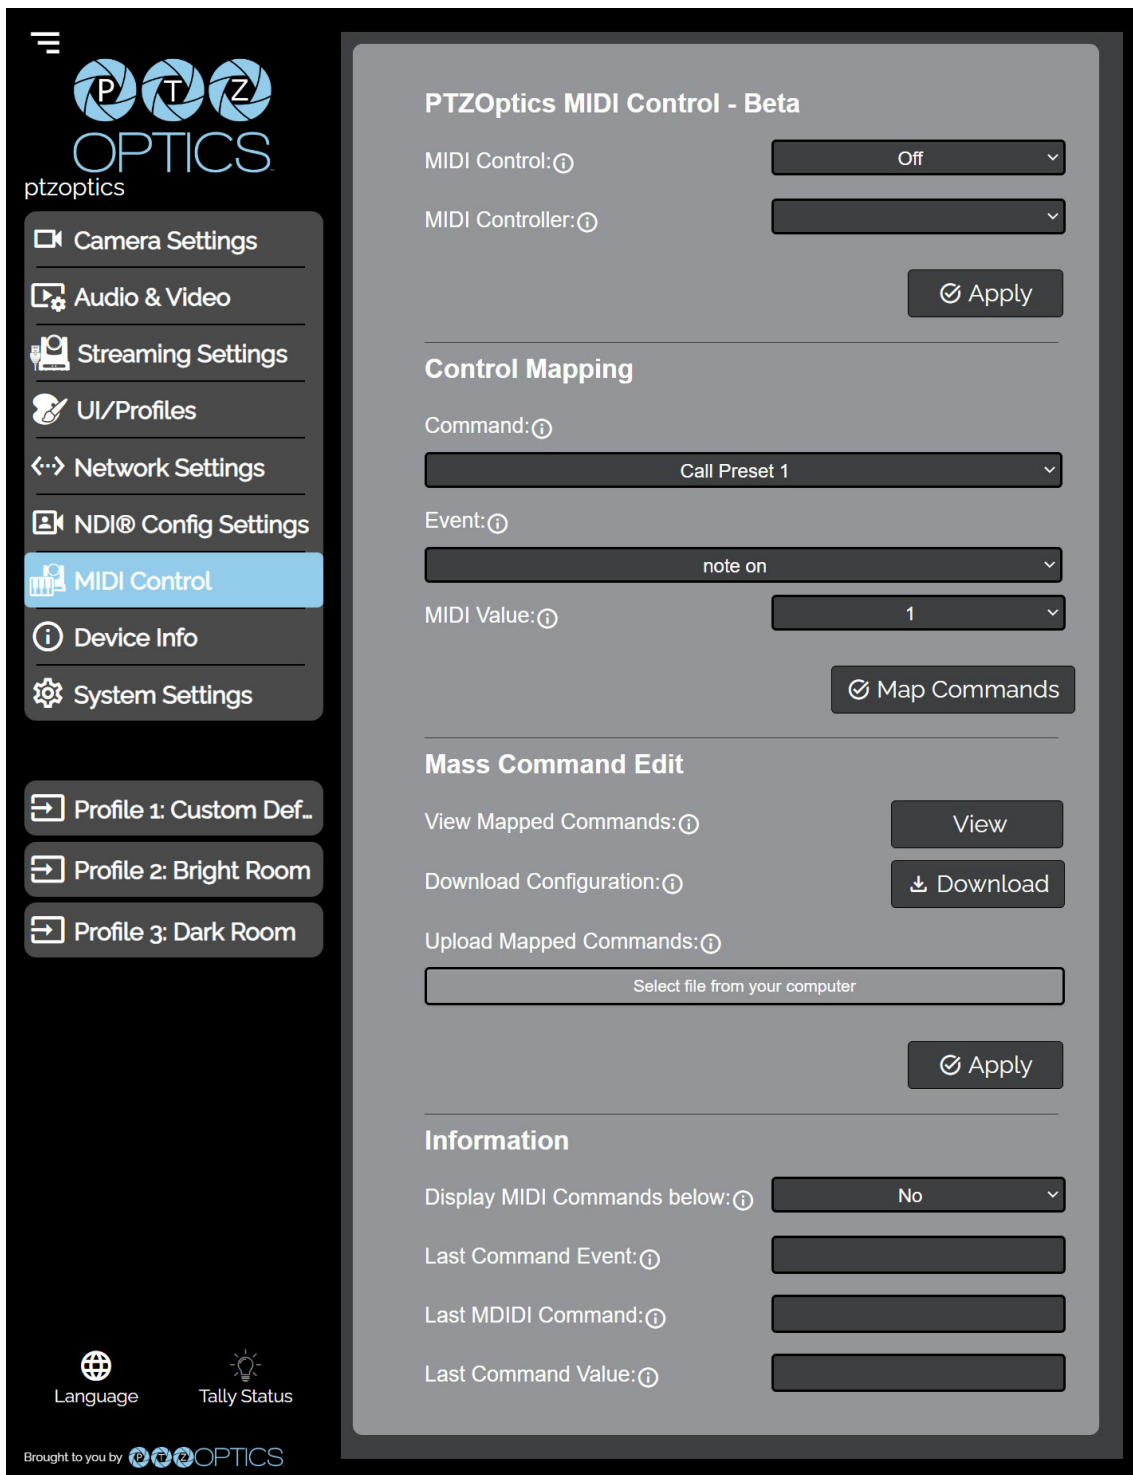



ptzoptics

- Camera Settings
- Audio & Video
- Streaming Settings
- UI/Profiles
- Network Settings
- NDI® Config Settings
- MIDI Control**
- Device Info
- System Settings

Profile 1: Custom Def...

Profile 2: Bright Room

Profile 3: Dark Room

Language

Tally Status

Brought to you by 

PTZOptics MIDI Control - Beta

MIDI Control: ⓘ

Off

MIDI Controller: ⓘ

 Apply

Control Mapping

Command: ⓘ

Call Preset 1

Event: ⓘ

note on

MIDI Value: ⓘ

1

 Map Commands

Mass Command Edit

View Mapped Commands: ⓘ

View

Download Configuration: ⓘ

Download

Upload Mapped Commands: ⓘ

Select file from your computer

 Apply

Information

Display MIDI Commands below: ⓘ

No

Last Command Event: ⓘ

Last MDIDI Command: ⓘ


Last Command Value: ⓘ



- **PTZOptics MIDI Control**
 - **MIDI Control:** Toggle MIDI Control on or off.
 - **MIDI Controller:** Select a MIDI Controller that's connected to your PC.
- **Control Mapping**
 - **Command:** What function you'd like the camera to perform.
 - **Event:** How you would like the trigger the command to be sent.
 - **MIDI Value:** The value associated with the button / dial / knob / etc. on the MIDI Controller.
- **Mass Command Edit**
 - **View Mapped Commands Button:** View the commands currently mapped to the camera.
 - **Download Configuration:** Download the commands currently mapped to the camera.
 - **Upload Mapped Commands:** Upload a list of mapped MIDI commands to the camera.
- **Information**
 - **Display MIDI Commands below:** Select whether the camera displays the commands being sent from the MIDI Controller. This is typically used when Control Mapping.
 - **Last Command Event:** The most recent MIDI Event the Controller sent.
 - **Last MIDI Command:** The most recent MIDI Command the Controller sent.
 - **Last Command Value:** The most recent MIDI Value the Controller sent.

Device Info

The **Device Info** page accesses the **Device Information**, **Power Control**, **Restore Default & Firmware Upload** sections.

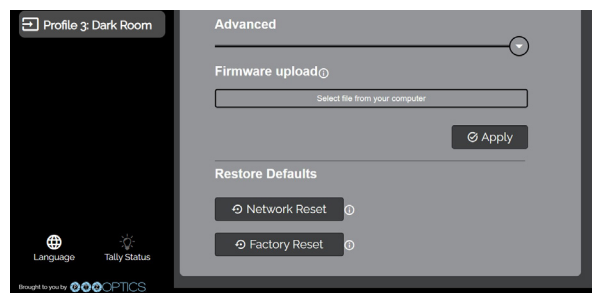

- **Device Information**
 - **Device ID:** Define the camera's Device ID to clearly designate which camera you're interacting with. The Device ID is displayed at the top left of the Navigation Panel and anything that queries the camera's name.
 - **Firmware Version:** The Firmware Version displays the firmware file currently running on the camera.
 - **Device Model:** The Device Model is a field that PTZOptics uses to designate the camera.
 - **Webware Version:** The Webware Version is the version of the web interface.
 - **Serial Number:** The camera's serial number.
 - **Mirrors:** Define a server address for acquiring the latest PTZOptics firmware files. By default, the camera will query PTZOptics' at <https://firmware.ptzoptics.com/>.
 - **Check Firmware Version Button:** Check to see if your camera is running the latest firmware from the Firmware Update Server.
- **Power Control**
 - **Reboot Camera:** Reboot / Power Cycle the camera.
- **Restore Default (Basic)**
 - **Menu Reset:** Reset the camera's non-network settings to factory default.
- **Firmware Upload**
 - **File Upload:** Select a firmware file from your PC to upload to the camera.
- **Restore Default (Advanced)**
 - **Network Reset:** Reset the camera's network settings to factory default.
 - **Factory Reset:** Reset the camera's network and non-network settings to factory default.

System Settings

The **System Settings** page accesses the **HTTPS Settings**, **IR Remote Channel Selection** & **Access Settings** sections.



- **HTTPS Settings**
 - **HTTPS Certificate:** Upload a HTTPS Certificate from your computer.
 - **HTTP Port:** The HTTP Port is how you reach the web interface of your camera (http://[Camera IP]:[port]/)
- **IR Remote Channel Selection**
 - **1 – 4 Button:** Define the communication channel the camera utilizes with the remote control. This allows you to easily use multiple cameras with a single IR remote.
- **Access Settings**
 - **Admin Name:** Administrator username login. This username can not be changed.
 - **Admin Password:** Administrator password. If you desire to change the password, all letters, numbers, and specifically “!@#%\$%^&*()” can be used, up to 15 characters. Please note the circles in the field are encrypted and do not reflect the password saved on the camera.
 - **Guest Name:** Guest username login. This username can not be changed.
 - **Guest Password:** Guest password. If you desire to change the password, all letters, numbers, and specifically “!@#%\$%^&*()” can be used, up to 15 characters. Please note the circles in the field are encrypted and do not reflect the password saved on the camera.

Maintenance and Troubleshooting

Camera Maintenance

- If the camera will not be used for a long time, power off the camera.
- Use a soft cloth or lotion-free tissue to clean the camera body.
- Use a soft, dry, lint-free cloth to clean the lens. If the camera is very dirty, clean it with a diluter neutral detergent. DO not use any type of solvent or harsh detergent which may damage the surface.

Unqualified Applications

- Avoid shooting at particularly bright objects, such as sunlight, lights, etc. for a long period of time.
- Do not operate close to powerful electromagnetic radiation, such as TV or radio transmitters, etc.

Troubleshooting

- No image
 1. Check whether the power cord is connected, voltage is OK, & Power LED is lit.
 2. Check whether the camera can “self-test” after startup. You can also press [*] > [#] >
 3. [Auto Focus] on the IR remote to trigger the camera to perform the startup dance on repeat.
 4. If using SDI or HDMI, check that the desired connection is selected to output video. You can select the desired connection from the OSD Menu or through the Web Interface.
 5. Check that the video cable is connected correctly to the destination device
- Image is shaky or vibrating
 1. Check whether the camera is mounted solidly or sitting on a steady horizontal and level surface.
 2. Check the building and any supporting furniture for vibration. Ceiling mounts are often affected by building vibration more than wall mounts.
 3. Any external vibration that is affecting the camera will be more apparent when zoomed in.
- Abnormal display of image
 1. Check the resolution dial on the back of the camera. Verify that the resolution and refresh rate is supported by your destination device.
 2. If using SDI, check that the SDI level is set to the desired level.
- Image settings are changing on their own
 1. The cameras have a feature called “Preset 2.0” where many of the Exposure, White Balance, and Image settings are saved with each preset. When a preset is called, the saved Exposure, White Balance, and Image settings are then loaded.

Control

- IR remote controller does not control the camera
 1. Does one of the four “Camera Select” buttons at the top of the remote light up when you press any of the buttons?
 - If not, change the batteries in the remote.
 2. Check that the remote and camera are on the same IR channel. The “Camera Select” buttons will light up with the selected IR channel when a button is pressed. You can change the camera’s IR channel by accessing the System Settings of the web interface.
 3. Try removing other sources of IR interface (sunlight, fluorescent lighting, etc.)
- Serial communication does not control the camera
 1. Verify that the RS232 / RS485 cable is connected correctly and using the proper pinout. Verify the communication settings of the control software / device (e.g. joystick).
 2. Verify that the communication port on the controlling device is active (e.g. Com port on PC).
 3. Verify that the communication settings in the camera’s OSD Menu match the communication settings of the controlling software / device.
- IP communication does not control the camera
 1. Verify that the camera and controlling device are on the same LAN with unique IP addresses.
 2. Verify that the controlling device is using the appropriate control port for the protocol. The default control ports are as follows: TCP 5678, UDP 1259, Sony UDP: 52381, NDI: 5961

If you need further assistance, please contact our support team at <https://help.ptzoptics.com/support/login/>.